

ILLUSTRATED PARTS LIST

LISTE DES PIÉCES

KUBOTA

MODEL RC54-71B • RC60-71B
MODELE

ROTARY MOWER

TONDEUSE ROTATIVE



Kubota

NOTICE

This Parts List is for the following purposes.

1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
2. When making repairs, refer to the illustrations in this Parts List.
3. This Parts List is subject to change without notice.

NOTE


Utilisation de ce livre

1. A la commande d'une pièce, chercher la référence et le nom de la pièce.
2. Pour les réparations, employez les illustrations.
3. La liste des pièces peut-être modifié sans préavis.

INSTRUCTIONS
INSTRUCTION

①
E003. PISTON • CRANKSHAFT
PISTON • VILEBREQUIN

⑩
[B]
②
B02-R

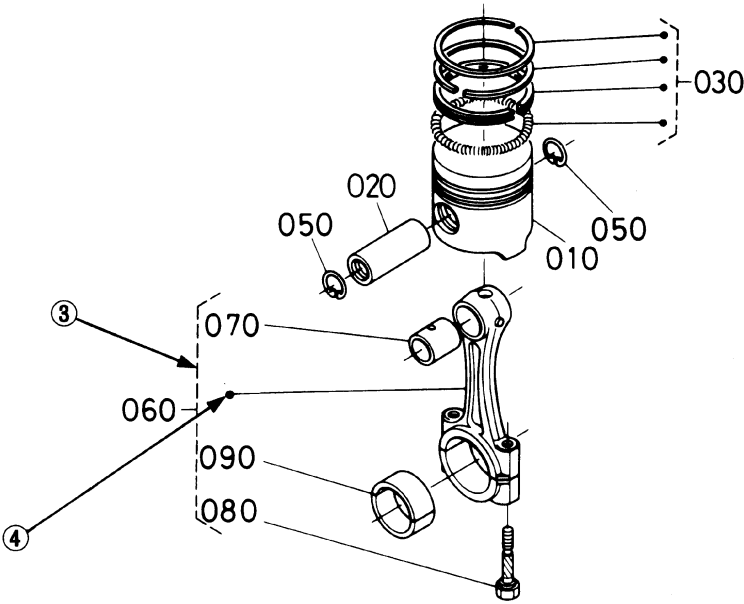

REF.No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	Q'TY Q'TE		S.No. No.S.	I.C.	REMARKS REMARQUES
				A	B			
010	15800-0000-0	PISTON	PISTON	~15000	~15000	1		{Example-1}
010	15800-0000-2	PISTON	PISTON	15001~	15001~	1		{Exemple-1}
020	15800-1000-0	PIN, PISTON	AXE DE PISTON	~15000	~15000	1		{Example-2}
020	15800-1000-2	PIN, PISTON	AXE DE PISTON	15001~	15001~	1		{Exemple-2}
030	15800-2000-0	ASSY PISTON RING	ENS. JEU DE SEGMENTS	~15000	~15000	1		{Example-3}
030	15830-2000-0	ASSY PISTON RING	ENS. JEU DE SEGMENTS	15001~	15001~	1		{Exemple-3}

- ① Fig.No. Represents No. corresponding to each group name.
- ② L.No. Substitute for conventional page numbering. Left-hand pages of the parts list are (location No.) numbered in **XXX-L**, and the right-hand pages in **XXX-R**.
The location Nos. are also used in numerical index at the end of parts list.
- ③ Components..... The components of an assembly are identified by a bracket of dotted lines.
- ④ Point..... Indicates that the parts is not sold independently.
The assembly (REF. No. 010) containing the part needs to be ordered.
- ⑤ REF.No..... Reference numbers are assigned to parts in the illustration. The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ⑥ Model name The name of the basic model is indicated in this column. Other applicable models are indicated on the "REMARKS" column ⑨.
- ⑦ S.No. Indicates a group of serial numbers to which a design change is applied. (serial No.)
- ⑧ I.C. Indicates the interchangeability of parts due to design change. (interchangeability)

Example-1  indicates that a new part can replace an old part, but not vice versa.
15800-0000-0 is applicable to the first serial number to S.No. 15000.
15800-0000-2 is applicable to the first serial number and above.

Example-2  indicates that the new and old parts are not interchangeable.
15800-1000-0 is applicable to the first serial number to S.No. 15000.
15800-1000-2 is applicable to S.No. 15001 and above.

Example-3  indicates that the new and old parts are interchangeable. Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.
- ⑨ REMARKS..... In this column, enter other applicable model names, dimensions and other special items.
- ⑩ Specifications..... The types and destinations of sister models are indicated. These indications are (for sister models) given to tell their relevant pages in this book.

The symbols, **Ⓐ** and **Ⓒᐱ** in the "REMARKS" column or "HEADING" show the models as to the following types.

[SYMBOL] [TYPE]

Ⓐ RC54-71B • RC60-71B-USA SPEC.

Ⓒᐱ RC54-71B • RC60-71B-CANADA SPEC.

- ① No.de Fig Représente le No. de chaque nom de groupe.
- ② No. d'emplacement Représente le substitut du numérotage de page ordinaire. Les pages du côté gauche de la liste des pièces détachées sont numérotées en **XXX-L**. Celles du côté droit sont numérotées en **XXX-R**. Les No. d'emplacement sont également utilisés dans l'index numérique à la fin de la liste des pièces détachées.
- ③ Composantes..... Les composantes d'un ensemble sont identifiées par des parenthèses en pointillé.
- ④ Point..... Indique que la pièce n'est pas à vendre toute seule.
Elle doit être commandée avec l'ensemble (POS. No. 010) qui la contient.
- ⑤ POS.No..... Des numéros de position sont donnés aux pièces représentées dans l'illustration. Le référence d'une pièce de l'illustration peut être identifié en se reportant au même numéro de position indiqué dans la liste des pièces détachées.
- ⑥ Nom de type..... Le nom du type de base est indiqué dans cette colonne. Les autres modèles sont indiqués dans la colonne des "REMARQUES" ⑨.
- ⑦ No.S..... Indique un groupe de numéros de série qui a subi des modifications de modèle.
(No. de série)
- ⑧ I.C..... Indique la permutabilité des pièces due à un changement dans le modèle.
(permutabilité)
- Exemple-1  indique que la nouvelle pièce peut remplacer la vieille, mais pas vice versa.
Le 15800-0000-0 s'applique au premier numéro de série jusqu'au No.S. 15000.
Le 15800-0000-2 s'applique au premier numéro de série et à ceux ci-dessus.
- Exemple-2  indique que la nouvelle et vieille pièces ne sont pas interchangeable.
Le 15800-1000-0 s'applique au premier numéro de série jusqu'au No.S. 15000.
Le 15800-1000-2 s'applique au No.S. 15001 et à ceuxci-dessus.
- Exemple-3  indique que la nouvelle pièce et la vieille pièce sont interchangeable. Toutes deux numéros 15800-2000-0 et 15830-2000-0 sont applicables a premier numéro de cette depuis.
- ⑨ REMARQUES Cette colonne renferme d'autres noms de modèles applicables, les dimensions et autres éléments spéciaux.
- ⑩ Spécifications..... Les types et les destinations des modèles soeurs sont indiqués. Ces indications sont
(pour modèles soeurs) données pour donner leurs pages relatives dans ce livre.

Les symboles **Ⓐ** et **Ⓒᐱ** dans la colonne "REMARQUES" ou "EN-TETE" indiquent les modèles selon les types suivants.

[SYMBOLE] [TYPE]

Ⓐ SPEC. RC54-71B • RC60-71B-USA

Ⓒᐱ SPEC. RC54-71B • RC60-71B-CANADA

ALPHABETICAL INDEX

MODEL RC54-71B • RC60-71B

PART NAME	L.No. (PAGE)	PART NAME	L.No. (PAGE)
—— A —— ANTI-SCALP ROLLER(FRONT).....B06-L ANTI-SCALP ROLLER(REAR).....B07-L ARM,LIFT.....B08-R ARM,TENSION.....B04-L		—— M —— MAIN STAY.....B07-R MANUAL,INSTRUCTION.....B09-L MOWER DECK.....B04-R	
—— B —— BELT.....B04-L BEVEL GEAR.....B01-R BEVEL GEAR SHAFT.....B01-R BLADE,CENTER.....B02-R BLADE,SIDE.....B03-L BLADE SHAFT.....B03-L BOX,BEVEL GEAR.....B01-R		—— O —— OIL SEAL,GEAR BOX.....B01-R OIL SEAL,PULLEY HOLDER(CENTER).....B02-R OIL SEAL,PULLEY HOLDER(SIDE).....B03-L OPERATORS MANUAL.....B09-L	
—— C —— CASE,BEVEL GEAR.....B01-R CENTER PULLEY.....B01-R COVER,DECK.....B04-R CROSS JOINT.....B01-L		—— P —— PINION SHAFT.....B01-R PULLEY,CENTER.....B01-R PULLEY,SIDE.....B03-L PULLEY,TENSION.....B04-L	
—— D —— DECK,MOWER.....B04-R DISCHARGE CHUTTE.....B07-L		—— R,S —— REAR WHEEL.....B05-L ROD,LIFT.....B08-R SHAFT,BEVEL GEAR.....B01-R SHAFT,BLADE.....B03-L SHAFT,FRONT WHEEL.....B05-L SHAFT,PINION.....B01-R SIDE PULLEY.....B03-L SPINDLE(CENTER).....B01-R SPINDLE(SIDE).....B03-L	
—— F,G —— FRONT LINKAGE.....B06-L FRONT WHEEL.....B05-L FRONT WHEEL SHAFT.....B05-L GEAR,BEVEL.....B01-R GEAR BOX.....B01-R		—— T —— TENSION ARM.....B04-L TENSION PULLEY.....B04-L TURNBUCKLE.....B08-R	
—— H —— HOLDER,CENTER PULLEY.....B02-R HOLDER,SIDE PULLEY.....B03-L		—— U,W —— UNIVERSAL JOINT.....B01-L WHEEL,FRONT.....B05-L	
—— I,J —— INSTRUCTION MANUAL.....B09-L JOINT,CROSS.....B01-L JOINT,UNIVERSAL.....B01-L			
—— L —— LABELS.....B04-R LEVER,LINK SET.....B06-L LIFT ARM.....B08-R LINKAGE,FRONT.....B06-L LINKAGE.....B06-L			


INDEX ALPHABETIQUE

MODELE RC54-71B · RC60-71B

DESIGNATION	No.D'EM- PLACE- MENT	DESIGNATION	No.D'EM- PLACE- MENT
—— A —— ARBRE D'ENGRENAGE CON. B01-R ARBRE DE LAME B03-L ARBRE DE ROUE AVANT B05-L ARBRE DU PIGNON B01-R		—— S,T —— SUPPORT DE POULIE(CENTRE) B02-R SUPPORT DE POULIE(REIN) B03-L TABLIER TONDEUSE B04-R TENDEUR B08-R TIGE B08-R	
—— B —— BIELLETES AVANT B06-L BRAS DE LEVAGE B08-R			
—— C —— CARDAN B01-L CARTER CONIQUE B01-R CHAINON B07-R CONDUIT D'EVACUATION B07-L COURROIE B04-L COUVERCLE DE ECHAPPEMENT B07-L			
—— E —— ENGRENAGE CONIQUE B01-R ETAI AVANT B07-R ETAI D. B06-L ETAI G. B06-L ETIQUETTE B04-R			
—— G,J —— GALET ANTI-SCALP(ARRIERE) B07-L GALET ANTI-SCALP(AVANT) B06-L JOINT DE CARDAN B01-L			
—— L,M —— LAME DE CENTRE B02-R LAME DE REIN B03-L LEVIER DE TENSION B04-L LEVIER DE TIRANT B06-L MAILLON ARRIERE B08-L MANUEL DE L'UTILISATEUR B09-L			
—— P —— POULIE DE CENTRE B01-R POULIE DE REIN B03-L POULIE DE TENSION B04-L			
—— R —— REDUCTEUR B01-R ROUE ARRIERE B05-L ROUE AVANT B05-L			

I01. UNIVERSAL JOINT JOINT DE CALDAN

B01-L

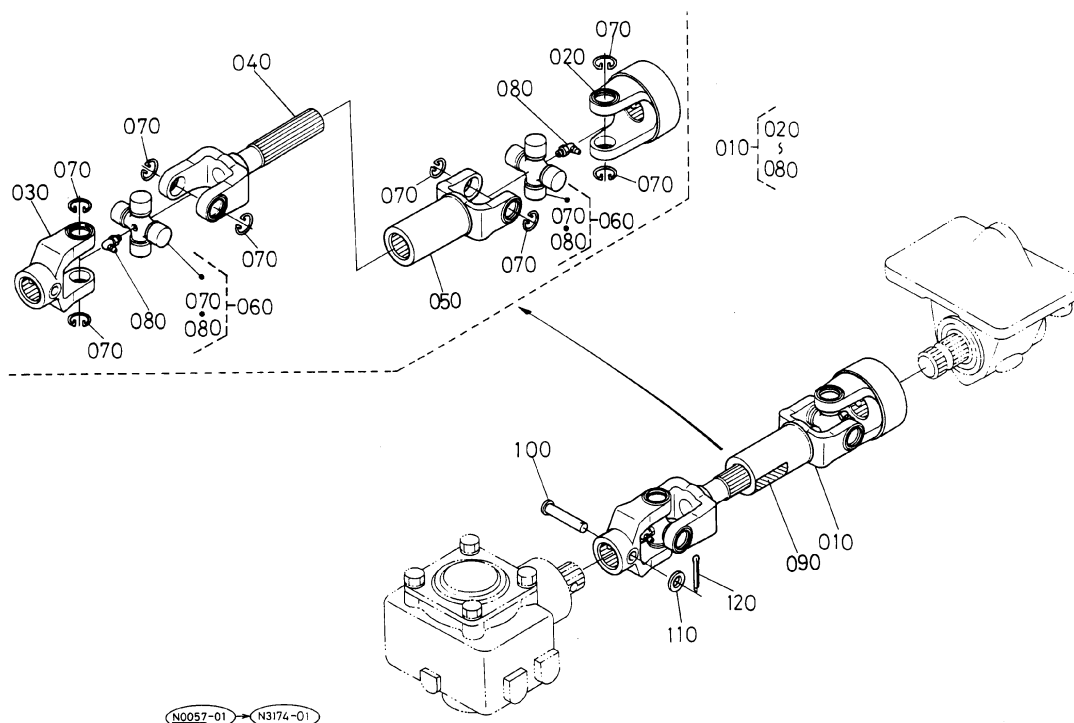


A : RC54-71B, B : RC60-71B

[illegible]

I02. GEAR BOX-CENTER PULLEY BOITIER DE DIRECTION-POULIE

B01-R

300 76539—3315—0

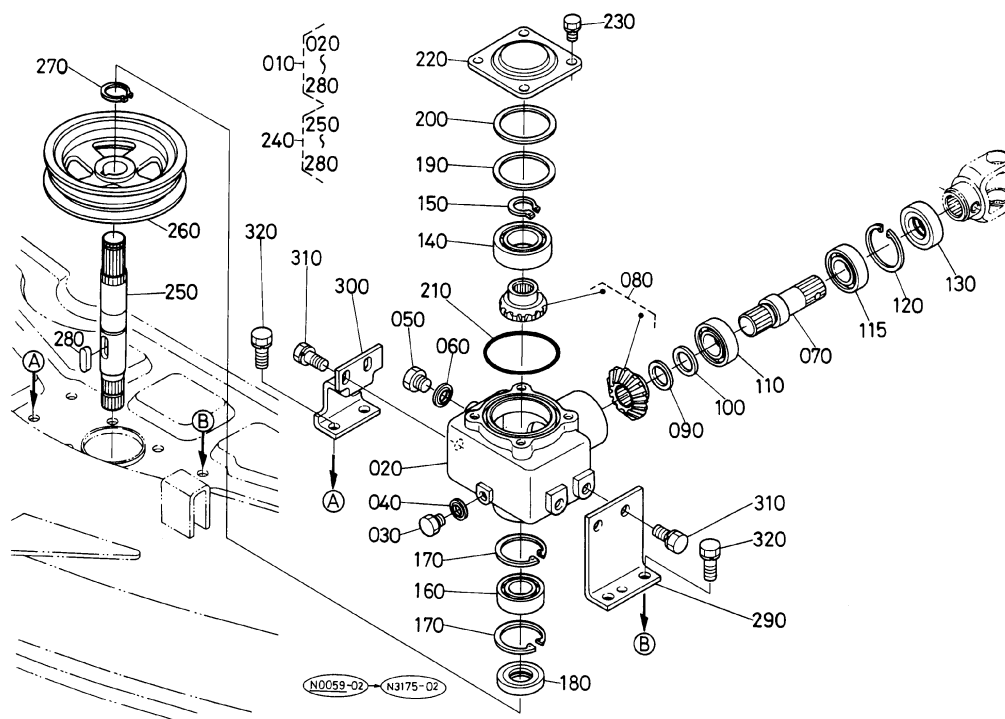

A : RC54-71B, B : RC60-71B


REF.No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	Q'TY / S.No. Q'TE / No.S.		I.C.	REMARKS REMARQUES
				A	B		
010	76529-9904-4	ASSY CASE,BEVEL GEAR	ENS.CARTER CONIQUE	1	-		
010	76518-9904-0	ASSY CASE,BEVEL GEAR	ENS.CARTER CONIQUE	-	1 ~11299	*	
010	76518-9904-3	ASSY CASE,BEVEL GEAR	ENS.CARTER CONIQUE	-	1 30001~	*	
020	76539-3311-2	CASE,BEVEL GEAR	CARTER ENGREN-CONIQUE	1	1		
030	76539-1214-0	BOLT	VIS	1	1		
040	04717-01200	WASHER,WITH RUBBER	JOINT EN CAOUTCHOUC	1	1		
050	76539-1214-0	BOLT	VIS	1	1		
060	04717-01200	WASHER,WITH RUBBER	JOINT EN CAOUTCHOUC	1	1		
070	70722-3331-0	SHAFT,PINION	ARBRE DU PIGNON	1	1		
080	76505-3332-0	KIT GEAR,BEVEL	ENS. ENGREN. CONIQUE	1	-		
080	76507-3332-0	KIT GEAR,BEVEL	ENS. ENGREN. CONIQUE	-	1 ~11299	*	
080	76529-9902-0	KIT GEAR,BEVEL	ENS. ENGREN. CONIQUE	-	1 30001~	*	
090	70720-3335-0	SHIM	CALE	1	1		0.2MM
100	70720-3336-0	SHIM	CALE	1	1		0.3MM
110	76546-3338-0	BEARING,BALL	ROULEMENT A BILLES	1	1		
115	08101-06205	BEARING,BALL	ROULEMENT A BILLES	1	1		
120	04611-00520	CIR CLIP,INTERNAL	CIRCLIP	1	1		
130	76535-3344-0	SEAL,OIL	PARE-HUILE	1	1		
140	70712-3355-0	BEARING,BALL	ROULEMENT A BILLES	1	1		
150	04612-00220	CIR CLIP,EXTERNAL	CIRCLIP	1	1		
160	08101-06205	BEARING,BALL	ROULEMENT A BILLES	1	1		
170	04611-00520	CIR CLIP,INTERNAL	CIRCLIP	2	2		
180	76535-3344-0	SEAL,OIL	PARE-HUILE	1	1		
190	76539-3341-0	SHIM	CALE	1	1		0.2MM
200	76539-3359-0	SHIM	CALE	1	1		0.3MM
210	04811-10800	O RING	JOINT TORIQUE	1	1		
220	70712-3361-0	COVER,BEVEL CASE	COUV. CARTER CONIQUE	1	1		
230	01123-50814	BOLT	VIS	4	4		

B02-L


This diagram illustrates the exploded view of a mechanical assembly, likely a pump or valve. The components are numbered as follows:

- Top Assembly:** 270 (O-ring), 260 (Cover), 250 (Shaft), 280 (Nut), 240 (Bracket).
- Central Assembly:** 220 (Flange), 230 (Screw), 200 (Ring), 190 (Ring), 150 (Ring), 140 (Ring), 210 (Gear), 080 (Gear), 050 (Screw), 060 (Screw), 020 (Bracket), 040 (Screw), 030 (Screw), 170 (Ring), 160 (Ring), 170 (Ring), 180 (Ring).
- Right Assembly:** 070 (Shaft), 110 (Nut), 100 (Ring), 090 (Ring), 115 (Ring), 120 (Ring), 130 (Ring).
- Bottom Assembly:** 320 (Screw), 310 (Bracket), 300 (Bracket), 290 (Bracket).

Labels A and B indicate specific assembly points or orientations. The diagram also includes a reference code: N0059-02 and N3175-02.

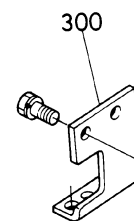
[illegible]

B02-R

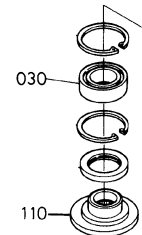[illegible]

I04. SIDE PULLEY·BLADE POULIE DE REIN·LAME

B03-L

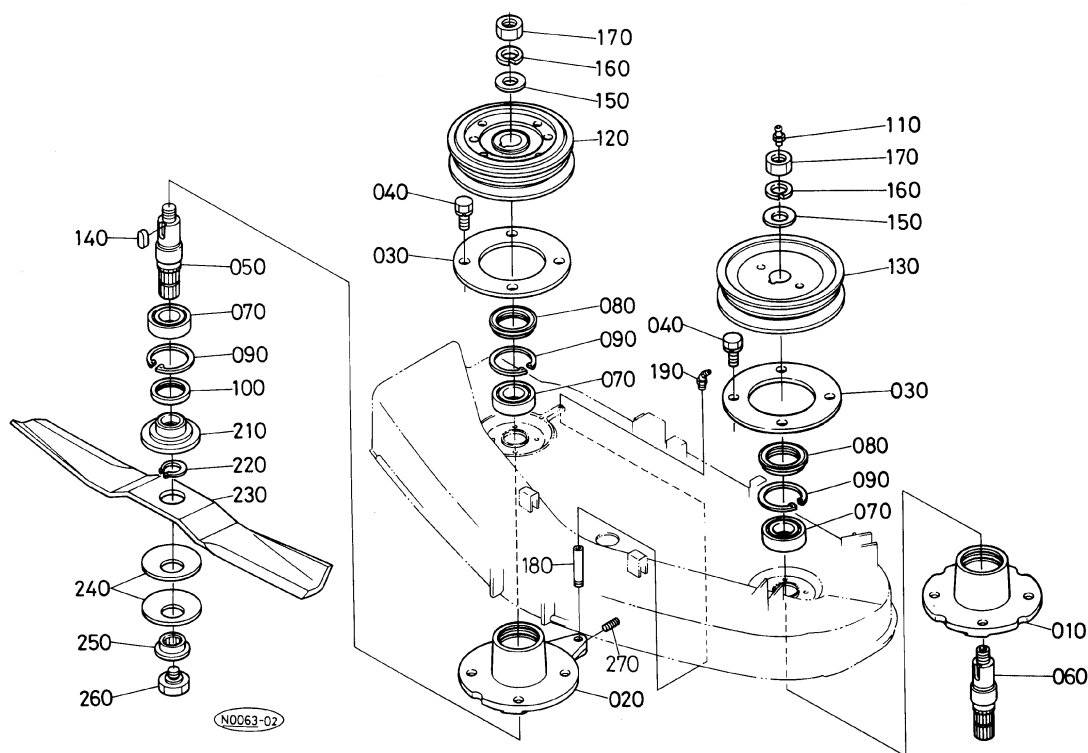


A : RC54-71B, B : RC60-71B

REF.No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	Q'TY QTE / S.No. No.S.		I.C.	REMARKS REMARQUES
				A	B		
010	76539-3451-0	HOLDER,PULLEY LH	SUPPORT DE POULIE G.	-	1 ~11299	*	
010	76539-3451-4	HOLDER,PULLEY LH	SUPPORT DE POULIE G.	1	1 30001~		
020	76539-3452-0	HOLDER,PULLEY RH	SUPPORT DE POULIE D.	-	1 ~11299	*	
020	76539-3452-4	HOLDER,PULLEY RH	SUPPORT DE POULIE D.	1	1 30001~		
030	76539-3432-0	PLATE	PLAQUE	2	2		
040	01133-51225	BOLT	VIS	8	8		
050	76539-3454-0	SHAFT,BLADE RH	ARBRE DE LAME	-	1 ~11299	*	
050	76539-3454-2	SHAFT,BLADE RH	ARBRE DE LAME	1	1 30001~		
060	76539-3455-0	SHAFT,BLADE LH	ARBRE DE LAME	-	1 ~11299	*	
060	76539-3455-2	SHAFT,BLADE LH	ARBRE DE LAME	1	1 30001~		
070	08101-06205	BEARING,BALL	ROULEMENT A BILLES	4	4		
080	70722-3412-0	SEAL,OIL	PARE-HUILE	2	2		
090	04611-00520	CIR CLIP,INTERNAL	CIRCLIP	4	4		
100	09500-35528	SEAL,OIL	PARE-HUILE	2	2		
110	06613-10675	NIPPLE,GREASE	GRAISSEUR	1	1		
120	76539-3357-0	PULLEY,SIDE RH	POULIE DE REIN	1	1		
130	76539-3358-0	PULLEY,SIDE LH	POULIE DE REIN	1	1		
140	05712-00722	KEY,FEATHER	CLAVETTE	2	2		
150	70721-3456-0	WASHER,PLAIN	RONDELLE FREIN	2	2		
160	70725-3360-0	WASHER,SPRING	RONDELLE GROWER	2	2		
170	70725-3356-0	NUT	ECROU	2	2		
180	76539-3413-2	PIPE,EXTENSION	TUYAU RALLONGE	1	1		
190	06613-10010	NIPPLE,GREASE	GRAISSEUR	1	1		
200	☆	BLANK	BLANC	-	-		
210	76539-3416-0	BOSS,BLADE	MOYEU DE LAME	-	2 ~11299	*	
210	76539-3415-0	BOSS,BLADE	MOYEU DE LAME	2	2 30001~		
220	04612-00220	CIR CLIP,EXTERNAL	CIRCLIP	2	2		
230	76529-3433-0	BLADE	LAME	2	-		

**SIDE PULLEY-BLADE
POULIE DE REIN-LAME**

B03-R

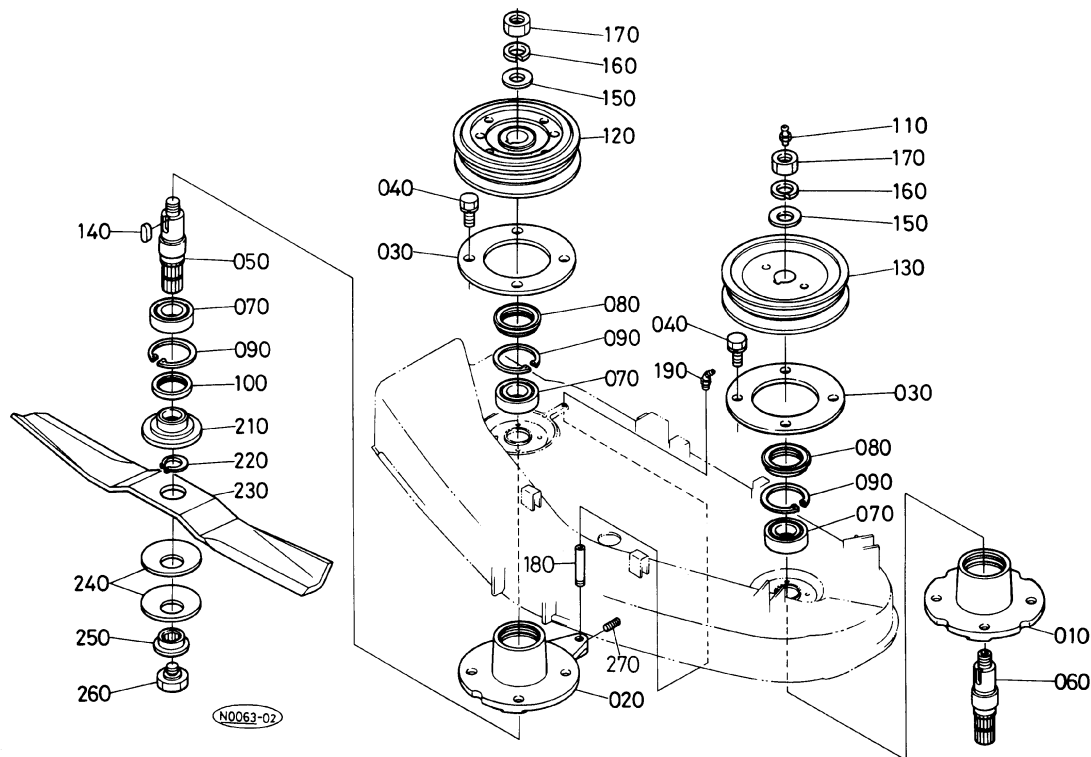


A : RC54-71B, B : RC60-71B

[illegible]

B04-L



[illegible]

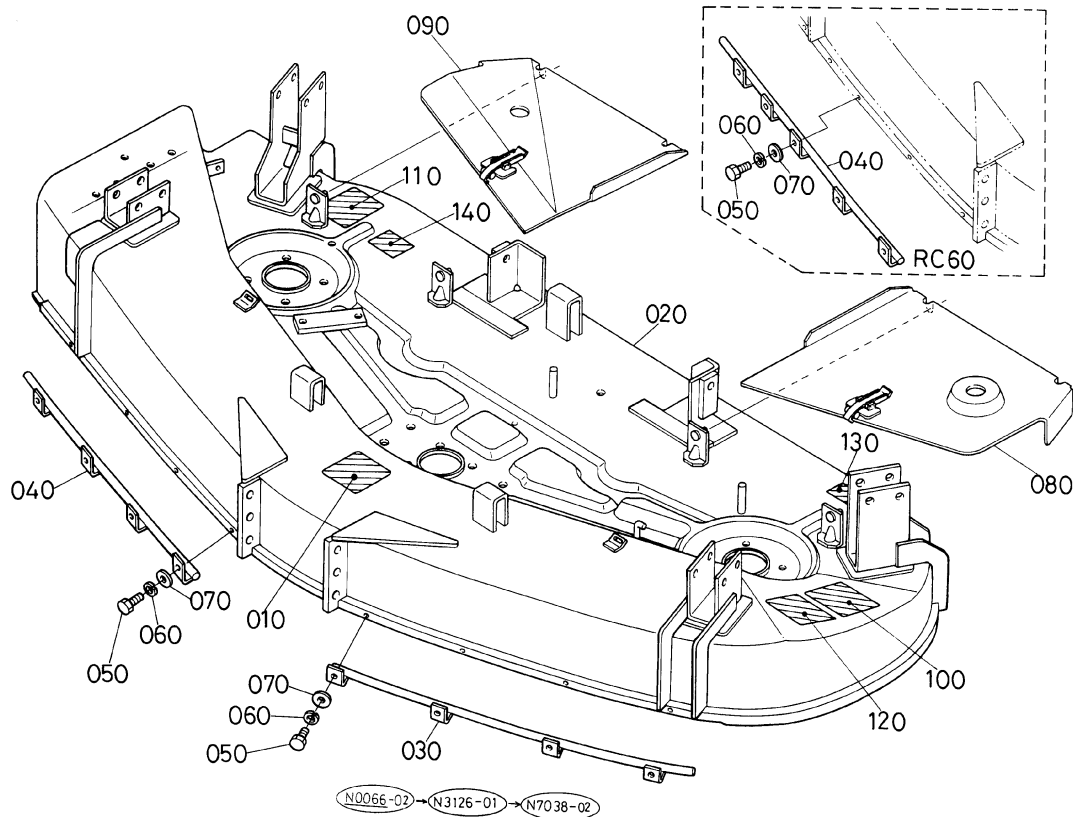

A : RC54-71B, B : RC60-71B

REF.No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	Q'TY / S.No. Q'TE / No.S.		I.C.	REMARKS REMARQUES
				A	B		
010	76539-3457-0	LABEL, BLADE	ETIQUETTE	1	1		(A), (CA) (ENGLISH)
010	76507-1134-0	NAME PLATE, BLADE	PLAQUE SIGN., LAME	1	1		(CA) (FRENCH)
020	76529-4115-2	DECK, MOWER	TABLIER TONDEUSE	1	-		
020	76539-4116-7	DECK, MOWER	TABLIER TONDEUSE	-	1 ~11299	✱	
020	76539-4115-0	DECK, MOWER	TABLIER TONDEUSE	-	1 30001~		
030	76529-4110-0	BAR, FRONT LH	BARRE AVANT G.	1	-		
030	76539-4110-0	BAR, FRONT LH	BARRE AVANT G.	-	1 30001~		
040	76529-4112-0	BAR, FRONT RH	BARRE AVANT D.	1	-		
040	76539-4112-0	BAR, FRONT RH	BARRE AVANT D.	-	1 30001~		
050	01053-50516	BOLT	VIS	8	9 30001~		
060	04512-50050	WASHER, SPRING	RONDELLE GROWER	8	9 30001~		
070	04013-50050	WASHER, PLAIN	RONDELLE FREIN	8	9 30001~		
080	76529-4118-0	COVER, LH	COUVERCLE G	1	-		
080	76539-4118-0	COVER, LH	COUVERCLE G	-	1		
090	76529-4120-0	COVER, RH	COUVERCLE D	1	-		
090	76539-4120-0	COVER, RH	COUVERCLE D	-	1		
100	70720-4715-4	LABEL, CAUTION	ETIQUETTE	1	1		(A), (CA) (ENGLISH)
100	70712-1147-0	LABEL, CAUTION	ETIQUETTE	1	1		(CA) (FRENCH)
110	70712-4114-2	LABEL, CAUTION	ETIQUETTE	1	1		(A), (CA) (ENGLISH)
110	76530-1142-0	LABEL, CAUTION	ETIQUETTE	1	1		(CA) (FRENCH)
120	76539-4119-0	LABEL, CUTTING HEIGHT	ETIQUETTE	1	1		(A), (CA) (ENGLISH)
120	76568-1149-0	LABEL, CUTTING HEIGHT	ETIQUETTE	1	1		(CA) (FRENCH)
130	76539-6126-0	LABEL, PTO	ETIQUETTE PDF	1	1		(A), (CA) (ENGLISH)
130	76550-1126-0	LABEL, PTO	ETIQUETTE PDF	1	1		(CA) (FRENCH)
140	☆	NAME PLATE, M/FORM	ETIQUETTE	1	-		NON SALE
140	☆	NAME PLATE, M/FORM	ETIQUETTE	-	1		NON SALE

 
230 76539-4412-0

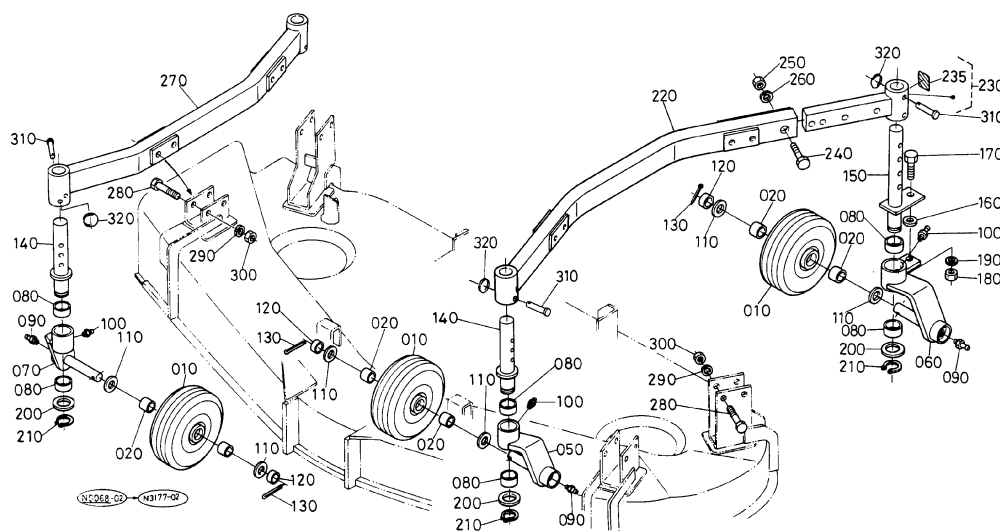

A : RC54-71B, B : RC60-71B


REF.No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	Q'TY Q'TE / S.No. No.S.		I.C.	REMARKS REMARQUES
				A	B		
010	76521-4211-0	FRONT WHEEL	ROUE AVANT	4	4		
020	70722-4419-0	BUSH	BAGUE	8	8		
030	☆	BLANK	BLANC	-	-		
040	☆	BLANK	BLANC	-	-		
050	76521-4215-0	STAY,FRONT WHEEL LH	SUPPORT DE ROUE AV G	1	1		
060	76539-4216-0	STAY,LH	ETAI G	1	1		
070	76521-4217-0	STAY,FRONT WHEEL RH	SUPPORT DE ROUE AV D	2	2		
080	70722-4219-0	BUSH	BAGUE	8	8		
090	06613-10675	NIPPLE,GREASE	GRAISSEUR	4	4		
100	06613-10675	NIPPLE,GREASE	GRAISSEUR	4	4		
110	04013-50200	WASHER,PLAIN	RONDELLE FREIN	8	8		
120	70722-4214-0	COLLAR	COLLIER	4	4		
130	05511-50540	PIN,SPLIT	GOUPILLE FENDUE	4	4		
140	76539-4311-0	SHAFT,WHEEL	ARBRE DE ROUE	3	3		
150	76539-4314-0	SHAFT,REAR WHEEL	ARBRE DE ROUE AR.	1	1		
160	04011-50100	WASHER,PLAIN	RONDELLE FREIN	1	1		
170	01173-51025	BOLT	VIS	1	1		
180	02118-50100	NUT	ECROU	1	1		
190	04512-50100	WASHER,SPRING	RONDELLE GROWER	1	1		
200	70722-4313-0	COLLAR,FRONT WHEEL	RONDELLE ROUE AVANT	4	4		
210	04612-00300	CIR CLIP,EXTERNAL	CIRCLIP	4	4		
220	76529-4409-0	STAY,WHEEL LH	SUPPORT DE ROUE G.	1	-		
220	76539-4411-4	STAY,WHEEL LH	SUPPORT DE ROUE G.	-	1 ~11299		
220	76539-4409-0	STAY,WHEEL LH	SUPPORT DE ROUE G.	-	1 30001~	*	
230	76529-4408-0	ASSY STAY,WHEEL	ENS.SUPPORT DE ROUE	1	-		
230	76539-4412-0	STAY,WHEEL	SUPPORT DE ROUE	-	1 ~11299		
230	76539-4408-0	ASSY STAY,WHEEL	ENS.SUPPORT DE ROUE	-	1 30001~	*	
235	76529-4415-0	LABEL,TOP	ETIQUETTE	1	1 30001~		

[illegible]

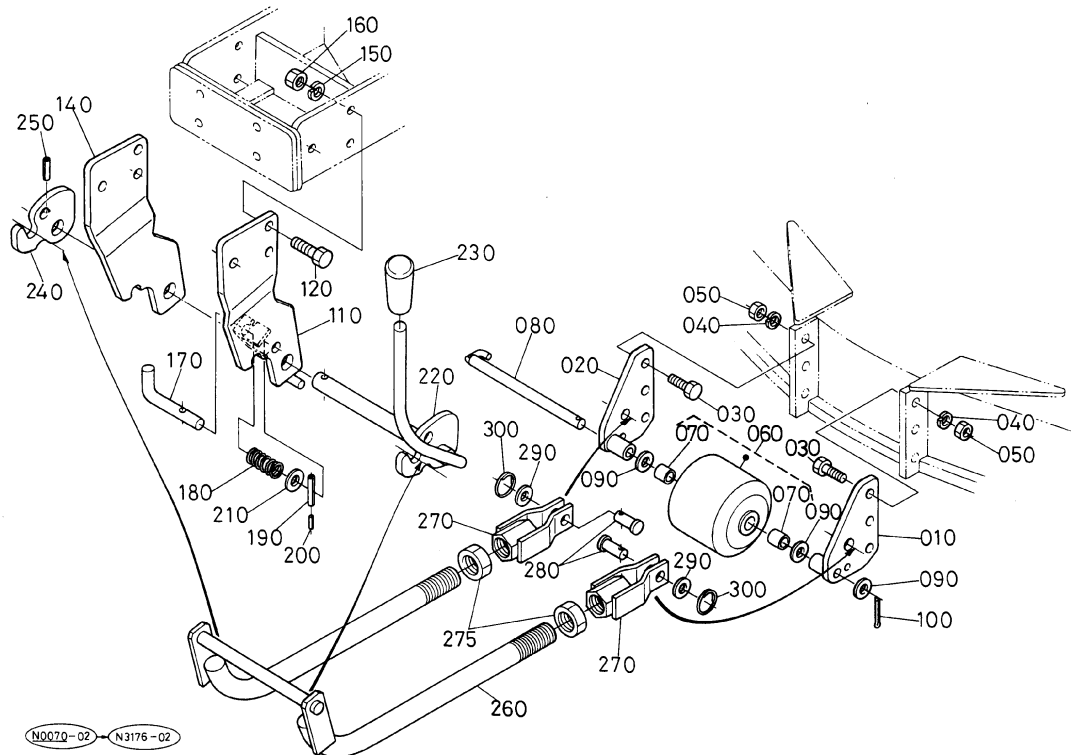

A : RC54-71B, B : RC60-71B


REF.No. POS.No.	PART No. REFERENCE	PART NAME	DESIGNATION	QTY QTE / S.No. No.S.		I.C.	REMARKS REMARQUES
				A	B		
010	76539-4481-3	BRACKET,LH	SUPPORT G.	1	1		
020	76539-4482-3	BRACKET,RH	SUPPORT D.	1	1		
030	01173-51030	BOLT	VIS	6	6		
040	04512-50100	WASHER,SPRING	RONDELLE GROWER	6	6		
050	02118-50100	NUT	ECROU	6	6		
060	76543-4625-0	ASSY ROLLER,ANTI-SCALP	ENS.GALET ANTI-SCALP	1	1		
070	08511-01220	BUSH	BAGUE	2	2		
080	76539-4618-0	PIN,GAUGE WHEEL	GOUPILLE,ROUE JAUGE	1	1		
090	04011-50120	WASHER,PLAIN	RONDELLE FREIN	3	3		
100	05511-50425	PIN,SPLIT	GOUPILLE FENDUE	1	1		
110	76518-4451-0	STAY,LH	ETAI G	1	1		
120	01173-51235	BOLT	VIS	6	6		
130	☆	BLANK	BLANC	-	-		
140	76518-4452-0	STAY	SUPPORT	1	1		
150	04512-50120	WASHER,SPRING	RONDELLE GROWER	6	6		
160	02176-50120	NUT	ECROU	6	6		
170	76539-4454-0	PIN,HINGE	AXE D'ARTICULATION	1	1		
180	76539-4456-0	SPRING,HINGE PIN	RESSORT	1	1		
190	05411-00540	PIN,SPRING	GOUPILLE-RESSORT	1	1		
200	05411-00320	PIN,SPRING	GOUPILLE-RESSORT	1	1		
210	04011-50140	WASHER,PLAIN	RONDELLE FREIN	1	1		
220	76539-4458-0	LEVER,LINK FULCRUM	LEVIER	1	1		
230	06914-00120	GRIP,LEVER	POIGNEE DE LEVIER	1	1		
240	76539-4459-0	HOLDER,LINK	SUPPORT DE CHAINON	1	1		
250	05411-00630	PIN,SPRING	GOUPILLE-RESSORT	1	1		
260	76539-4461-0	LINK,FRONT	MAILLON AVANT	1	1		
270	76539-4463-0	LINK,FRONT	MAILLON AVANT	2	2		
275	76539-4466-0	NUT,LOCK	CONTRE-ECROU	2 30211~	2 30590~		

 

A : RC54-71B, B : RC60-71B


[illegible]

 B07-L

[illegible]

LIFT LINKAGE MAILLON

 B07-R




A : RC54-71B, B : RC60-71B

[illegible]

I11. REAR LINKAGE CHAINON ARRIERE


B08-L

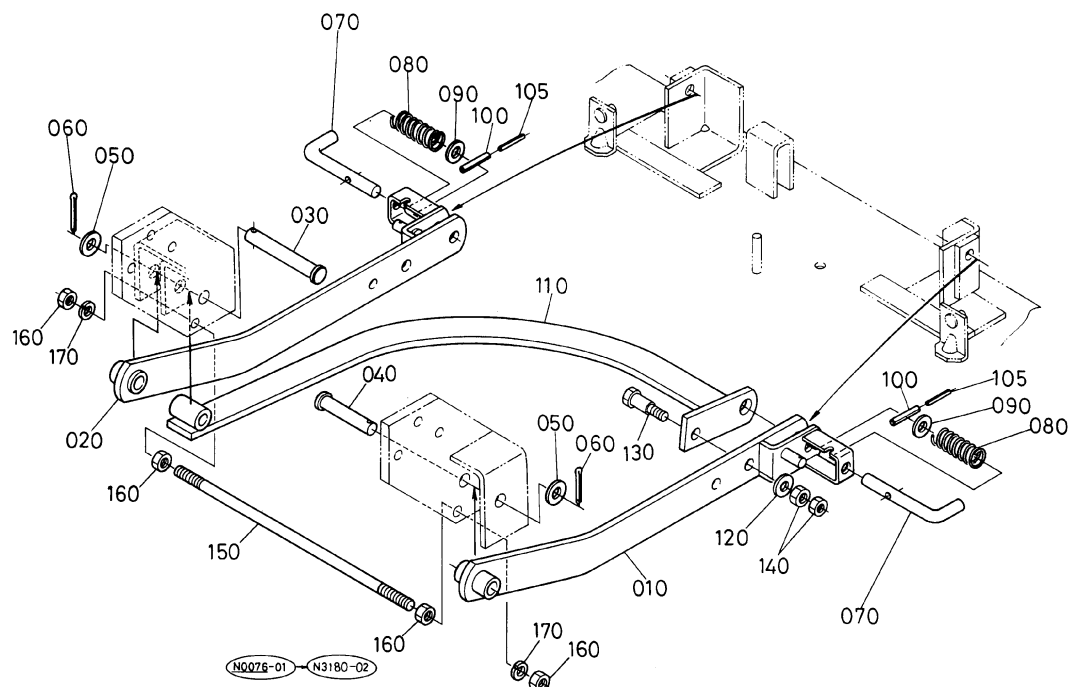

A : RC54-71B, B : RC60-71B

[illegible]

 B08-R

[illegible]

ACCESSORIES AND SERVICE PARTS ACCESSOIRES ET PIÈCE DE SERVICE

B09-L

A : RC54-71B, B : RC60-71B

[illegible]

NUMERICAL INDEX

INDEX NUMERIQUE

NUMERICAL INDEX INDEX NUMERIQUE

B10-L

PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT	PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT	PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT	PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT
01053-50516	B04-R	04811-10800	B01-R	70723-7113-0	B09-L	76539-3341-0	B01-R
01123-50814	B01-R	05122-50845	B01-L	70725-3356-0	B03-L	76539-3350-0	B02-L
01133-51035	B07-R	05122-51050	B05-R	70725-3360-0	B03-L	76539-3350-2	B02-L
01133-51222	B02-L	05122-51230	B08-R	76505-3113-0	B01-L	76539-3352-0	B02-L
	B02-R	05122-51235	B07-R	76505-3119-0	B01-L	76539-3357-0	B03-L
01133-51225	B03-L	05122-51260	B08-R	76505-3120-0	B01-L	76539-3358-0	B03-L
01133-51230	B02-L	05122-51430	B06-R	76505-3204-0	B01-L	76539-3359-0	B01-R
01173-51025	B05-L	05122-51675	B08-L	76505-3332-0	B01-R	76539-3411-0	B02-R
	B07-L	05411-00320	B06-L	76505-4618-2	B07-L	76539-3411-4	B02-R
01173-51030	B06-L	05411-00332	B08-L	76507-1134-0	B04-R	76539-3413-2	B02-R
01173-51235	B06-L	05411-00540	B06-L	76507-3332-0	B01-R		B03-L
01173-51245	B05-R		B08-L	76507-4625-0	B07-L	76539-3415-0	B02-R
01173-51270	B04-L	05411-00630	B06-L	76518-4451-0	B06-L		B03-L
	B05-R	05511-50218	B01-L	76518-4452-0	B06-L	76539-3416-0	B02-R
01517-51030	B07-R	05511-50425	B06-L	76518-4453-0	B08-L		B03-L
02118-50100	B05-L		B07-R	76518-5111-0	B07-R	76539-3432-0	B03-L
	B06-L		B08-R	76518-5113-0	B07-R	76539-3433-0	B02-R
	B07-L	05511-50430	B08-L	76518-5115-0	B07-R		B03-R
	B07-R	05511-50530	B07-L	76518-5117-0	B07-R		B09-L
02172-50120	B04-L		B07-R	76518-5121-0	B07-R	76539-3437-2	B02-R
	B08-L	05511-50540	B05-L	76518-5125-0	B07-R		B03-R
02174-50120	B05-R	05712-00722	B03-L	76518-7111-0	B09-L	76539-3439-0	B02-R
	B08-R	05712-00728	B02-L	76518-7111-4	B09-L		B03-R
02176-50120	B05-R	06613-10010	B03-L	76518-7115-0	B09-L	76539-3451-0	B03-L
	B06-L	06613-10675	B03-L	76518-9904-0	B01-R	76539-3451-4	B03-L
03410-50606	B02-R		B04-L	76518-9904-3	B01-R	76539-3452-0	B03-L
	B03-R		B05-L	76521-4211-0	B05-L	76539-3452-4	B03-L
04011-50100	B05-L	06914-00120	B06-L	76521-4215-0	B05-L	76539-3454-0	B03-L
04011-50120	B06-L	08101-06205	B01-R	76521-4217-0	B05-L	76539-3454-2	B03-L
	B07-L		B02-R	76521-6117-2	B08-R	76539-3455-0	B03-L
	B08-R		B03-L	76529-3433-0	B02-R	76539-3455-2	B03-L
04011-50140	B06-L	08511-01220	B06-L		B03-L	76539-3457-0	B04-R
	B06-R		B07-L		B09-L	76539-3471-0	B04-L
	B08-L	08511-02020	B04-L	76529-3471-0	B04-L	76539-3473-3	B04-L
04011-50160	B08-L		B07-R	76529-4110-0	B04-R	76539-3475-0	B04-L
04011-50200	B07-R	09500-35528	B02-R	76529-4112-0	B04-R	76539-3478-0	B04-L
04012-50080	B01-L		B03-L	76529-4115-2	B04-R	76539-3488-0	B04-L
04013-50050	B04-R	37720-2898-0	B08-R	76529-4118-0	B04-R	76539-4110-0	B04-R
04013-50120	B07-R	66616-3439-0	B02-R	76529-4120-0	B04-R	76539-4112-0	B04-R
04013-50200	B05-L	67111-4425-0	B02-R	76529-4408-0	B05-L	76539-4115-0	B04-R
04015-50120	B04-L	70712-1147-0	B04-R	76529-4409-0	B05-L	76539-4116-7	B04-R
04512-50050	B04-R	70712-3355-0	B01-R	76529-4414-2	B05-R	76539-4118-0	B04-R
04512-50100	B05-L	70712-3361-0	B01-R	76529-4415-0	B05-L	76539-4119-0	B04-R
	B06-L	70712-4114-2	B04-R	76529-9900-0	B09-L	76539-4120-0	B04-R
	B07-L	70712-4714-2	B07-L	76529-9902-0	B01-R	76539-4216-0	B05-L
	B07-R	70712-5114-0	B06-R	76529-9904-4	B01-R	76539-4311-0	B05-L
04512-50120	B04-L	70720-3335-0	B01-R	76530-1142-0	B04-R	76539-4314-0	B05-L
	B05-R	70720-3336-0	B01-R	76530-1148-0	B07-L	76539-4408-0	B05-L
	B06-L	70720-4715-4	B04-R	76530-6113-0	B08-R	76539-4409-0	B05-L
	B08-L	70721-3456-0	B03-L	76530-6117-0	B08-R	76539-4411-4	B05-L
04611-00520	B01-R	70721-4713-0	B07-L	76535-3344-0	B01-R	76539-4412-0	B05-L
	B02-R	70722-3331-0	B01-R	76539-1214-0	B01-R	76539-4414-0	B05-R
	B03-L	70722-3412-0	B02-R	76539-3115-0	B01-L	76539-4414-2	B05-R
			B03-L	76539-3118-0	B01-L	76539-4454-0	B06-L
04612-00170	B04-L	70722-4214-0	B05-L	76539-3121-0	B01-L	76539-4456-0	B06-L
04612-00220	B01-R	70722-4219-0	B05-L	76539-3212-0	B01-L	76539-4458-0	B06-L
	B02-R	70722-4313-0	B05-L	76539-3311-2	B01-R	76539-4459-0	B06-L
	B03-L	70722-4419-0	B05-L	76539-3313-0	B02-L	76539-4461-0	B06-L
04612-00250	B02-L	70722-4712-0	B07-L	76539-3315-0	B02-L	76539-4463-0	B06-L
04612-00300	B05-L	70723-6115-0	B08-R	76539-3315-2	B02-L	76539-4465-0	B08-L
04717-01200	B01-R						

NUMERICAL INDEX INDEX NUMERIQUE

B10-R

PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT	PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT	PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT	PART No. REFERENCE	LOCATION No. No. D'EMPLACEMENT
76539-4466-0	B06-L						
76539-4467-0	B08-L						
76539-4469-0	B08-L						
76539-4470-0	B08-L						
76539-4481-3	B06-L						
76539-4482-3	B06-L						
76539-4618-0	B06-L						
76539-4711-4	B07-L						
76539-4711-5	B07-L						
76539-5119-0	B07-R						
76539-5123-0	B07-R						
76539-5127-0	B07-R						
76539-5129-0	B08-L						
76539-5131-0	B08-L						
76539-5135-0	B08-L						
76539-6118-0	B08-R						
76539-6126-0	B04-R						
76539-9900-0	B09-L						
76539-9903-2	B02-L						
76539-9903-3	B02-L						
76543-4625-0	B06-L						
76546-3338-0	B01-R						
76550-1126-0	B04-R						
76550-3115-0	B01-L						
76550-3435-0	B02-R						
	B03-R						
76550-4219-0	B05-R						
	B07-R						
76568-1149-0	B04-R						

BSP.No.	76519-7111 I	
No / LINE	A(1)	B(2)
01	76519-00000 RC54-71B	76518-00000 RC60-71B

DESIGN CHANGE No.
76507-0021
76518-0003
76539-0108



KUBOTA TRACTOR CORPORATION

CORPORATE OFFICE: 3401 DEL AMO BOULEVARD, TORRANCE, CA 90503

WESTERN DIVISION: 6665 Hardaway Road, Stockton, CA 95215 • (209) 931-5051

CENTRAL DIVISION: 14855 F.A.A. Blvd., Fort Worth, TX 76155 • (817) 571-0900

NORTHERN DIVISION: 2626 Port Road, Columbus, OH 43217 • (614) 492-1100

SOUTHEAST DIVISION: 1025 North Brook Parkway, Suwanee, GA 30174 • (770) 995-8855



PRINTED IN U.S.A.

June 2002

Code No. 97898-30491

