

WSM

WORKSHOP MANUAL **KUBOTA EXCAVATOR**

KX080-4

Kubota

CONTENTS

TO THE READER TO THE READER

I INFORMATION

CONTENTS

INFORMATION

1. SAFETY FIRST I-1
2. IN THE INTEREST OF WORK
SAFETY I-2
3. LABELS DISPLAYED TO PROMOTE
WORK SAFETY I-6
4. MAIN SPECIFICATIONS I-12
5. DIMENSIONS I-13

G GENERAL

CONTENTS

GENERAL

1. CHECKING EXCAVATOR
IDENTIFICATION G-1
2. ENGINE IDENTIFICATION G-2
3. MUFFLER FULL ASSEMBLY
IDENTIFICATION G-5
4. GENERAL PRECAUTIONS G-7
5. HANDLING PRECAUTIONS FOR
ELECTRICAL PARTS AND WIRING G-11
6. TIGHTENING TORQUES G-16
7. OIL AND WATER CAPACITY TABLE G-20
8. MAINTENANCE INTERVALS G-21

1 MACHINE BODY

CONTENTS

SERVICING

1. FRONT 1-S1
2. SWIVEL FRAME 1-S8
3. TRACK FRAME 1-S22
4. MEASURING MACHINE
PERFORMANCE 1-S38
5. SWIVEL GEAR BACKLASH
PERFORMANCE 1-S40

2 ENGINE

CONTENTS

GENERAL

1. SPECIFICATIONS 2-G1
2. DIMENSIONS 2-G2
3. PERFORMANCE CURVES 2-G3
4. FAN DRIVE 2-G4

3 HYDRAULIC SYSTEM

CONTENTS

MECHANISM

1. DIAGRAM OF HYDRAULIC CIRCUIT 3-M1
2. HYDRAULIC DEVICE LAYOUT 3-M3
3. PUMP 3-M4
4. CONTROL VALVE 3-M12
5. SWIVEL MOTOR 3-M29
6. TRAVEL MOTOR 3-M34
7. HYDRAULIC CYLINDER 3-M39
8. PILOT VALVE 3-M42
9. SHOCKLESS VALVES 3-M52
10. SOLENOID VALVE 3-M54

SERVICING

1. PUMP 3-S1
2. CONTROL VALVE 3-S17
3. SWIVEL MOTOR 3-S26
4. SWIVEL JOINT 3-S41
5. TRAVEL MOTOR 3-S49
6. CYLINDER 3-S69
7. PILOT VALVE 3-S71
8. SHOCKLESS VALVES 3-S106
9. SWIVEL SHUTTLE VALVE 3-S107
10. SOLENOID VALVE 3-S108
11. ROUTING OF HYDRAULIC HOSES 3-S112
12. MEASURING HYDRAULIC DEVICE
PERFORMANCE 3-S133
13. HYDRAULIC DEVICE
PERFORMANCE STANDARDS 3-S158
14. TROUBLESHOOTING 3-S165

4 ELECTRICAL SYSTEM

CONTENTS

SERVICING

1. LAYOUT OF ELECTRICAL DEVICES
AND WIRING ROUTING 4-S1
2. METER PANEL OPERATION 4-S10
3. INSPECTIONS 4-S44
4. TROUBLESHOOTING (START-UP
EQUIPMENT VERSION) 4-S50
5. METHODS FOR DIAGNOSING
ERRORS 4-S51
6. TROUBLESHOOTING (METER
PANEL VERSION) 4-S53

5 CABIN

CONTENTS

MECHANISM

1. AIR CONDITIONING SYSTEM 5-M1
2. WIPER 5-M17

SERVICING

1. TROUBLESHOOTING 5-S1
2. SERVICE SPECIFICATIONS 5-S4
3. TORQUE 5-S5
4. PRECAUTIONS WHEN REPAIRING
THE REFRIGERANT SYSTEM 5-S6
5. INSPECTING AND CHARGING THE
REFRIGERANT SYSTEM 5-S11
6. INSPECTION AND DISASSEMBLY 5-S20
7. WINDOW WASHER 5-S36
8. CABIN GLASS REMOVAL AND
MOUNTING 5-S38
9. REMOVAL AND INSTALLATION OF
GLASS 5-S52
10. FRONT WINDOW 5-S57

TO THE READER

This Workshop Manual provides service personnel with information about the mechanisms, service and maintenance of the construction machinery. This Workshop Manual is divided into 3 sections, General, Mechanisms and Service.

■ General

This section contains information such as engine and equipment ID numbers, general precautions, maintenance schedules, inspections and maintenance items and special tools.

■ Mechanisms

This section describes the structure of mechanisms and explains their functions. Be sure that you fully understand this Mechanisms section prior to performing any service work, such as troubleshooting or when performing any disassembly or assembly work.

■ Service

This section contains information and procedures for performing maintenance on the backhoe, such as troubleshooting, service specification tables, torque specifications, items to be inspected and adjusted, disassembly and assembly procedures, as well as precautions, maintenance standard values and usage limits.

All of the illustrations, specifications and other information in this manual were created based on the latest model at the time of publication.

Please be aware that changes to the content may be made without prior notice.

■ NOTE

- **Corresponding model list**

Machine Model	Engine Model
KX080-4	V3307-CRS-T4

■ IMPORTANT

- **Refer to the information of the engine below.**
- Engine model : V2607-CR-E4B, V2607-CR-TE4B, V3307-CR-TE4B
- Web PDF-Code : No.9Y111-06740
- Hard Copy-Code : No.9Y121-06740
- CD-ROM-Code : No.9Y131-06740

© KUBOTA Corporation 2013

January, 2013

Record of Revisions

Last digit of the Code No.	Date	Main Revised Point and Corrective Measures	Remarks
1	2015.08.05	• Add the contents of pump assembly and disassembly, the contents of cabin glass removal and mounting.	S. M
2			
3			
4			

I INFORMATION

INFORMATION

CONTENTS

1. SAFETY FIRST	I-1
2. IN THE INTEREST OF WORK SAFETY	I-2
[1] WORKING SAFELY WITH THE EQUIPMENT MEANS ALWAYS FOLLOWING THESE INSTRUCTIONS:.....	I-2
(1) Precautions Before Working on the Machine	I-2
(2) Precautions Before Working on the Equipment.....	I-3
3. LABELS DISPLAYED TO PROMOTE WORK SAFETY	I-6
[1] LOCATIONS	I-6
[2] LABEL MAINTENANCE	I-11
4. MAIN SPECIFICATIONS	I-12
5. DIMENSIONS	I-13

1. SAFETY FIRST



SAFETY FIRST

- This "Safety Alert Symbol" is used in this manual and on labels on equipment to indicate important issues and warn of the danger of personal injury. Read and follow these warnings carefully.
- It is important that you thoroughly read these instructions and safety rules prior to working on the equipment and that you always follow them.



DANGER

- Indicates that failure to follow the warning will result in serious injury or death.



WARNING

- Indicates that failure to follow the warning may result in serious injury or death.



CAUTION

- Indicates that failure to follow the warning may result in injury.



IMPORTANT

- Indicates that failure to follow the warning may result in damage to or a breakdown of the equipment.



NOTE

- Indicates supplementary explanations that will be helpful when using the equipment.

[NOTE]


- Indicates other supplementary information to take note of.

RY9212001INI0001US0

2. IN THE INTEREST OF WORK SAFETY

[1] WORKING SAFELY WITH THE EQUIPMENT MEANS ALWAYS FOLLOWING THESE INSTRUCTIONS:

(1) Precautions Before Working on the Machine

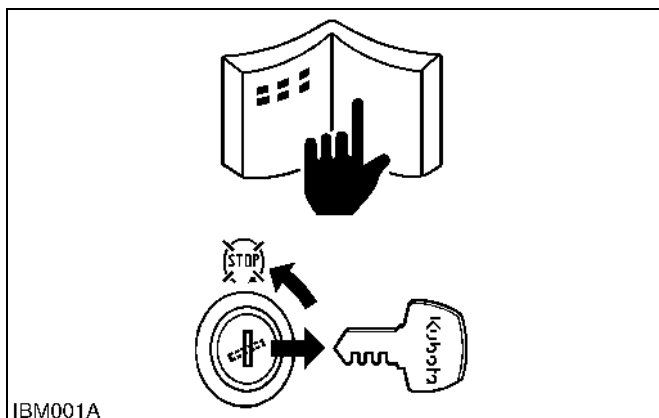


IBM001A

Before starting any service or maintenance work

- Read all the general and safety instructions in this manual, as well as the decals on your equipment.
- Always stop the engine whenever you leave the driver's seat to inspect or clean the machine or its devices, or to inspect or adjust parts.
- Choose a safe spot for inspecting the equipment-on flat, hard ground.


RY9212001INI0002US0

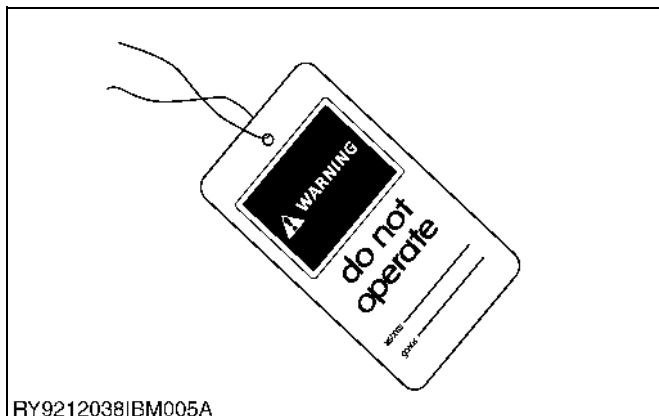

RY9212038IBM005A

- When performing maintenance on the equipment, hang the DO NOT OPERATE sign where it will be obvious from and around the driver's seat.
- When performing maintenance or repairs, always lower attachments to the ground, stop the engine and set the brake.
- When performing maintenance on the equipment, always disconnect the negative battery cable.
- Before using tools, make sure you understand how to use them correctly and use tools in good condition and of the right size for the job.

RY9212001INI0003US0

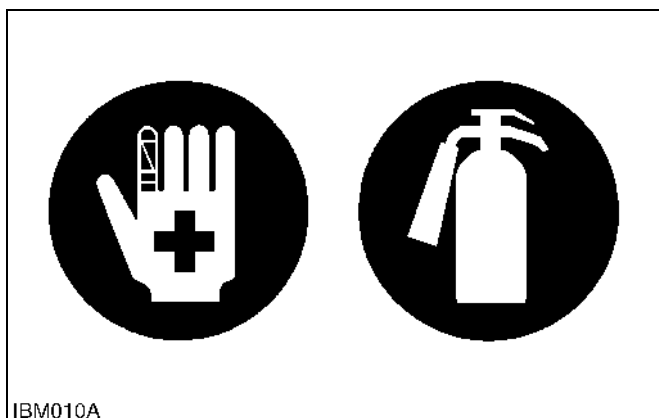


IBM010A

Be Ready for an Emergency

- Keep a first-aid kit and fire extinguisher close at hand so you can use it when needed.
- Keep emergency contact information for doctors, hospitals and ERs handy.

RY9212001INI0004US0

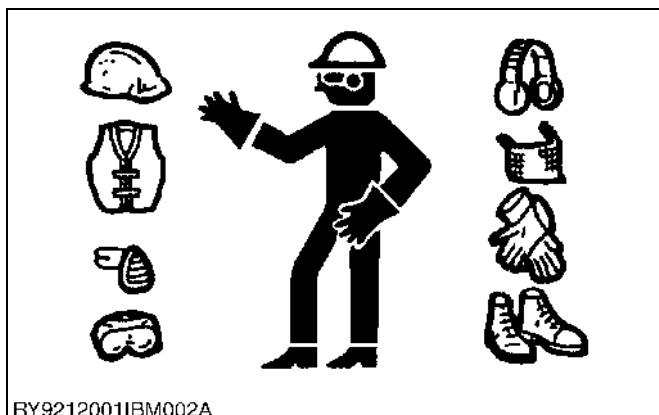


RY9212001IBM002A

- Wear clothes appropriate for working on equipment. Do not wear loose-fitting clothes as they may catch on the machine controls.
- When working on the equipment, use all safety gear, such as a helmet, safety glasses and shoes, that are required by law or regulation.
- Never perform maintenance while drowsy or under the influence of alcohol or drugs.

RY9212001INI0005US0

(2) Precautions Before Working on the Equipment

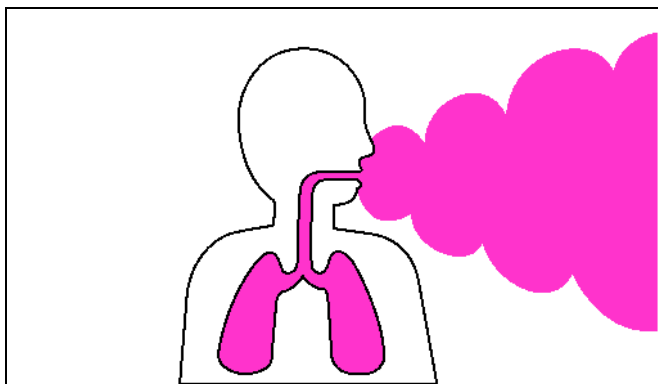

RY9212001IBM008A

- Stop the machine on a hard and level location and make sure the area around the machine is free of obstacles and hazardous materials. When parking the machine indoors, select a spot that can be properly ventilated.
- When performing work such as with a hammer, fragments may go flying, so make sure only authorized persons are around the machine.
- Before servicing the machine, clean it off so there is no mud, debris, oil or the like sticking to it.

RY9212001INI0006US0



RY9212001IBM003A

- Before getting on/off of the machine, clean off around the steps so there is no mud on them. Always give yourself 3-point support when getting on/off the machine.



CAUTION

- **3-point support means using both legs and one hand or both hands and one leg as you climb up/down.**

RY9212001INI0007US0




RY9212001IBM004A

Starting the Machine Safely

- Before starting the engine, always sit in the driver's seat and make sure the area is safe and clear.
- As it is dangerous, never start the engine from anywhere but the driver's seat.
- Always check and make sure control lever(s) are not engaged before starting the engine.
- Never start the engine by hot-wiring the starter circuit. This is not only dangerous, but may damage the machine.


RY9212001INI0008US0

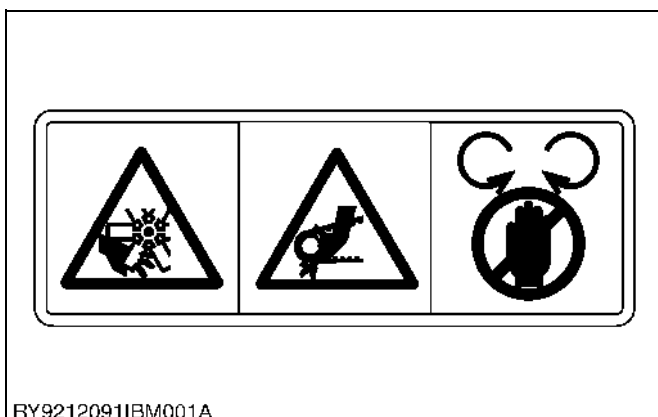


RY9212091IBM001A

- Whenever it is necessary to open the engine covers or hood in order to service the machine, always prop them open.
- If it is absolutely necessary to run the engine while working on the machine, make sure you are clear of all rotating or moving parts. Also take care not to leave anything, such as tools or rags, near any moving parts.

RY9212001INI0009US0

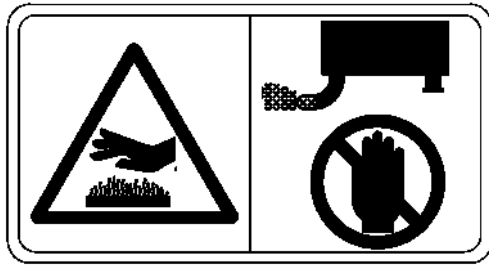


RY9212091IBM002A

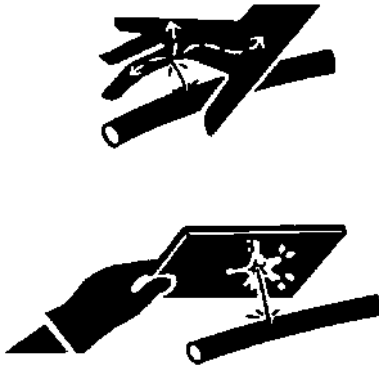

RY9212001IBM005A



RY9212001IBM006A

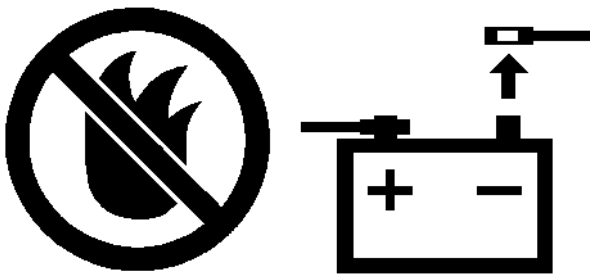

IBM006A

- The engine, muffler, radiator, hydraulic line, etc., have parts that remain very hot even after the engine has been stopped. Be sure to avoid these parts, as touching them can result in burns. Radiator coolant, hydraulic fluid and oil also remain hot. Therefore, do not attempt to remove caps and plugs, etc., before these fluids have sufficiently cooled.
- Make sure the coolant temperature has dropped sufficiently before opening the radiator cap. Also, since the inside of the radiator is pressurized, when removing the cap, first loosen it to release the pressure before removing the cap completely.

RY9212001INI0016US0

- The pressure in the hydraulic circuit stays at pressure even after the engine stops. Before removing parts, such as hydraulic devices from the machine, first release the pressure. Please note that when releasing residual pressure, the machine itself and/or implements may move without warning, so be very careful when releasing the pressure.
- Oil gushing out under pressure is extremely dangerous as it may pierce your skin or your eyes. Similarly, oil leaking out of pinholes is not visible. So when checking for oil leaks, always wear safety glasses and gloves and use a piece of cardboard or a wood block to shield yourself from oil.

RY9212001INI0011US0

No Smoking or Open Flames while Fueling

- Fuel is extremely flammable and dangerous. Never smoke near fuel. If fuel is spilled on the machine, its engine, or electrical parts, it may cause a fire. If fuel is spilled, wipe it all up immediately.
- Never smoke while filling the machine with fuel. And always tighten the fuel cap securely and wipe up any spilled fuel.


RY9212001INI0012US0

- Always wear safety glasses and gloves when handling the battery.
- The gas generated by the battery is flammable. Never weld or use tools like a grinder near the battery. And never smoke near it.
- When disconnecting the battery, always disconnect the negative cable first. When connecting the battery, always connect the positive cable first.

RY9212001INI0013US0



RY9212001IBM007A

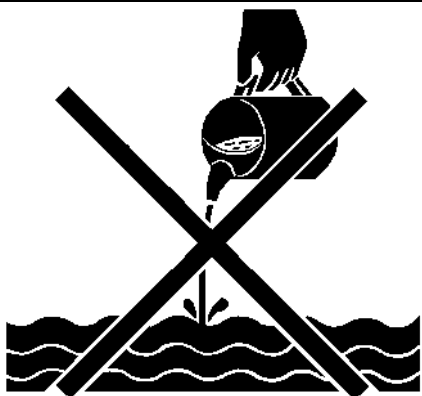

IBM009A

- Grease is under high pressure inside the hydraulic cylinder. It is very dangerous to loosen a grease nipple quickly as it may shoot off. Always loosen grease nipples slowly.
- And never face a grease nipple while loosening it.

RY9212001INI0014US0

Dispose of Waste Fluids Properly

- Never dispose of waste fluids on the ground, in the gutter, a river, pond or lake. Always dispose of hazardous substances like waste oil, coolant and electrolytic fluid in accordance with the relevant environmental protection regulations.
- Keep the safety plates clean so they can be read. If a safety plate is damaged and comes off or becomes illegible, put a plate with the same warnings back in its place.

RY9212001INI0015US0

3. LABELS DISPLAYED TO PROMOTE WORK SAFETY

[1] LOCATIONS

(1)

CAUTION

TO AVOID PERSONAL INJURY:

1. Read and understand operator's manual before attempting to start or operate the excavator. Read the manual of the attachment to do a correct operation safely when other attachments are installed instead of Kubota specified bucket.
2. Before starting engine, make sure all control levers are in neutral and the operating area is clear of all bystanders.
3. Never allow passengers on any part of the excavator while operating.
4. Know your work area before starting operation.
 - Check underground lines and cables.
 - Stay off slopes too steep for safe operation.
 - Check for hidden holes, obstacles or drop-offs and overhangs.
5. Make sure all shields are in place and securely fastened.
6. Before dismounting from the machine, lower all attachment to the ground, stop the engine and remove the key.
7. Damaged ROPS must be replaced, not repaired or revised.

IMPORTANT


Never use boom, dipper, or bucket to hammer or beat sideways.

Excavator is not intended for these usages.

1BAAABSAP078E

(2)

DANGER

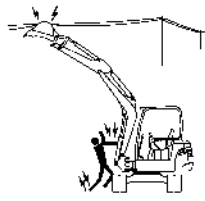

TO AVOID SERIOUS INJURY OR DEATH:

Check overhead clearance with electric wires.

1BAAACDAP243A

(3)

WARNING



ATTACHMENT IMPACT HAZARD
KEEP ATTACHMENT AWAY FROM CAB AND MACHINE.
FAILURE TO DO SO MAY RESULT IN SEVERE INJURIES OR DEATH OR DAMAGE TO THE BOOM/CYLINDER, HYDRAULIC HOSES OR THE CAB.

1BAAAARAP1000

(4)

WARNING

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrester may be required. The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

1AGAIHFAP069A

(5)



Pattern A ↔ Pattern B

CAUTION

TO AVOID PERSONAL INJURY:

1. Study control lever pattern A and pattern B. Then choose the one which is most familiar.
2. Position the pattern selector lever in either the left position (pattern A) or the right position (pattern B).
3. Engage lever lock to prevent accidental pattern change.
4. Familiarize yourself with the pattern selected by operating slowly.


1BAAAQAP0820

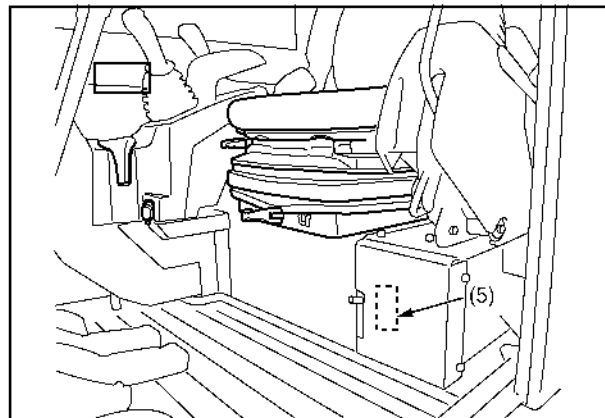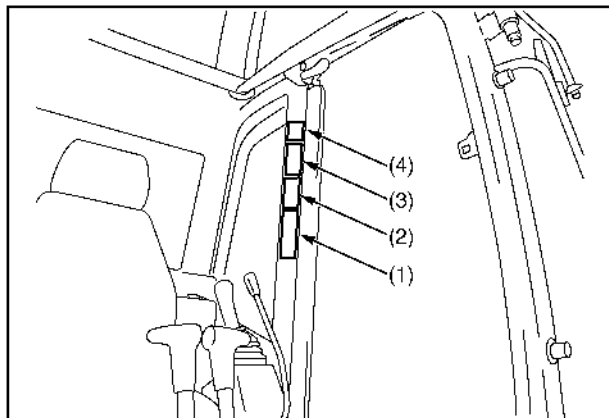

RY9212158ICI001A


RY9212158INI0003US0

(1)

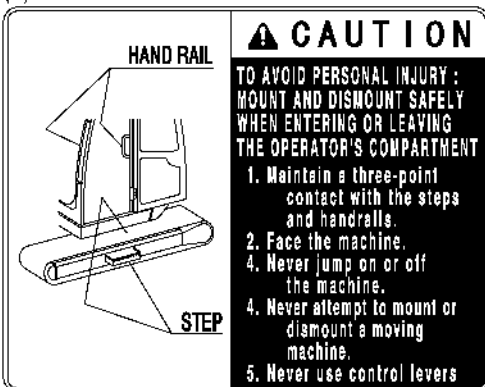

1BAABBP122E

(2)

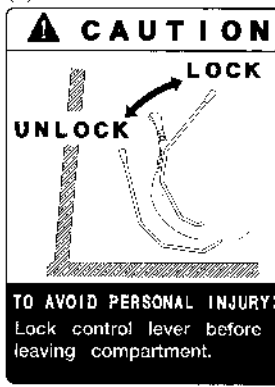

1BAAAARAP0450

(3)

WARNING

TO AVOID PERSONAL INJURY OR DEATH:

- Do not overextend capacity.
- Do not operate in case of poor or these values measured in lifting capacity, do so.
- The values are only valid when the machine is on a level surface and the ground is firm and stable.
- The values are only valid when the machine is on a level surface and the ground is firm and stable.
- The values are only valid when the machine is on a level surface and the ground is firm and stable.

Lift point radius (m) 11.3 (m)

Lift point height (m) 4.6 x 7.1 x 1.1

The lifting capacity is based on EN11007 and is not based on 70% of the rated load of the machine or 87.5% of the hydraulic lifting capacity of the machine.

The lifting capacity is based on EN11007 and is not based on 70% of the rated load of the machine or 87.5% of the hydraulic lifting capacity of the machine.

LIFT POINT HEIGHT (m)	LIFTING CAPACITY OVER-FRONT BLADE DOWN (m) 11.3 (m)				LIFTING CAPACITY OVER-FRONT BLADE UP (m) 11.3 (m)				LIFTING CAPACITY OVER-SIDE (m) 11.3 (m)			
	MIN	8	12	MAX	MIN	8	12	MAX	MIN	8	12	MAX
1.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5
3	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5
4.6	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5
7.1	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5
11.3	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5	3.5

Machines with ROPS cab and rubber tracks, without ROPS

1BAABBP122E

(4)

WARNING

TO AVOID PERSONAL INJURY OR DEATH:

Before moving the excavator, KNOW THE LOCATION OF THE DOZER BLADE. The excavator will travel in the direction of the dozer blade when drive levers are moved away from the operator.

DO NOT OPERATE WITHOUT ROPS. YOU COULD BE CRUSHED.

USE SEAT BELT

1BAABBP122E


(5)

CAUTION


TO AVOID PERSONAL INJURY:

Do not open engine hood before stopping engine. Only when engine does not stop with the key. Pull back this stop button and hold it until the engine stops.

1BAABBP122E

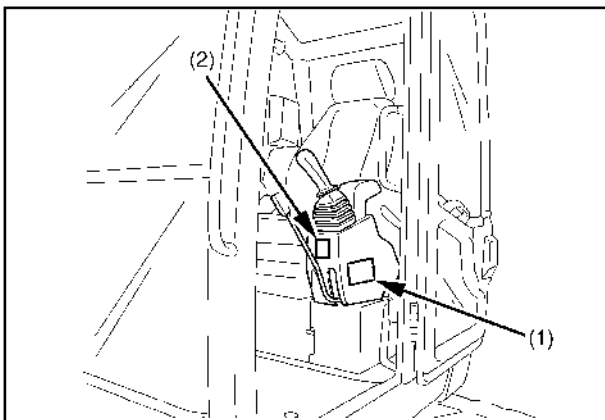


RY9212158ICI002A

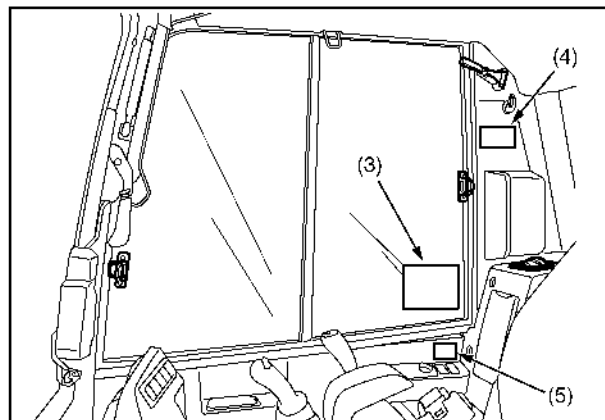


RY9212158INI0004US0

- (1) Do not allow any persons within the working range.

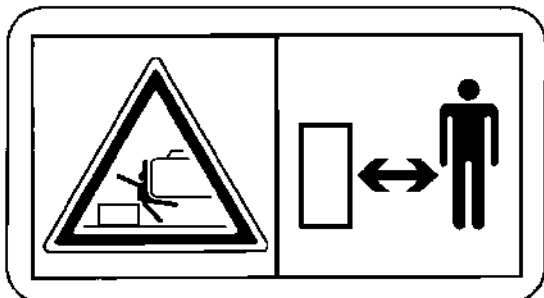

1BAAEAJP069A


- (2) Do not touch hot parts such as exhaust etc.

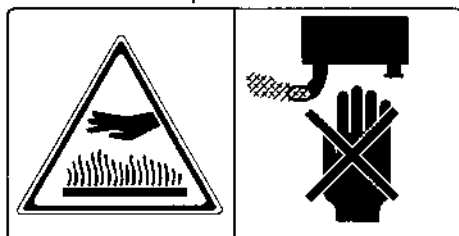

1BAAABBAP073E


- (3) **CAUTION**
TO AVOID PERSONAL INJURY
NEVER OPEN BEFORE
STOPPING ENGINE

1BAAGAAP0260

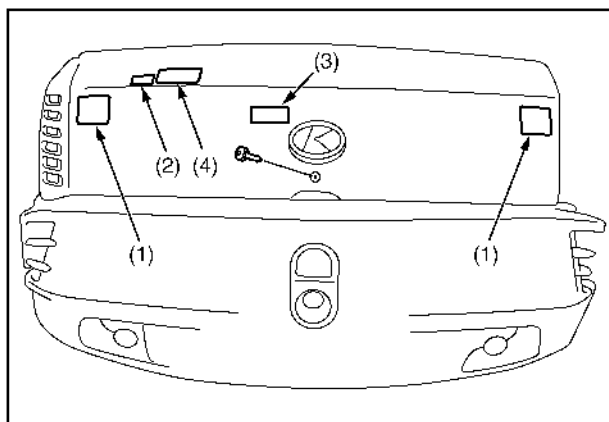


RY9212158ICI003A

- (4)

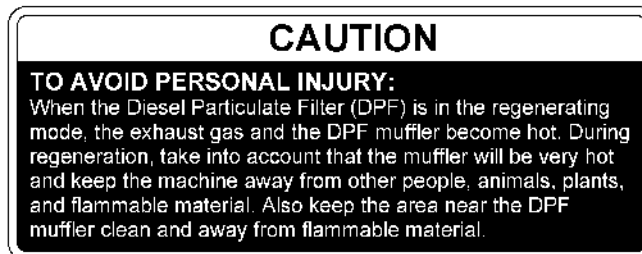


1BCAAAAP2180

- (5)

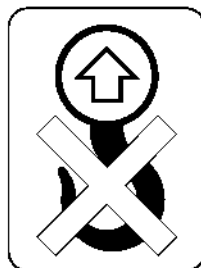


1BAABAUAP2720

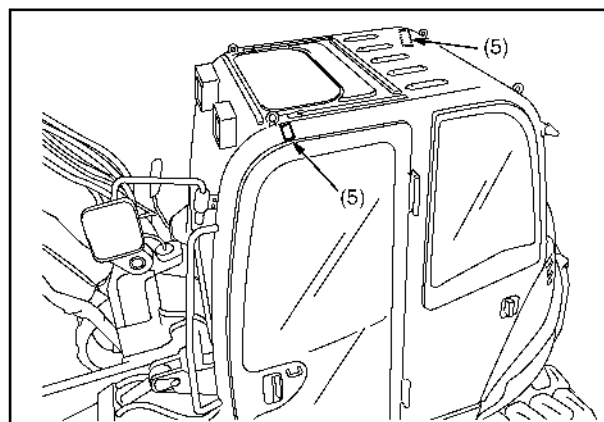


RY9212158INI0005US0

(1) [Both sides]

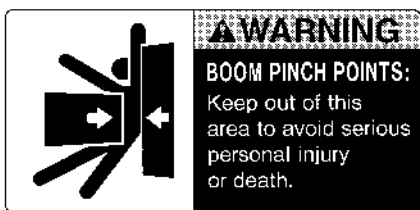

1BAAAQAP0930


(2) [Both sides]

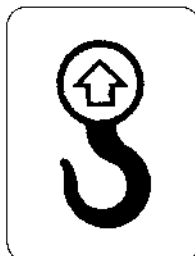

1BAAAQAP0940


(3)

Diesel fuel only No fire



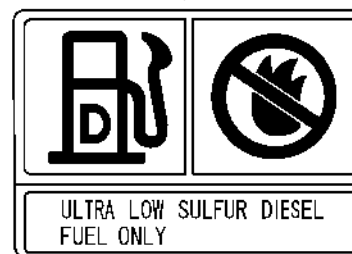


1BAAGAAP1810


(4) Do not loosen the grease nipple completely or too quickly.

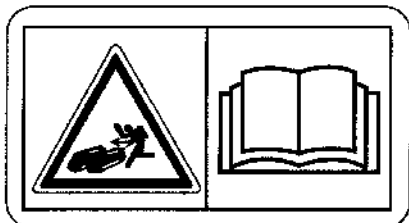

1BAABAMAP0010

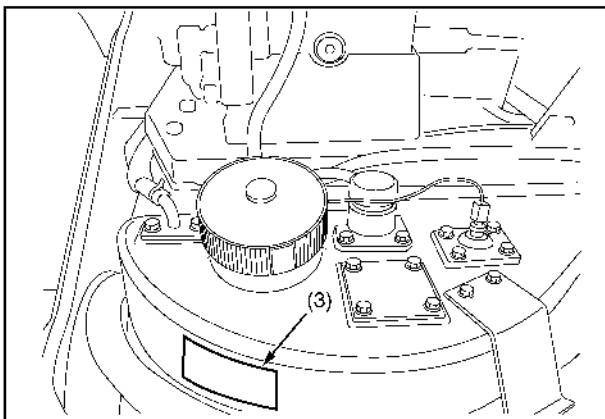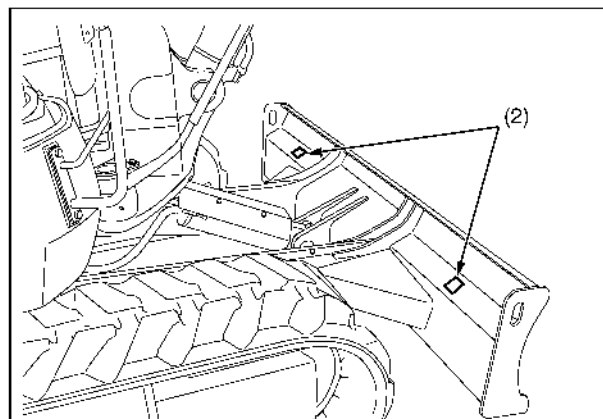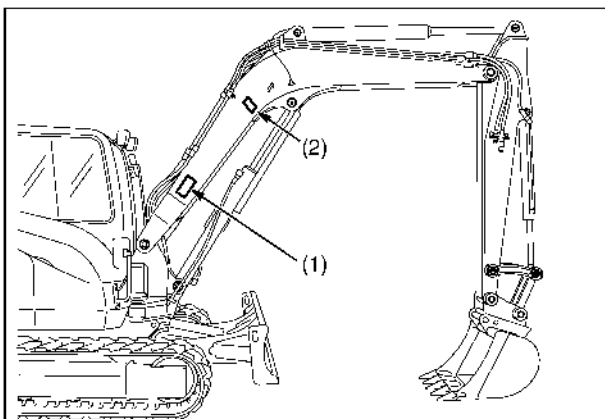


RY9212158ICI004A

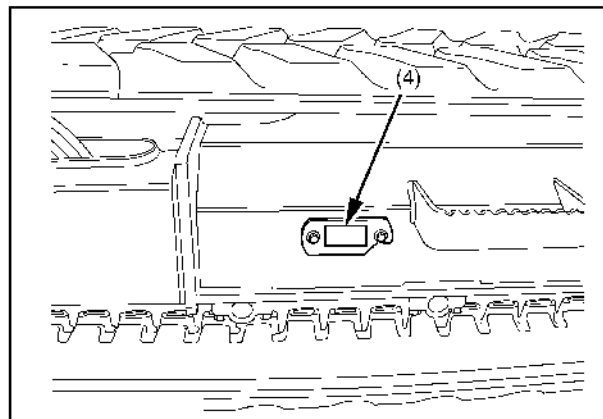

RY9212158INI0006US0

- (1) Do not touch hot parts such as exhaust etc.

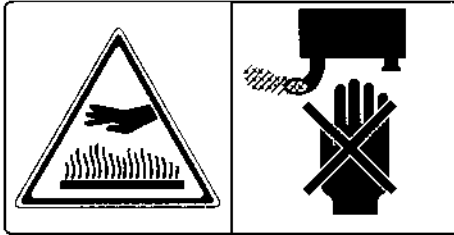


1BAAABBAP073E

- (2) Keep away from fan and fan belt.



1BCAAAAAP073E

- (3) Do not touch hot parts such as exhaust etc.

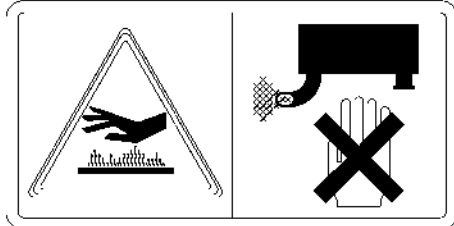

1BAAAADAP1160

- (4)





1BAAABDAP0790


- (5) Attention to the danger of burning.



1BAAABBAP1670

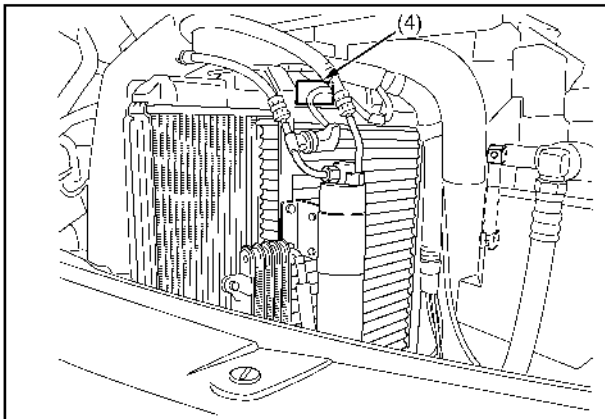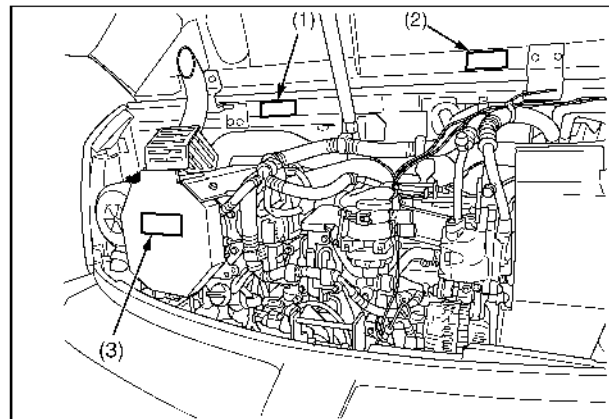

RY9212158ICI005A

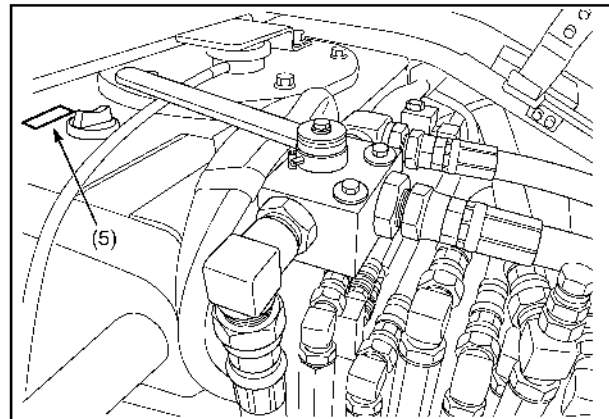


RY9212158INI0007US0

(1)

DANGER EXPLOSIVE GASES
Cigarettes, flames or sparks could cause battery to explode. Always shield eyes and face from battery. Do not charge or use booster cables or adjust post connections without proper instruction and training.
KEEP VENT CAPS TIGHT AND LEVEL
POISON CAUSES SEVERE BURNS
Contains sulfuric acid. Avoid contact with skin, eyes or clothing. In event of accident flush with water and call a physician immediately.
KEEP OUT OF REACH OF CHILDREN


1BAAAAQAP0960

(2)


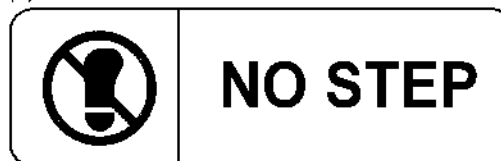


1BAAABDAP0780


(3) [Angle blade type only]

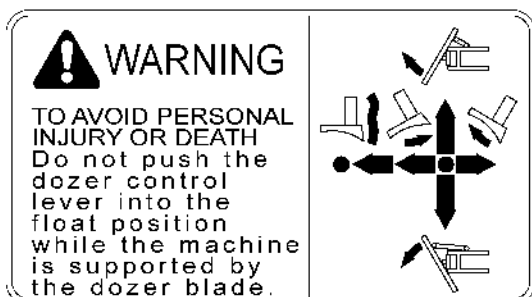

1BAAGACAP072A

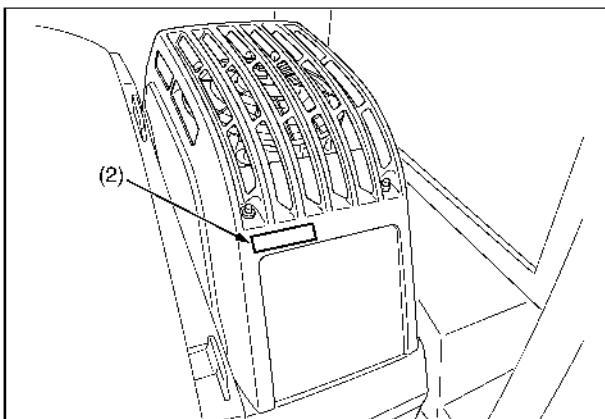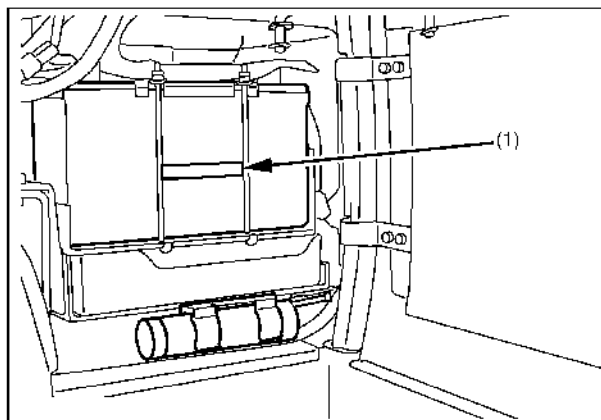

RY9212158IC1006A

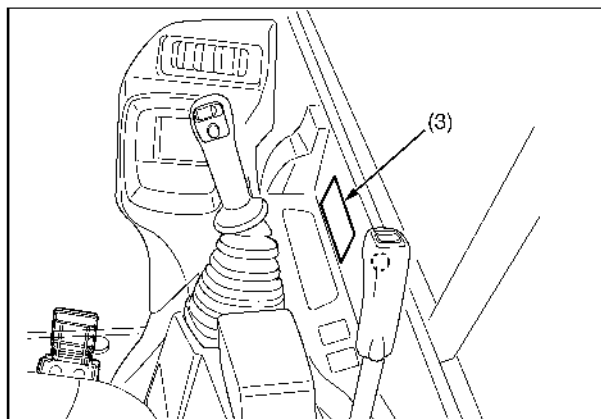

RY9212158INI0008US0

[2] LABEL MAINTENANCE

Thoroughly Read, Understand and Follow Safety Precautions on Labels

- Always keep labels in a clean, undamaged state.
- If labels get dirty, wipe them off with soapy water and a soft cloth.
If solvents such as paint thinner or engine oil are used, the text and or figures may fade away.
- When using a pressure washer to clean the equipment, do not spray any labels directly as doing so may make them peel off.
- If a label is damaged or lost, order a new one from your dealer and affix it as before.
- Before affixing a new label, completely wipe off any dirt or grime on the surface, allow it to dry and then affix in the same place.
- When replacing a part that has a label on it, replace the label at the same time.

RY9212001INI0018US0

4. MAIN SPECIFICATIONS


			KUBOTA EXCAVATOR				
Model name			KX080-4				
Type			Cabin			Angle Blade type Cabin	
Operating weight (including operator's weight)			Rubber tracks	Steel tracks (450 width)	Steel tracks (600 width)	Rubber tracks	Steel tracks (450 width)
			8290 kg 18280 lbs	8340 kg 18390 lbs	8470 kg 18670 lbs	8680 kg 19140 lbs	8730 kg 19250 lbs
Engine	Type		Water cooled 4 cycle diesel engine with 4 cylinder				
	Model name		KUBOTA V3307-CRS-T4				
	Total displacement		3331 cc (203.3 cu.in.)				
	Engine power	SAE gross	52.2 kW (70.0 Hp)				
		SAE net	48.8 kW (65.5 Hp)				
	Rated speed		2000 rpm				
	Low idling speed		1000 rpm				
Performance	Unit swing speed		9.5 rpm				
	Travel speed	Fast	4.9 km / h (3.1 mph)				
		Slow	2.7 km / h (1.7 mph)				
	Ground pressure (With operator)		36.0 kPa (0.367 kgf/cm ²) 5.22 psi	36.2 kPa (0.369 kgf/cm ²) 5.25 psi	27.6 kPa (0.281 kgf/cm ²) 4.00 psi	37.5 kPa (0.382 kgf/cm ²) 5.44 psi	37.7 kPa (0.384 kgf/cm ²) 5.47 psi
	Climbing angle		*36 % (20 deg)				
	Angle in case of crossing slope		*27 % (15 deg)				
Blade	Width x Height		2200 x 500 mm 86.6 x 19.7 in.			2200 x 510 mm 86.6 x 20.1 in.	
	Max swing	Left	—			0.44 rad (25 deg)	
		Right	—			0.44 rad (25 deg)	
Boom swing angle		Left	1.22 rad (70 deg)				
		Right	1.05 rad (60 deg)				
Pressure connection for attachments	Max. displacement (Theoretical)		100 L (26.4 U.S.gal) / min				
	Max. pressure		20.6 MPa 210 kgf/cm ² 2987 psi				
Fuel tank capacity			115 L (30.4 U.S.gal)				

■ NOTE

- Above dimensions are based on the machine with KUBOTA original bucket and 2100 arm.
- Specifications subject to change without notice.
- With unloaded digging bucket.
- Firm compacted soil.
- Operators must exercise extra caution and follow instructions in the operator's manual.
- Worse condition or heavier attachment to the above will decrease climbing angle.

RY9212158INI0001US0

5. DIMENSIONS

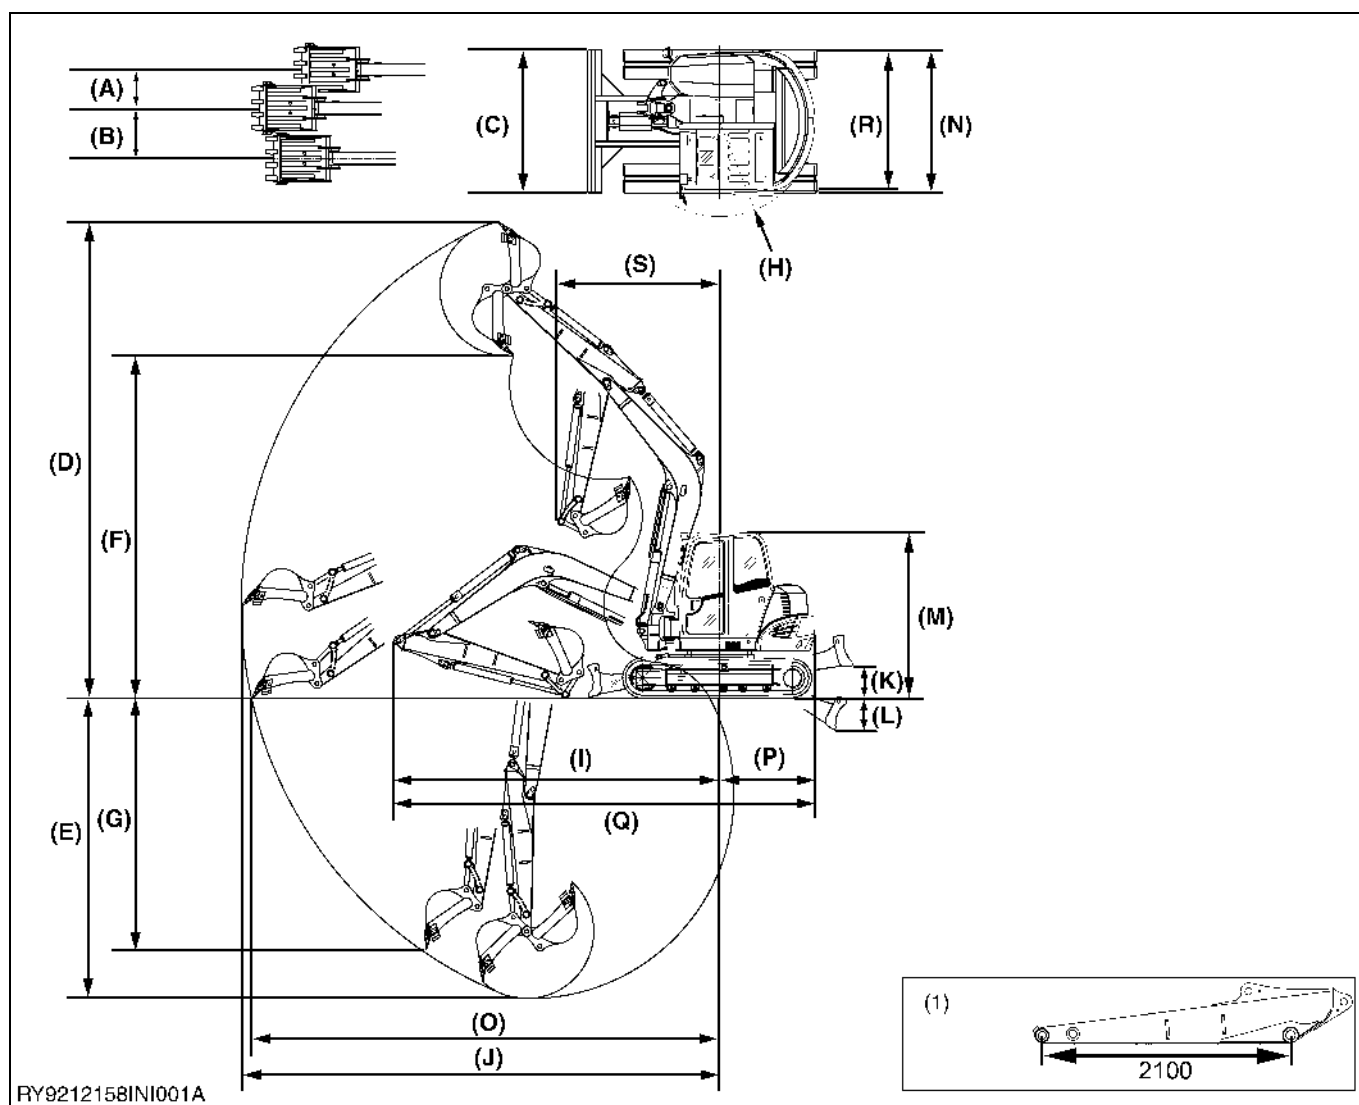

(1) Arm length (2100 Arm)

	(A)	(B)	(C)	(D)	(E)	(F)	(G)
KX080-4	590 mm 23.2 in.	770 mm 30.3 in.	2200 mm 86.6 in.	7300 mm 287.4 in.	5250 mm 206.7 in.	4600 mm 181.1 in.	3850 mm 151.6 in.
	(H)	(I)	(J)	(K)	(L)	(M)	(N)
KX080-4	1460 mm 57.5 in.	4990 mm 196.5 in.	7330 mm 288.6 in.	500 mm 19.7 in.	500 mm 19.7 in.	2540 mm 100.0 in.	2200 mm 86.6 in.
	(O)	(P)	(Q)	(R)	(S)		
KX080-4	7170 mm 282.3 in.	1460 mm 57.5 in.	6450 mm 253.9 in.	2150 mm 84.6 in.	2490 mm 98.0 in.		

- Above dimensions are based on the machine with KUBOTA original bucket.
- Above dimensions are based on the machine with rubber track.
- Specifications subject to change without notice.

RY9212158INI0002US0


G GENERAL

GENERAL

CONTENTS

1. CHECKING EXCAVATOR IDENTIFICATION	G-1
2. ENGINE IDENTIFICATION	G-2
[1] MODEL NAME AND SERIAL NUMBER	G-2
[2] E4B ENGINE	G-3
[3] CYLINDER NUMBER.....	G-4
3. MUFFLER FULL ASSEMBLY IDENTIFICATION	G-5
[1] PART NUMBER AND SERIAL NUMBER	G-5
4. GENERAL PRECAUTIONS.....	G-7
5. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING	G-11
[1] WIRING	G-11
[2] FUSES.....	G-13
[3] CONNECTOR	G-13
[4] WASHING THE MACHINE WITH A HIGH-PRESSURE WASHER	G-15
6. TIGHTENING TORQUES.....	G-16
[1] TORQUES FOR GENERAL USE NUTS AND BOLTS	G-16
[2] TORQUE FOR HYDRAULIC HOSE FITTINGS	G-17
(1) Torque for Hydraulic Hose Fittings.....	G-17
(2) Torques of Lock-Nuts for Elbows with Male Seats and Adaptors with O-rings (Straight Threads).....	G-17
[3] HOSE CLAMP SCREW TORQUE	G-18
7. OIL AND WATER CAPACITY TABLE	G-20
8. MAINTENANCE INTERVALS.....	G-21

1. CHECKING EXCAVATOR IDENTIFICATION



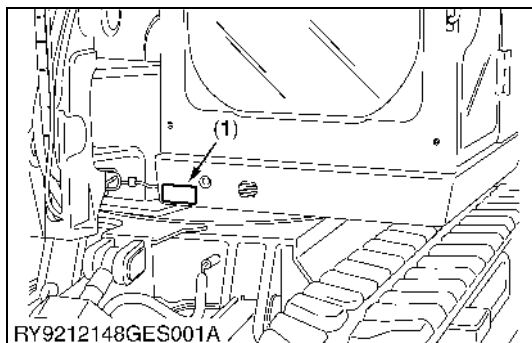


When consulting with your local KUBOTA dealer about this mini-excavator, please provide the model of the mini-excavator, its frame and engine numbers and the number of hours on the hour meter.

- (1) Mini-excavator Nameplate
(Model, frame number, engine number)
- (2) Frame Number
- (3) Engine Number


(a) Model Nameplate

RY9212148GEG0001US0

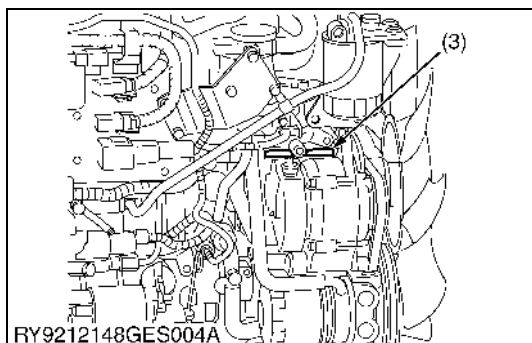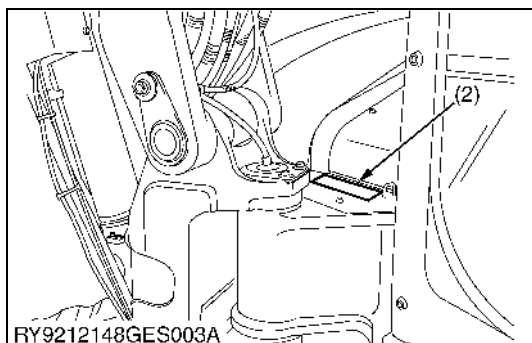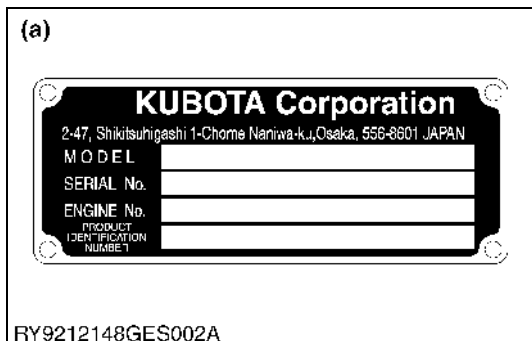

2. ENGINE IDENTIFICATION

[1] MODEL NAME AND SERIAL NUMBER

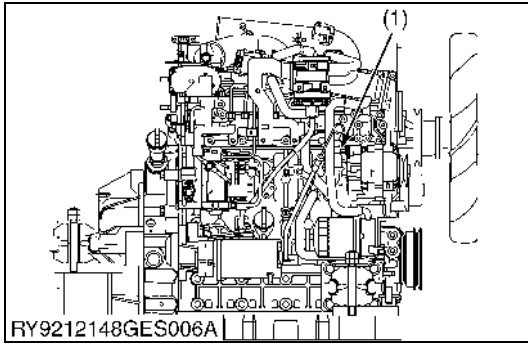

Be sure to check the engine nameplate and serial number when you wish to consult about the engine.

The model and serial number of the engine need to be checked prior to servicing the engine or replacing any of its parts.

■ Engine Serial No.

The engine serial number is the numerical ID of the engine and is printed after the engine's model number.

The year and month of manufacture are indicated as follows.

Engine Series

Number or Alphabet	Series	Number or Alphabet	Series
1	05 (include: WG)	6	GZ, OC, AC, EA, E
2	V3	7	03
3	08	8	07
4	SM (include: WG)	A	EA, RK
5	Air Cooled Gasoline	B	03 (KET Production)

Production Year

Alphabet or Number	Year	Alphabet or Number	Year
1	2001	F	2015
2	2002	G	2016
3	2003	H	2017
4	2004	J	2018
5	2005	K	2019
6	2006	L	2020
7	2007	M	2021
8	2008	N	2022
9	2009	P	2023
A	2010	R	2024
B	2011	S	2025
C	2012	T	2026
D	2013	V	2027
E	2014		

(1) Engine Model Name and Serial Number

(To be continued)

(Continued)

Production Month and Lot Number

Month	Engine Lot Number	
January	A0001 to A9999	from B0001
February	C0001 to C9999	from D0001
March	E0001 to E9999	from F0001
April	G0001 to G9999	from H0001
May	J0001 to J9999	from K0001
June	L0001 to L9999	from M0001
July	N0001 to N9999	from P0001
August	Q0001 to Q9999	from R0001
September	S0001 to S9999	from T0001
October	U0001 to U9999	from V0001
November	W0001 to W9999	from X0001
December	Y0001 to Y9999	from Z0001

* Alphabetical letters "I" and "O" are not used.

(a) (b)(c)(d) (e)
e.g. V2607 - 8 C L A001

- (a) **V2607**: Engine Model Name
 (b) **8**: Engine Series (07 series)
 (c) **C**: Production Year (2012)
 (d) **L**: Production Month (June)
 (e) **A001**: Lot Number: (0001 to 9999 or A001 to Z999)

RY9212148GEG0002US0

[2] E4B ENGINE

[Example: Engine Model Name V2607-CR-**TE4(C)B**-XXXX or V2607-CR-**TIE4(C)B**-XXXX]

The emission controls previously implemented in various countries to prevent air pollution will be stepped up as Nonroad Emission Standards continue to change. The timing or applicable date of the specific Nonroad Emission regulations depends on the engine output classification.

Over the past several years, KUBOTA has been supplying diesel engines that comply with regulations in the respective countries affected by Nonroad Emission regulations. For KUBOTA Engines, E4B will be the designation that identifies engine models affected by the next emission phase (See the table below).

When servicing or repairing **###-E4B** series engines, use only replacement parts for that specific E4B engine, designated by the appropriate KUBOTA Parts List and perform all maintenance services listed in the appropriate KUBOTA Operator's Manual or in the appropriate KUBOTA Workshop Manual. Use of incorrect replacement parts or replacement parts from other emission level engines (for example: E3B engines), may result in emission levels out of compliance with the original E4B design and EPA or other applicable regulations. Please refer to the emission label located on the engine head cover to identify Output classification and Emission Control Information. E4B engines are identified with "EF" at the end of the Model designation, on the US EPA label. Please note: E4B is not marked on the engine.

EMISSION CONTROL INFORMATION	
THIS ENGINE MEETS 2012 #### EMISSION REGULATIONS FOR U.S. EPA AND CALIFORNIA NONROAD CYCLES.	
Kubota KUBOTA Corporation	
MODEL: ###-EF	ENGINE DISP.: ####
FAMILY: 0####	
POWER: ## kW / ## HP	CATEGORY: ## - ##
VALVE CLEARANCE (COLD): ## mm EX ## mm	
ECS: ### ####	
ULTRA LOW SULFUR DIESEL FUEL ONLY	
DEL. ASSY.	####

RY9212134GES005A


Category (1)	Engine output classification	EPA regulation
EF	Less than 19 kW	Tier 4
	From 19 to less than 56 kW	Interim Tier 4
	From 56 to less than 75 kW	Interim Tier 4
	From 75 to less than 130 kW	Interim Tier 4

■ NOTE

- "E4B" engines are identified with "EF" at the end of the Model designation, on the US EPA label. "E4B" designates some Interim Tier 4 / Tier 4 models, depending on engine output classification.

RY9212148GEG0003US0

[3] CYLINDER NUMBER

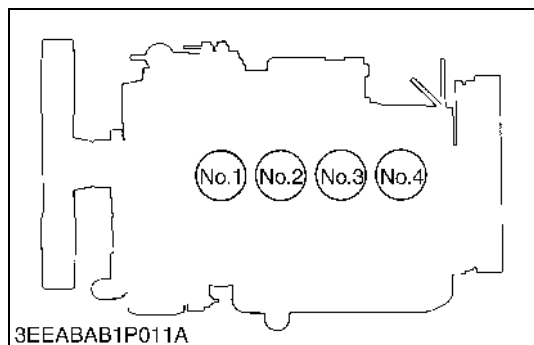

You can see the cylinder numbers of KUBOTA diesel engine in the figure.

The sequence of cylinder numbers is No.1, No.2, No.3 and No.4 and it starts from the gear case side.

RY9212134GEG0005US0

3. MUFFLER FULL ASSEMBLY IDENTIFICATION

[1] PART NUMBER AND SERIAL NUMBER



Diesel Particulate Filter (hereinafter referred to as the "DPF") Muffler Full Assembly Serial Number

The DPF muffler full assembly serial number is an identified number for the DPF muffler full assembly.

It shows the month and year of manufacture as below.

Year of manufacture

Alphabet or Number	Year	Alphabet or Number	Year
1	2001	F	2015
2	2002	G	2016
3	2003	H	2017
4	2004	J	2018
5	2005	K	2019
6	2006	L	2020
7	2007	M	2021
8	2008	N	2022
9	2009	P	2023
A	2010	R	2024
B	2011	S	2025
C	2012	T	2026
D	2013	V	2027
E	2014		

Month of manufacture

Month	DPF Muffler Full Assembly Lot Number	
January	A0001 to A9999	B0001 to BZ999
February	C0001 to C9999	D0001 to DZ999
March	E0001 to E9999	F0001 to FZ999
April	G0001 to G9999	H0001 to HZ999
May	J0001 to J9999	K0001 to KZ999
June	L0001 to L9999	M0001 to MZ999
July	N0001 to N9999	P0001 to PZ999
August	Q0001 to Q9999	R0001 to RZ999
September	S0001 to S9999	T0001 to TZ999
October	U0001 to U9999	V0001 to VZ999
November	W0001 to W9999	X0001 to XZ999
December	Y0001 to Y9999	Z0001 to ZZ999

* Alphabetical letters "I" and "O" are not used.

(a)(b) (c)
e.g. C L 0019


(1) DPF Muffler Full Assembly Part Number and Serial Number

(a) Year: C indicates 2012

(b) Month: L or M indicates June

(c) Lot Number: (0001 to 9999 or A001 to Z999)

RY9212148GEG0004US0

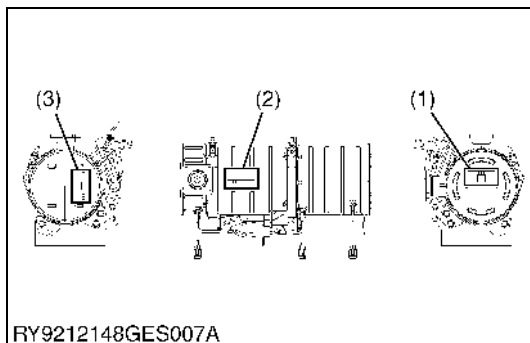


You must keep the records of the filter comp (DPF) part number and serial number before you remove the DPF for cleaning.

- (1) Body (DPF Outlet) Part Number and Serial Number
- (2) Filter Comp (DPF) Part Number and Serial Number
- (3) Catalyst (DOC) Part Number and Serial Number

RY9212148GEG0005US0

4. GENERAL PRECAUTIONS

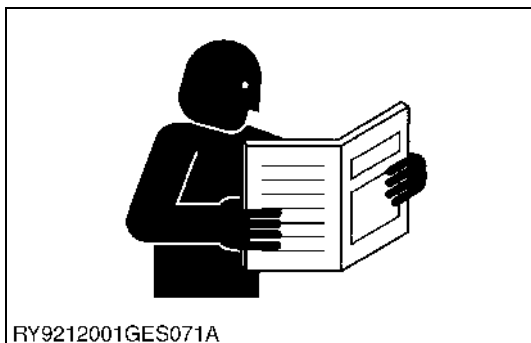

RY9212001GES071A

Whenever performing maintenance on the machine, always read the Safety Precautions in this manual and the Operator's Manual carefully, become familiar with them and perform the work safely.


Before performing any maintenance on the machine, make sure it is sufficiently clean and choose a sufficiently clean location to perform any disassembly.

Before performing maintenance on the machine, always disconnect the negative battery cable first.

Whenever a special tool is required, use the special tool that KUBOTA recommends. Make any special tools that are not used very frequently according to the diagrams in this manual.

Always use genuine KUBOTA parts to maintain the performance and safety characteristics of the machine.

RY9212001GEG0011US0

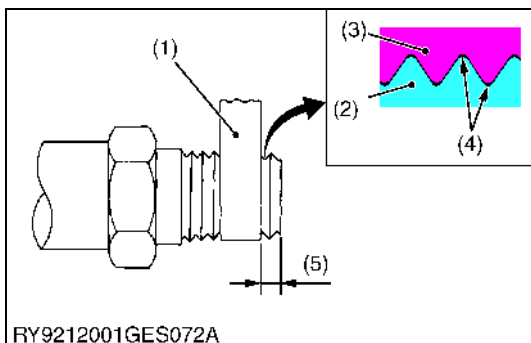


RY9212001GES072A

Plumber's Tape

- Wrap plumber's tape on the threads before tightening taper couplings. After wrapping (2 wraps) the plumber's tape, tighten to the specified torque. Once the coupling is tightened, do not loosen it as this will cause an oil leak.

(1) Plumber's Tape	(4) Gap
(2) External Thread	(5) Leave 1 to 2 Threads
(3) Internal Thread	

RY9212001GEG0012US0

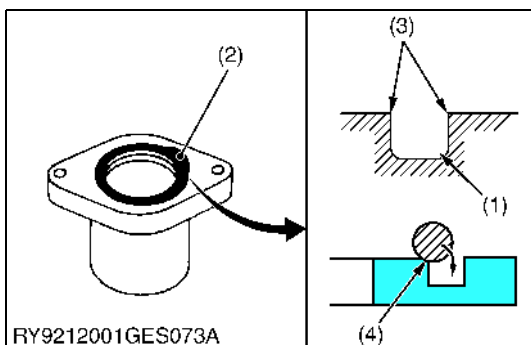


RY9212001GES073A

O-Ring

- Clean the groove the O-ring goes in and remove any burrs. Apply grease on the O-ring when inserting it in the groove. (Except floating seals)
- When putting the O-ring in the groove, be careful as it is easy at the very end to twist the O-ring against the inside of the groove. If it gets twisted, roll it gently with your fingertip to untwist it.

(1) O-Ring Groove	(4) If the Ring Touches This Corner, It Will Twist
(2) O-Ring	
(3) Check for Burrs	

RY9212001GEG0013US0

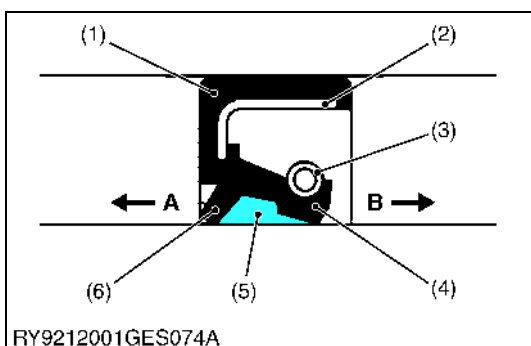


RY9212001GES074A

Oil Seal

- Do not face the lip of the oil seal in the wrong direction. Face the main lip toward the material to be sealed.
- After oil seals are replaced, apply grease to the moving parts around the lip to prevent the dry surfaces from wearing against each other when the engine is started. If the seal has a dust lip, fill the gap between the lips with grease.
- As a general rule, use a press to insert the oil seal in place. If that is not possible, use an appropriate tool to gently and evenly tap it into place, taking care that it does not go in at a slant. Press the seal all the way so it seats in the boss.

(1) Gasket	A : Air (Outside)
(2) Metal Ring	B : Hydraulic Chamber (Inside)
(3) Spring	
(4) Main Lip	
(5) Grease	
(6) Dust Lip	

RY9212001GEG0014US0

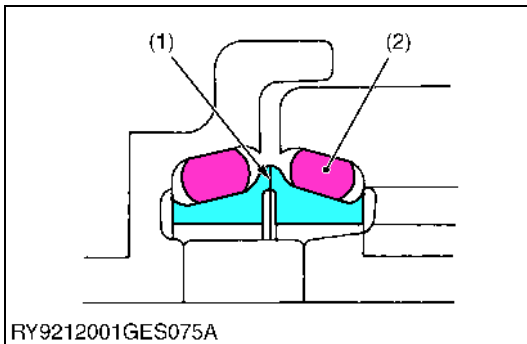


Floating Seal

- Be sure to wipe off any oil from the O-ring or surfaces that touch the O-ring. (For wheel motors, apply a light film)
- When putting an O-ring into a floating seal, make sure the O-ring does not twist.
- Apply a light film of oil to surrounding surfaces when working to get the floating seal with O-ring in place; take care that the surrounding surfaces, O-ring and housing are parallel with each other.
- After getting the seal in place, turn the engine over 2 or 3 revolutions, to both create a film of oil on surrounding surfaces and to properly seat the face of the seal.

(1) Surrounding Surfaces

(2) O-Ring

RY9212001GEG0015US0

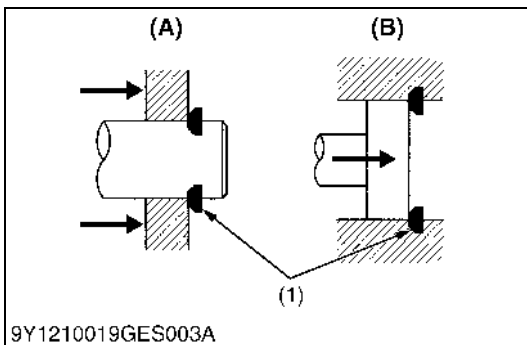


Snap Ring Related

- When installing external or internal snap rings, orient them as shown in the diagram so the angled side faces the direction of force.

(1) Position so the Angled Part
Receives the Force(A) External
(B) Internal

RY9212001GEG0016US0

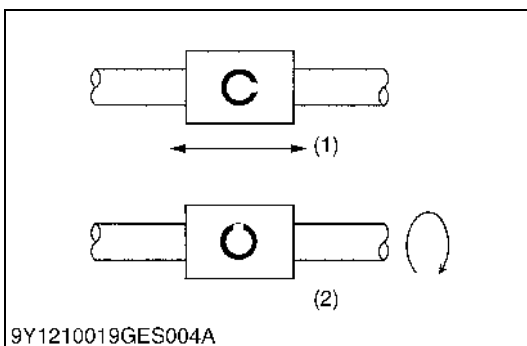


Spring Pins

- When driving a spring pin, face the split in the direction that receives the force, as shown in the diagram.

(1) With Lateral Movement

(2) With Rotational Movement

RY9212001GEG0017US0

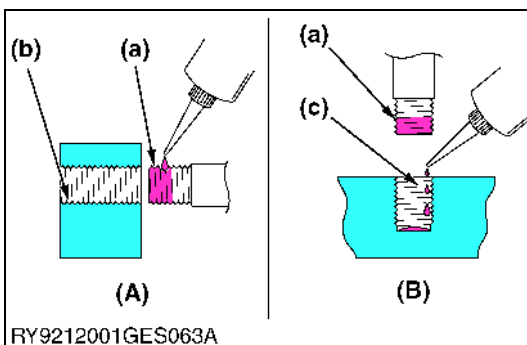


Adhesive

- Clean and dry the area where adhesive will be applied with a solvent so it is free of moisture, oil and dirt.
- Apply adhesive all around the threads of the bolt except the first set of threads at the tip and fill the grooves between the threads. If the threads or the grooves are large, adjust the amount of adhesive accordingly and apply it all around the bolt hole as well.

(A) Bolt Through-Hole (Nut)
(B) Pocket Bolt Hold
(Capsule Shape, etc.)(a) Apply Here
(b) Do Not Apply
(c) Drip On

RY9212001GEG0018US0

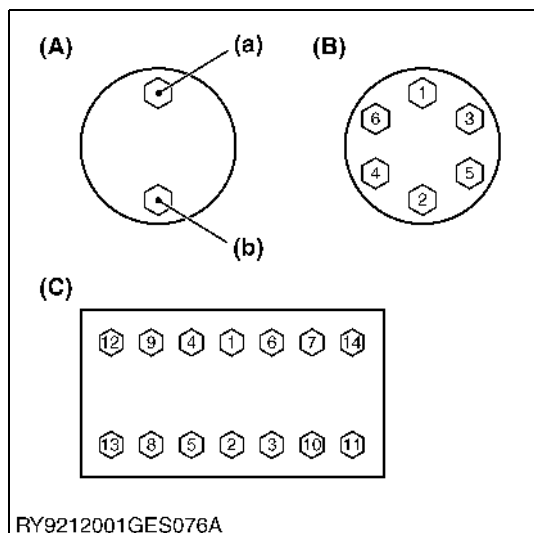

Tightening Bolts and Nuts

- Tighten bolts and nuts to their specified torque.
- Tighten nuts and bolts alternately top/bottom **(a) (b)**, left/right so the torque is distributed evenly.

(A) Top/Bottom Alternately
(B) Across Diagonally

(C) Diagonally Across the Center

RY9212001GEG0019US0

Assembling Hydraulic Hoses

- Tighten to their specified torque.
- Before assembling, wipe the inside of metal fittings clean of any dirt.
- After assembly, put the fitting under normal pressure and check that it does not leak.

RY9212001GEG0020US0

Elbow with Male Seat Assembly Procedure




When assembling an elbow with male seat, adhere to the following procedures to prevent deformation of O-rings and leaks.


1. Connecting to Valves
 - Clean the blow with male seat and the surface of the seal opposite and mount with the lock-nut on top.
 - Finger tighten till it touches the washer.
2. Positioning
 - Turn the mouth of the elbow back so it faces the right direction. (not back over 1 turn)
3. Fasten
 - Tighten the lock-nut to the specified torque with a wrench.

- (1) Lock-Nut
(2) Washer
(3) Seal (O-Ring)

- (4) Wrench for Holding
(5) Hose
(6) Torque Wrench for Tightening

RY9212001GEG0021US0

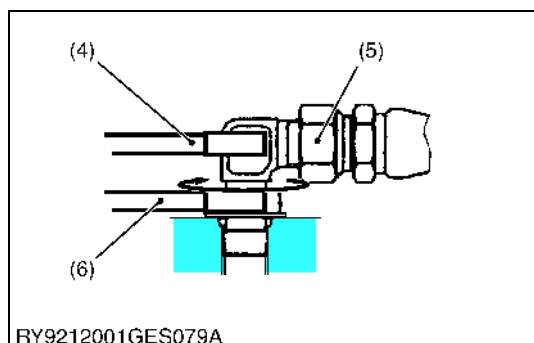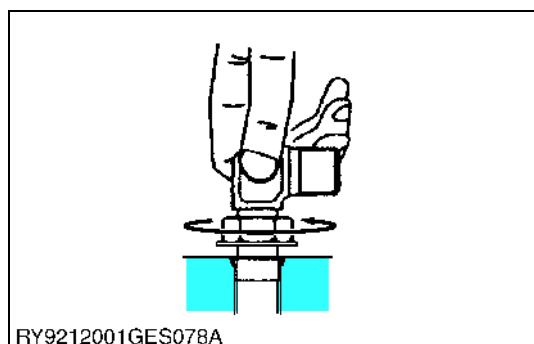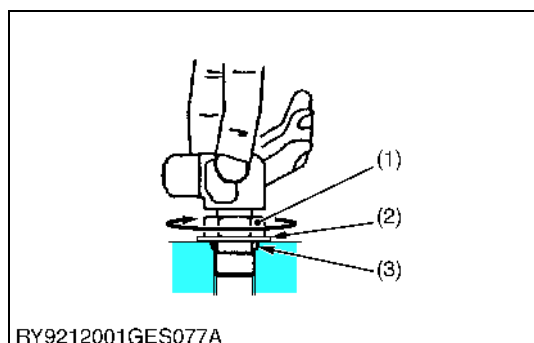

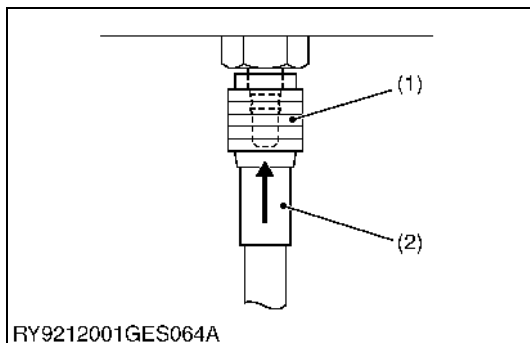


Installing and Removing Quick Couplings

- To remove a quick hose coupling, push the fitting in the direction of the arrow and pull on the plastic part in the opposite direction.
- To attach a quick coupler, push it in firmly in the direction of the arrow. Then check that it will not pull off.

(1) Plastic Part


(2) Fitting

RY9212001GEG0022US0

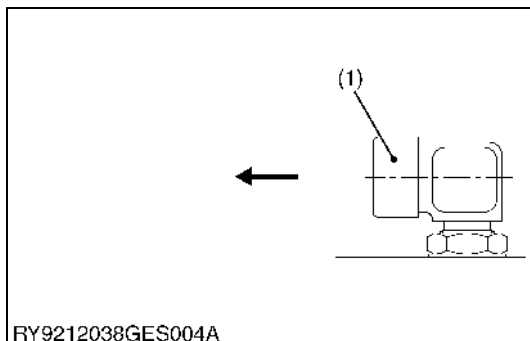


Connecting the face sealing (ORS) type hose


1. Remove the protective cap from the adapter and make sure the O-ring is installed in its groove. (If the O-ring is missing, fit the specified-size in position.)

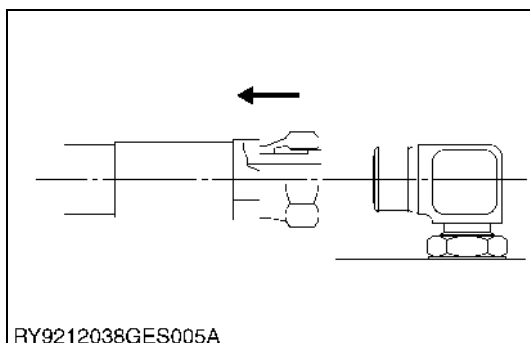

2. Shift the hose's cap nut in the direction of arrow until the O-ring contact face stretched out of the cap nut.

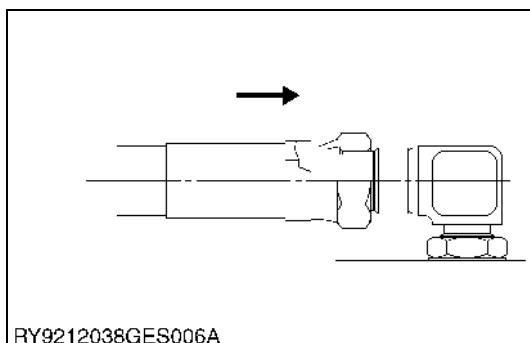

3. Bring the hose's O-ring contact face in close contact with the joint's O-ring. Make sure they do not come off each other.

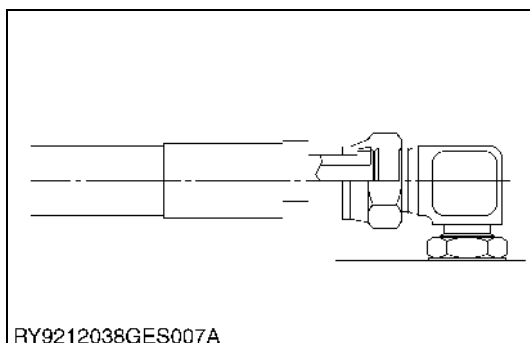


4. Tighten up the cap nut to the specified torque.

(1) Protective cap

RY9212038GEG0005US0

5. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING

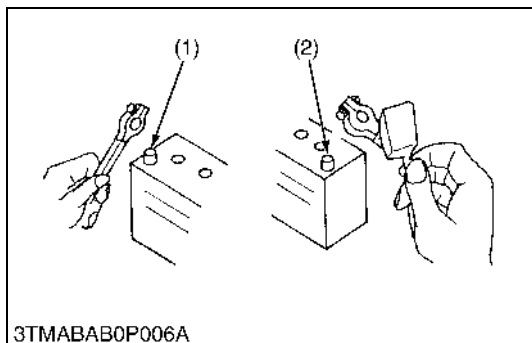

Follow the precautions below for handling electrical parts and wiring to ensure safety and prevent damage to the machine and nearby equipment.

■ IMPORTANT


- **Inspect electrical wiring for damage and/or loose connections.**
- **Do not alter or rewire any electrical parts or wiring.**
- **Always remove the negative battery cable first when disconnecting the battery and attach the positive cable first when connecting it.**

(1) Battery Cable (-) Side

(2) Battery Cable (+) Side

RY9212001GEG0023US0

[1] WIRING

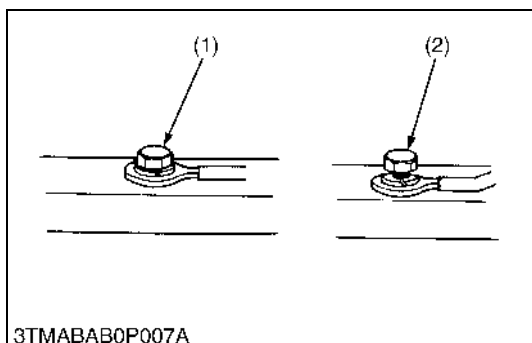


- Tighten wiring terminals securely.

(1) Correct (Tightened Securely)

(2) Incorrect (Poor Contact if Loose)

RY9212001GEG0024US0

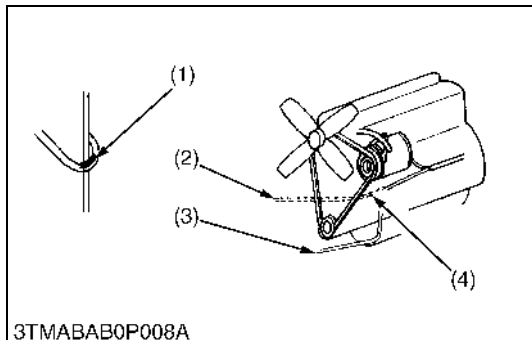


- Keep wiring away from hazards.

(1) Hazardous Positioning
(2) Wiring Position (Wrong)

(3) Wiring Position (Right)
(4) Hazardous Position

RY9212001GEG0025US0

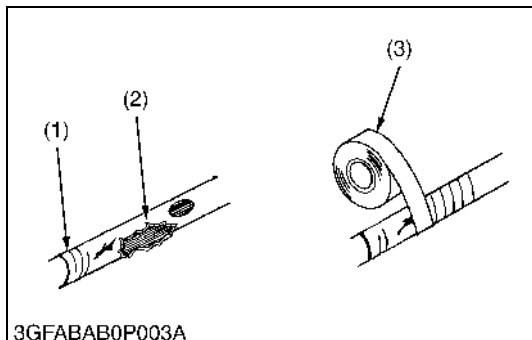


- Immediately repair or replace old or damaged wiring.

(1) Damaged
(2) Torn

(3) Electrical Tape

RY9212001GEG0026US0

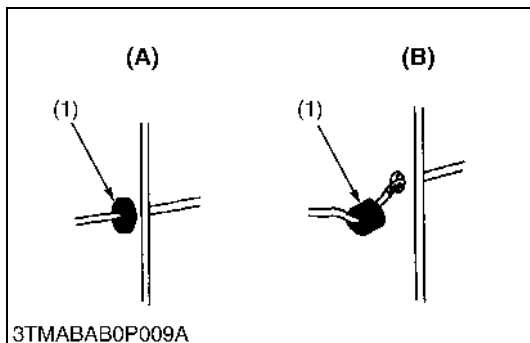


- Insert grommet securely.

(1) Grommet

(A) **Correct**
(B) **Incorrect**


RY9212001GEG0027US0

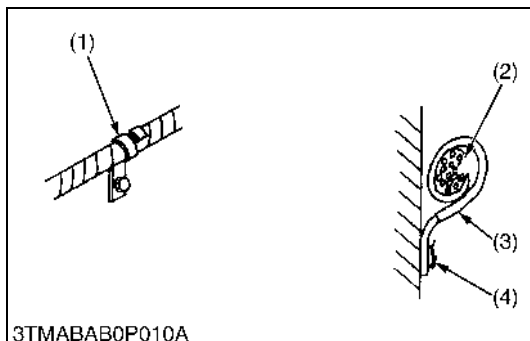

- Clamp wiring securely but do not damage wires with the clamp.

(1) Clamp (Spiral Clamp Around Wire) (3) Clamp
(2) Wire (4) Welding Mark


RY9212001GEG0028US0

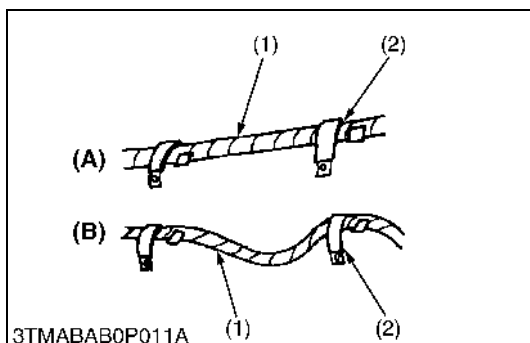

- Clamp wiring so it is not twisted, pulled too tight or sag too much. However, moving parts may require play in the wiring.

(1) Wire (A) **Correct**
(2) Clamp (B) **Incorrect**

RY9212001GEG0029US0

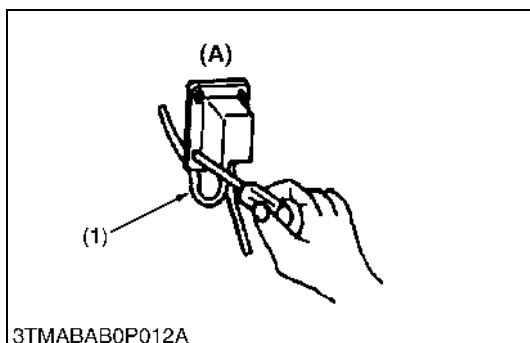


- Do not pinch or bind wiring when installing parts.

(1) Wire

(A) **Incorrect**


RY9212001GEG0030US0

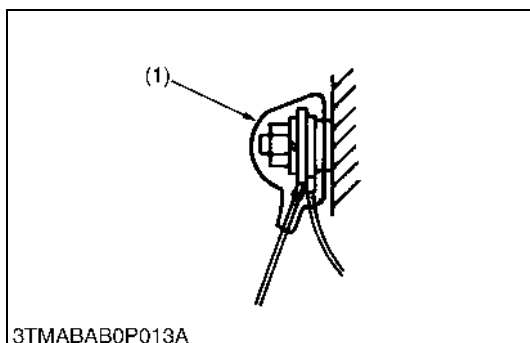

- After wiring, double-check terminal protectors and clamps before connecting battery cables.

(1) Cover (Install Covers Securely)

RY9212001GEG0031US0

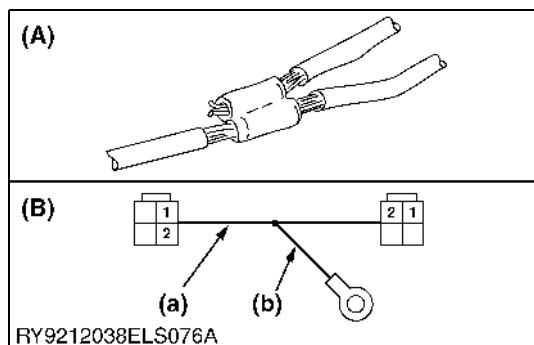

- Do not modify harnesses. The diameter of wires in each harness is determined after calculating its capacity.
- Modifying harnesses may cause a malfunction or a fire.

(A) Wiring Diagram


(B) Diagram of Modification

(a) Standard Wiring

(b) Modified Wiring

RY9212038ELS0008US0

[2] FUSES

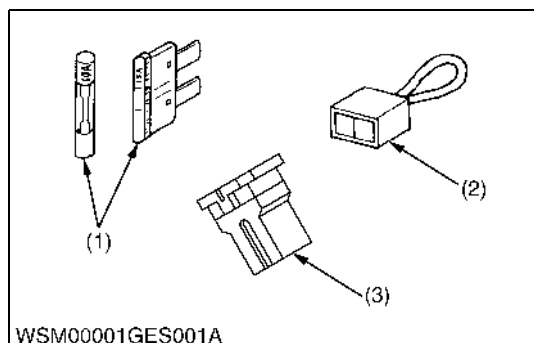

- Always use fuses of the specified capacity. Never use over or undersized fuses.
- Never use copper or steel wire in place of a fuse.
- Do not install accessories such as work lights, radios, etc., if your machine does not have an auxiliary circuit.
- Do not install accessories as they will exceed the capacity of fuses.


(1) Fuse

(2) Fusible Link

(3) Slow-Blow Fuse

RY9212001GEG0032US0

[3] CONNECTOR

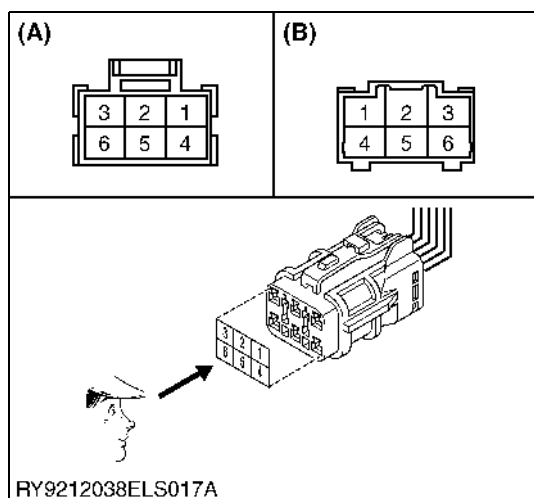

Connectors


The terminals of female connector are numbered from #1 on the top right when facing it.

Male terminals are numbered from #1 on the top left.

(A) Female connector terminals

(B) Male connector terminals


RY9212038ELS0010US0

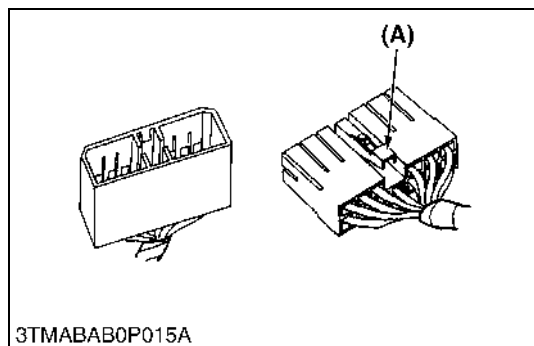

- Press the lock to disconnect locking connectors.

(A) Push

RY9212001GEG0033US0

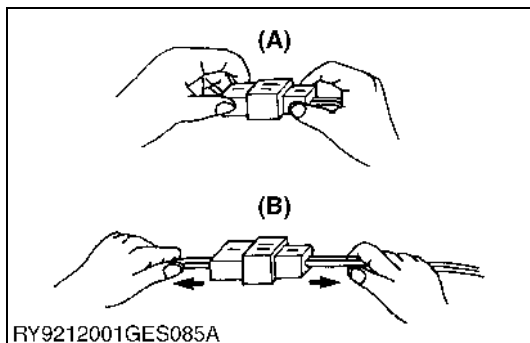


- Hold the connectors when separating them.
- Do not pull on the wire harness to separate the connectors.

(A) Correct

(B) Incorrect

RY9212001GEG0034US0

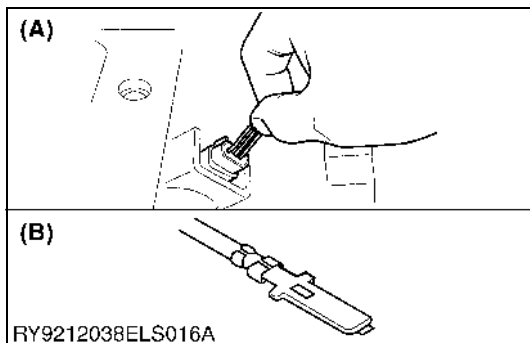


Pull on the harness from the connector and make sure the harness does not come off. (Pull with 3 kgf (30 N, 7 lbf) or less of force)

(A) Pull

(B) Loosened Crimping

RY9212038ELS0011US0

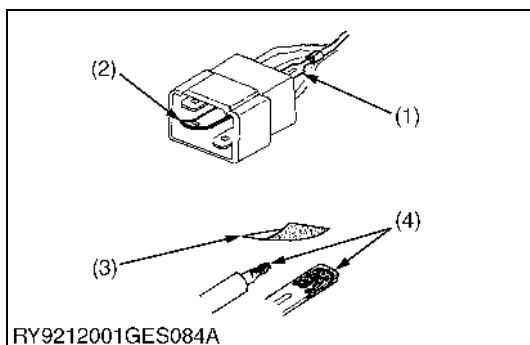

- Straighten bent prongs and make sure none are sticking out or missing.
- Remove corrosion from terminals with sandpaper.


(1) Missing Terminal

(3) Sandpaper

(2) Bent Prong

(4) Corrosion


RY9212001GEG0035US0

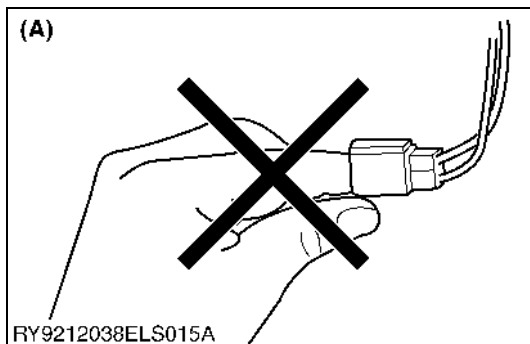

- Do not touch the terminals of connectors with bare hands.

(A) Do not touch

RY9212038ELS0012US0

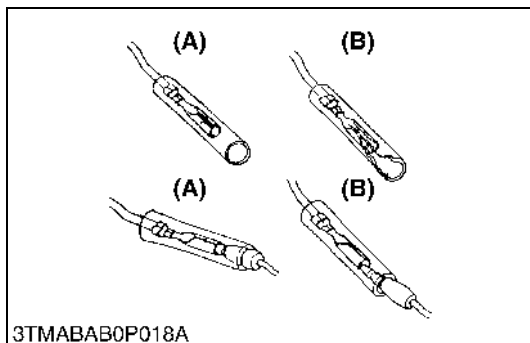


- Female connectors must not be spread too far open

(A) Correct

(B) Incorrect

RY9212001GEG0036US0

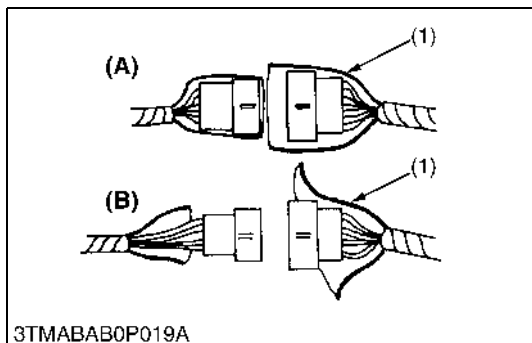

- The plastic covers of connectors must cover them completely.


(1) Cover

(A) Correct

(B) Incorrect

RY9212001GEG0037US0

[4] WASHING THE MACHINE WITH A HIGH-PRESSURE WASHER

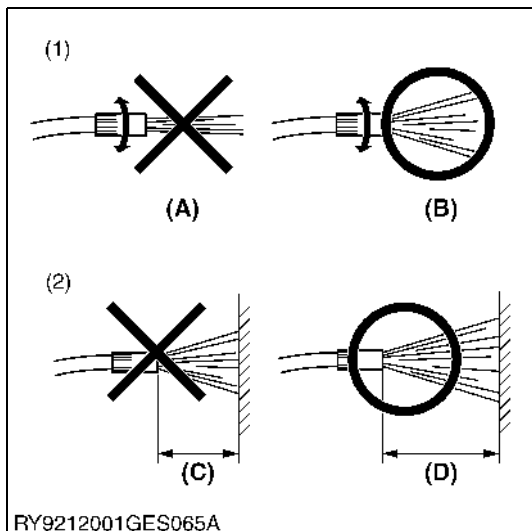

Using a high-pressure washer incorrectly can lead to personal injury and/or damage, break or cause parts of the machine to fail, so use the power washer properly according to its operator's manual and labels.

⚠ CAUTION

- Stand at least 2.0 meters from the machine and adjust the nozzle for a wide spray so it does not cause any damage. If you blast the machine with water or wash it from too close a distance,

- It may cause a fire due to damaged or cuts in the insulation of electrical wiring.
- An injury may result if hydraulic oil gushes out under high pressure, due to damaged hydraulic hoses.
- It may damage, break or cause parts of the machine to fail.

(Ex.)

- Stickers or labels may come off
- Electrical parts or the engine may fail due to water in them.
- Damage glass, resins, etc. or the rubber of oil seals.
- Tear off paint or the film from plating

(1) Do Not Blast with Water

(2) Never Wash from Too Close

(A) Blasting

(B) Wide Spray

(C) Less Than 2.0 m (80 in.)

(D) Over 2.0 m (80 in.)

RY9212001GEG0038US0

6. TIGHTENING TORQUES

[1] TORQUES FOR GENERAL USE NUTS AND BOLTS

Screws, bolts and nuts whose tightening torques are not specified in this Workshop Manual should be tightened according to the table below.

Indication on top of bolt	 4 No-grade or 4T						 7 7T						 9 9T		
Indication on top of nut	  No-grade or 4T												   6T		
Material of opponent part	Ordinariness			Aluminum			Steel			Aluminum			Steel		
Unit	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft	N·m	kgf·m	lbf·ft
M6	7.9	0.8	5.8	7.9	0.8	5.8	9.81	1.0	7.24	7.9	0.8	5.8	12.3	1.25	9.05
	to 9.3	to 0.95	to 6.8	to 8.8	to 0.9	to 6.5	to 11.2	to 1.15	to 8.31	to 8.8	to 0.9	to 6.5	to 14.2	to 1.45	to 10.4
M8	18	1.8	13	17	1.7	13	24	2.4	18	18	1.8	13	30	3.0	22
	to 20	to 2.1	to 15	to 19	to 2.0	to 14	to 27	to 2.8	to 20	to 20	to 2.1	to 15	to 34	to 3.5	to 25
M10	40	4.0	29	32	3.2	24	48	4.9	36	40	4.0	29	61	6.2	45
	to 45	to 4.6	to 33	to 34	to 3.5	to 25	to 55	to 5.7	to 41	to 44	to 4.5	to 32	to 70	to 7.2	to 52
M12	63	6.4	47	—	—	—	78	7.9	58	63	6.4	47	103	10.5	76
	to 72	to 7.4	to 53				to 90	to 9.2	to 66	to 72	to 7.4	to 53	to 117	to 12	to 86.7
M14	108	11	79.6	—	—	—	124	12.6	91.2	—	—	—	167	17	123
	to 125	to 12.8	to 92.5				to 147	to 15	to 108				to 196	to 20	to 144
M16	167	17	123	—	—	—	197	20	145	—	—	—	260	26.5	192
	to 191	to 19.5	to 141				to 225	to 23	to 166				to 304	to 31	to 224
M18	246	25	181	—	—	—	275	28	203	—	—	—	344	35	254
	to 284	to 29	to 209				to 318	to 32.5	to 235				to 402	to 41	to 296
M20	334	34	246	—	—	—	368	37.5	272	—	—	—	491	50	362
	to 392	to 40	to 289				to 431	to 44	to 318				to 568	to 58	to 419

RY9212032GEG0001US0


[2] TORQUE FOR HYDRAULIC HOSE FITTINGS

(1) Torque for Hydraulic Hose Fittings

Union nut (metal seal type)		Union nut (ORS type)	
1/8	7.8 to 11.8 N·m 0.8 to 1.2 kgf·m 5.7 to 8.7 lbf·ft	—	—
1/4	24.5 to 29.2 N·m 2.5 to 3.0 kgf·m 18.1 to 21.7 lbf·ft	9/16UNF	35.2 to 43.1 N·m 3.6 to 4.4 kgf·m 26.0 to 31.8 lbf·ft
3/8	37.2 to 42.1 N·m 3.8 to 4.3 kgf·m 27.5 to 31.1 lbf·ft	11/16UNF	60.0 to 73.5 N·m 6.1 to 7.5 kgf·m 44.3 to 54.2 lbf·ft
1/2	58.8 to 63.7 N·m 6.0 to 6.5 kgf·m 43.4 to 47.0 lbf·ft	13/16UNF	70.6 to 86.2 N·m 7.2 to 8.8 kgf·m 52.1 to 63.6 lbf·ft
3/4	117.6 to 127.4 N·m 12.0 to 13.0 kgf·m 86.8 to 94.0 lbf·ft	1-14UNS	105.8 to 129.4 N·m 10.8 to 13.2 kgf·m 78.0 to 98.4 lbf·ft
1 - 1/4	220.5 to 230.3 N·m 22.5 to 23.5 kgf·m 162.7 to 169.8 lbf·ft	—	—

RY9212148GEG0006US0

(2) Torques of Lock-Nuts for Elbows with Male Seats and Adaptors with O-rings (Straight Threads)

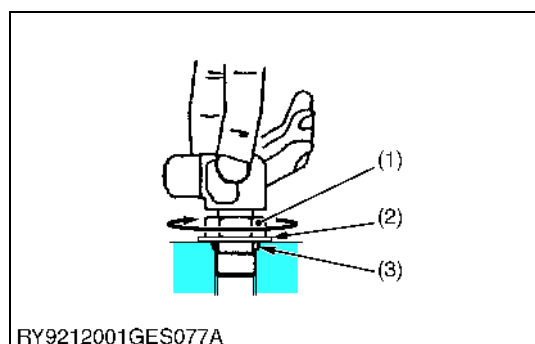


Tightening torque	1/8	15.0 to 16.5 N·m 1.5 to 1.7 kgf·m 11.1 to 12.2 lbf·ft
	1/4	24.5 to 29.4 N·m 2.5 to 3.0 kgf·m 18.1 to 21.7 lbf·ft
	3/8	49.0 to 53.9 N·m 5.0 to 5.5 kgf·m 36.1 to 39.8 lbf·ft
	1/2	58.8 to 63.7 N·m 6.0 to 6.5 kgf·m 43.4 to 47.0 lbf·ft
	3/4, 1	117.6 to 127.4 N·m 12.0 to 13.0 kgf·m 86.8 to 94.0 lbf·ft
	1-1/4	220.5 to 230.3 N·m 22.5 to 23.5 kgf·m 162.8 to 170.0 lbf·ft
	7/8 - 14UNF	55.9 to 60.8 N·m 5.7 to 6.2 kgf·m 41.2 to 44.8 lbf·ft

(1) Lock-nut
(2) Washer

(3) Seal (O-ring)

RY9212148GEG0007US0


[3] HOSE CLAMP SCREW TORQUE

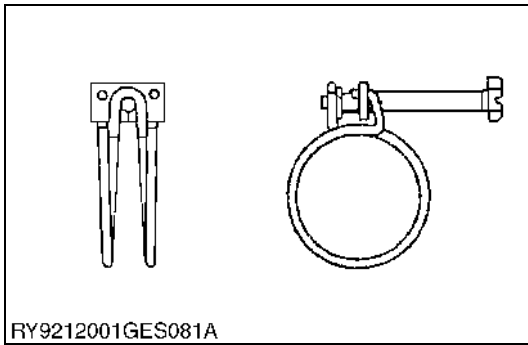

Type 1

Tightening torque	$\phi 10$ - $\phi 14$	6C040-58721	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft
	$\phi 12$ - $\phi 16$	09318-89016	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft
	$\phi 19$ - $\phi 25$	09318-89024	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft
	$\phi 31$ - $\phi 40$	09318-89039	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft
	$\phi 36$ - $\phi 46$	09318-89045	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft
	$\phi 44$ - $\phi 53$	09318-89052	3.9 to 4.9 N·m 40 to 50 kgf·cm 2.9 to 3.6 lbf·ft
	$\phi 51$ - $\phi 59$	09318-89058	3.9 to 4.9 N·m 40 to 50 kgf·cm 2.9 to 3.6 lbf·ft
	$\phi 86$ - $\phi 96$	RD809-42241	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft

RY9212001GEG0045US0

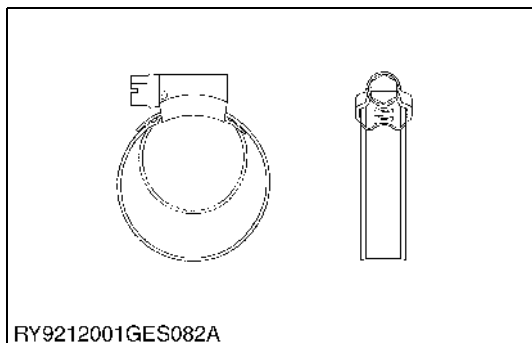**Type 2**

Tightening torque	$\phi 13-\phi 20$	RB101-63631	2.5 to 3.4 N·m 25 to 35 kgf·cm 1.8 to 2.5 lbf·ft
	$\phi 15-\phi 25$	RC101-64581	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 19-\phi 28$	R1401-63211	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 22-\phi 32$	R1401-63151	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 26-\phi 38$	68311-72821	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 32-\phi 44$	RD411-63821	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 44-\phi 56$	35820-15181	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 50-\phi 65$	RC401-63191	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 58-\phi 75$	36919-04591	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 60-\phi 80$	RD809-63101	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 68-\phi 85$	RD809-63061	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft
	$\phi 77-\phi 95$	69284-63171	4.9 to 5.9 N·m 50 to 60 kgf·cm 3.6 to 4.3 lbf·ft

RY9212001GEG0046US0

7. OIL AND WATER CAPACITY TABLE

Item		KX080-4	Notes
Engine oil (when filter changed)		9.7 L (2.6 U.S.gal)	API type, CJ-4
Coolant		10.5 L (2.77 U.S.gal)	Antifreeze Kubota LLC-N-50F Mixture ratio 50%
Reserve tank		1.3 L (0.34 U.S.gal)	
Fuel (full)		115 L (30.4 U.S.gal)	JIS #3 diesel
Hydraulic oil	Total volume (Std. spec.)	146 L (38.6 U.S.gal)	Tellus oil S2M46
	Inside tank (gauge middle)	75 L (20.0 U.S.gal)	
Travel motor		1.35 L (0.36 U.S.gal)	Gear oil SAE#90 (API GL-4)
Idler assy		80 ml (4.88 cu.in.)	Engine oil SAE #30CD (monograde)
Track rollers		80 ml (4.88 cu.in.)	
Carrier rollers		80 ml (4.88 cu.in.)	
Grease		—	EP2

RY9212158GEG0001US0

8. MAINTENANCE INTERVALS

No.	Check points		Measures	Hour meter indication																Interval			
				50	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800				1000
1	Coolant		check	Daily check																every 2 years			
			change																				
2	Fuel		check	Daily check																			
3	Engine oil		check	Daily check																every 500 hrs			
			change											○									○
4	Hydraulic oil		check	Daily check																every 1000 hrs	*1		
			change																○				
5	Grease front attachments	Bucket and bucket link pin / Dozer angle pin and angle cylinder boss	—	Daily check																every 100 hrs			
		Boom swing fulcrum	—		○		○		○		○		○		○		○		○				
		Others	—					○				○					○		○				
6	Radiator and oil cooler		check	Daily check																			
7	Washer liquid		check	Daily check																			
8	Engine and electrical wiring		check	Daily check																			
9	Water separator		drain	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 hrs		
10	Fuel tank		drain	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 hrs		
11	Battery condition		check	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 hrs		
12	Greasing swing bearing teeth		—	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	every 50 hrs		
13	V-belt tension		check	Daily check																			
			adjust				○				○				○				○				○
14	Radiator hoses and clamps		check				○				○				○				○	○	every 200 hrs		
			replace																		every 2 years		
15	Air filter element	Outer element	clean				○				○				○				○	○	every 200 hrs	*2	@
			replace																○	every 1000 hrs	*2		
		Inner element	replace																	○	every 1000 hrs	*2	
16	Greasing swing ball bearing		—				○				○				○				○	○	every 200 hrs		
17	Fuel filter cartridge		replace										○							○	every 500 hrs		@
18	Engine oil filter		replace										○							○	every 500 hrs		
19	Drive unit oil		change	●									○								every 500 hrs		
20	Hydraulic return filter cartridge		replace					●										○			every 500 hrs		
21	Hydraulic suction filter element		replace																	○	every 1000 hrs	*4	
22	Filter in the pilot hydraulic system		replace																	○	every 1000 hrs	*4	
23	Injector tip		check																		every 1500 hrs	*4	@

No.	Check points	Measures	Hour meter indication																	Interval		
			50	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	1000			
24	Oil separator element	replace																		every 1500 hrs	*4	@
25	EGR cooler	check																		every 1500 hrs	*4	
26	Front idler and track roller oil	change																		every 2000 hrs	*4	
27	Alternator and starter motor	check																		every 2000 hrs	*4	
28	EGR system	check																		every 3000 hrs	*4	
29	Turbo charger	check																		every 3000 hrs	*4	
30	DPF	clean																		every 3000 hrs	*4	
31	Boost sensor and AFS (Air flow sensor)	check																		every 1 year	*4	
32	Condition of DPF muffler	check																		every 1 year	*4	
33	DPF differential pressure sensor and piping for gas leak	check																		every 1 year	*4	
34	DPF exhaust gas temperature sensor	check																		every 1 year	*4	
35	EGR and piping for gas leak	check																		every 1 year	*4	
36	Radiator system	rinse																		every 2 years	*4	
37	Fuel line and intake air line	check				○				○				○				○	○	every 200 hrs		@
		replace																		every 2 years	*3	
38	Closed breather related rubber piping	replace																		every 2 years	*4	
39	DPF differential pressure sensor rubber piping (Front and back)	replace																		every 2 years	*4	
40	Suction pipe downstream the AFS	replace																		every 2 years	*4	
41	Boost sensor pressure rubber piping	replace																		every 2 years	*4	
42	EGR cooler hose	replace																		every 2 years	*4	

Air conditioner

No.	Check points	Measures	Hour meter indication																	Interval		
			50	100	150	200	250	300	350	400	450	500	550	600	650	700	750	800	1000			
1	Air filter	clean				○				○				○				○	○	every 200 hrs	*2	
		replace																	○	every 1000 hrs	*2	
2	Air-conditioner condenser	check				○				○				○				○	○	every 200 hrs		
3	Air-conditioner pipes and hose	check																		every 1 year		
		replace																		every 2 years		
4	Refrigerant (gas)	check																		service as required	*4	

■ IMPORTANT

- : First operation
- *1 : When using a hydraulic hammer, change hydraulic oil and return filter according to the table on "Hydraulic Oil Change (Including Exchange of the Suction Filter in the Hydraulic Tank) under "EVERY 1000 SERVICE HOURS" in the chapter "REGULAR CHECKS AND MAINTENANCE WORK".
- *2 : Clean and replace the air filter more frequently if used under dusty conditions. When the filter is very dirty from dusty conditions, replace the filter.
- *3 : Replace only if necessary.
- *4 : Consult your local KUBOTA Dealer for this service.
- The items listed above (@ marked) are registered as emission related critical parts by KUBOTA in the U.S.EPA nonroad emission regulation. As the engine owner, you are responsible for the performance of the required maintenance on the engine according to the above instruction. Please see the Warranty Statement in detail.

RY9212158GEG0002US0

■ NOTE**Engine Oil:**

- Oil used in the engine should have an American Petroleum Institute (API) service classification and Proper SAE Engine Oil according to the ambient temperatures.

Above 25 °C (77 °F)	SAE30 or SAE 10W-30, SAE 15W-40
0 to 25 °C (32 to 77 °F)	SAE20 or SAE 10W-30, SAE 15W-40
Below 0 °C (32 °F)	SAE10W or SAE 10W-30, SAE 15W-40

- Refer to the following table for the suitable API classification engine oil and the fuel.

Fuel used	Engine oil classification (API classification)
	Oil class of engines except external DPF
Ultra Low Sulfur Fuel [< 0.0015 % (15 ppm)]	CJ-4

Fuel:

- Use the ultra low sulfur diesel fuel only [below 0.0015 % (15 ppm)] for these engines.
- Cetane number of 45 minimum. Cetane number greater than 50 is preferred, especially for temperatures below -20 °C (-4 °F) or elevations above 1500 m (5000 ft).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No. 2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)
- Indicated capacities of water and oil are manufacture's estimate.

■ IMPORTANT

- If you use different fuel or engine oil, the cleaning interval of the DPF (3000 hours) can't be secured and the DPF will be clogged for a shorter time than expected.
- Filters must trap fuel and lubricant sulfate additives (Zn, Pb, Na, K, Ca, Mg, Cu, Ba, P, etc.) as ash during combustion. Fuel must be controlled carefully to prevent the additives being mixed into fuel such as fuel tank anti-oxidants, water remover, anti-freeze and so on.

RY9212158GEG0003US0

1 MACHINE BODY

SERVICING

CONTENTS

1. FRONT	1-S1
[1] BOOM ASSEMBLY/DISASSEMBLY	1-S1
[2] TABLE OF DIMENSIONS	1-S3
(1) Bucket.....	1-S3
(2) Front Pin	1-S4
(3) Front Bushings	1-S5
(4) Arm	1-S6
(5) Blade	1-S7
2. SWIVEL FRAME.....	1-S8
[1] WEIGHT ASSEMBLY/DISASSEMBLY	1-S8
[2] CABIN REMOVAL AND MOUNTING.....	1-S8
[3] FUEL TANK ASSEMBLY/DISASSEMBLY	1-S11
[4] HYDRAULIC OIL TANK ASSEMBLY/DISASSEMBLY.....	1-S14
[5] ASSEMBLY/DISASSEMBLY OF ENGINE RELATED COMPONENTS.....	1-S16
(1) DPF Muffler	1-S16
(2) Engine	1-S18
[6] ASSEMBLING OPERATING LEVERS.....	1-S21
(1) Travel Lever.....	1-S21
(2) Blade Lever	1-S21
(3) Limit Switch	1-S21
3. TRACK FRAME	1-S22
[1] SWIVEL BEARING ASSEMBLY/DISASSEMBLY	1-S22
[2] TRACK	1-S23
(1) Assembly/Disassembly of the Rubber Track.....	1-S23
(2) Assembly/Disassembly of Iron Tracks.....	1-S24
(3) Steel Track Removal/Installation Tools	1-S27
[3] FRONT IDLER.....	1-S30
(1) Assembly/Disassembly of Front Idler	1-S30
(2) Assembly/Disassembly of the Front Idler	1-S30
[4] GREASE CYLINDER	1-S32
(1) Assembly/Disassembly of the Grease Cylinder.....	1-S32
(2) Components	1-S32
[5] TENSIONER.....	1-S33
(1) Tensioner Assembly/Disassembly.....	1-S33
[6] TRACK ROLLERS.....	1-S34
(1) Track Roller Assembly/Disassembly	1-S34
(2) Components	1-S34
[7] CARRIER ROLLERS.....	1-S35
(1) Carrier Roller Assembly/Disassembly	1-S35
(2) Components	1-S35
[8] TABLE OF DIMENSIONS	1-S36
(1) Rubber Track.....	1-S36
(2) Steel Track	1-S36
(3) Idler Sprocket	1-S37
(4) Carrier Rollers and Track Rollers	1-S37
4. MEASURING MACHINE PERFORMANCE	1-S38
[1] MEASURING FRONT PERFORMANCE	1-S38
(1) Measuring Swivel Gear Backlash.....	1-S38
(2) Measuring Swivel Bearing Play	1-S39

5. SWIVEL GEAR BACKLASH PERFORMANCE	1-S40

1. FRONT

[1] BOOM ASSEMBLY/DISASSEMBLY



CAUTION

- Wear protective gear, such as a helmet, eye protection, etc., during assembly/disassembly.
- For group work, decide on signals for communication, make sure everyone understands and uses them and be very careful about safety.
- Never put your finger in the pin hole when aligning the pin with the hole.
- When hoisting anything heavy, always determine its center of gravity before hoisting it.
- When working with a sling, use a cloth or the like in places that may be hit hard by the nylon sling.

RY9212148MBS0012US0



1. Lower the front to the ground.
Remove the AUX lines from each bracket and disconnect the bucket cylinder hoses.

(1) AUX line

(2) Bucket cylinder hose

RY9212148MBS0017US0



2. Suspend the arm cylinder temporarily and remove the pin on the rod side.
Operate the crane and lower the arm cylinder onto a block on top of the boom.

(1) Arm Cylinder

(2) Block

RY9212148MBS0018US0




3. Suspend the arm and bucket temporarily with the crane, then remove the linkage pin between the arm and the boom and then remove the bucket and the arm.

Weight	Approx. 510 kg (1120 lbs)

(1) Pin

RY9212148MBS0019US0

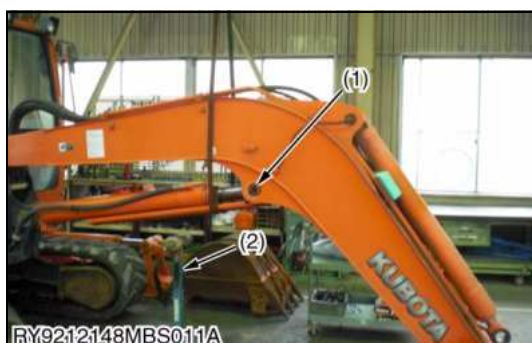

4. Set the end of the boom on the ground.
Suspend the boom cylinder temporarily and remove the pin on the rod side.
Operate the crane and lower the boom cylinder onto a stand.

(1) Pin

(2) Cylinder stand

RY9212148MBS0020US0



5. Remove all the arm cylinder and bucket cylinder hoses.

(1) Arm cylinder hose

(2) Bucket cylinder hose

RY9212148MBS0021US0



6. Suspend the boom temporarily and remove the pin at the base of the boom.

(1) Pin

RY9212148MBS0022US0



7. Operate the crane and remove the boom.

Boom weight	Approx. 500 kg (1102 lbs)

RY9212148MBS0023US0

8. Perform the procedure in reverse for assembly.


RY9212148HYS0096US0

[2] TABLE OF DIMENSIONS

(1) Bucket

■ NOTE




- Kubota Japan bucket

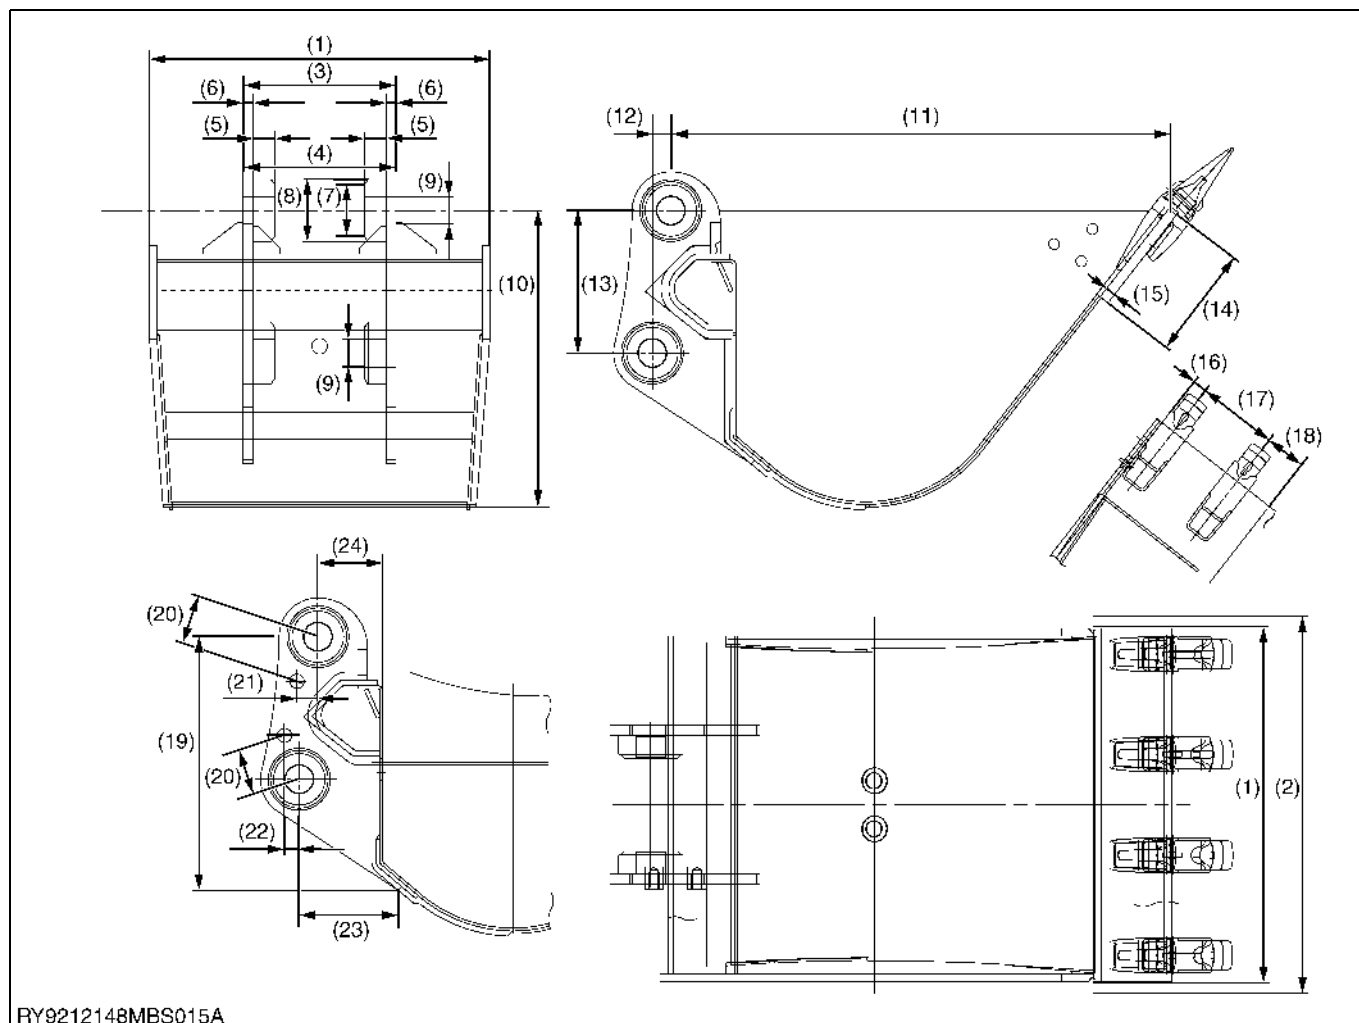

No.	KX080-4	No.	KX080-4	No.	KX080-4	No.	KX080-4
(1)	600 mm 23.62 in.	(7)	φ 105 mm φ 4.13 in.	(13)	300 mm 11.81 in.	(19)	462 mm 18.19 in.
(2)	620 mm 24.41 in.	(8)	φ 120 mm φ 4.72 in.	(14)	205 mm 8.07 in.	(20)	90 mm 3.54 in.
(3)	328 mm 12.91 in.	(9)	φ 60 mm φ 2.36 in.	(15)	25 mm 0.98 in.	(21)	22 mm 0.87 in.
(4)	200 mm 7.87 in.	(10)	538 mm 21.18 in.	(16)	37.5 mm 1.48 in.	(22)	14 mm 0.55 in.
(5)	44 mm 1.73 in.	(11)	902.5 mm 35.53 in.	(17)	164.5 mm 6.48 in.	(23)	222 mm 8.74 in.
(6)	20 mm 0.79 in.	(12)	7.5 mm 0.30 in.	(18)	82 mm 3.23 in.	(24)	111 mm 4.37 in.

RY9212148MBS0033US0

(2) Front Pin

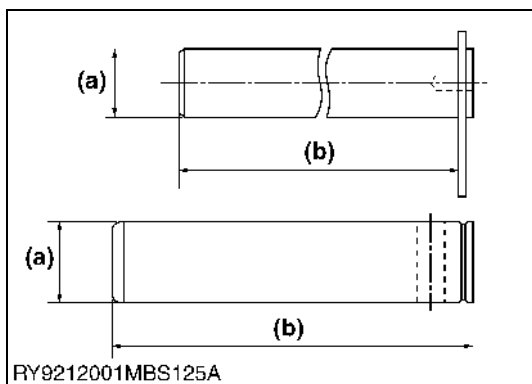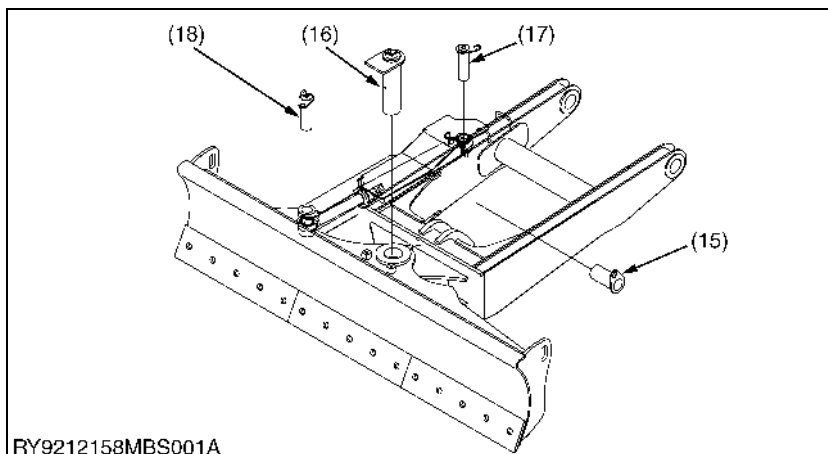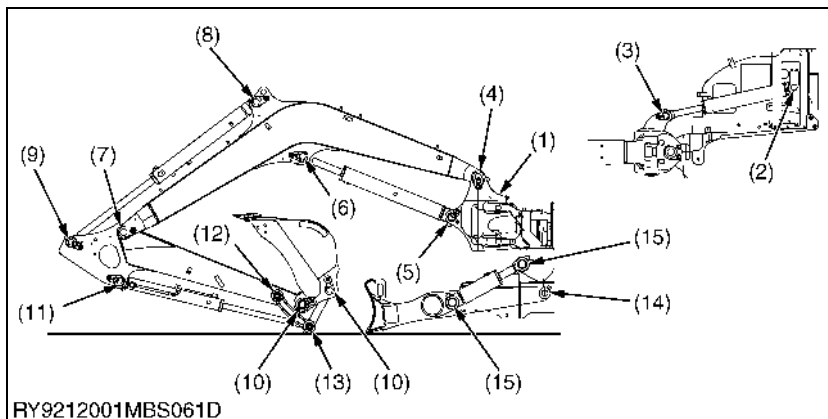



Item	KX080-4 (Pin dia. X length)
(1)	$\phi 100 \times 474$ mm $\phi 3.94 \times 18.66$ in.
(2)	$\phi 70 \times 183$ mm $\phi 2.76 \times 7.20$ in.
(3)	$\phi 70 \times 168$ mm $\phi 2.76 \times 6.61$ in.
(4)	$\phi 80 \times 437$ mm $\phi 3.15 \times 17.20$ in.
(5)	$\phi 70 \times 200$ mm $\phi 2.76 \times 7.87$ in.
(6)	$\phi 70 \times 226$ mm $\phi 2.76 \times 8.90$ in.
(7)	$\phi 70 \times 332$ mm $\phi 2.76 \times 13.07$ in.
(8)	$\phi 60 \times 226$ mm $\phi 2.36 \times 8.90$ in.
(9)	$\phi 60 \times 175$ mm $\phi 2.36 \times 6.89$ in.
(10)	$\phi 60 \times 333$ mm $\phi 2.36 \times 13.11$ in.
(11)	$\phi 60 \times 151$ mm $\phi 2.36 \times 5.94$ in.
(12)	$\phi 60 \times 275$ mm $\phi 2.36 \times 10.83$ in.
(13)	$\phi 60 \times 275$ mm $\phi 2.36 \times 10.83$ in.
(14)	$\phi 60 \times 167$ mm $\phi 2.36 \times 6.57$ in.
(15)	$\phi 70 \times 144$ mm $\phi 2.76 \times 5.67$ in.
(16)	$\phi 85 \times 295$ mm $\phi 3.35 \times 11.61$ in.
(17)	$\phi 50 \times 167$ mm $\phi 1.97 \times 6.57$ in.
(18)	$\phi 50 \times 167$ mm $\phi 1.97 \times 6.57$ in.

- The pin usage limit is when the wear exceeds 1.0mm (0.039 in.) from the factory spec. from new.

(a) Pin diameter
(b) Length

RY9212158MBS0001US0


(3) Front Bushings

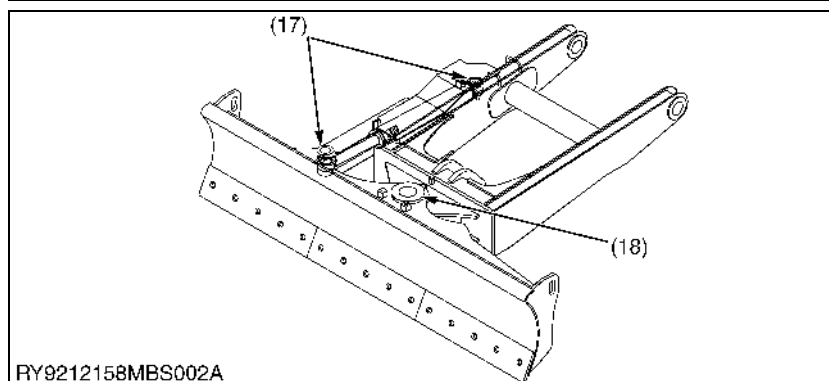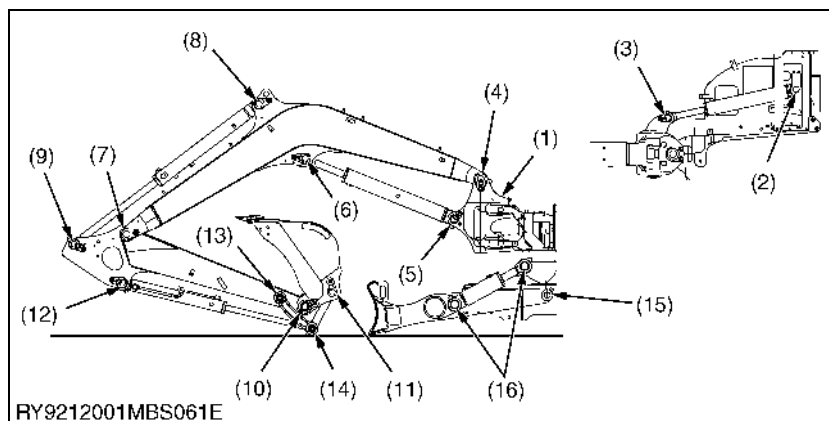

Item	Point used	KX080-4 (I.D. X O.D. X Length)	Item	Point used	KX080-4 (I.D. X O.D. X Length)
(1)	Swing bracket top	$\phi 100 \times 115 \times 64$ mm $\phi 3.94 \times 4.53 \times 2.52$ in.	(7)	Arm ends	$\phi 70 \times 82 \times 80$ mm $\phi 2.76 \times 3.23 \times 3.15$ in.
	Swivel frame, vertical	$\phi 100 \times 115 \times 110$ mm $\phi 3.94 \times 4.53 \times 4.33$ in.	(8)	Cylinder	$\phi 60 \times 70 \times 75$ mm $\phi 2.36 \times 2.76 \times 2.95$ in.
	Swing bracket bottom	$\phi 100 \times 115 \times 61$ mm $\phi 3.94 \times 4.53 \times 2.40$ in.	(9)	Cylinder	$\phi 60 \times 70 \times 75$ mm $\phi 2.36 \times 2.76 \times 2.95$ in.
(2)	Cylinder	$\phi 70 \times 82 \times 65$ mm $\phi 2.76 \times 3.23 \times 2.56$ in.	(10)	Arm ends	$\phi 60 \times 80 \times 65$ mm $\phi 2.36 \times 3.15 \times 2.56$ in.
(3)	Swing bracket top	$\phi 70 \times 82 \times 45$ mm $\phi 2.76 \times 3.23 \times 1.77$ in.	(11)	Bucket link	$\phi 60 \times 70 \times 60$ mm $\phi 2.36 \times 2.76 \times 2.36$ in.
	Cylinder	$\phi 70 \times 82 \times 65$ mm $\phi 2.76 \times 3.23 \times 2.56$ in.	(12)	Cylinder	$\phi 60 \times 70 \times 65$ mm $\phi 2.36 \times 2.76 \times 2.56$ in.
	Swing bracket bottom	$\phi 70 \times 82 \times 36$ mm $\phi 2.76 \times 3.23 \times 1.42$ in.	(13)	Arm ends	$\phi 60 \times 70 \times 60$ mm $\phi 2.36 \times 2.76 \times 2.36$ in.
(4)	Swing bracket ends	$\phi 80 \times 95 \times 80$ mm $\phi 3.15 \times 3.74 \times 3.15$ in.	(14)	Bucket link	$\phi 60 \times 70 \times 52$ mm $\phi 2.36 \times 2.76 \times 2.05$ in.
	Boom ends	$\phi 80 \times 95 \times 80$ mm $\phi 3.15 \times 3.74 \times 3.15$ in.		Cylinder	$\phi 60 \times 70 \times 65$ mm $\phi 2.36 \times 2.76 \times 2.56$ in.
(5)	Swing bracket right	$\phi 70 \times 82 \times 49$ mm $\phi 2.76 \times 3.23 \times 1.93$ in.	(15)	Blade	$\phi 60 \times 70 \times 88$ mm $\phi 2.36 \times 2.76 \times 3.46$ in.
	Cylinder	$\phi 70 \times 82 \times 75$ mm $\phi 2.76 \times 3.23 \times 2.95$ in.	(16)	Blade	$\phi 70 \times 82 \times 60$ mm $\phi 2.76 \times 3.23 \times 2.36$ in.
	Swing bracket left	$\phi 70 \times 82 \times 49$ mm $\phi 2.76 \times 3.23 \times 1.93$ in.	(17)	Cylinder	$\phi 50 \times 60 \times 60$ mm $\phi 1.97 \times 2.36 \times 2.36$ in.
(6)	Cylinder	$\phi 70 \times 82 \times 75$ mm $\phi 2.76 \times 3.23 \times 2.95$ in.	(18)	Angle fulcrum, vertical	$\phi 85 \times 100 \times 60$ mm $\phi 3.35 \times 3.94 \times 2.36$ in.

- The usage limit for bushings is when the wear exceeds 1.0 mm (0.039 in.) from the factory spec. from new.

RY9212158MBS0002US0

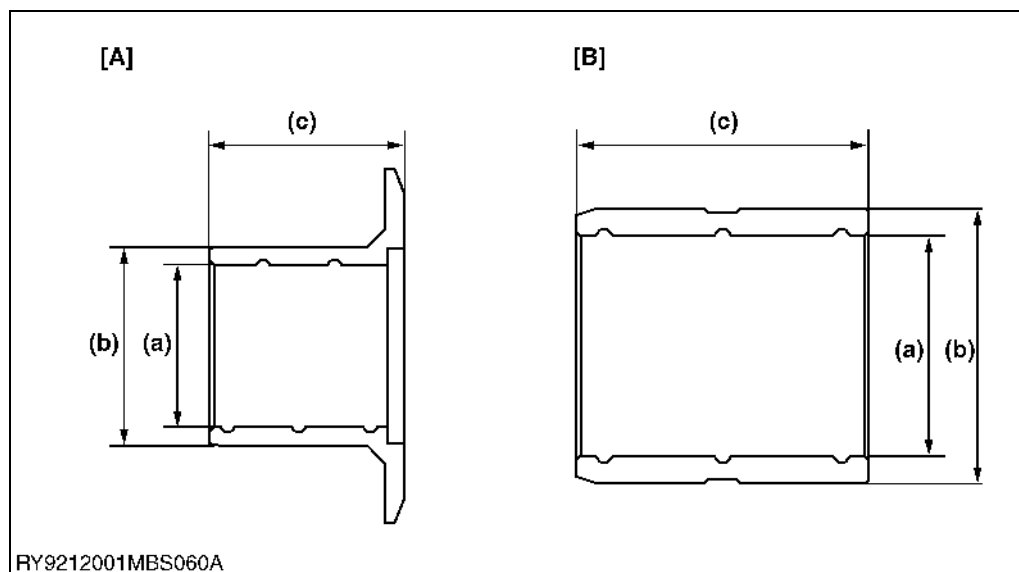Bushing shape

(A) Flanged bushing


(B) Normal bushing

(a) I.D.

(b) O.D.

(c) Length

RY9212148MBS0036US0

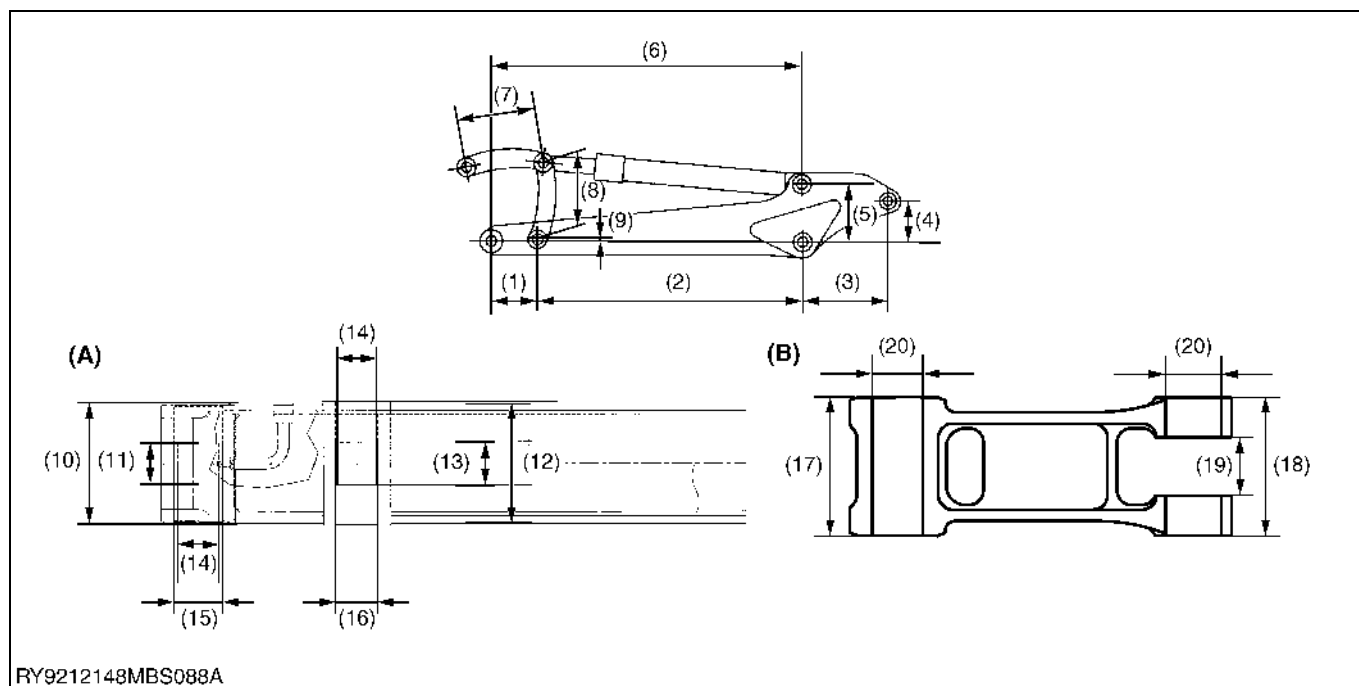
(4) Arm

(A) Arm tip

(B) Bucket link 1


No.	KX080-4	No.	KX080-4	No.	KX080-4	No.	KX080-4
(1)	260 mm 10.24 in.	(6)	1745 mm 68.70 in.	(11)	66 mm 2.60 in.	(16)	φ 70 mm φ 2.76 in.
(2)	1840 mm 72.44 in.	(7)	403 mm 15.87 in.	(12)	200 mm 7.87 in.	(17)	200 mm 7.87 in.
(3)	451 mm 17.76 in.	(8)	428 mm 16.85 in.	(13)	70 mm 2.76 in.	(18)	
(4)	279 mm 10.98 in.	(9)	13 mm 0.51 in.	(14)	φ 67 mm φ 2.64 in.	(19)	76 mm 2.99 in.
(5)	370 mm 14.57 in.	(10)	188 mm 7.40 in.	(15)	φ 80 mm φ 3.15 in.	(20)	φ 70 mm φ 2.76 in.

RY9212148MBS0037US0

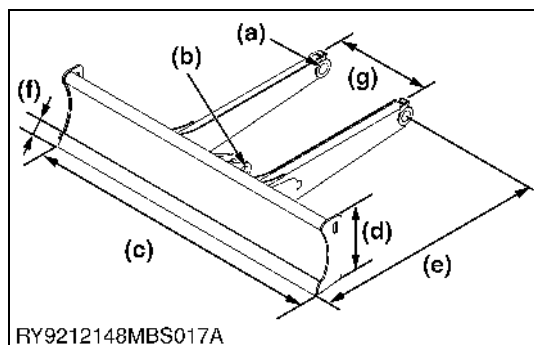(5) Blade

No.	Item	KX080-4
(a)	I.D. X Length	$\phi 70 \times 98$ mm $\phi 2.76 \times 3.86$ in.
(b)	I.D. X Length	$\phi 70 \times 28$ mm $\phi 2.76 \times 1.10$ in.
(c)	Width	2200 mm 86.61 in.
(d)	Height	500 mm 19.69 in.
(e)	Length	1448 mm 57.01 in.
(f)	Tip height - plate thickness	$90 \times t$ 16 mm $3.54 \times t$ 0.63 in.
(g)	Distance between supports	698 mm 27.48 in.

RY9212148MBS0038US0

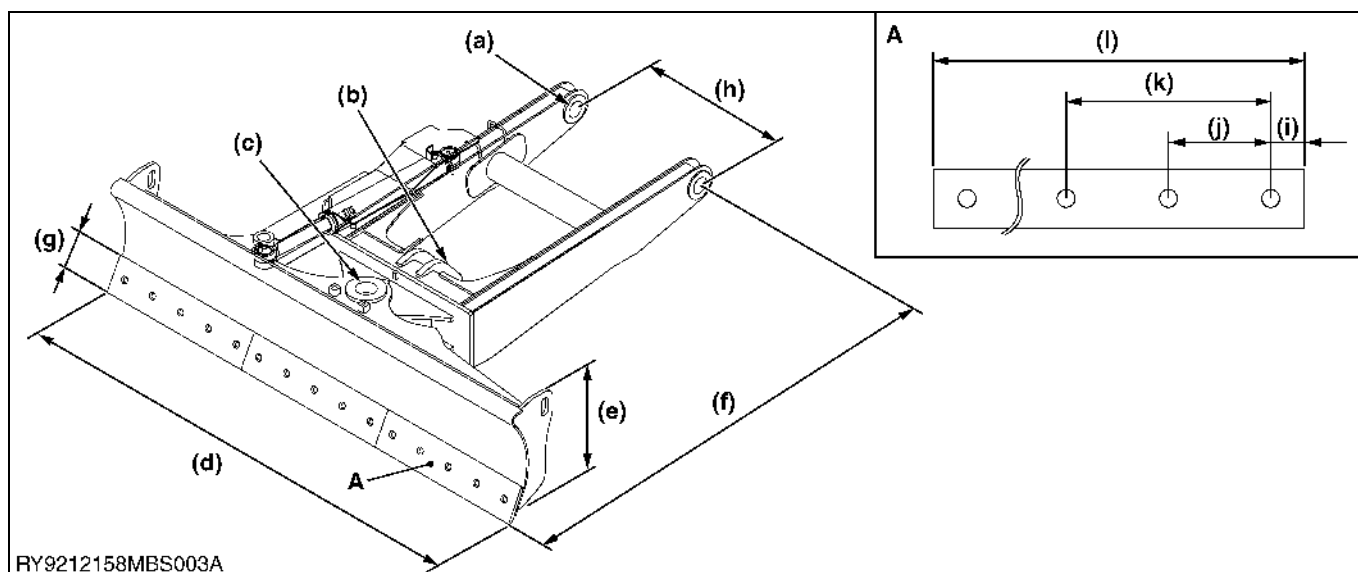

No.	Item	KX080-4	No.	Item	KX080-4
(a)	I.D. X Length	$\phi 70 \times 98$ mm $\phi 2.76 \times 3.86$ in.	(g)	Tip height - plate thickness	$160 \times t$ 15.9 mm $6.30 \times t$ 0.63 in.
(b)	I.D. X Length	$\phi 70 \times 28$ mm $\phi 2.76 \times 1.10$ in.	(h)	Distance between supports	698 mm 27.48 in.
(c)	I.D. X Length	$\phi 85 \times 289$ mm $\phi 3.35 \times 11.38$ in.	(i)	Cutting edge	60 mm 2.36 in.
(d)	Width	2200 mm 86.61 in.	(j)	Cutting edge	153 mm 6.02 in.
(e)	Height	510 mm 20.08 in.	(k)	Cutting edge	306 mm 12.05 in.
(f)	Length	1754.5 mm 69.07 in.	(l)	Cutting edge	732 mm 28.82 in.

RY9212158MBS0003US0

2. SWIVEL FRAME

[1] WEIGHT ASSEMBLY/DISASSEMBLY



1. Remove the left and rear hoods.



CAUTION

It takes at least 2 people to remove the rear hood.

Rear hood weight	Approx. 27 kg (60 lbs)

- (1) Rear hood
- (2) Left hood

RY9212148MBS0039US0



2. Remove the air cleaner.

- (1) Air cleaner

RY9212148MBS0040US0



3. Remove the weight.



CAUTION

- Find its center of gravity and suspend it securely.

Tightening torque	Weight	367.7 to 431.5 N·m 37.5 to 44.0 kgf·m 271.2 to 318.3 lbf·ft


During installation, apply a threadlock. (Loctite 271)

Weight of the weight	Approx. 1040 kg (2293 lbs)

- (1) Weight

RY9212148MBS0042US0

[2] CABIN REMOVAL AND MOUNTING

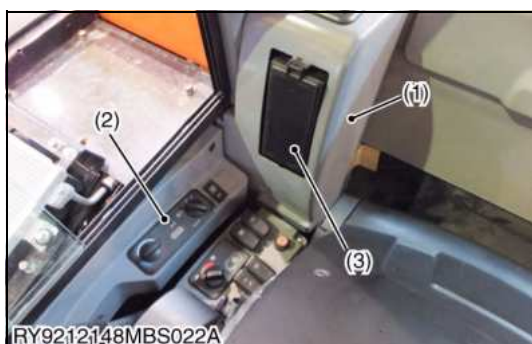

1. Remove the blower cover and AC panel, then remove the blower hose, fuse box and AC connector.

- (1) Blower cover
- (2) AC panel
- (3) Fuse box

RY9212148MBS0043US0




2. Disconnect the cabin harness and the washer harness.

(1) Cabin harness

(2) Washer harness

RY9212148MBS0044US0

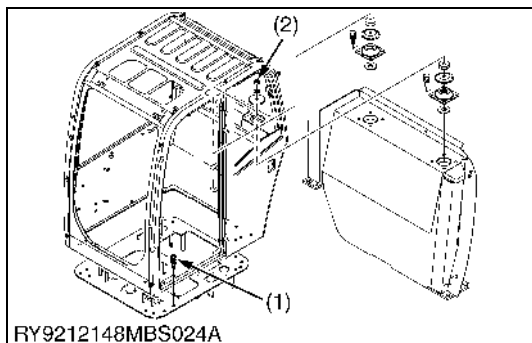

3. Suspend the cabin with the crane and remove the cabin mounting bolts (nine) and nuts (two).

Tightening torque	Bolt	259.9 to 304.0 N·m 26.5 to 31.0 kgf·m 191.7 to 224.2 lbf·ft
	Nut	107.9 to 127.4 N·m 11.0 to 13.0 kgf·m 79.6 to 94.0 lbf·ft

(1) Bolt

(2) Nut

RY9212148MBS0045US0



4. Remove the cabin.

■ IMPORTANT


- Find its center of gravity and suspend it securely.

Cabin weight	Approx. 230 kg (507 lbs)

(1) Cabin

RY9212148MBS0046US0

Installation of cabin rubber vibration dampers

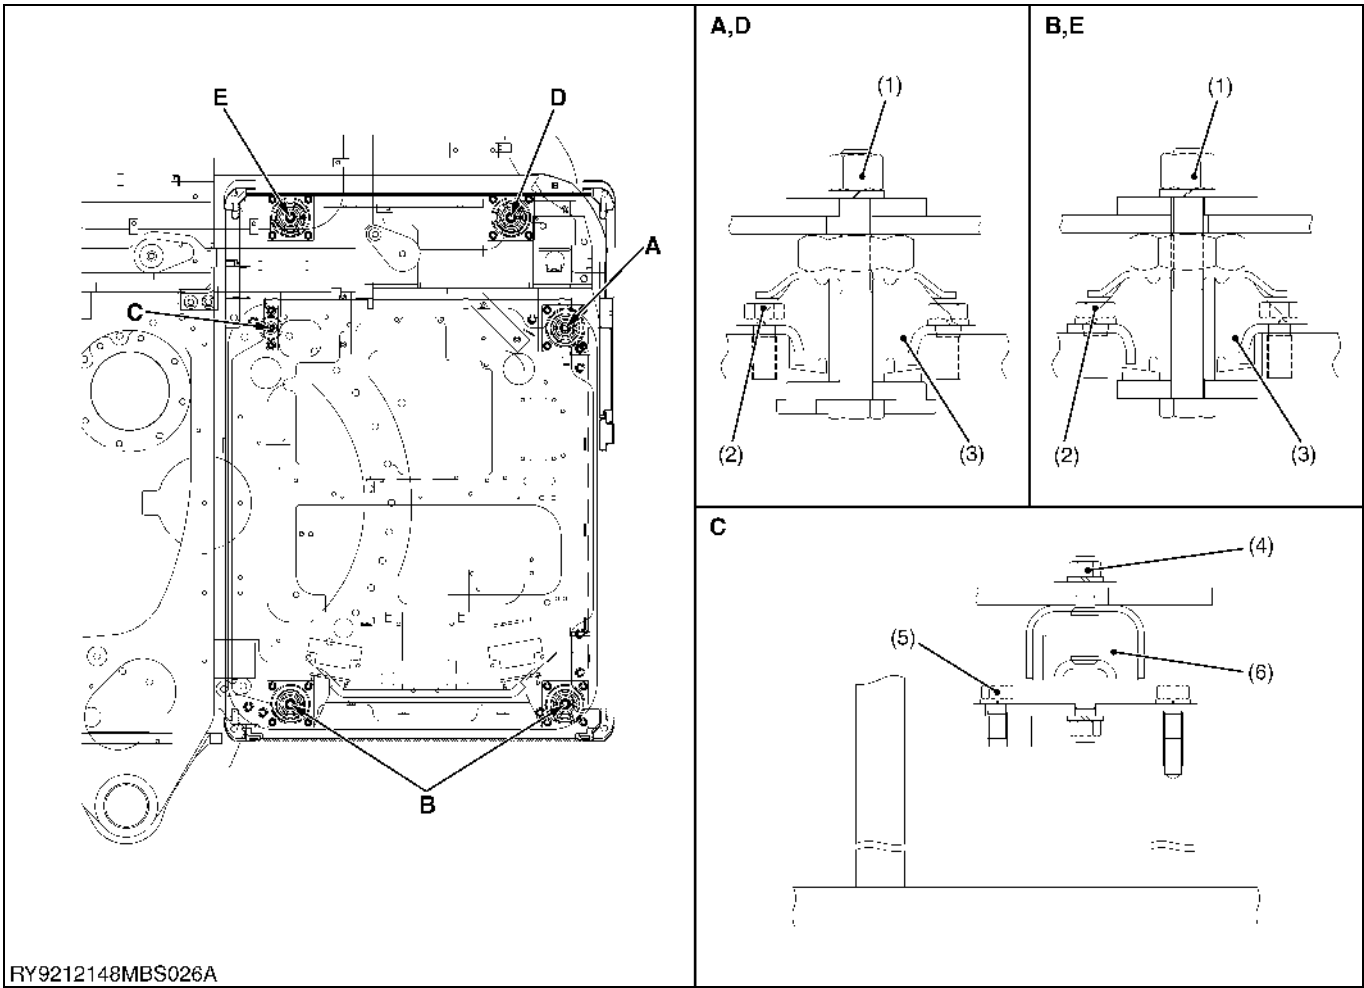

- (1) Nut
(2) Bolt
- (3) Rubber vibration damper
(4) Nut
- (5) Bolt
- (6) Rubber vibration damper

Tightening torque	Nut (1)	107.9 to 127.4 N·m 11.0 to 13.0 kgf·m 79.6 to 94.0 lbf·ft
	Bolt (2)	103.0 to 117.7 N·m 10.5 to 12.0 kgf·m 76.0 to 86.8 lbf·ft
	Nut (4)	39.2 to 45.1 N·m 4.0 to 4.6 kgf·m 28.9 to 33.3 lbf·ft
	Bolt (5)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft

RY9212148MBS0047US0


[3] FUEL TANK ASSEMBLY/DISASSEMBLY



1. Remove the cover.

(1) Cover

RY9212148MBS0048US0

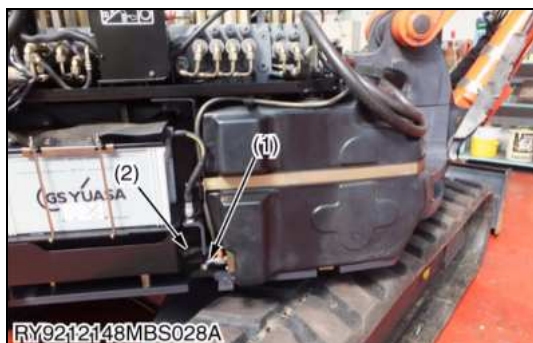

2. After draining the fuel, remove the fuel hose.

(1) Water drain cock

(2) Fuel hose

RY9212148MBS0049US0




3. Remove the electrical wiring and the fuel hose.

(1) Electrical wiring

(2) Fuel hose

RY9212148MBS0050US0

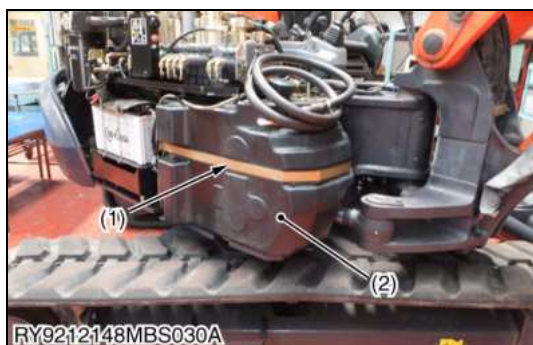


4. Remove the band for mounting the fuel tank and then remove the fuel tank.

(1) Fuel tank mounting band

(2) Fuel tank

RY9212148MBS0051US0

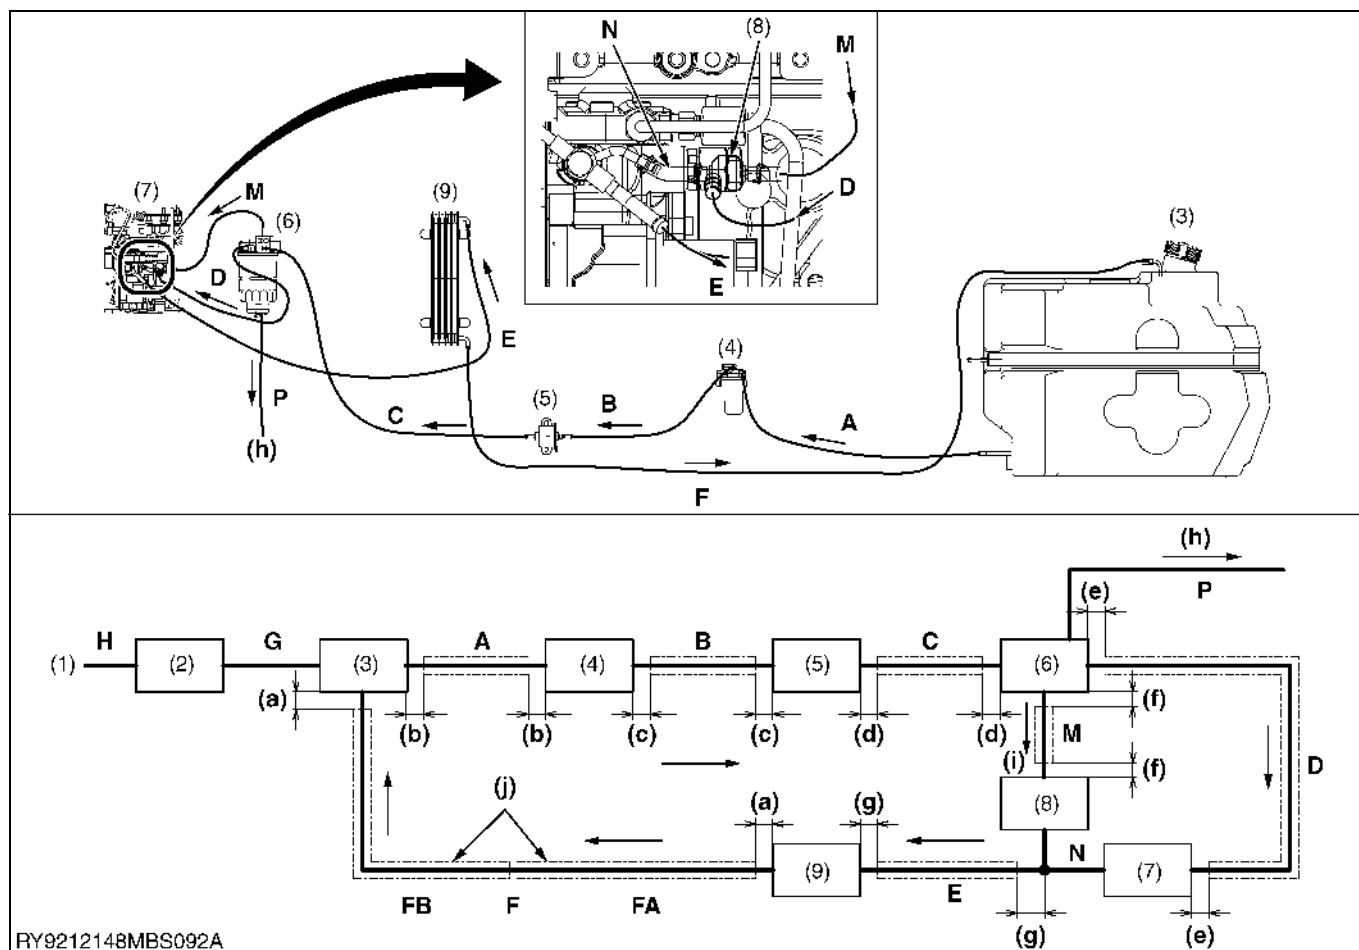Fuel hose circuit

RY9212148MBS092A



(1) Outside air	(6) Fuel filter	(a) 110 mm (4.3 in.)	(f) 30 mm (1.2 in.)
(2) Strainer (Eur. only)	(7) Engine	(b) 45 mm (1.8 in.)	(g) 75 mm (3.0 in.)
(3) Fuel tank	(8) Fuel check valve	(c) 65 mm (2.6 in.)	(h) Drain (for bleeding water)
(4) Water separator	(9) Fuel cooler	(d) 50 mm (2.0 in.)	(i) Air bleed
(5) Fuel pump		(e) 40 mm (1.6 in.)	

NOTE

- (j): Install so the joint in the tube does not come to the edge of the fuel pump.

	Tube		Protective tube			Tube		Protective tube	
	Length	I.D.	Length	I.D.		Length	I.D.	Length	I.D.
A	850 mm 33.46 in.	8 mm 0.31 in.	800 mm 31.50 in.	15 mm 0.59 in.	G	280 mm 11.02 in.	8 mm 0.31 in.	—	—
B	550 mm 21.65 in.		420 mm 16.54 in.	16 mm 0.63 in.	H	Rubber cap		—	—
C	1450 mm 57.09 in.	7 mm 0.29 in.	1350 mm 53.15 in.	15 mm 0.59 in.	M	260 mm 10.24 in.	4 mm 0.16 in.	200 mm 7.87 in.	10 mm 0.39 in.
D	320 mm 12.60 in.		240 mm 9.45 in.		N	80 mm 3.15 in.		—	—
E	1650 mm 64.96 in.		1500 mm 59.06 in.		P	480 mm 18.90 in.	5 mm 0.20 in.	—	—
F	2360 mm 33.46 in.		—	—					
FA	—	—	900 mm 35.43 in.	15 mm 0.59 in.					
FB	—	—	1240 mm 48.82 in.						

RY9212148MBS0148US0

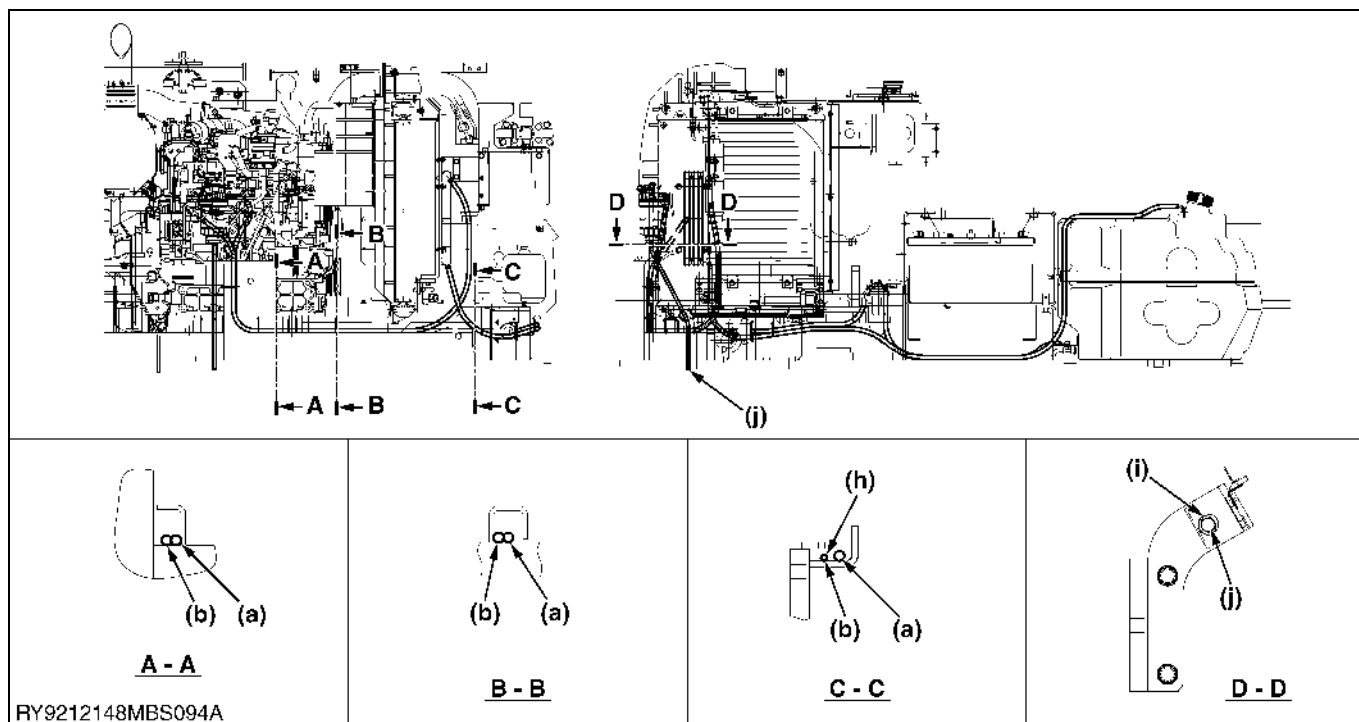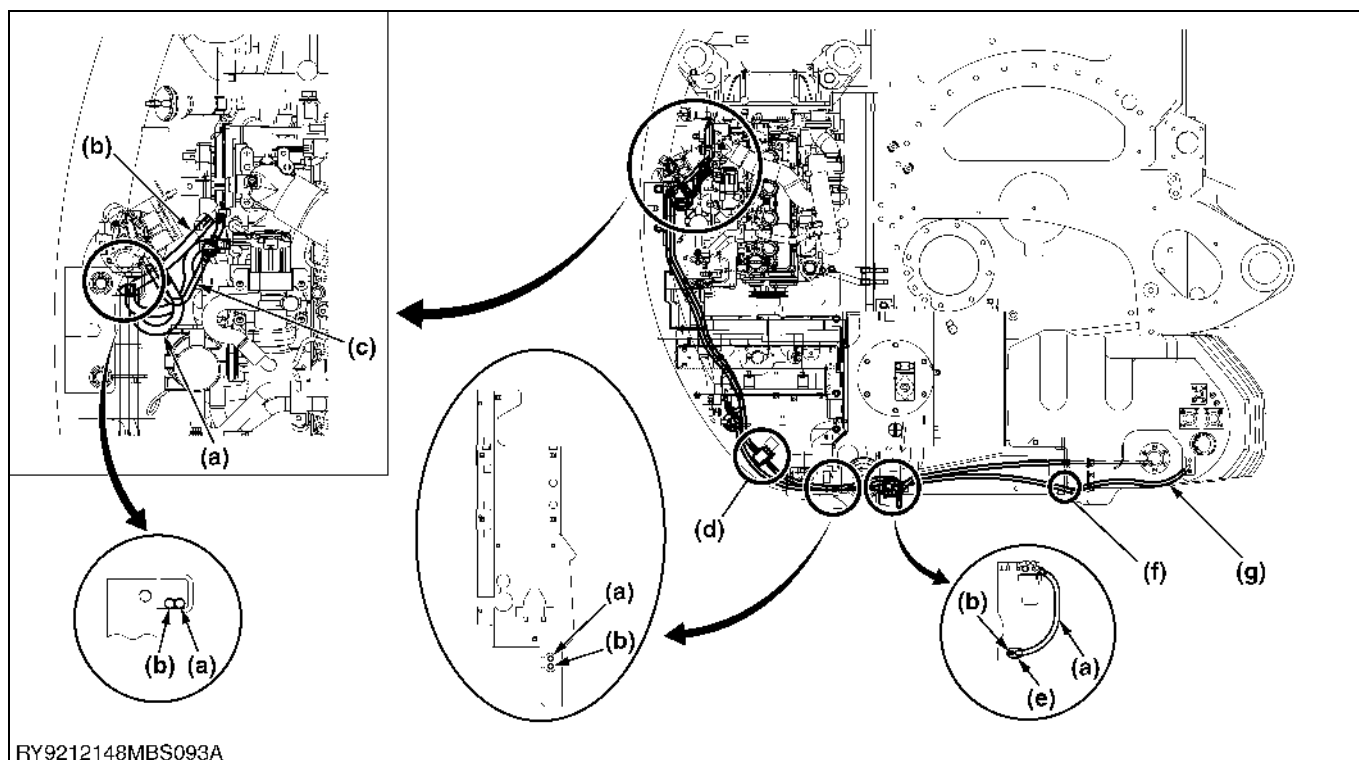Fuel Supply and Return Hose Routing

- (a): Fuel hose supply side
- (b): Fuel hose return side
- (c): Air bleed
- (d): Pass the return hose outside the electric pump. Install so the electric pump and hose do not interfere with each other.
- (e): Pass through the long hole in the swivel frame.
- (g): Route the return hose so it does not touch the fuel sensor connector.
- (f): Install the return hose so it passes outside the band.
- (h): Pass both the supply and return hoses through the guide.
- (i): Pass through the hole in the bracket.
- (j): Drain

[4] HYDRAULIC OIL TANK ASSEMBLY/DISASSEMBLY



1. After draining the hydraulic oil, remove the front, right and tank covers.

(1) Front cover	(3) Tank cover
(2) Right cover	

RY9212148MBS0150US0




2. Remove the cover, electric fan, center cover and center frame.
3. Remove the top cover, fuel tank, battery and control valve.
(Refer to sections on removing the fuel tank and control valve.)

[Work Tip]

- Move the condenser toward the rear of the machine with the AC hoses still installed.

(1) Cover	(5) Top cover
(2) Electric fan	(6) Fuel tank
(3) Center cover	(7) Battery
(4) Center frame	(8) Control valve

RY9212148MBS0151US0

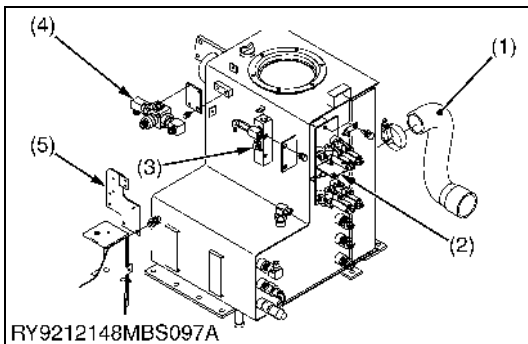

4. Disconnect all the harnesses and the hydraulic hose connected to the hydraulic oil tank.
5. Remove the AUX mounting bracket, manifold block adapter and the 2-way valve from the hydraulic oil tank.
6. Remove the bracket from the battery support.

(1) Suction hose	(4) 2-way valve
(2) AUX mounting bracket	(5) Bracket
(3) Manifold block adapter	

RY9212148MBS0152US0



7. Remove the hydraulic hoses.

■ IMPORTANT

- Plug the disconnected hoses and adapters.

- | |
|--------------------|
| (1) Hydraulic hose |
|--------------------|

RY9212148MBS0153US0



8. Remove the divider plates.

- | |
|-------------------|
| (1) Divider plate |
|-------------------|

RY9212148MBS0154US0



9. Remove the battery support mounting bolts and slide the battery support to the right side of the machine.

■ **IMPORTANT**

- **Apply a thread lock (Loctite 271).**

Tightening torque	Bolt	196.1 to 225.6 N·m 20.0 to 23.0 kgf·m 144.6 to 166.4 lbf·ft

- (1) Battery support

RY9212148MBS0155US0



10. Suspend the hydraulic oil tank with a crane.
11. Remove the hydraulic tank mounting bolts, then lift with the crane and remove it.

■ **IMPORTANT**

- **Apply a thread lock (Loctite 271).**

Tightening torque	Bolt	77.5 to 90.2 N·m 7.9 to 9.2 kgf·m 57.2 to 66.5 lbf·ft

Hydraulic tank weight	Approx. 19 kg Approx. 42 lbs

- (1) Hydraulic oil tank

RY9212148MBS0156US0

[5] ASSEMBLY/DISASSEMBLY OF ENGINE RELATED COMPONENTS

(1) DPF Muffler



1. Remove the rear and left hoods and the air cleaner.



CAUTION

- For hood removal, a minimum of 2 persons is needed.

Rear hood weight	Approx. 27 kg (60 lbs)

- (1) Air cleaner

RY9212148MBS0052US0




2. Remove the DPF muffler cover and the DPF exhaust pipe.

- (1) DPF muffler cover

- (2) DPF exhaust pipe

RY9212148MBS0053US0

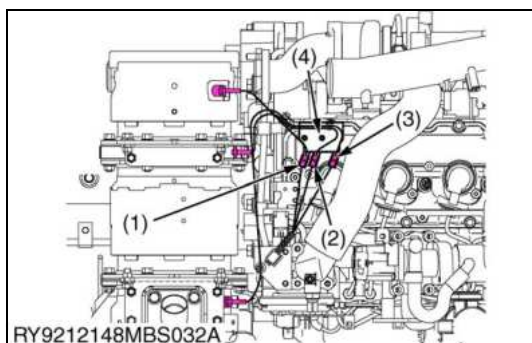

3. Remove the DOC intake temperature sensor, DOC outlet temperature sensor and DPF outlet temperature sensor connectors and then remove the bracket.


- (1) DOC intake temperature sensor connector

- (3) DPF outlet temperature sensor connector

- (2) DOC outlet temperature sensor connector

- (4) Bracket

RY9212148MBS0054US0

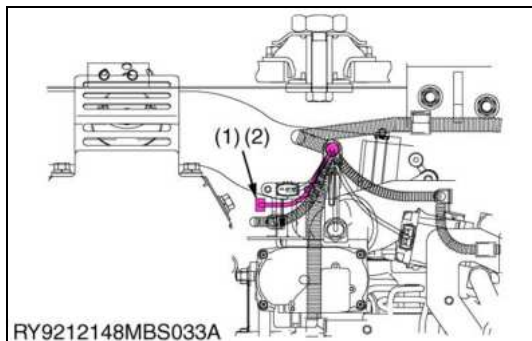


4. Disconnect the DPF pressure differential sensor connector and remove the bracket.

- (1) DPF pressure differential sensor connector

- (2) Bracket

RY9212148MBS0055US0

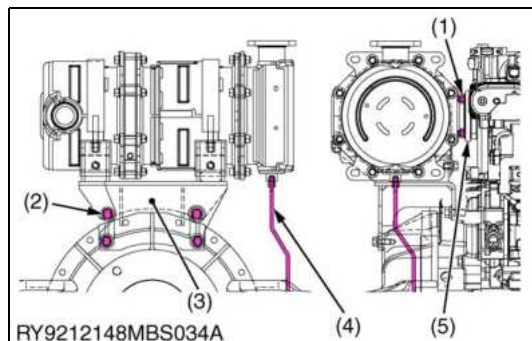

5. Remove the 4 flange nuts, bracket mounting bolts, drain pipe and then the DPF muffler.

CAUTION

- It takes at least 2 people to remove the DPF muffler.

IMPORTANT

- Record the machine number, engine number and DPF muffler number.
- Refer to the DPF handling manual for cleaning DPF.
- During installation, first mount all the flange nuts and bracket mounting bolts loosely and then tilt the muffler itself in position, adjusting it so there is no stress on it and tighten the nuts/bolts.

Install the gasket so the protruding side faces the exhaust manifold side.

- Apply the anti-seize lube ("Pure Nickel Special" in Never-Seez Anti-Seize and Lubricating Compounds) on the screw part when attaching the drain pipe.

DPF muffler weight	Approx. 23 kg (51 lbs)

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
	Bolt (M12)	77.5 to 90.2 N·m 7.9 to 9.2 kgf·m 57.2 to 66.5 lbf·ft
	Flange nut	49.0 to 59.9 N·m 5.0 to 6.1 kgf·m 36.1 to 44.2 lbf·ft
	Drain pipe	16.0 to 23.0 N·m 1.6 to 2.3 kgf·m 11.8 to 17.0 lbf·ft


- (1) Flange Nut (4) Drain Pipe
(2) Bracket Mounting Bolt (5) Gasket
(3) DPF Muffler Bracket (6) DPF Muffler

RY9212148MBS0056US0

6. Remove the DPF muffler bracket and muffler mounting band from the DPF muffler.

IMPORTANT


- During installation, tighten the bolts fully and then with the nuts mounted loosely, install onto the machine. When fully tightening the nuts, tilt the muffler itself, adjusting it so it is not under stress. Install the DPF mounting band so it fits within the specified dimensions at the location shown at left.

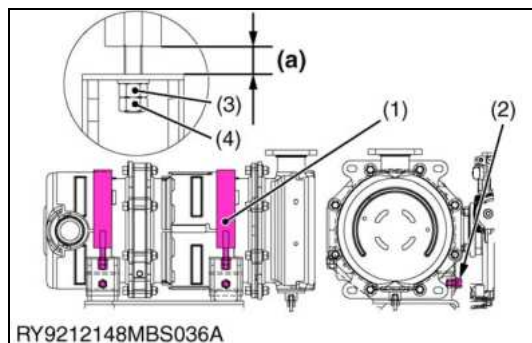

Tightening torque	Bolt (M10)	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft
	Nut 1	9.8 to 11.3 N·m 1.0 to 1.2 kgf·m 7.2 to 8.3 lbf·ft
	Nut 2	39.2 to 45.1 N·m 4.0 to 4.6 kgf·m 28.9 to 33.3 lbf·ft

- (1) Muffler mounting band (a) 12 to 16 mm (0.5 to 0.6 in.)
(2) Bolt
(3) Nut 1
(4) Nut 2

RY9212148MBS0057US0

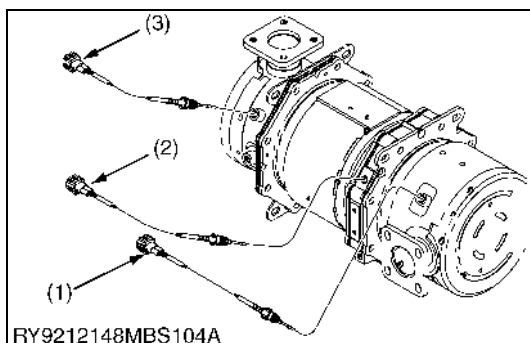

7. Remove the exhaust temperature sensor from the DPF muffler as needed.

- Tools: Flare nut wrench

■ IMPORTANT

- **Never use the spanner to prevent the nut break.**
- **If the exhaust temperature sensor does not be loosened, apply the lubricant (KURE CRC) on the screw part and leave it for a day and restart the work.**
- **When tightening the exhaust temperature sensor, apply the anti-seize lube ("Pure Nickel Special" in Never-Seez Anti-Seize and Lubricating Compounds).**

Tightening torque	Exhaust temperature sensor	25.0 to 35.0 N·m 2.5 to 3.6 kgf·m 18.4 to 25.8 lbf·ft

- (1) Exhaust Temperature Sensor (T0) (3) Exhaust Temperature Sensor (T2)
(2) Exhaust Temperature Sensor (T1)

RY9212148MBS0157US0

(2) Engine

⚠ CAUTION

- **Wear protective gear, such as a helmet, safety glasses, etc., during assembly/disassembly.**
- **Disconnect the negative terminal of the battery prior to any assembly/disassembly work.**
- **For group work, decide on signals for communication, make sure everyone understands and uses them and be very careful about safety.**

RY9212148MBS0058US0



1. Remove the weight.

Refer to the section Weight Assembly/Disassembly for the weight removal/mounting procedure.

RY9212148MBS0059US0



2. Remove the cabin.

Refer to the section Cabin Removal and Mounting for the cabin removal/mounting procedure.

RY9212148MBS0060US0



3. Remove the pilot filter.

- (1) Pilot filter

RY9212148MBS0061US0



4. Remove the electrical wiring and air cleaner pipe mounted on the arch.

(1) Air cleaner pipe (2) Electrical wiring

RY9212148MBS0062US0



5. Suspend the arch and remove the five arch mounting bolts. Remove the arch.

■ **IMPORTANT**

- Find its center of gravity and suspend it securely.
- Be careful of the electrical wiring.


Tightening torque	Bolt	259.9 to 304.0 N·m 26.5 to 31.0 kgf·m 191.7 to 224.2 lbf·ft

Apply thread lock compound (Loctite 271).

Arch weight	Approx. 85 kg (187 lbs)

(1) Arch

RY9212148MBS0063US0

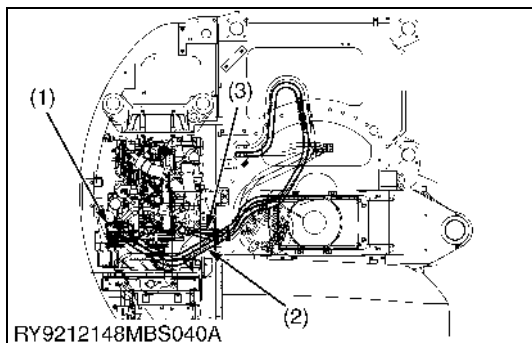


6. Remove the compressor.
7. Drain the coolant inside the radiator and disconnect the heater hose.

■ **IMPORTANT**

- Move the compressor across to the condenser side.
- Plug the disconnected heater hoses.

(1) Compressor (2) AC hose (3) Heater hose


RY9212148MBS0064US0

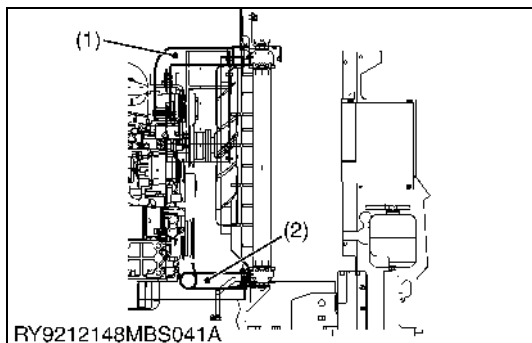

8. Disconnect the upper and lower hoses.

(1) Upper hose (2) Lower hose

RY9212148MBS0065US0

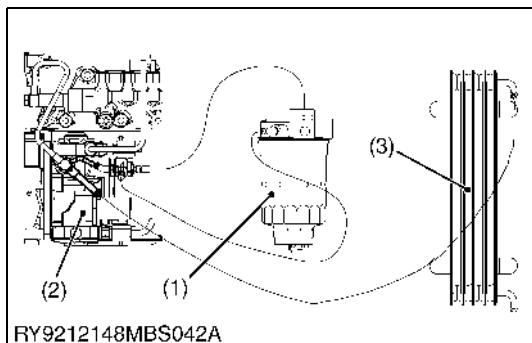


9. Disconnect the fuel hoses on the supply pump side.

■ **IMPORTANT**

- Between the fuel filter and supply pump
- Between the fuel cooler and the supply pump
- Plug the disconnected hoses.

(1) Fuel filter (2) Supply pump (3) Fuel cooler

RY9212148MBS0066US0

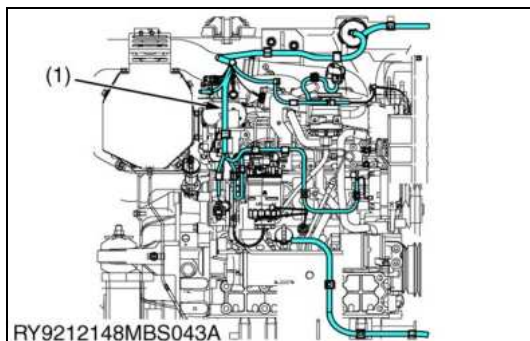

10. Disconnect all the connections and clamps to the engine.

- (1) Engine electrical wiring

RY9212148MBS0067US0



11. Remove the pump mounting bolts and disconnect from the pump connector.


12. Suspend the engine and remove the bolts and nuts holding the engine to its mounts.

13. Disconnect the ground and remove the engine.



CAUTION

- Find its center of gravity and suspend it securely.
- Make sure you have not forgotten to disconnect any electrical wiring before removing the engine.

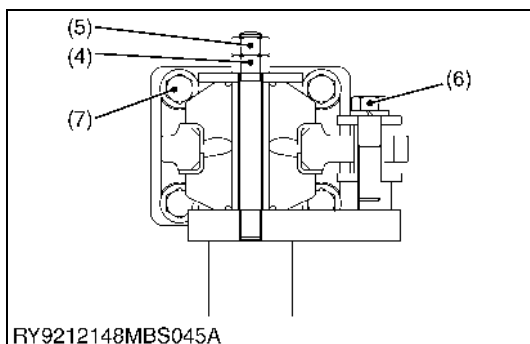

Tightening torque	First nut	88.2 to 107.8 N·m 9.0 to 11.0 kgf·m 65.1 to 79.5 lbf·ft
	Second nut	166.0 to 191.0 N·m 16.9 to 19.5 kgf·m 122.4 to 140.9 lbf·ft
	Bolt (M16)	196.1 to 225.6 N·m 20.0 to 23.0 kgf·m 144.6 to 166.4 lbf·ft
	Bolt (M14)	123.6 to 147.1 N·m 12.6 to 15.0 kgf·m 91.2 to 108.5 lbf·ft

Apply thread lock compound (Loctite 271).


Engine weight	Approx. 350 kg (772 lbs)

(1) Engine	(5) Second nut
(2) Pump	(6) Bolt (M16)
(3) Ground wire	(7) Bolt (M14)
(4) First nut	

RY9212148MBS0068US0

[6] ASSEMBLING OPERATING LEVERS


(1) Travel Lever

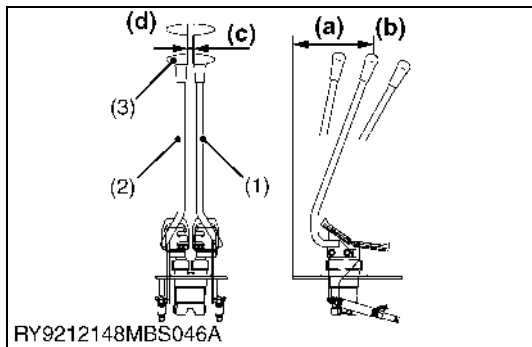

- (1) Left travel lever
(2) Right travel lever
(3) Grip

- (a) $260 \pm 5 \text{ mm}$ (10.2 $\pm$ 0.2 in.)
(b) When in neutral
(c) 15 to 21 mm (0.59 to 0.83 in.)
(d) Fwd/rear deviation of l/r levers to be within 2mm (0.08 in.)

RY9212148MBS0069US0

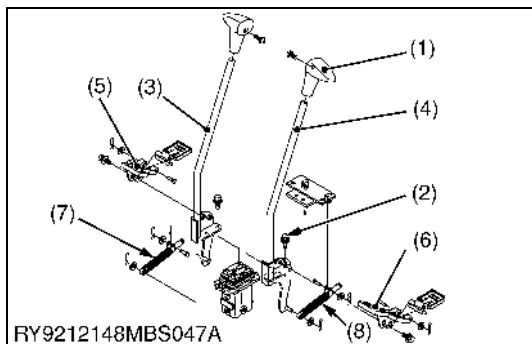

1. Install the left and right travel levers.


The pilot valve side is die cast aluminum so be careful not to over tighten; tighten to the torques indicated below.

Tightening torque	Left/right travel levers	39.2 to 45.1 N·m 4.0 to 4.6 kgf·m 28.9 to 33.3 lbf·ft

- (1) Grip
(2) Bolt
(3) Right travel lever
(4) Left travel lever
(5) Right pedal
(6) Left pedal
(7) Right damper
(8) Left damper

RY9212148MBS0070US0

(2) Blade Lever

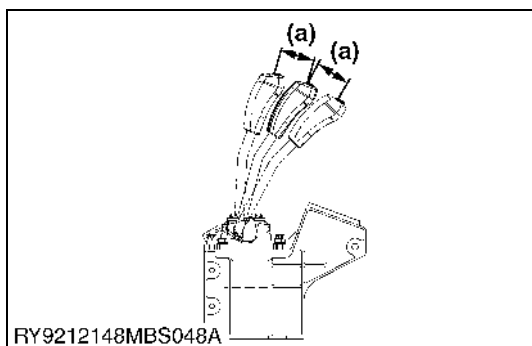


Neutral position

- (a) 65.5 mm (2.6 in.)

RY9212148MBS0071US0

(3) Limit Switch

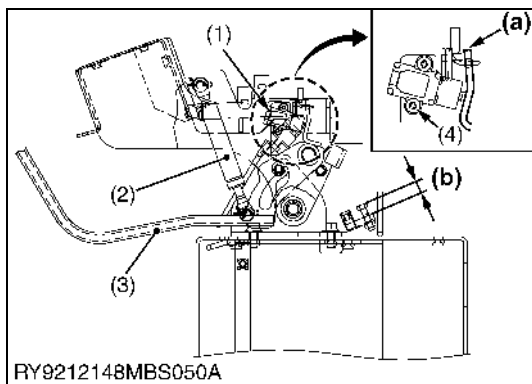

1. No clearance (a) when limit switch operated.

Tightening torque	Bolt	3.9 to 4.9 N·m 0.4 to 0.5 kgf·m 2.9 to 3.6 lbf·ft

Apply thread lock compound ThreeBond TB1401B.

- (1) Limit Switch
(2) Damper
(3) Unload Lever
(4) Bolt
(a) Clearance
(b) 16 mm (0.6 in.)

RY9212148MBS0072US0


3. TRACK FRAME

[1] SWIVEL BEARING ASSEMBLY/DISASSEMBLY



1. Remove the swivel frame.

RY9212148MBS0073US0

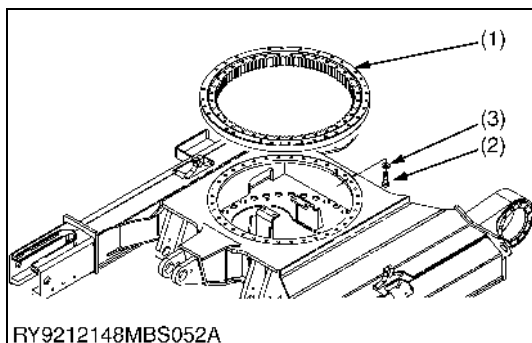


2. Suspend the swivel bearing with a crane, remove the swivel bearing mounting bolts on the bottom side, then remove the swivel bearing.

Swivel bearing weight (reference value)	110 kg (243 lbs)

Component names

No.	Name of part	Qty
(1)	Swivel bearing	1
(2)	Bolt	36
(3)	Diaphragm spring	36

RY9212148MBS0074US0

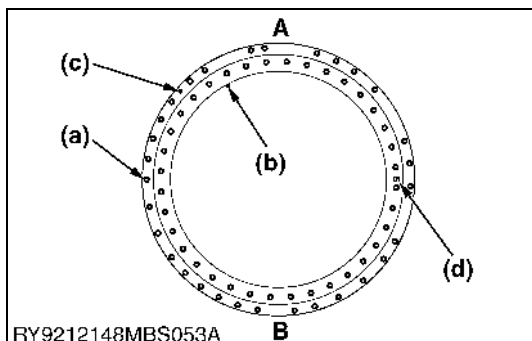

Mounting Procedure

1. Set the "S" mark on the right side of the machine and mount the swivel bearing mounting bolts finger tight.
Once they are all finger tight, tighten them in a diagonal pattern to the specified torque.


Tightening torque	Swivel bearing	259.9 to 304.0 N·m 26.5 to 31.0 kgf·m 191.7 to 224.2 lbf·ft

Thread locking compound (Loctite 271)

■ IMPORTANT

- Make sure the diaphragm springs face the right way.
- After mounting the bearing, apply grease so that it covers the entire surface of bearing teeth.

- (a) Ball insertion holes (outer soft zone) A : Front of machine
(b) Tooth surface grease application zone B : Back of machine
(c) Port for applying grease to the balls (mates with hole in swivel frame) C : Swivel frame side
(d) 'S' Mark D : Track frame side

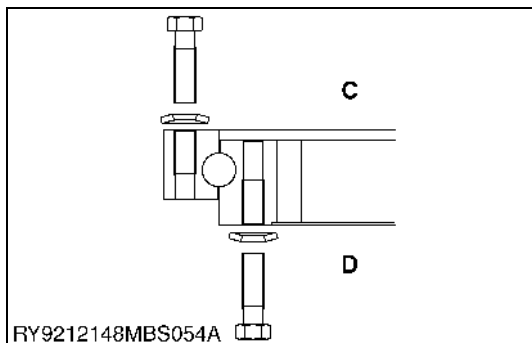

RY9212148MBS0075US0

[2] TRACK



WARNING

- The backhoe is equipped with an overload warning system.
When changing the rubber track to an iron track, or vice versa, it is necessary to change the preset code in either case.
If the preset code is not set correctly, the overload warning will fail to work correctly, which presents the risk of serious injury or death.
After making the setting, always make sure the overload warning is working correctly as per the overload warning test procedure.
(Refer to the electrical part of the Overload Warning System section.)



CAUTION

- As the grease cylinder is under high pressure, loosening the grease nipple all at once may cause the nipple to go flying and/or grease to spray out.
- Do not get your face or any body part right in front of the nipple while loosening it and loosen the nipple gradually.

RY9212148MBS0001US0

(1) Assembly/Disassembly of the Rubber Track




RY9212148MBS055A

- Remove the cover on the grease nipple.
- Press a socket wrench onto the base of the grease nipple and loosen slowly.
If there are any rocks or the like caught in the sprocket, remove the rocks first.

- Tool to use: 22 mm socket

- Grease nipple

RY9212148MBS0002US0

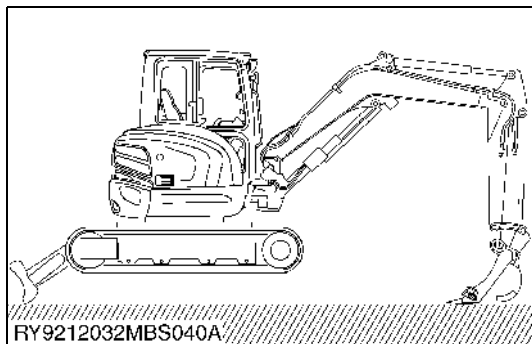


RY9212032MBS040A

- Jack up the body using the front end and blade, expel grease from inside the grease cylinder, and fully loosen up the track.
When the track loosens up, attach the grease nipple.

Tightening torque	Grease nipple	98.0 to 107.8 N·m 10.0 to 11.0 kgf·m 72.0 to 80.0 lbf·ft

RY9212148MBS0003US0

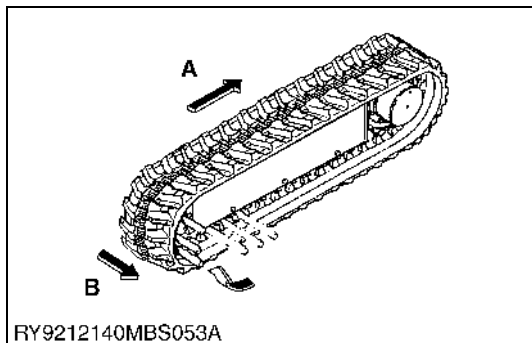


RY9212140MBS053A

- With the machine lifted slightly, wedge a steel pipe into the track and turn the sprocket backwards in direction **A**.
When the steel pipe reaches halfway up the idler and the track lifts off the idler, stop turning the sprocket and slide the track sideways in direction **B** to remove it.

- Weight of rubber track: approximately 405 kg (893 lbs)

A : Backwards**B : Direction to slide**

RY9212148MBS0004US0

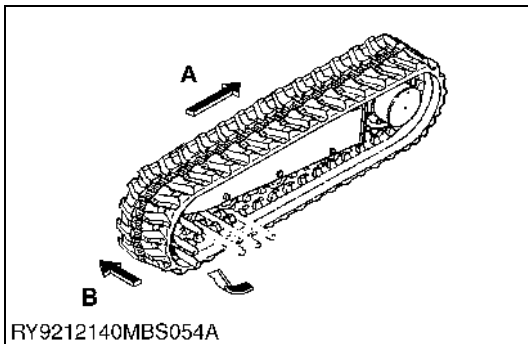

Assembling the Rubber Track

1. Jack up the machine with the front and the blade and with it lifted slightly off the ground, wedge the track onto the sprocket and set it on the frame.
2. Wedge steel pipes into the track and rotate the sprocket backwards in direction **A**. When a steel pipe reaches halfway up the idler, stop turning the sprocket. Slide the track sideways in direction **B** and set the track onto the idler. Lower the machine and drive it backwards to make sure the tracks are on securely. Adjust the tension of the track.



CAUTION

- Make sure to assemble the rubber track facing the right way.

A : Backwards

B : Direction to Slide

RY9212148MBS0013US0

(2) Assembly/Disassembly of Iron Tracks




Removal

1. Remove the cover on the grease nipple.
 2. Press a socket wrench onto the base of the grease nipple and loosen slowly.
If there are any rocks or the like caught in the sprocket, remove the rocks first.
- Tool to use: 22 mm socket


- (1) Cover

RY9212148MBS0005US0

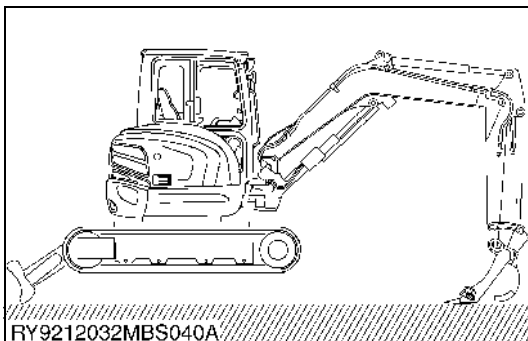

3. Jack up the body using the front end and blade, expel grease from inside the grease cylinder, and fully loosen up the track.
When the track loosens up, attach the grease nipple.

RY9212148MBS0076US0

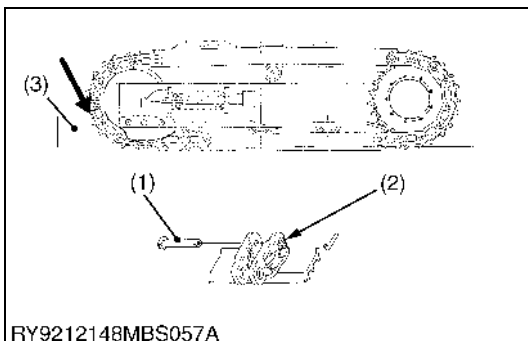


4. Rotate the track so the master pin comes to the front idler side and put a block under the track.

- (1) Master pin
- (2) Master link

- (3) Block

RY9212148MBS0077US0

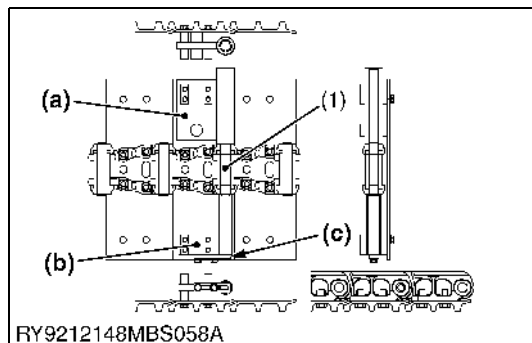


5. Lower the machine to the ground and mount tools a, b, and c to the track.

■ **IMPORTANT**

- With tool b in place, mount tool c.

(1) Master pin	(a) Tool a
	(b) Tool b
	(c) Tool c


RY9212148MBS0078US0

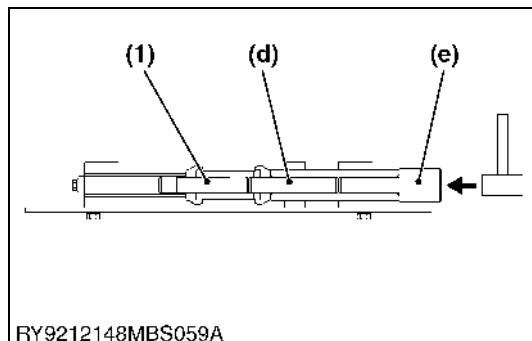

6. After inserting tools d and e inside tool c, tap the side of tool e with a hammer.

(1) Master pin	(d) Tool d
	(e) Tool e

RY9212148MBS0079US0

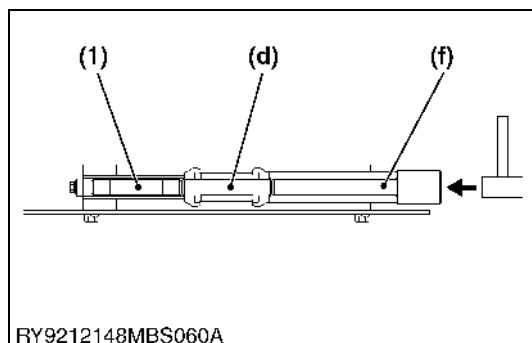

7. Switch tools e and f and tap with a hammer until the master pin comes out.

8. Once the master pin comes out, remove all of the mounted tools.

■ **IMPORTANT**

- Be careful when working because the moment tool d is removed, the master link will come off.

(1) Master pin	(d) Tool d
	(f) Tool f



RY9212148MBS0080US0

9. Slowly operate the travel lever backwards on the side being removed and remove the track.

⚠ **DANGER**

- Do not get your feet under the mini-excavator.

RY9212148MBS0081US0

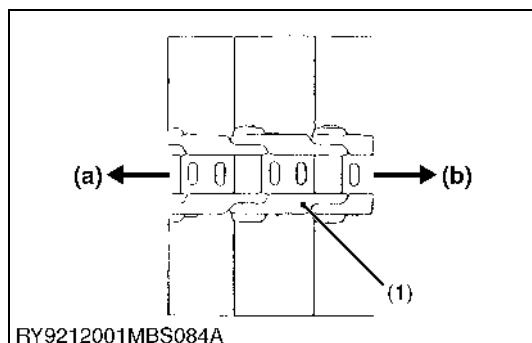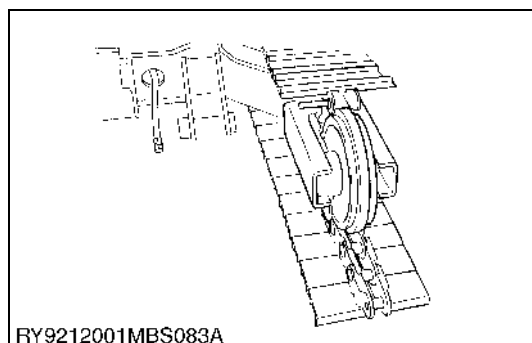

Mounting


1. Jack up the mini-excavator using the front end and blade and place the track so that the end of the track meshes with the sprocket under the mini-excavator.

■ **IMPORTANT**

- Take care to face the track in the correct direction.

(1) Master link	(a) Sprocket side
	(b) Front idler side


RY9212148MBS0082US0

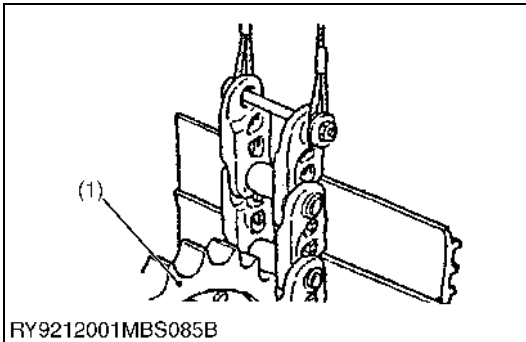

2. Raise the track using a crane and mesh it with the sprocket.

- (1) Sprocket


RY9212148MBS0083US0

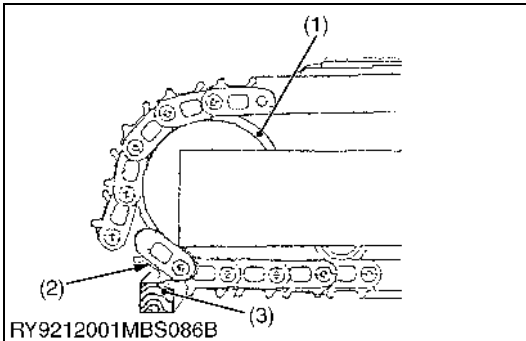

3. Operate the travel lever forward slowly and wind the track on. When the track is sufficiently pulled on to where the track link joint is at the front idler, lower the mini-excavator and place a block under the track to support it.

- (1) Front Idler
(2) Track
(3) Block

RY9212148MBS0084US0

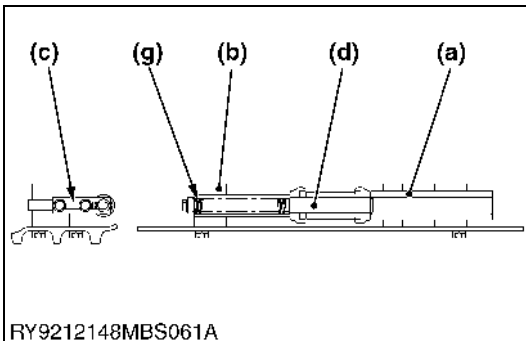

4. Mount tools a and b on the track plate and insert tool d from the tool a side.


■ **IMPORTANT**

- Set tools c and g on tool b.

Align the holes of tools a and b with that of the master link and then install.

- (a) Tool a
(b) Tool b
(c) Tool c
(d) Tool d
(g) Tool g

RY9212148MBS0085US0

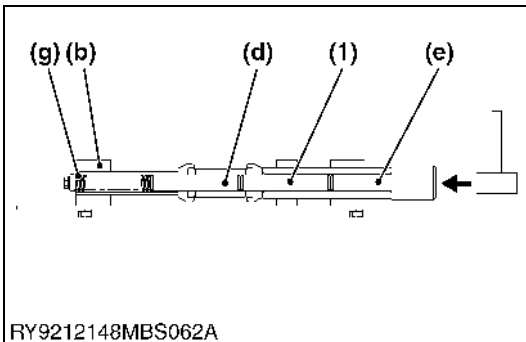

5. Insert the master pin from the tool a side and use a hammer on tool e to insert the master pin.


6. After tapping tool e in to the end, remove tools b and g.

■ **IMPORTANT**

- When removing tool g, be careful that the spring doesn't make it go flying.

- (1) Master pin
(b) Tool b
(d) Tool d
(e) Tool e
(g) Tool g

RY9212148MBS0086US0

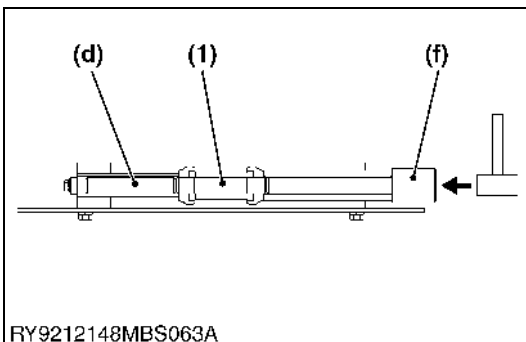


7. After remounting tool b, tap tool f with a hammer until the master pin is all the way in.

- (1) Master pin
(d) Tool d
(f) Tool f

RY9212148MBS0087US0


(3) Steel Track Removal/Installation Tools

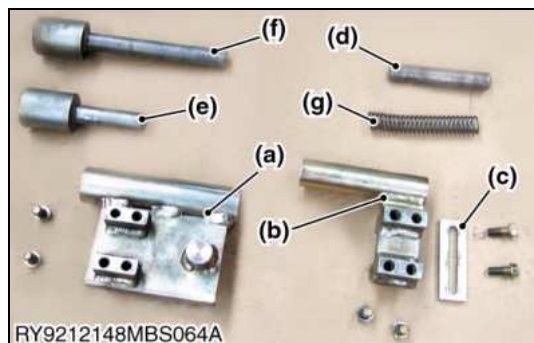

No. in Figure	Name of part
(a)	Guide (outside)
(b)	Guide (inside)
(c)	Stopper plate
(d)	Pin
(e)	Pusher 1
(f)	Pusher 2
(g)	Spring


RY9212148MBS008US0

(a) Guide (outside)

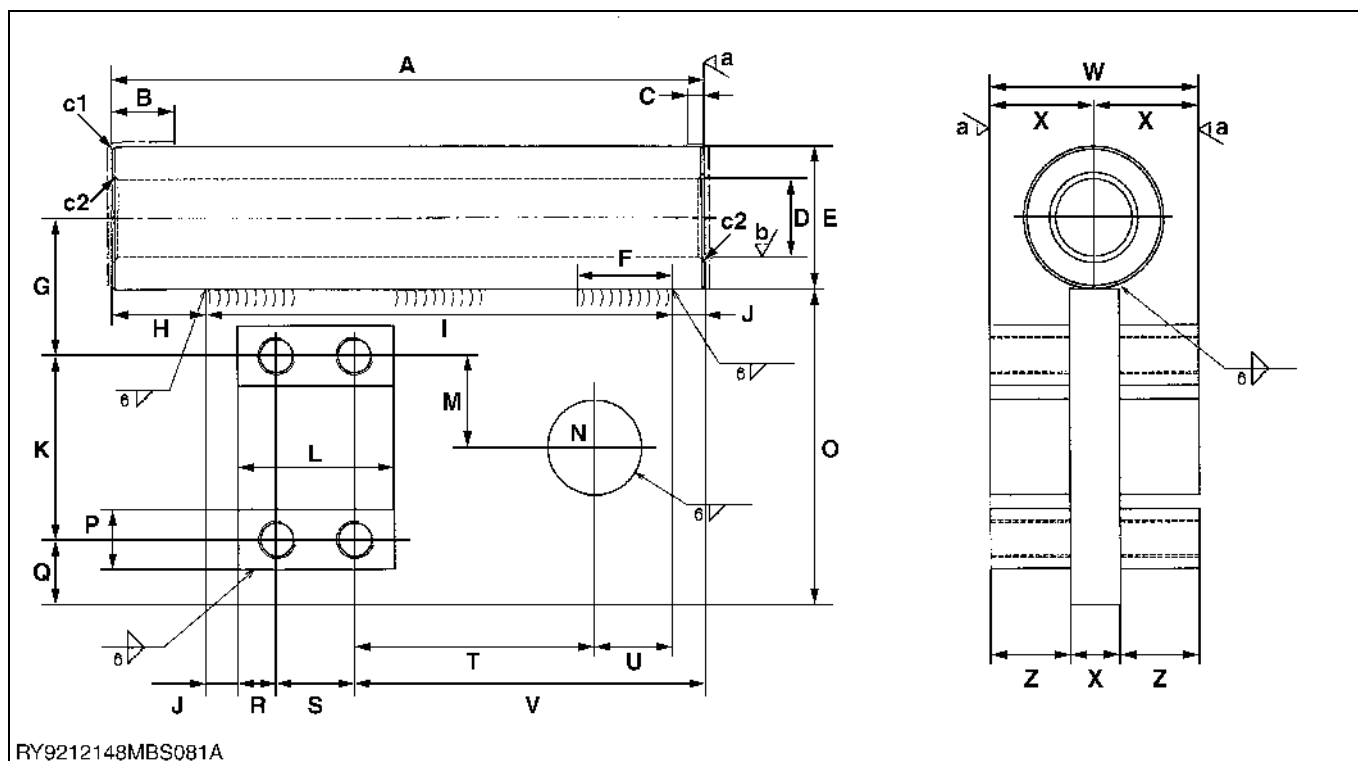


A	189.5 to 190.5 mm (7.46 to 7.50 in.)	Q	21.0 mm (0.83 in.)
B	20.0 mm (0.79 in.)	R	12.5 mm (0.49 in.)
C	5.0 mm (0.20 in.)	S	24.5 to 25.5 mm (0.96 to 1.00 in.)
D	φ 24.4 to 24.6 mm (0.96 to 0.97 in.)	T	77.0 mm (3.03 in.)
E	45.0 mm (1.77 in.)	U	25.0 mm (0.98 in.)
F	30.0 mm (1.18 in.)	V	112.5 mm (4.43 in.)
G	43.5 mm (1.71 in.)	W	67.0 mm (2.64 in.)
H	29.5 mm (1.16 in.)	X	33.4 to 33.6 mm (1.31 to 1.32 in.)
I	150.0 mm (5.91 in.)	Y	16.0 mm (0.63 in.)
J	10.5 mm (0.41 in.)	Z	25.5 mm (1.00 in.)
K	57.5 to 58.5 mm (2.26 to 2.30 in.)	C1	1.0 mm (0.04 in.) bevel
L	50.0 mm (1.97 in.)	C2	2.0 mm (0.08 in.) bevel
M	29.0 mm (1.14 in.)	a	Ra=12.5a
N	φ 30.0 mm (1.18 in.)	b	Ra=6.3a
O	100.0 mm (3.94 in.)	c	2 x M12 x 1.25 / φ 10.8
P	19.0 mm (0.75 in.)		

RY9212148MBS008US0

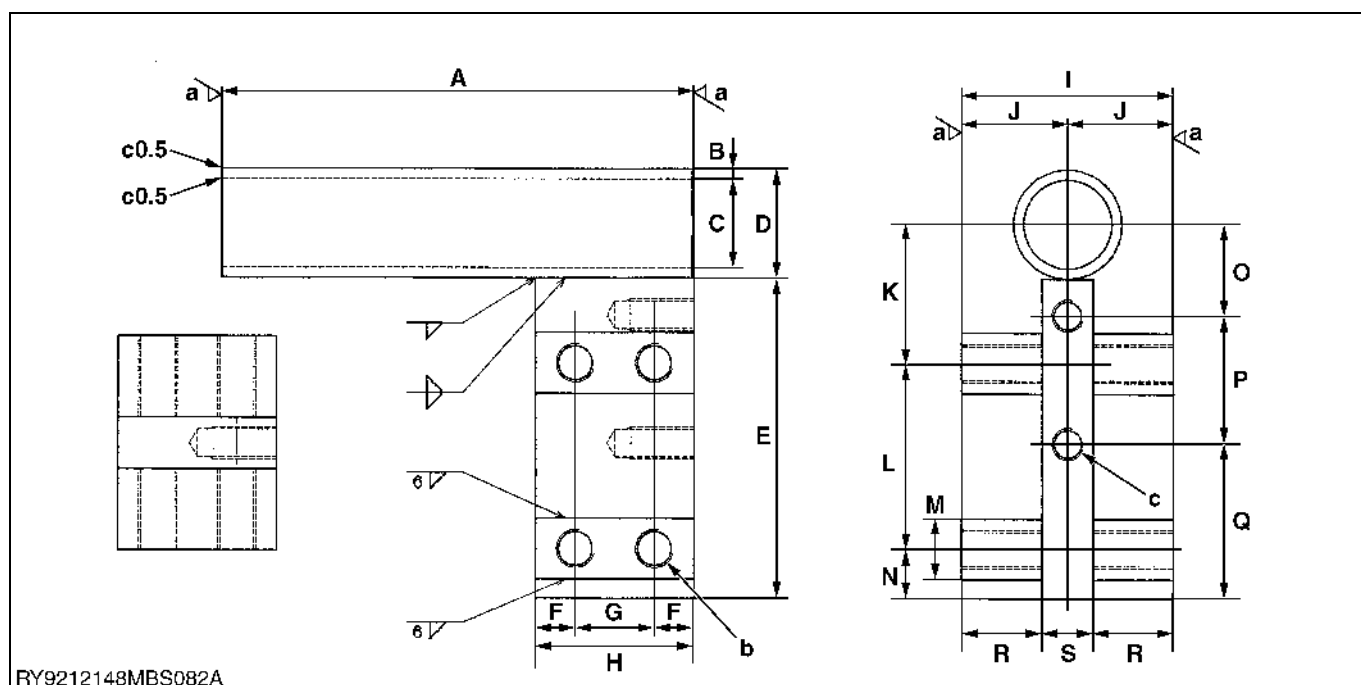(b)Guide (inside)


A	150.0 mm (5.91 in.)	M	19.0 mm (0.75 in.)
B	3.2 mm (0.13 in.)	N	15.5 mm (0.61 in.)
C	φ27.6 mm (1.09 in.)	O	28.5 mm (1.12 in.)
D	φ34.0 mm (1.34 in.)	P	39.5 to 40.5 mm (1.56 to 1.59 in.)
E	100.0 mm (3.94 in.)	Q	48.5 mm (1.91 in.)
F	12.5 mm (0.49 in.)	R	25.5 mm (1.00 in.)
G	24.5 to 25.5 mm (0.96 to 1.00 in.)	S	16.0 mm (0.63 in.)
H	50.0 mm (1.97 in.)	C0.5	0.5 mm (0.02 in.) bevel
I	67.0 mm (2.64 in.)	a	Ra=12.5a
J	33.0 to 34.0 mm (1.30 to 1.34 in.)	b	2 x M12 x 1.25 / φ10.8
K	43.5 mm (1.71 in.)	c	2 x M10 x 1.25 x 20 / φ8.8 x 25
L	57.5 to 58.5 mm (2.26 to 2.30 in.)		

RY9212148MBS0090US0

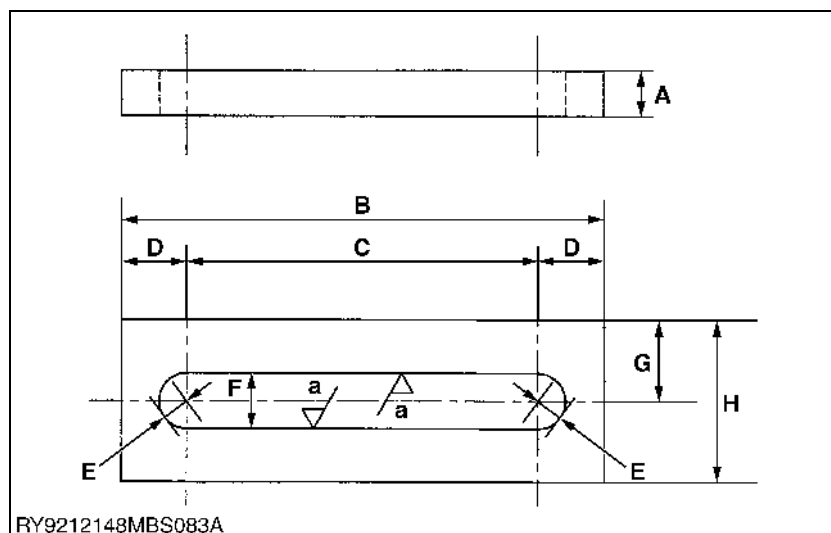**(c)Stopper plate**

A	9.0 mm (0.35 in.)
B	96.0 mm (3.78 in.)
C	70.0 mm (2.76 in.)
D	13.0 mm (0.51 in.)
E	5.5 mm (0.22 in.)
F	11.0 mm (0.43 in.)
G	16.0 mm (0.63 in.)
H	32.0 mm (1.26 in.)
a	Ra=12.5a


RY9212148MBS0091US0

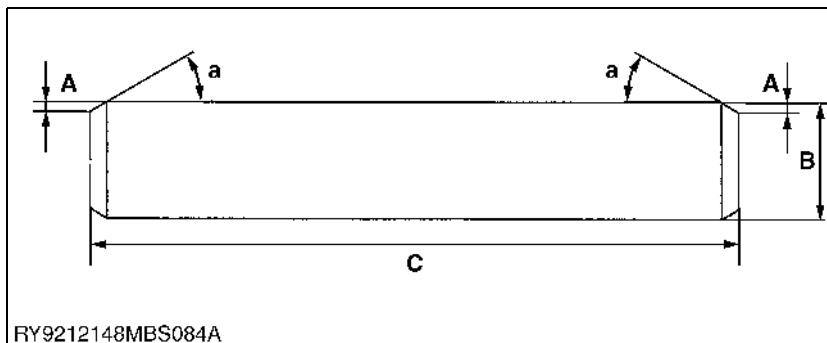

(d)Pin

A	2.0 mm (0.08 in.)
B	φ23.4 to 23.6 mm (0.92 to 0.93 in.)
C	132.7 to 133.3 mm (5.22 to 5.25 in.)
a	30°(0.52 rad)


RY9212148MBS0092US0

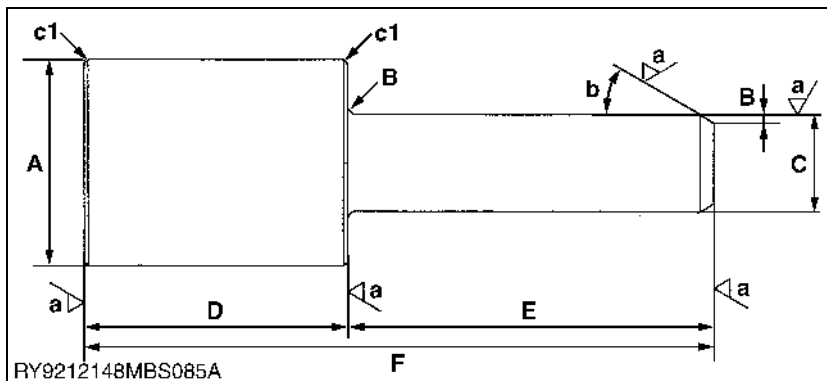

(e)Pusher 1

A	φ50.0 mm (1.97 in.)
B	2.0 mm (0.08 in.)
C	φ23.4 to 23.6 mm (0.92 to 0.93 in.)
D	65.0 mm (2.56 in.)
E	89.7 to 90.3 mm (3.53 to 3.56 in.)
F	155.0 mm (6.10 in.)
C1	1.0 mm (0.04 in.) bevel
a	Ra=12.5a
b	30°(0.52 rad)


RY9212148MBS0093US0

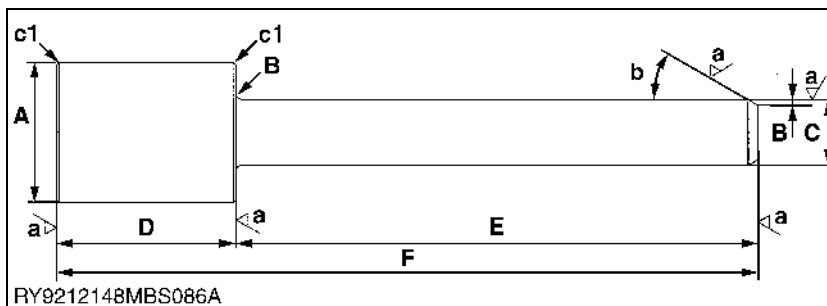

(f)Pusher 2

A	φ50.0 mm (1.97 in.)
B	2.0 mm (0.08 in.)
C	φ23.4 to 23.6 mm (0.92 to 0.93 in.)
D	65.0 mm (2.56 in.)
E	188.7 to 189.3 mm (7.43 to 7.45 in.)
F	254.0 mm (10.00 in.)
C1	1.0 mm (0.04 in.) bevel
a	Ra=12.5a
b	30°(0.52 rad)

RY9212148MBS0094US0

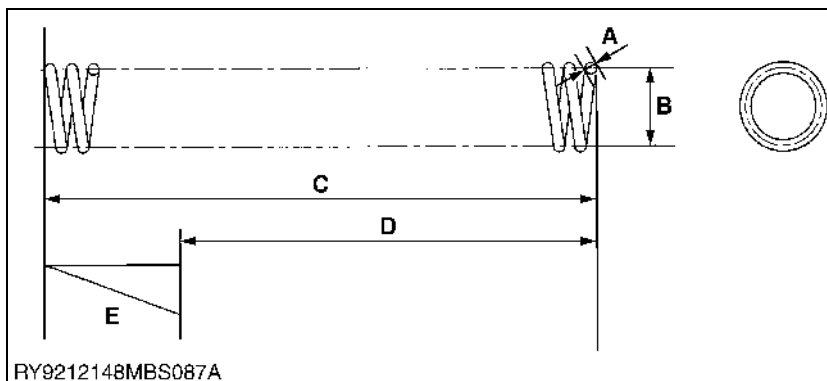

(g)Spring

A	φ2.9 mm (0.11 in.)
B	φ20.0 mm (0.79 in.)
C	144.0 mm (5.67 in.)
D	109.0 mm (4.29 in.)
E	106.0 N (10.8 kgf, 23.8 lbs)

RY9212148MBS0095US0

[3] FRONT IDLER

(1) Assembly/Disassembly of Front Idler



1. Remove the track. (Refer to the chapter Assembly/Disassembly of the Rubber Track.)

■ IMPORTANT

- Jack up the machine with the front-end and the blade and place blocks under the frame.
2. Use a crow bar to separate the front idler and the yoke from the track frame.

Front idler assembly weight	Approx. 70 kg (150 lbs)


3. Use a crane during assembly.

■ IMPORTANT

- Wipe off any dirt, sand, etc. sticking to the inside of the track frame prior to inserting the component.
- Make sure it slides smoothly and insert it.


RY9212148MBS0096US0

(2) Assembly/Disassembly of the Front Idler

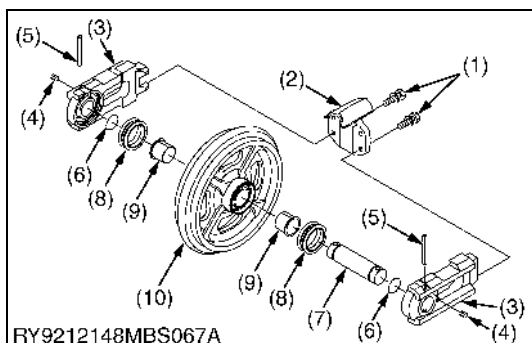

No.	Name of part	Qty	Notes
(1)	Bolt	4	123.6 to 147.1 N·m 12.6 to 15.0 kgf·m 91.2 to 108.5 lbf·ft
(2)	Yoke	1	
(3)	Bracket	2	
(4)	Plug	2	R1/8
(5)	Spring pin	2	
(6)	O-ring	2	
(7)	Shaft	1	
(8)	Floating seal	2	
(9)	Bushing	2	
(10)	Idler	1	

RY9212148MBS0097US0

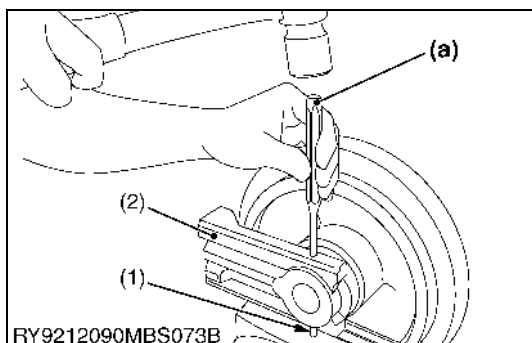

Disassembly Procedures


1. Remove the plug from the bracket and drain the oil.
2. Use a pin punch to extract the left and right spring pins and then remove the bracket.

(1) Spring Pin

(a) Pin Punch

(2) Bracket


RY9212148MBS0006US0

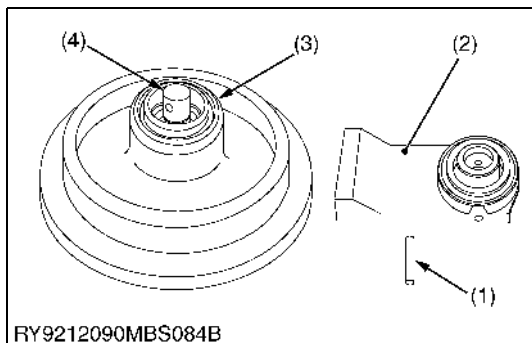

3. Remove the floating seal.
4. Remove the shaft.

(1) Spring Pin	(3) Floating Seal
(2) Bracket	(4) Shaft

RY9212148MBS0007US0

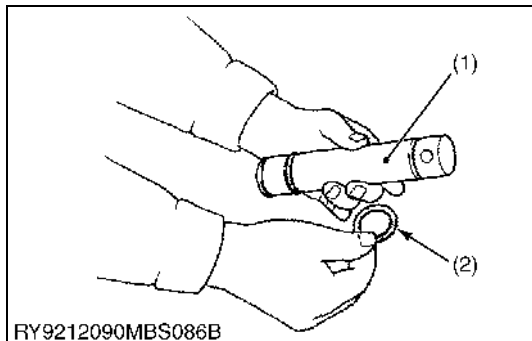

Assembly Procedures


1. Mount the O-rings on the shaft.

■ IMPORTANT

- Apply engine oil to the O-rings.

(1) Shaft	(2) O-Ring

RY9212148MBS0008US0

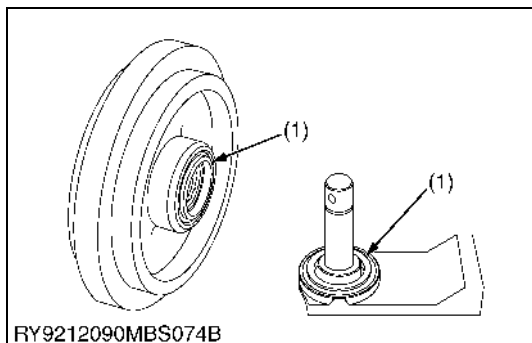


2. After installing a floating seal on one side of the bracket, mount the shaft and fix it in place with a spring pin.
3. Install a floating seal on the idler.

■ IMPORTANT

- Face the split in the spring pin so it is perpendicular to the shaft and tap it in.
- Make sure there is no oil or debris on the O-ring or the O-ring seat.
- Apply a thin film of oil to the sliding surfaces.
- Make sure there are no scratches in the sliding surfaces or the O-rings.

- | |
|-------------------|
| (1) Floating Seal |
|-------------------|

RY9212148MBS0009US0

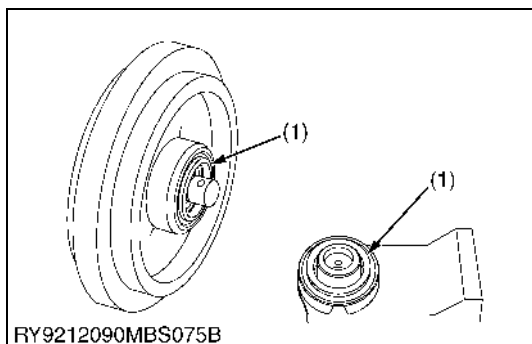


4. Install a floating seal to the bracket on the other side of the idler.

■ IMPORTANT

- Make sure there is no oil or debris on the O-ring or the O-ring seat.
- Apply a thin film of oil to the sliding surfaces.
- Make sure there are no scratches in the sliding surfaces or the O-rings.

- | |
|-------------------|
| (1) Floating Seal |
|-------------------|

RY9212148MBS0009US0

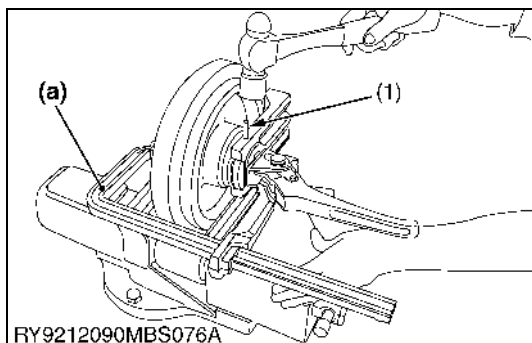


5. Align the holes in the shaft and the brackets, hold them in place with a clamp and tap in a spring pin.

■ IMPORTANT

- Face the split in the spring pin so it is perpendicular to the shaft and tap it in.
- After completing the assembly, turn the idler a little to form a film of oil on the sliding surface of the floating seals.

(1) Spring Pin	(a) Clamp

RY9212148MBS0009US0

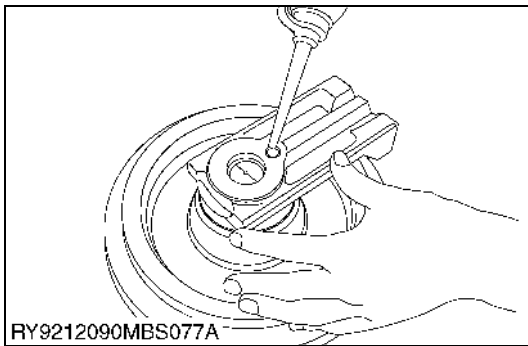

6. Fill with engine oil via the plug hole in the bracket.
7. Install the plug.

Lubricant	Type SAE #30CD engine oil	80 cc 4.88 cu.in
Tightening torque	Plug	10.0 N·m 1.0 kgf·m 7.4 lbf·ft

Apply thread lock compound (Loctite 503 or equivalent)

RY9212148MBS0010US0

[4] GREASE CYLINDER

(1) Assembly/Disassembly of the Grease Cylinder



1. Remove the track and the front idler. (Refer to the the Track and Front Idler chapters for assembly/disassembly of the track and front idler.)
2. Remove the grease cylinder from the track frame.

Grease cylinder weight	Approx. 20 kg (44 lbs)


3. Use a crane during assembly.

■ IMPORTANT

- Wipe off any dirt, sand, etc. sticking to the inside of the track frame prior to inserting the component.
- Make sure it slides smoothly and insert it.

RY9212148MBS0100US0

(2) Components

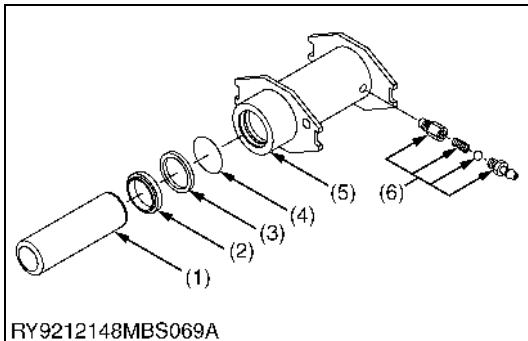

No.	Name of part	Qty	Notes
(1)	Rod	1	
(2)	Seal	1	
(3)	Backup ring	1	
(4)	O-ring	1	
(5)	Cylinder tube	1	
(6)	Grease nipple	1	98.0 to 107.8 N·m 10.0 to 11.0 kgf·m 72.3 to 79.5 lbf·ft

RY9212148MBS0101US0

[5] TENSIONER

(1) Tensioner Assembly/Disassembly



1. Remove the track front idler and grease cylinder. (Refer to the the Track and Front Idler and Grease Cylinder sections for their assembly/disassembly procedures.)
2. Remove the tensioner from the track frame.


Tensioner weight	Approx. 30 kg (66 lbs)

3. Use a crane during assembly.

■ IMPORTANT

- Wipe off any dirt, sand, etc. sticking to the inside of the track frame prior to inserting the component.
- Make sure it slides smoothly and insert it.

RY9212148MBS0102US0

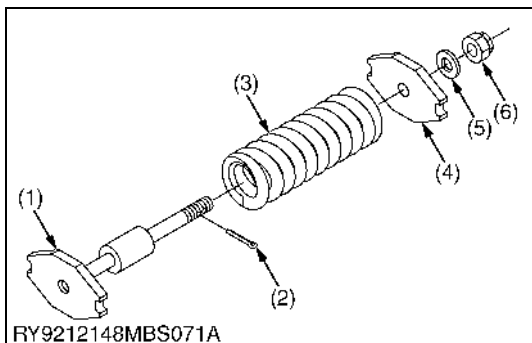

No.	Name of part	Qty	Notes
(1)	Bolt	1	
(2)	Split pin	1	
(3)	Spring	1	
(4)	Retainer	1	
(5)	Washer	1	
(6)	Nut	1	


RY9212148MBS0103US0

When switching from a rubber track to a steel one or vice versa, set to the appropriate preset length.

Preset length	Steel	Factory Specification	334 mm 13.1 in.
	Rubber		319 mm 12.6 in.

(a) Preset length

RY9212148MBS0104US0

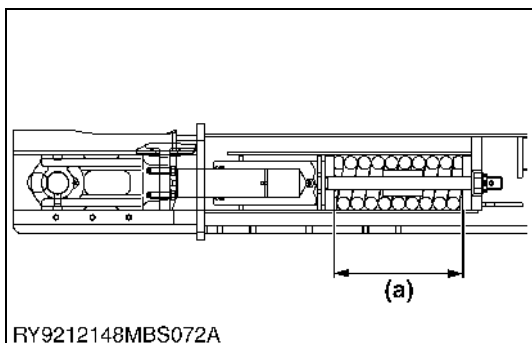

[6] TRACK ROLLERS


(1) Track Roller Assembly/Disassembly



CAUTION

- As the grease cylinder is under high pressure, loosening the grease nipple all at once may cause the nipple to go flying and/or grease to spray out.
- Do not get your face or any body part right in front of the nipple while loosening it and loosen the nipple gradually.

RY9212148MBS0016US0

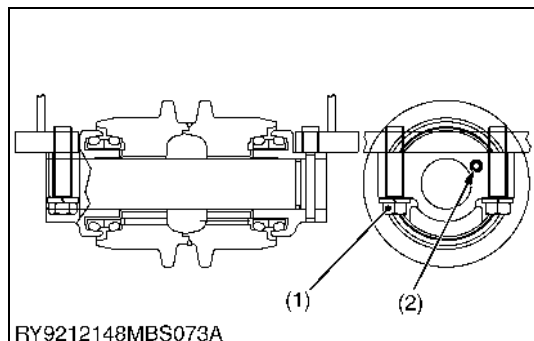

RY9212148MBS073A

1. Remove the track roller mounting bolts.

Tightening torque	Bolt	166.7 to 196.1 N·m 17.0 to 20.0 kgf·m 123.0 to 144.6 lbf·ft

Apply a threadlock (ThreeBond 1305P).

- (1) Bolt
- (2) Grease plug

RY9212148MBS0105US0




RY9212032MBS034A

2. Jack up the body using the front end and blade, expel grease from inside the grease cylinder, and fully loosen up the track. When the track is loose, attach the grease nipple and place a block under the track frame.
3. Remove the track roller(s).

Track roller weight	Approx. 12.4 kg (27.3 lbs)

RY9212148MBS0011US0

(2) Components

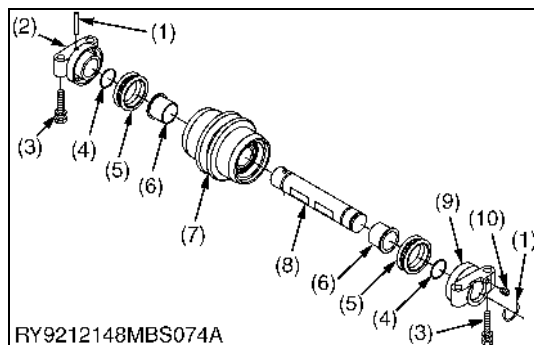

RY9212148MBS074A

(1) Spring pin	(6) Bushing
(2) Bracket 1	(7) Roller
(3) Bolt	(8) Shaft
(4) O-ring	(9) Bracket 2
(5) Floating seal	(10) Plug

RY9212148MBS0106US0

[7] CARRIER ROLLERS

(1) Carrier Roller Assembly/Disassembly



CAUTION

- As the grease cylinder is under high pressure, loosening the grease nipple all at once may cause the nipple to go flying and/or grease to spray out.
- Do not get your face or any body part right in front of the nipple while loosening it and loosen the nipple gradually.

RY9212148MBS0016US0



RY9212032MBS034A

1. Jack up the body using the front end and blade, expel grease from inside the grease cylinder, and fully loosen up the track. When the track is loose, attach the grease nipple and place a block under the track frame.
2. Insert a block between the track frame and the track and remove the carrier roller.

Tightening torque	Bolt	166.7 to 196.1 N·m 17.0 to 20.0 kgf·m 123.0 to 144.6 lbf·ft


Apply a threadlock (ThreeBond 1305P).

Carrier roller weight	Approx. 10.8 kg Approx. 23.8 lbs

(1) Block


(2) Bolt

RY9212148MBS0146US0

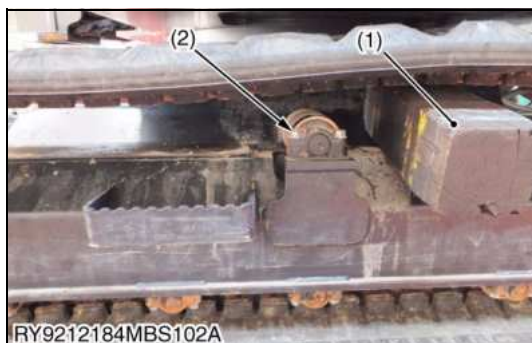

RY9212184MBS102A

(2) Components

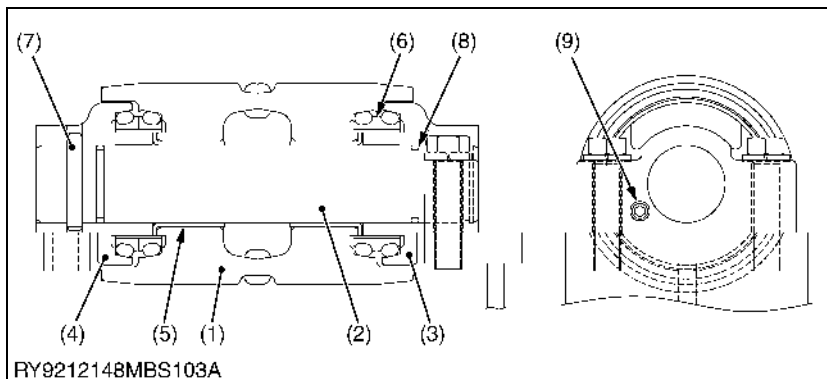


RY9212148MBS103A

- (1) Roller
- (2) Shaft
- (3) Bracket 1
- (4) Bracket 2
- (5) Bushing
- (6) Floating seal
- (7) Spring pin
- (8) O-ring
- (9) Grease plug

RY9212148MBS0147US0

[8] TABLE OF DIMENSIONS

(1) Rubber Track

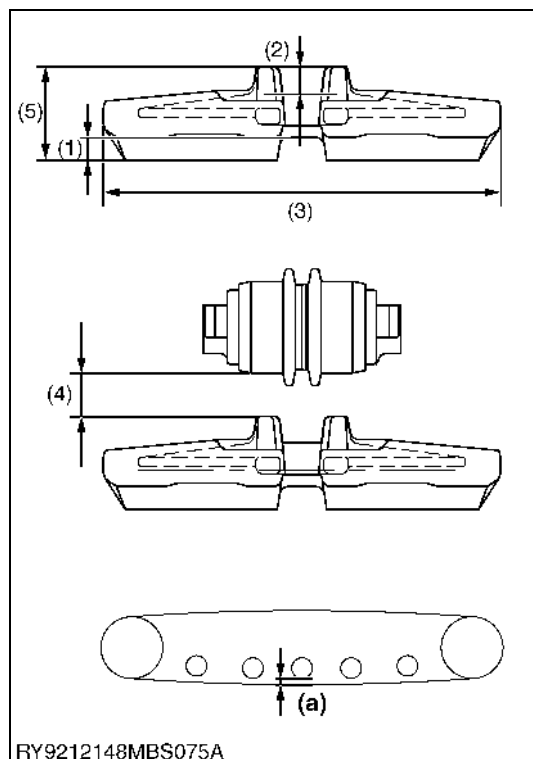


No.	Item	KX080-4	KX080-4
	Country sold	CA	USA
(1)	Lug height	20 mm 0.79 in.	20 mm 0.79 in.
(2)	Link height	30 mm 1.18 in.	30 mm 1.18 in.
(3)	Track width	450 mm 17.72 in.	450 mm 17.72 in.
(4)	Track tension	25 to 40 mm 0.98 to 1.57 in.	25 to 40 mm 0.98 to 1.57 in.
(5)	Track height	102.5 mm 4.04 in.	102.5 mm 4.04 in.
	No. of cored bars	76	76
	Circumference in middle	6194 mm 243.86 in.	6194 mm 243.86 in.
	Cored bar pitch	81.5 mm 3.21 in.	81.5 mm 3.21 in.
	Endless ID mark	—	∞

(a) Track adjustment point

RY9212158MBS0006US0

(2) Steel Track

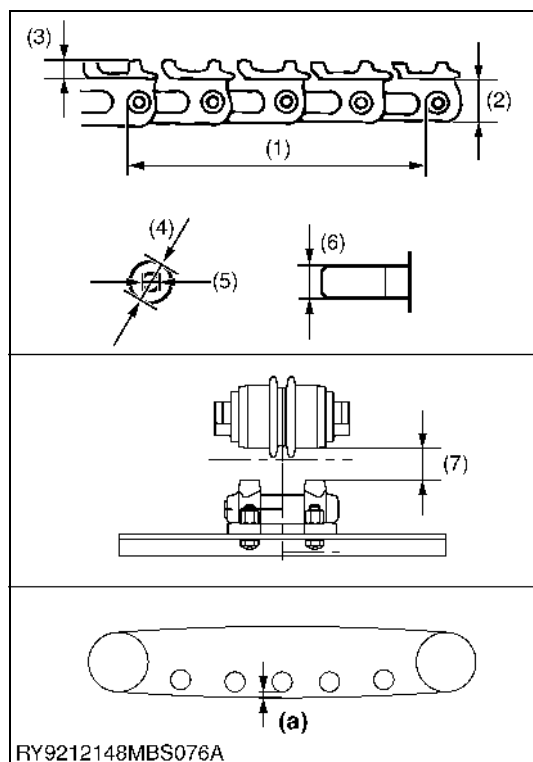

No.	Item	KX080-4	
	Track width	450 mm 17.72 in.	600 mm 23.62 in.
	No. of links	39	
(1)	4 Link lengths (A)/(B)	616.0 / 632.0 mm 24.25 / 24.88 in.	
(2)	Height (A)/(B)	74.0 / 70.0 mm 2.91 / 2.76 in.	
(3)	Grouser height (A)/(B)	26.0 / 16.0 mm 1.02 / 0.63 in.	
(4)	Bushing O.D. (A)/(B)	φ 41.26 / 40.26 mm φ 1.62 / 1.59 in.	
(5)	Bushing I.D. (A)/(B)	φ 24.5 / 27.0 mm φ 0.96 / 1.06 in.	
(6)	Pin O.D. (A)/(B)	φ 24.0 / 21.0 mm φ 0.94 / 0.83 in.	
(7)	Track tension	40 to 55 mm 1.57 to 2.17 in.	


(A): Factory spec. when new

(B): Recommended replacement values

(a) Track adjustment point

RY9212148MBS0109US0

(3) Idler Sprocket

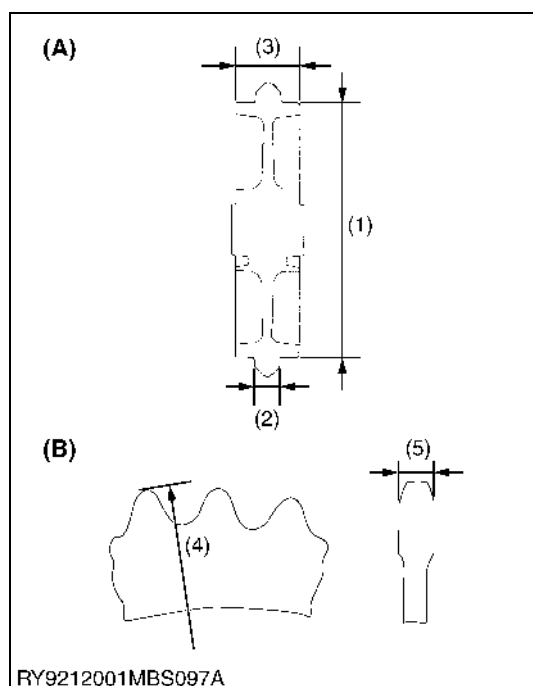

No.	Item	KX080-4
Front Idler		
(1)	O.D. (A)/(B)	$\phi 390 / 384$ mm $\phi 15.35 / 15.12$ in.
(2)	Guide width (A)/(B)	$38 / 32$ mm $1.50 / 1.26$ in.
(3)	Width	98 mm 3.86 in.
Sprocket		
(4)	O.D. (A)/(B)	$\phi 493 / 481$ mm $\phi 19.41 / 18.94$ in.
(5)	Wheel width	39 mm 1.54 in.

(A): Factory spec. when new



(B): Recommended replacement values

(A) Front Idler

(B) Sprocket

RY9212148MBS0110US0

(4) Carrier Rollers and Track Rollers

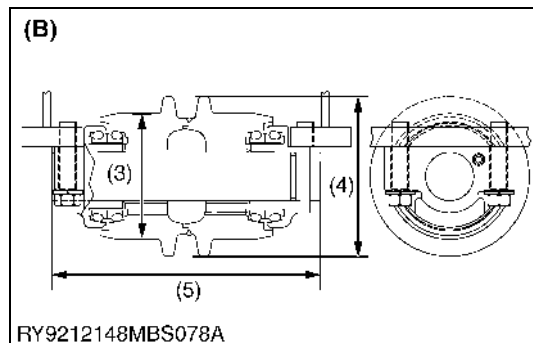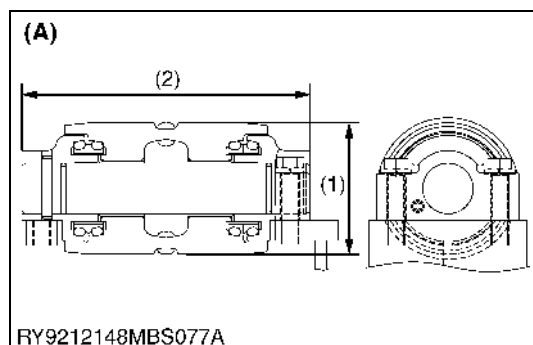

No.	Item	KX080-4
Carrier Rollers		
(1)	O.D. (A)/(B)	$\phi 80 / 76$ mm $\phi 3.15 / 2.99$ in.
(2)	Roller width	$\phi 228.6$ mm $\phi 9.00$ in.
Track Rollers		
(3)	Guide width (A)/(B)	$\phi 104 / 96$ mm $\phi 4.09 / 3.78$ in.
(4)	O.D. (A)/(B)	$\phi 132 / 124$ mm $\phi 5.20 / 4.88$ in.
(5)	Roller width	$\phi 228.6$ mm $\phi 9.00$ in.

(A): Factory spec. when new

(B): Recommended replacement values

(A) Carrier rollers

(B) Track rollers

RY9212148MBS0111US0

4. MEASURING MACHINE PERFORMANCE



[1] MEASURING FRONT PERFORMANCE

(1) Measuring Swivel Gear Backlash

Purpose

- Measure the degree of overall wear in the front and replace pins and/or bushings or add shims as needed.
- When there is a great deal of play, it may cause wear in the swivel bearing teeth, swivel motor pinion gear and front pins and bushings.

RY9212148MBS0112US0

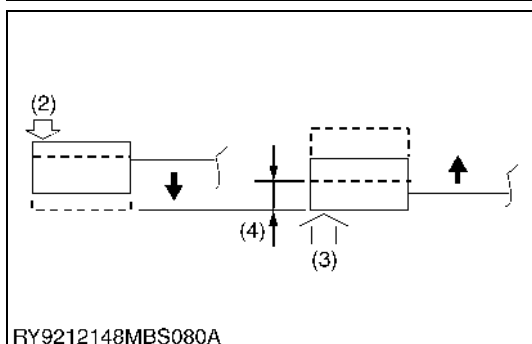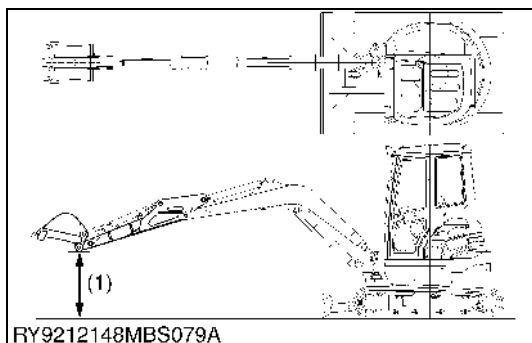

Measurement preparation

1. To make the measurements, position the machine so the arm cylinder and bucket cylinder are fully compressed with the end of the arm at a height of 1.0 m (40 in.) off the ground.
2. Stop the engine.

[Left play measurement]

1. Push to the right with 50 N (5.0 kgf, 11 lbs) of pressure, making that position the zero point; then press to the left with 300 N (30 kgf, 67.4 lbs) of pressure and take a reading at that point.
2. Take three measurements, determine the average and take that as the measured value.

[Right play measurement]

1. Push to the left with 50 N (5.0 kgf, 11 lbs) of pressure, making that position the zero point; then press to the right with 300 N (30 kgf, 67.4 lbs) of pressure and take a reading at that point.
2. Take three measurements, determine the average and take that as the measured value.

- (1) 1.0 m (40 in.)
(2) 50 N (5.0 kgf, 11 lbs)


- (3) 300 N (30 kgf, 67.4 lbs)
(4) Amount of Play

RY9212148MBS0113US0


(2) Measuring Swivel Bearing Play

Purpose


- Assesses the degree of wear in the ball bearings and race surfaces of the swivel bearing according to the amount of wear in the inner and outer races.

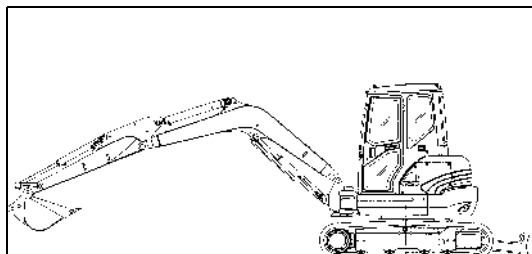

RY9212050MBS018A

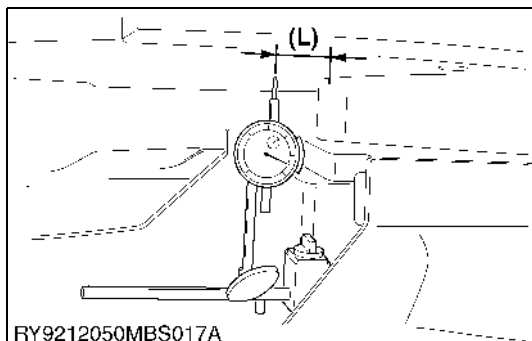

RY9212050MBS017A

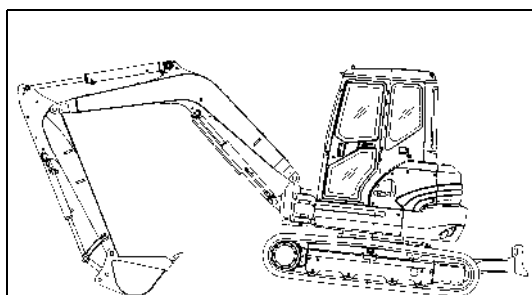

RY9212050MBS019A

[Measurement preparation]

1. Make sure there is no looseness in the swivel bearing mounting bolts.
2. Operate the swivel and make sure there are no abnormal sounds and that it operates smoothly.
3. Fasten the dial gauge and the dial gauge stand to the track frame so the probe of the dial gauge touches the swivel frame.

[Measurement]

1. Arm cylinder fully compressed and bucket cylinder fully extended, keeping the boom base pin and the arm end pin at the same height.
2. Zero the dial gauge.
3. Use the front attachment to tilt the body of the machine upwards and take a reading on the dial gauge.
4. Take three measurements, determine the average and take that as the measured value.

(L) Measurement position 50 mm
(1.97 in.)

RY9212148MBS0132US0

5. SWIVEL GEAR BACKLASH PERFORMANCE

No.	Item		Factory specification	Notes
(1)	Front play measurement		≤ 70 mm ≤ 2.76 in.	
(2)	Swivel bearing play	Factory spec. when new	1.24 mm 0.05 in.	
		Usage limit	2.48 mm 0.10 in.	

RY9212158MBS0004US0

2 ENGINE

GENERAL

CONTENTS

1. SPECIFICATIONS	2-G1
2. DIMENSIONS	2-G2
3. PERFORMANCE CURVES	2-G3
4. FAN DRIVE.....	2-G4


1. SPECIFICATIONS

		KX080-4
Model		V3307-CRS-T4
No. of cylinders		4
Cylinder Bore X Stroke		94.0 x 120 mm (3.70 x 4.72 in.)
Total displacement		3331 cm ³ (203.3 cu.in.)
Idling RPM		1000 min ⁻¹
Rated RPM		2000 min ⁻¹
Maximum RPM		2220 min ⁻¹
Rated output/RPM	Net	47.2 kW/2000 min ⁻¹ (63.3 kW/2000 min ⁻¹)
	Gross	49.7 kW/2000 min ⁻¹ (66.6 kW/2000 min ⁻¹)
Max torque/RPM	Net	258.9 N·m/1400 min ⁻¹ (26.4 kgf·m/1400 min ⁻¹ , 191.0 lbf·ft/1400 min ⁻¹)
	Gross	267.0 N·m/1400 min ⁻¹ (27.73 kgf·m/1400 min ⁻¹ , 196.9 lbf·ft/1400 min ⁻¹)
Machine dimensions (LxWxH)		803 x 578 x 760 mm (31.61 x 22.76 x 29.92 in.)
Dry weight		310 kg (683 lbs)
Combustion type		Re-entrant, direction injection type (E-CDIS)
Fuel injection pump type		Denso common rail system
Governor type		
Nozzle type		
Fuel injection timing		
Fuel injection pressure		
Rotation direction		Counterclockwise viewed from flywheel side
Firing sequence		1-3-4-2
Compression ratio		17.5
EGR		External EGR
Compression pressure		3.1 MPa (32 kgf/cm ² , 450 psi)
Fuel consumption (at rated RPM)	Net	237.3 g/kW·h (177.0 g/HP·h, 0.390 lb/HP·h)
	Gross	220 g/kW·h (164.1 g/HP·h, 0.362 lb/HP·h)
Engine oil consumption (at rated RPM)		0.54 g/kW·h (0.40 g/PS·h) or less
Alternator		12 V, 960 W
Battery name	ETN	600 035 060
	DIN	60035
	JIS	12V92AH, 130E41R
Starter motor		12 V, 2.7 kW

*As it is the fan drive specification, the net value noted is the same as for the E3.

RY9212148END0001US0


2. DIMENSIONS

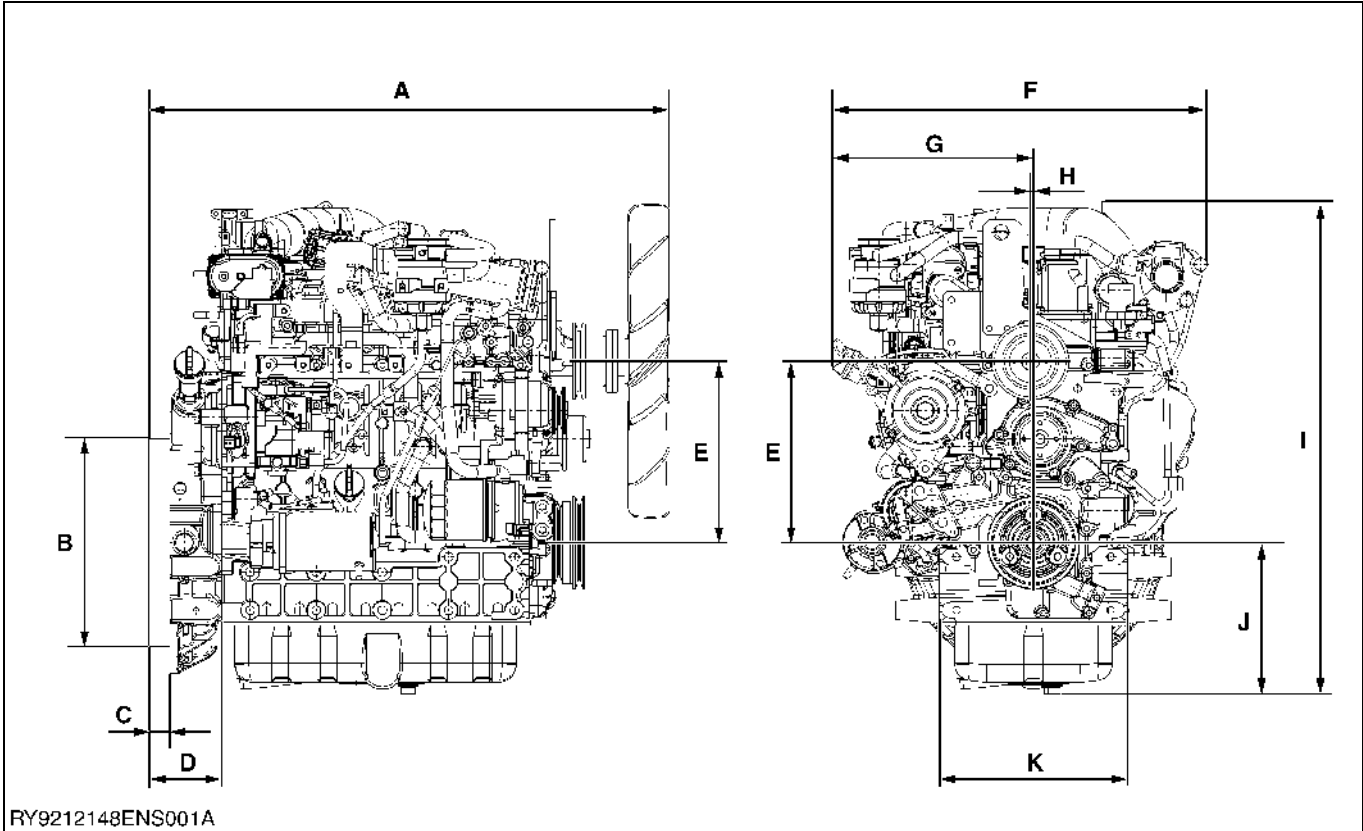

A	802.9 mm (31.57 in.)	E	280 mm (11.02 in.)	I	759.8 mm (29.91 in.)
B	ϕ321 mm (12.64 in.)	F	578.1 mm (22.76 in.)	J	233.6 mm (9.20 in.)
C	32.6 mm (1.28 in.)	G	310.2 mm (12.21 in.)	K	290 mm (11.42 in.)
D	113 mm (4.45 in.)	H	5 mm (0.20 in.)		

RY9212148END0002US0

3. PERFORMANCE CURVES

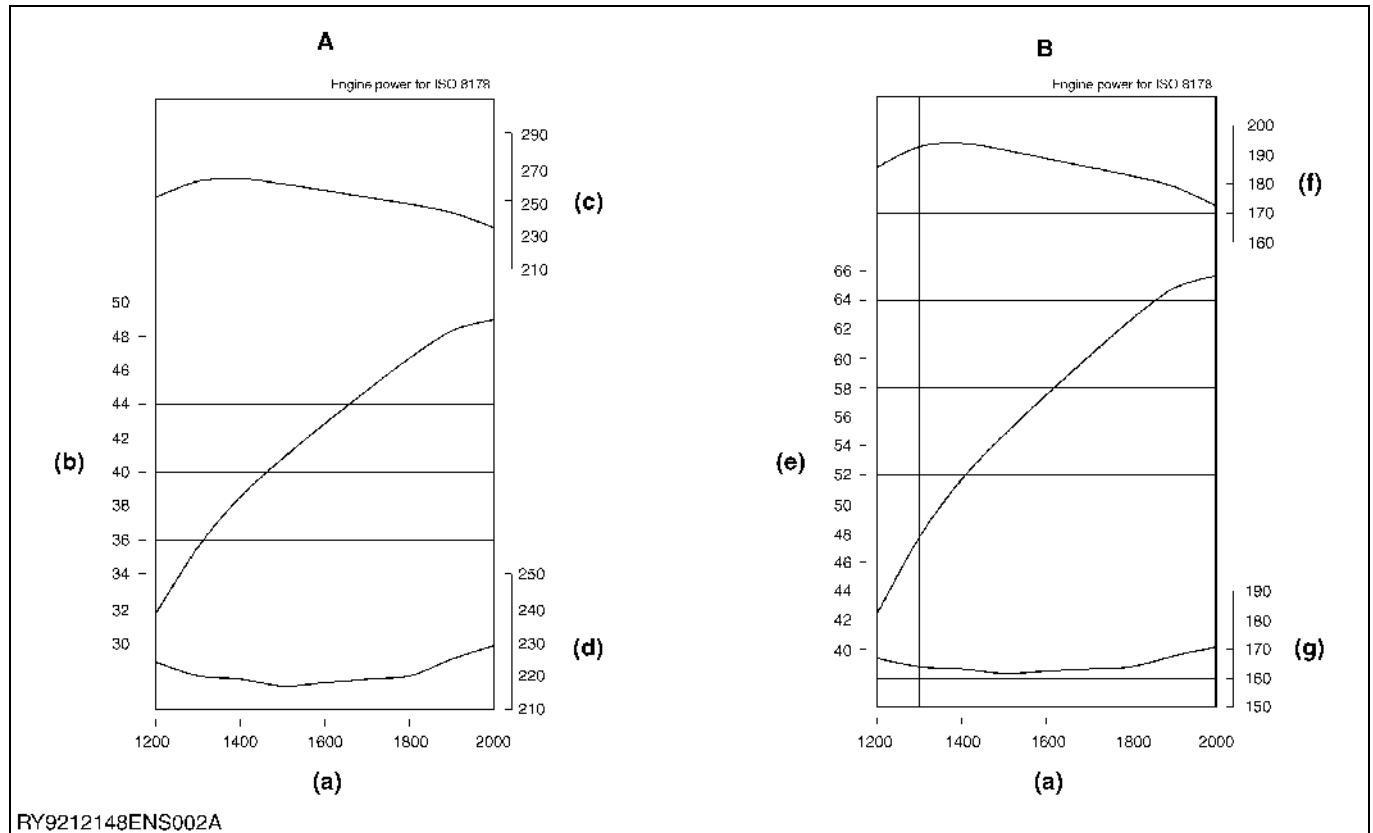


- (a) Engine RPM
 (b) Output (kW)
 (c) Torque (N·m)
 (d) Fuel consumption (g/kWh)
 (e) Output (HP)
 (f) Torque (ft·lb)
 (g) Fuel consumption (g/HP·h)

A : SI unit
 B : US units of work

RY9212148END0003US0

4. FAN DRIVE

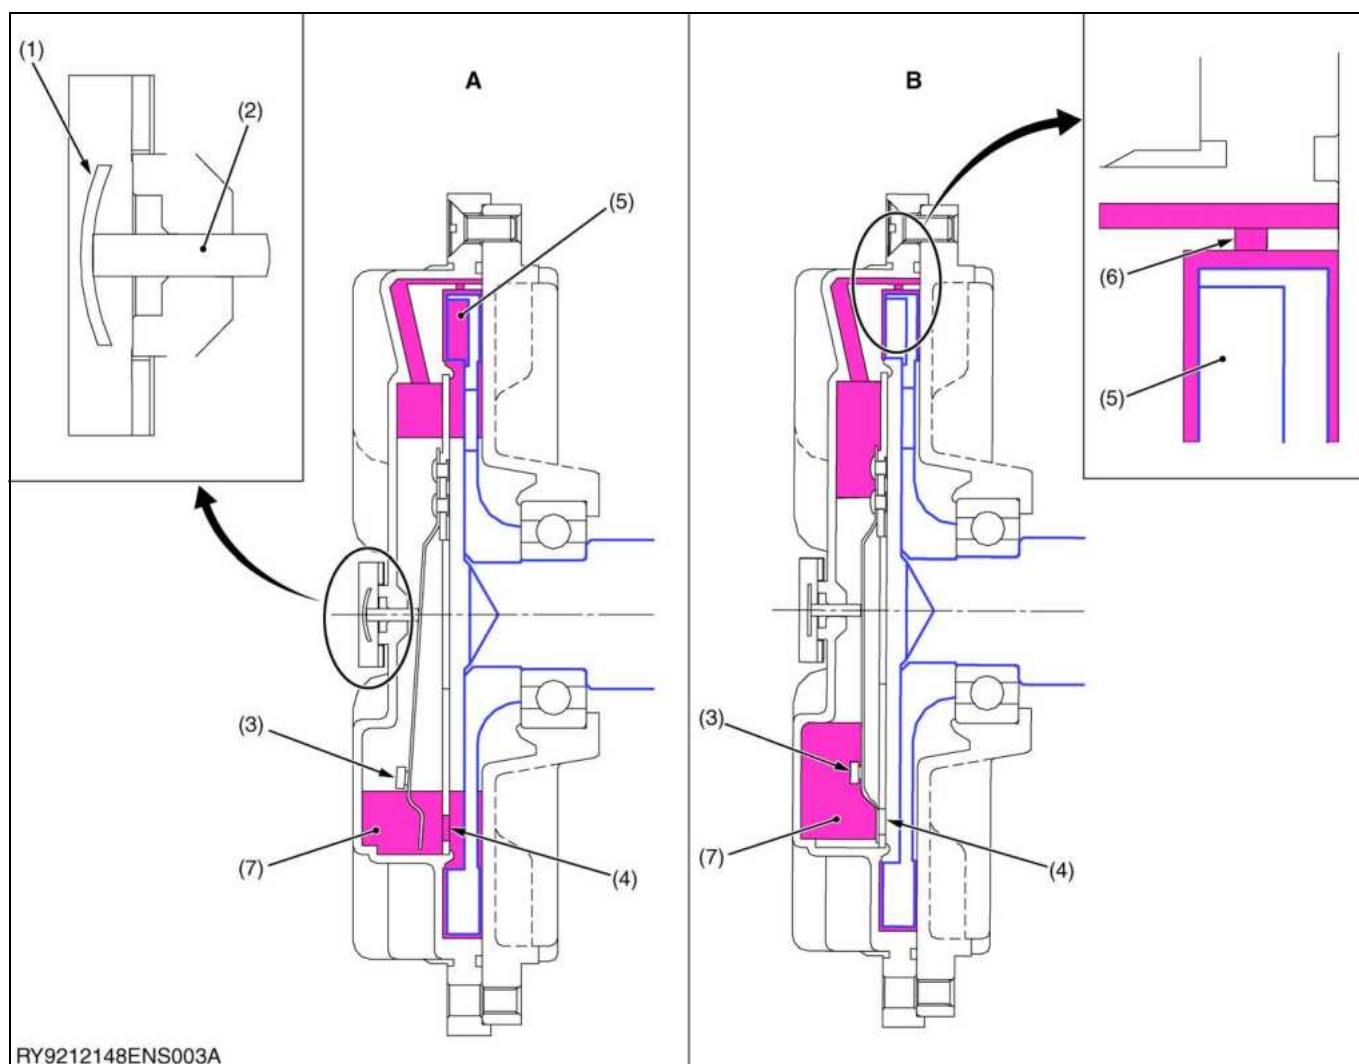

(1) Bimetallic Strip	(4) Feed Orifice	(6) Collection Orifice	A : At High Temperature
(2) Piston	(5) Torque Transmission Chamber	(7) Oil Collection Chamber	B : At Low Temperature
(3) Flat Spring (Valve)			

[At high temperature]

- When the temperature rises, the bimetallic strip (1) bends slightly, opening the supply orifice (4) via the linkage of the piston (2) and the valve (3).
- Silicon oil flows from the supply orifice (4) into the torque transmission chamber (5), increasing the transmitted torque and increasing fan RPM.

[At low temperature]

- The supply orifice (4) closes and oil is not supplied to the torque transmission chamber (5).
- As the part colored in blue is directly coupled to the engine, it rotates at the same speed as the engine. Conversely, the fan drive body turns at a lower RPM as there is little oil remaining in the torque transmission chamber (5). (The blue part turns at high RPM and the fan body turns at low speed.)
- The oil from the torque transmission chamber (5) returns to the oil collection chamber (7) via the collection orifice (6).

RY9212148END0004US0

3 HYDRAULIC SYSTEM

MECHANISM


CONTENTS

1. DIAGRAM OF HYDRAULIC CIRCUIT.....	3-M1
[1] DIAGRAM OF HYDRAULIC CIRCUIT (KX080-4 STANDARD SPECIFICATION).....	3-M1
[2] DIAGRAM OF HYDRAULIC CIRCUIT (KX080-4 ANGLE BLADE SPECIFICATION).....	3-M2
2. HYDRAULIC DEVICE LAYOUT	3-M3
3. PUMP	3-M4
[1] SPECIFICATIONS.....	3-M4
[2] PIST PUMP HORSEPOWER CONTROL CURVE.....	3-M5
(1) P3 = At No Load (2 MPa)	3-M5
(2) P3 = 20.6 MPa.....	3-M5
[3] FUNCTION AND STRUCTURE	3-M6
(1) Operating Principles	3-M6
(2) Horsepower Control.....	3-M7
(3) Flow Control (LS Control)	3-M8
(4) Gain Control	3-M11
(5) Standby Flow Amount	3-M11
4. CONTROL VALVE.....	3-M12
[1] SPECIFICATIONS.....	3-M12
[2] FUNCTION AND STRUCTURE	3-M15
(1) Unload Valve Section	3-M15
(2) Mono-Block Section Operation (LS Control)	3-M18
(3) Arm Regenerative Function.....	3-M20
(4) Swing Section Operation (LS Control).....	3-M21
(5) Travel Section Operation (Open Center Control)	3-M22
(6) Blade Section Operation (Open Center Control)	3-M24
(7) Anti-Drift Function.....	3-M25
(8) P3 Bypass Section Operation (Simultaneous Boom Up + Swivel Operation)	3-M26
(9) Signal Circuit	3-M27
5. SWIVEL MOTOR.....	3-M29
[1] SPECIFICATIONS.....	3-M29
[2] FUNCTION AND STRUCTURE	3-M30
(1) Operating Principles	3-M30
6. TRAVEL MOTOR	3-M34
[1] SPECIFICATIONS.....	3-M34
[2] FUNCTION AND STRUCTURE	3-M35
(1) Operating Principles	3-M35
7. HYDRAULIC CYLINDER.....	3-M39
[1] SPECIFICATIONS.....	3-M39
[2] FUNCTION AND STRUCTURE	3-M40
(1) Operating Principles	3-M40
8. PILOT VALVE	3-M42
[1] CONTROL PILOT VALVES.....	3-M42
(1) Specifications	3-M42
(2) Function and Structure	3-M43
[2] TRAVEL PILOT VALVE.....	3-M44
(1) Specifications	3-M44
(2) Function and Structure	3-M45
[3] SWING PILOT VALVE	3-M47
(1) Specifications	3-M47
(2) Function and Structure	3-M48


[4] BLADE PILOT VALVES	3-M49
(1) Specifications.....	3-M49
(2) Function and Structure	3-M50
9. SHOCKLESS VALVES	3-M52
[1] SPECIFICATIONS	3-M52
[2] FUNCTION AND STRUCTURE	3-M52
10. SOLENOID VALVE	3-M54
[1] UNLOAD VALVE	3-M54
(1) Specifications.....	3-M54
(2) Function and Structure	3-M55
[2] AUX SOLENOID VALVE	3-M57
(1) Specifications.....	3-M57
(2) Function and Structure	3-M58
[3] ANGLE SOLENOID VALVE	3-M59
(1) Specifications.....	3-M59
[4] EP MODE SOLENOID VALVE	3-M60
(1) Specifications.....	3-M60

1. DIAGRAM OF HYDRAULIC CIRCUIT


[1] DIAGRAM OF HYDRAULIC CIRCUIT (KX080-4 STANDARD SPECIFICATION)

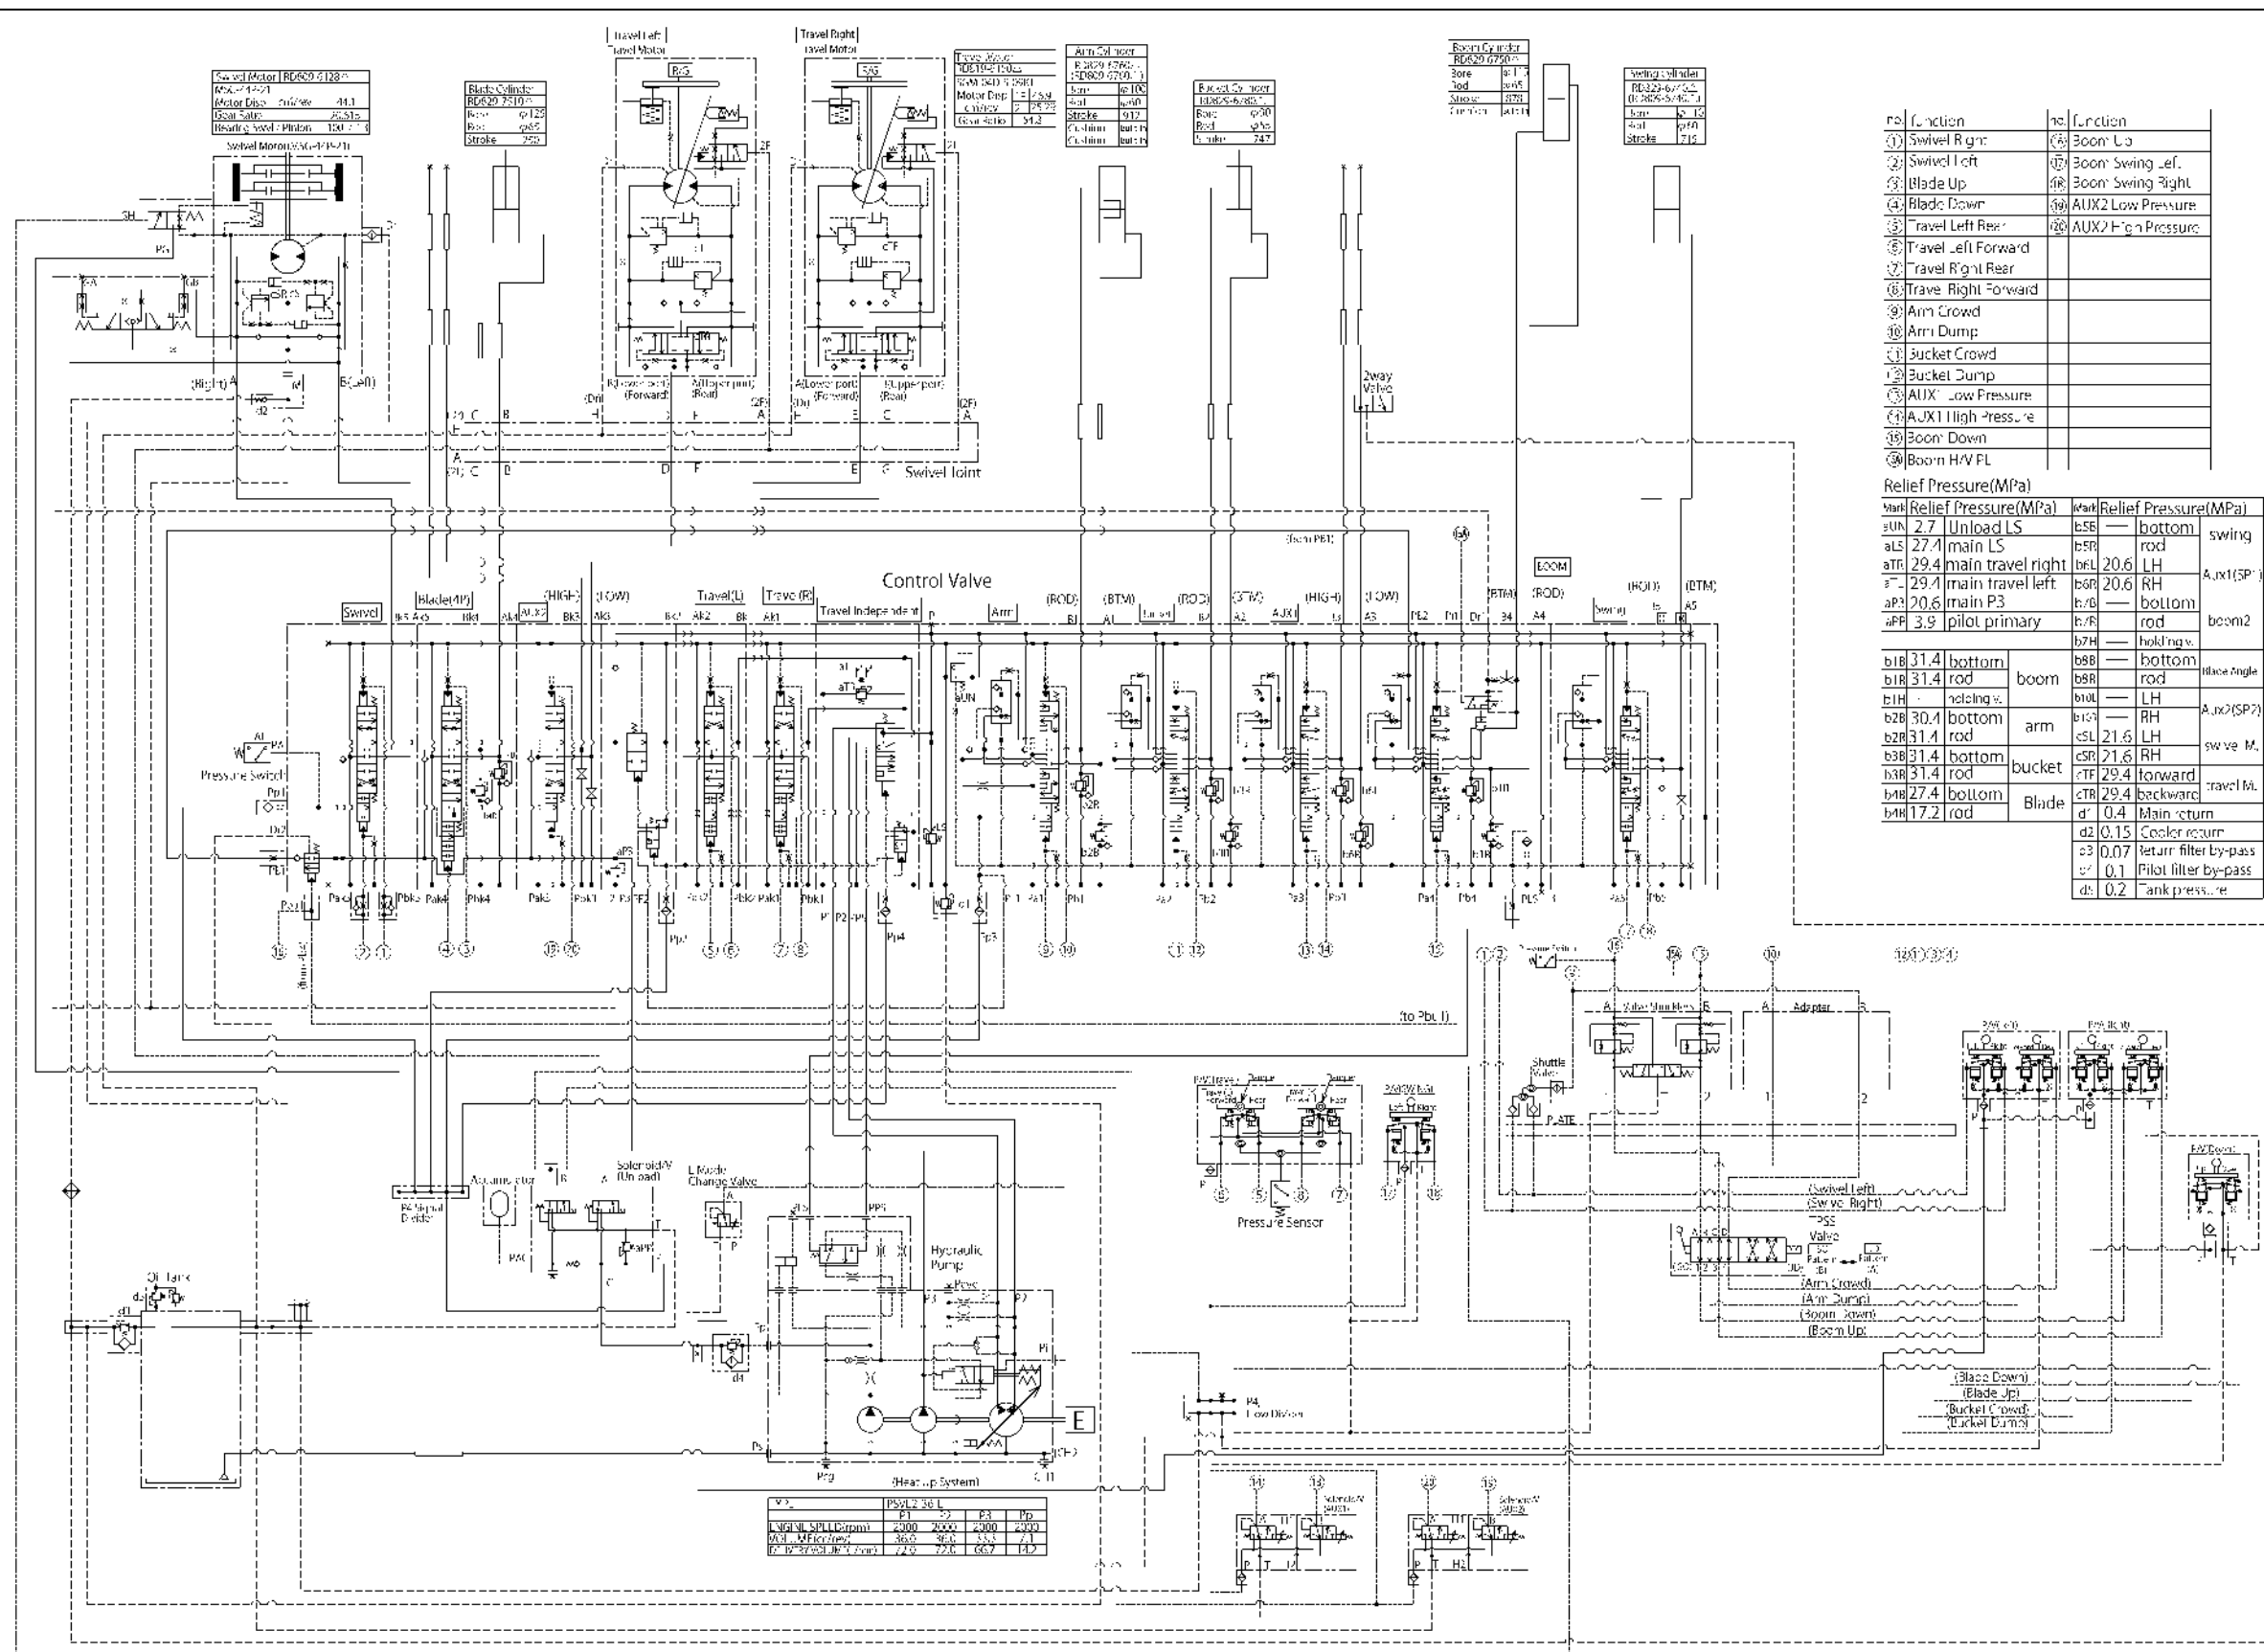

no. function	no. function
(1) Swivel Right	(16) Boom Up
(2) Swivel Left	(17) Boom Swing Left
(3) Blade Up	(18) Boom Swing Right
(4) Blade Down	(19) AUX1 Low Pressure
(5) Travel Left Rear	(20) AUX2 High Pressure
(6) Travel Left Forward	(21) Blade Angle Left
(7) Travel Right Rear	(22) Blade Angle Right
(8) Travel Right Forward	
(9) Ann Crowd	
(10) Ann Dump	
(11) Bucket Crowd	
(12) Bucket Jump	
(13) AUX1 Low Pressure	
(14) AUX1 High Pressure	
(15) Boom Down	
(16) Boom H/V P.	

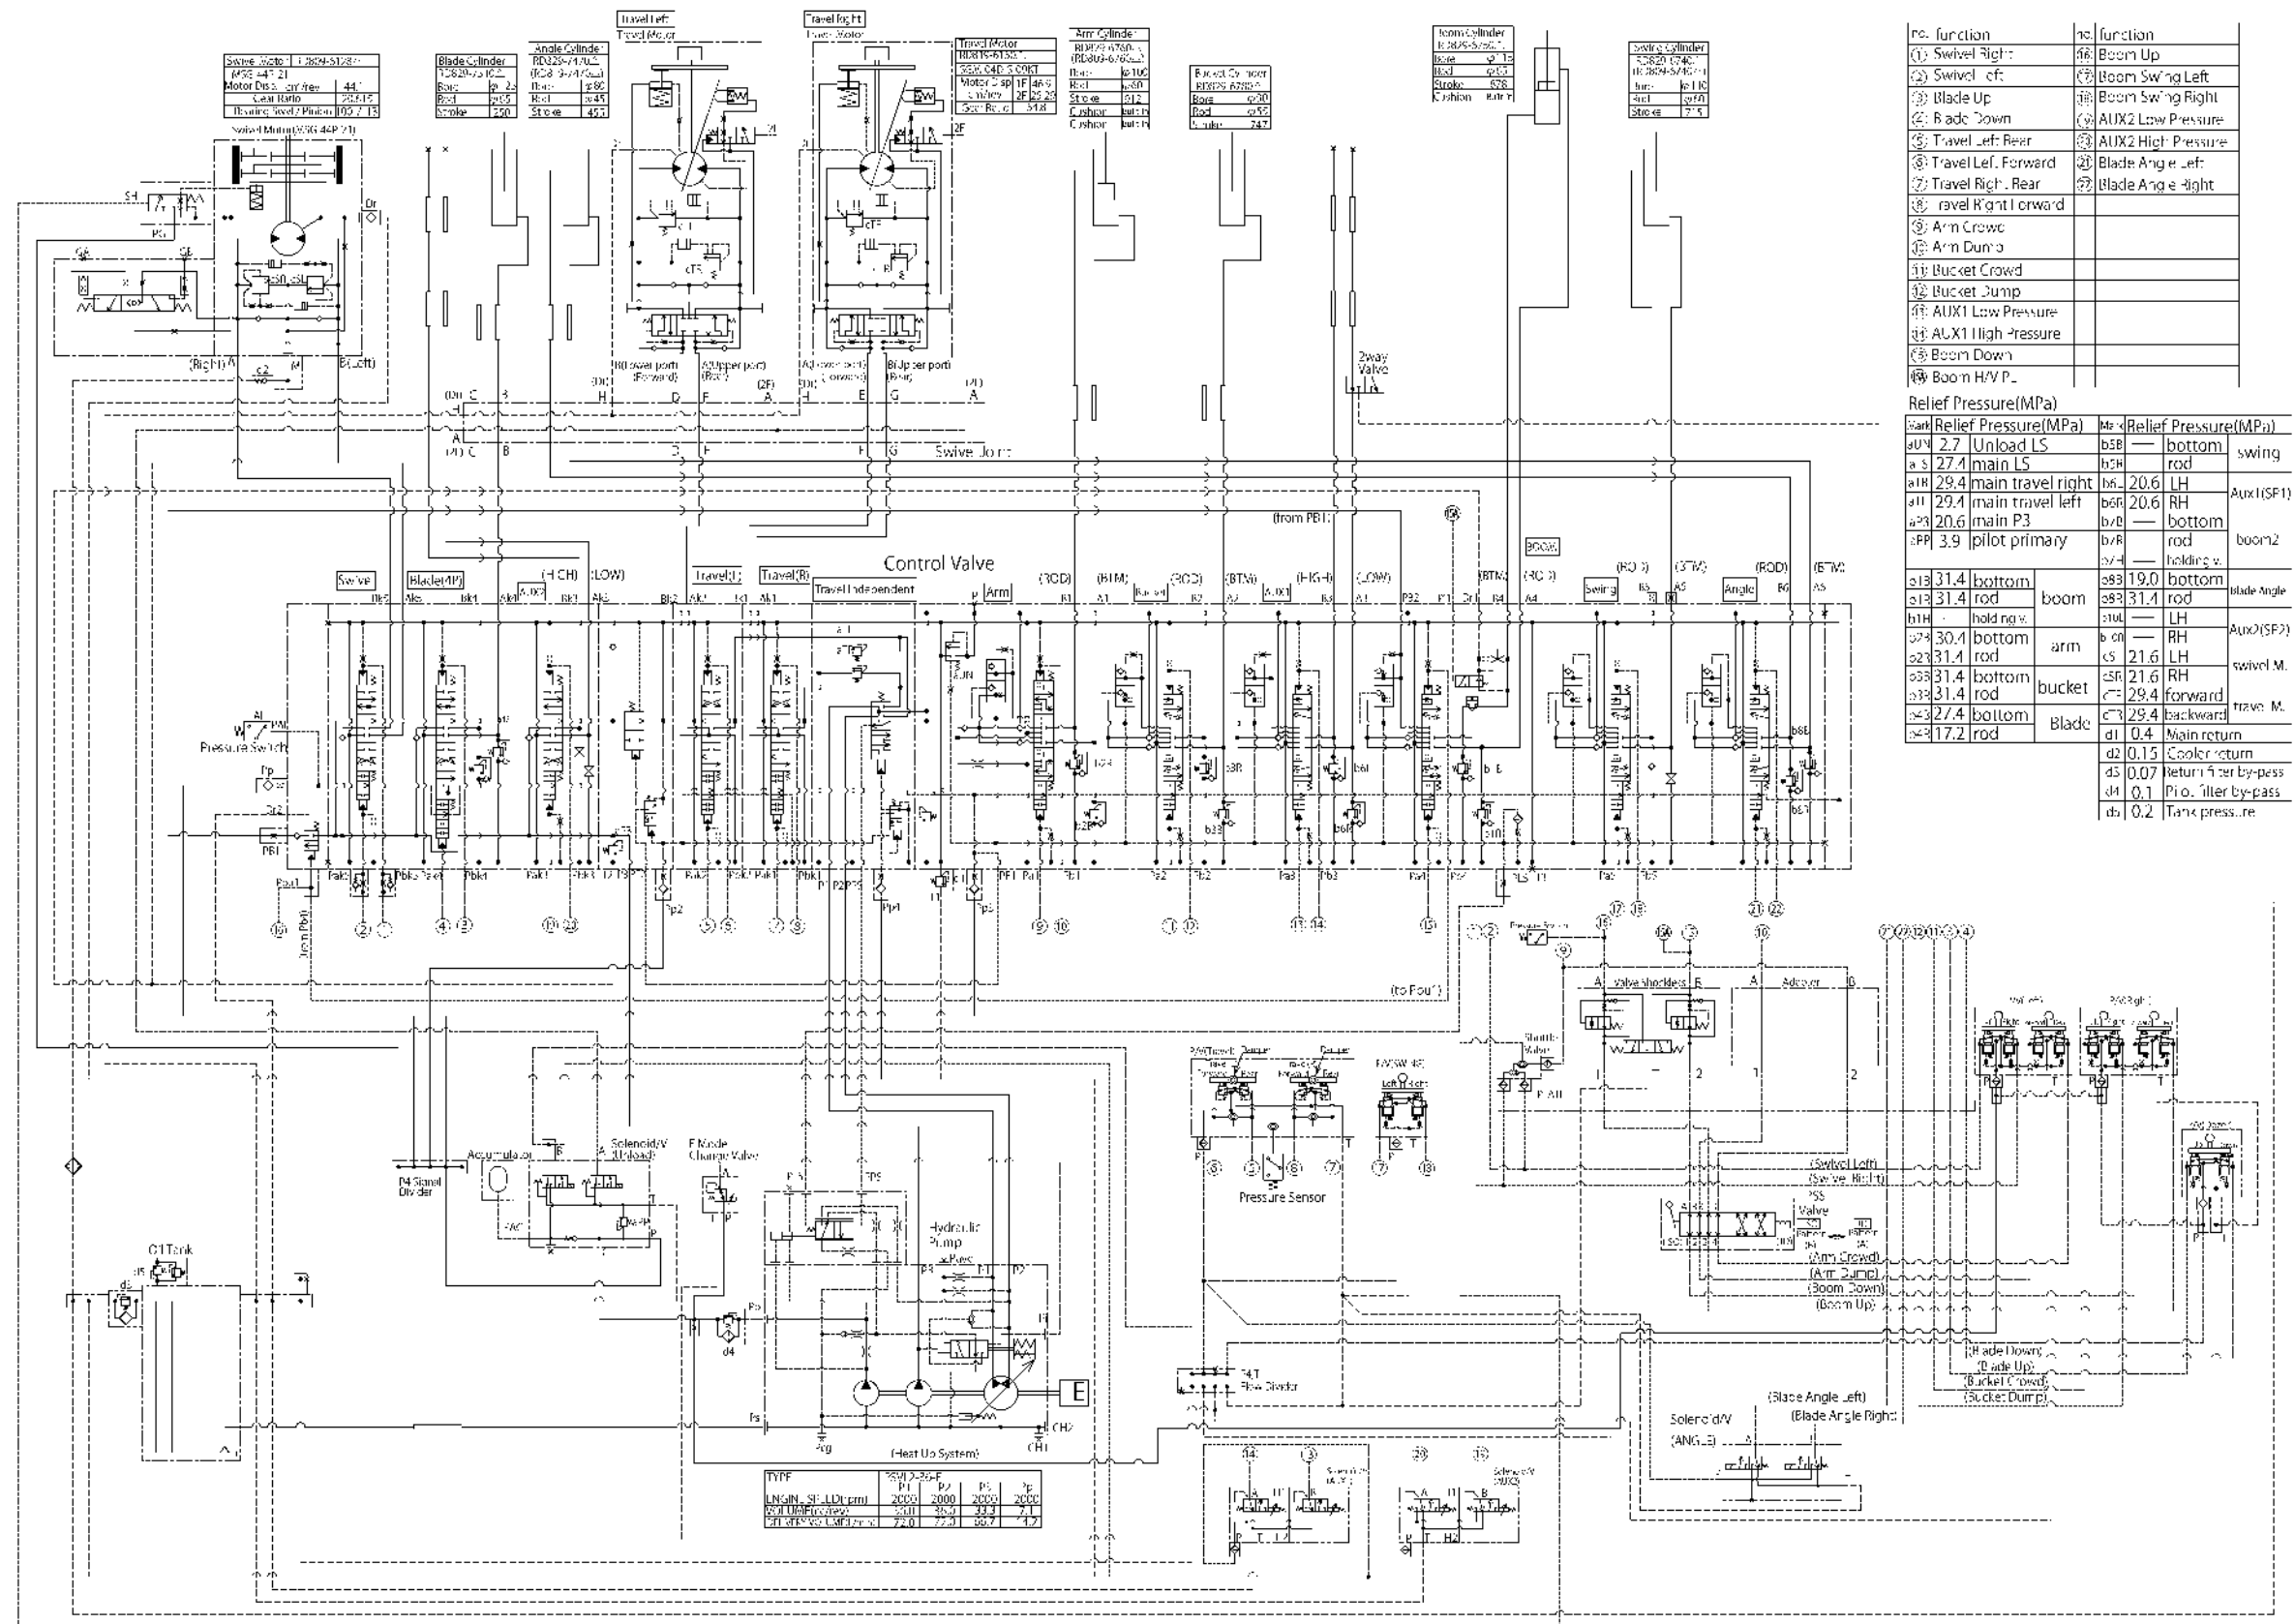

2. HYDRAULIC DEVICE LAYOUT

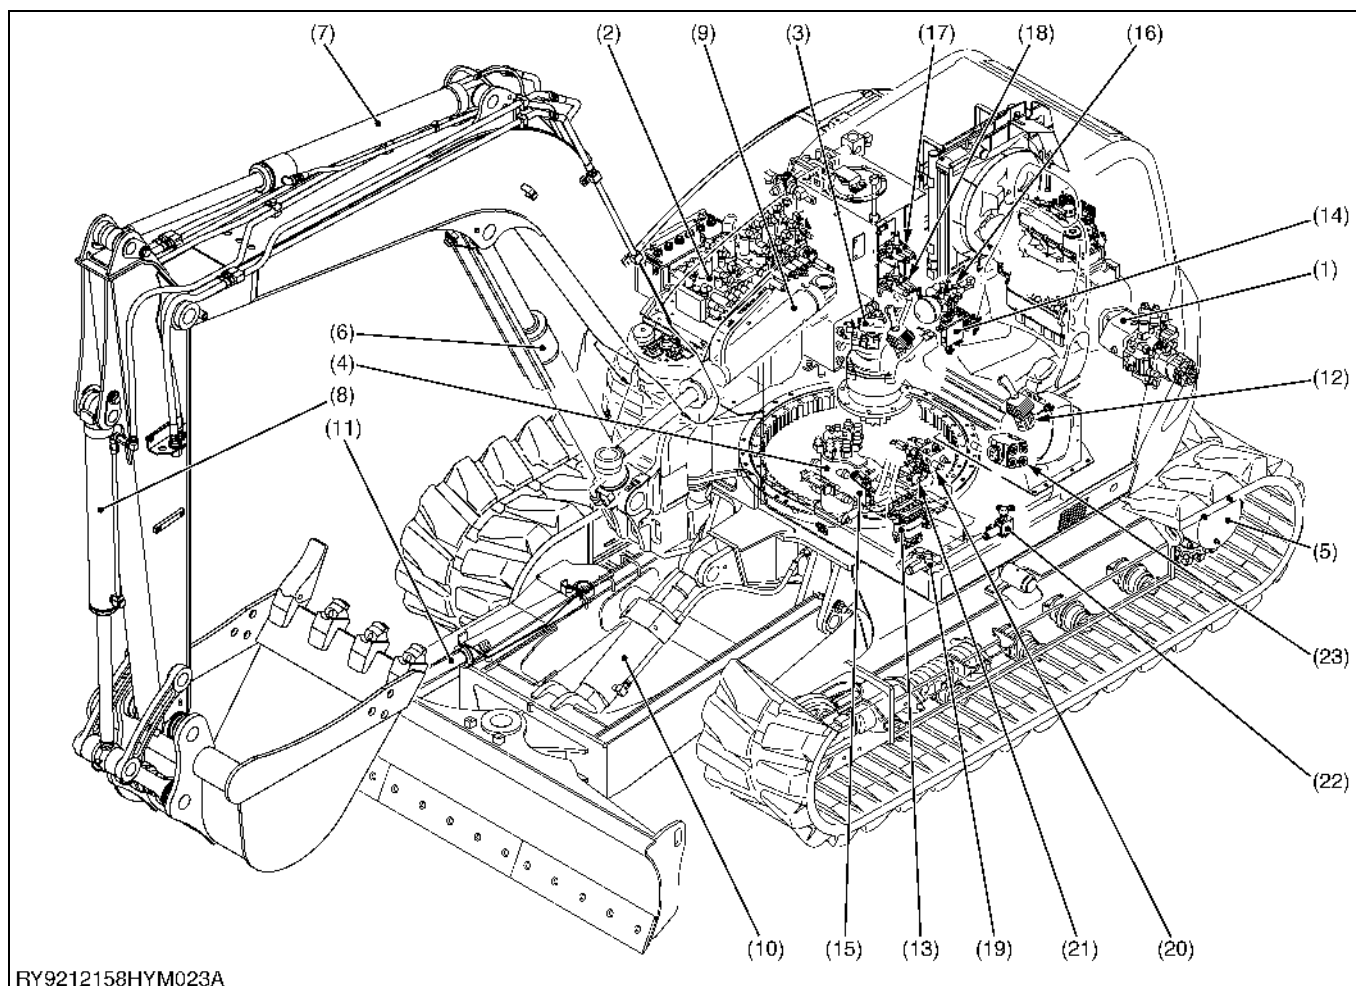


(1) Pump	(7) Arm Cylinder	(13) Travel Pilot Valve	(19) Angle Solenoid Valve
(2) Control Valve	(8) Bucket Cylinder	(14) Blade Pilot Valves	(20) Boom Shockless Valve
(3) Swivel Motor	(9) Swing Cylinder	(15) Swing Pilot Valve	(21) Swivel Shuttle Valve
(4) Swivel Joint	(10) Blade Cylinder	(16) Unload Valve	(22) EP Mode Solenoid Valve
(5) Travel Motor	(11) Angle Cylinder	(17) AUX1 Solenoid Valve	(23) TPSS Valve
(6) Boom Cylinder	(12) Control Pilot Valves	(18) AUX2 Solenoid Valve	

RY9212158HYM0030US0

3. PUMP

[1] SPECIFICATIONS

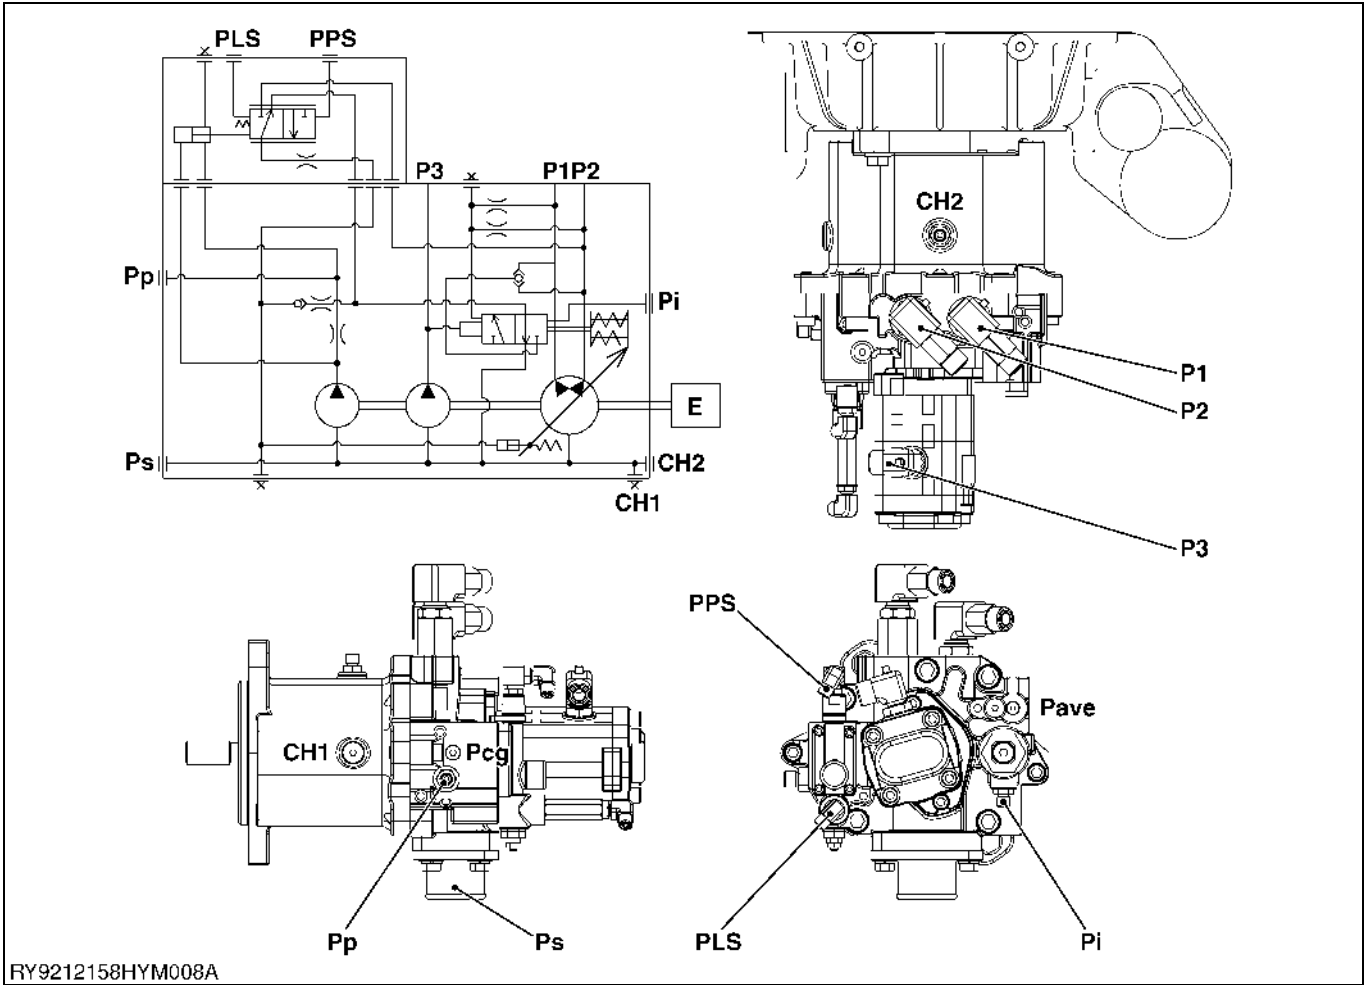

P1,P2: Piston pump discharge pressure

P3: Gear pump discharge pressure

Pp : Pilot pump discharge pressure

PLS: Load pressure

PPS: Valve inlet pressure

Pi : EP mode limit pressure

Pave: average pressure

PS: Suction pressure


CH: Air bleed

Maker		KYB	
Model			
Rated RPM		2000 rpm	
Rotation direction		Right	
Piston pump	Max displacement	36.0 + 36.0 cc/rev (2.2 cu.in./rev)	
Pilot pump		7.1 cc/rev (0.4 cu.in./rev)	
Gear pump		33.3 cc/rev (2.0 cu.in./rev)	
Standby flow amount		22 L/min (5.8 U.S.gals)	

RY9212158HYM0010US0

[2] PIST PUMP HORSEPOWER CONTROL CURVE


(1) P3 = At No Load (2 MPa)

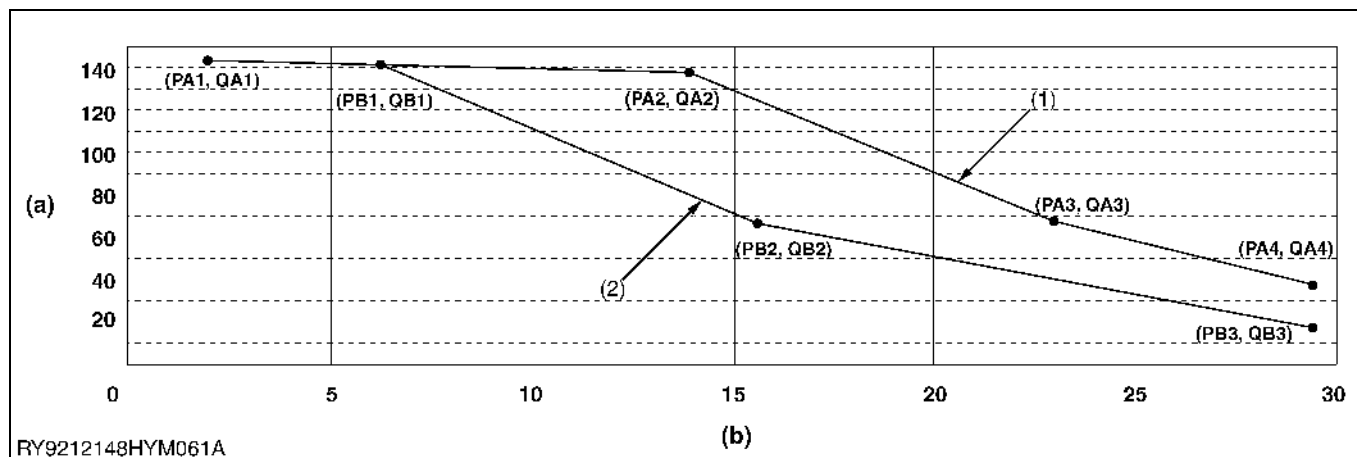(1) $P_i = 3.6$ MPa (P mode)(2) $P_i = 0$ MPa (E mode)(a) Discharge flow rate: Q
(L/min)(b) Discharge pressure: P
(MPa)

Pump input RPM: 2000			
Discharge pressure (MPa)	Discharge flow rate (L/min)	Discharge pressure (MPa)	Discharge flow rate (L/min)
PA1 = 2.0	143.0	PB1 = 6.3	141.0
PA2 = 14.0	139.0	PB2 = 15.7	66.0
PA3 = 23.1	69.3	PB3 = 29.4	19.8
PA4 = 29.4	39.3		

RY9212148HYM0064US0

(2) P3 = 20.6 MPa

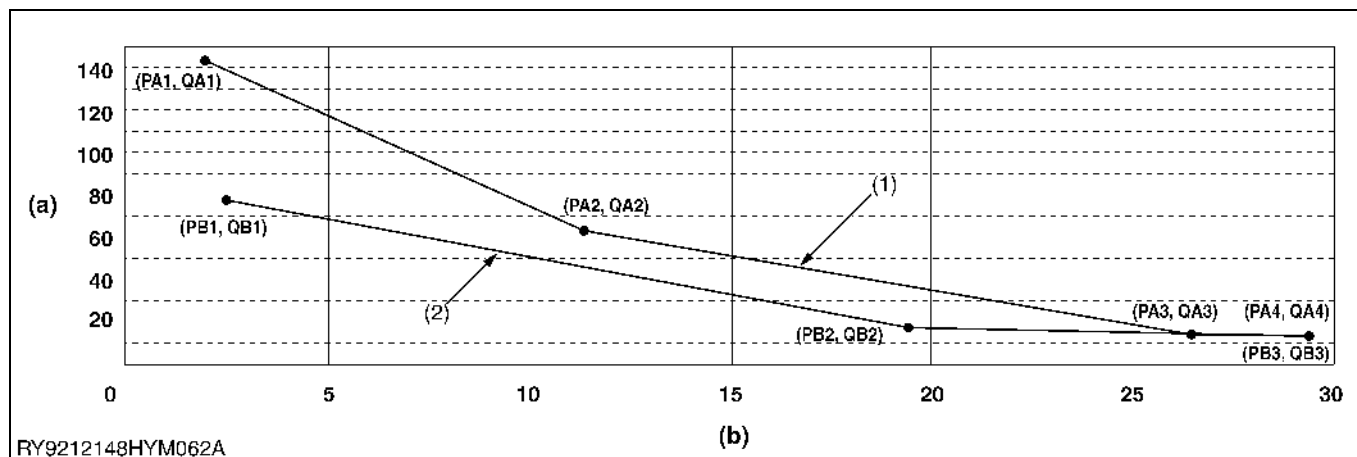
(1) $P_i = 3.6$ MPa (P mode)(2) $P_i = 0$ MPa (E mode)(a) Discharge flow rate: Q
(L/min)(b) Discharge pressure: P
(MPa)

Pump input RPM: 2000			
Discharge pressure (MPa)	Discharge flow rate (L/min)	Discharge pressure (MPa)	Discharge flow rate (L/min)
PA1 = 2.0	143.0	PB1 = 2.5	79.0
PA2 = 11.4	63.0	PB2 = 19.5	19.4
PA3 = 26.5	14.3	PB3 = 29.4	12.7
PA4 = 29.4	12.7		

RY9212148HYM0065US0

[3] FUNCTION AND STRUCTURE

(1) Operating Principles

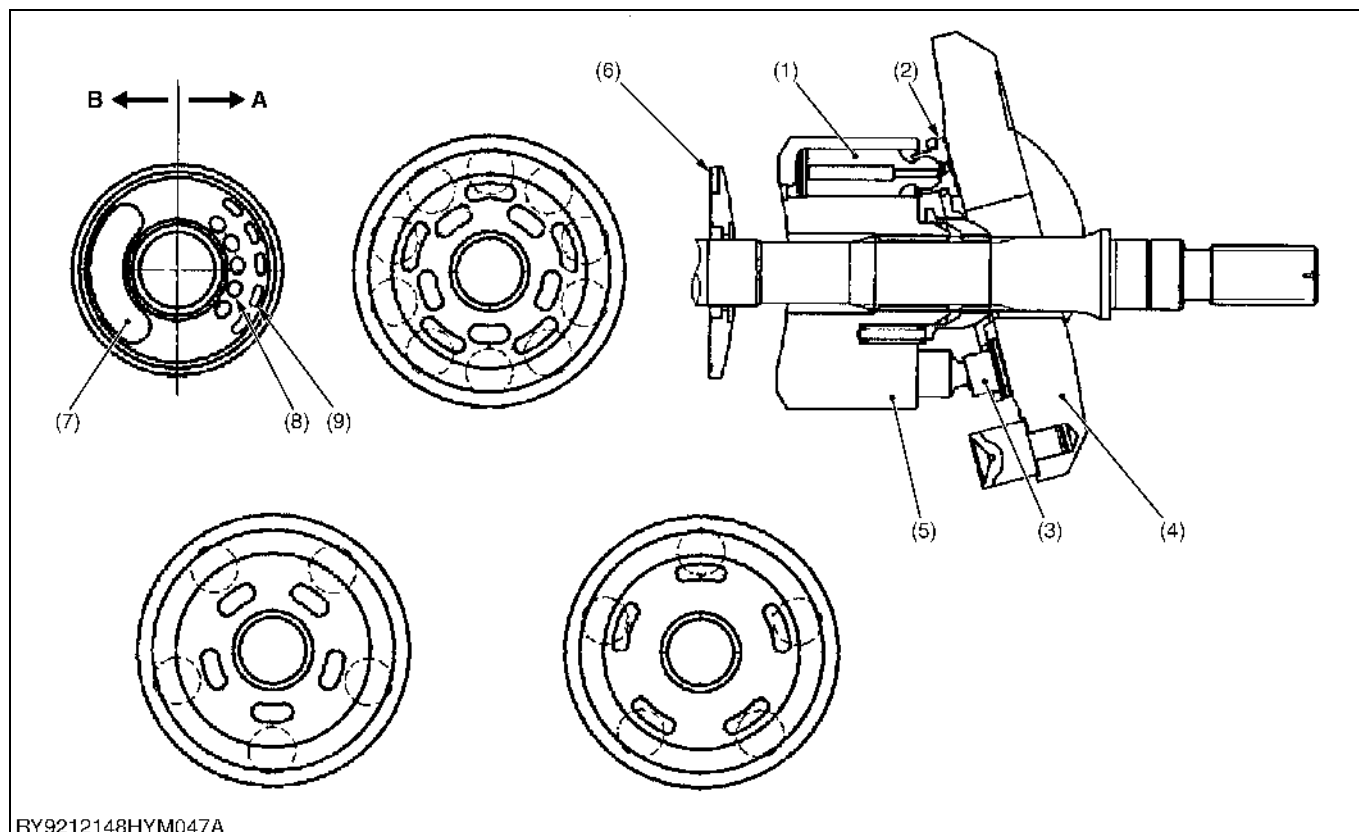

(1) Piston	(4) Swash-plate	(7) Suction port	A : Discharge side
(2) Retainer plate	(5) Cylinder block	(8) P1 discharge port	B : Suction side
(3) Shoe	(6) Valve plate	(9) P2 discharge port	


There are 10 pistons (1) built into the cylinder block (5) and it is coupled to the axle via a spline. Also, one end of the cylinder block is in contact with a valve plate (6), which has two half-moon shaped ports (kidney ports); these two kidney ports are connected to suction and discharge ports respectively, so when the cylinder block rotates, the pistons are connected to the passage on the suction side for an interval of 180 degrees and to the discharge side for the remaining interval. There are shoes (3) crimped so they can rotate freely against the ball on the end of the piston and the retainer plate (2) presses them against the swash-plate (4). As a result, the shoes are always in contact with the swash-plate as it moves, so as the angle of the swash-plate changes, that translates into changes in the stroke of the piston and ultimately alters the amount of discharge from the pump. As a result of the cylinder block rotation, the side that is pressed into the cylinder block by the piston via the swash-plate is the discharge path. At this time the compressed chambers of the cylinder block are connected to the kidney ports on the discharge side A and the side where the pistons are being withdrawn become the suction path and are connected to the suction side kidney port. As a consequence, during the interval of one revolution of the cylinder block, each piston alternately provides suction at the suction port and then discharge at the discharge port. Thus smooth pump operation is achieved by having 10 pistons constantly alternating between suction and discharge. The ports of the cylinder block are arranged alternately with different diameters; the discharge ports of the valve plate also has two kinds of ports arranged inside/outer to match, so the flow to be discharged can be split off to the inner/outer ports and consequently equivalent flow amounts can be obtained simultaneously.

RY9212148HYM0059US0

(2) Horsepower Control

Horsepower control is a matter of controlling the discharge flow of the piston pump in such a way that the total consumed horsepower (torque) of the pump does not exceed the specified horsepower (torque) of the engine.

RY9212174HYM0005US0

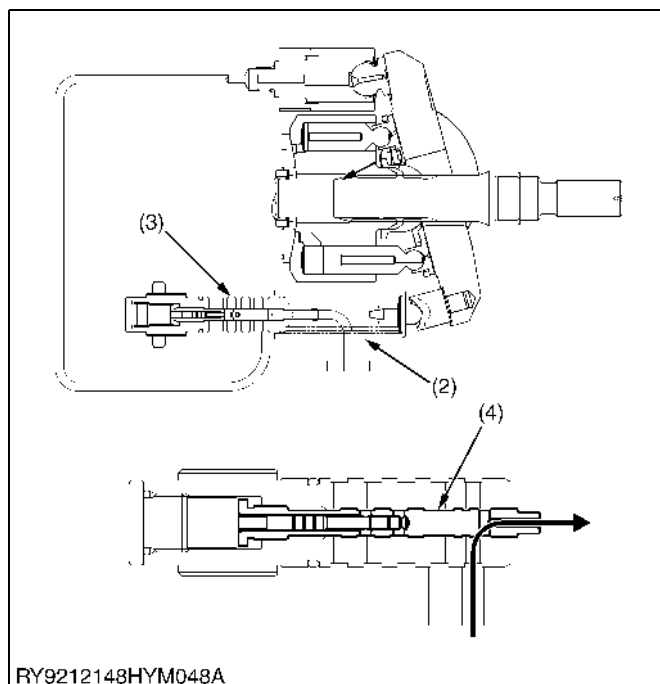


RY9212148HYM048A

1. When pressure P is low (when the load is low)


The horsepower control spool (4) is positioned at the far left, thus connecting the control pin (1) to the tank via the horsepower control spool (4). Consequently, there is no force on the control pin (1), which results in the maximum swash-plate tilt angle and discharge flow.

(1) Control pin	(3) Horsepower control valve
(2) Horsepower control spring	(4) Horsepower control spool

RY9212148HYM0060US0

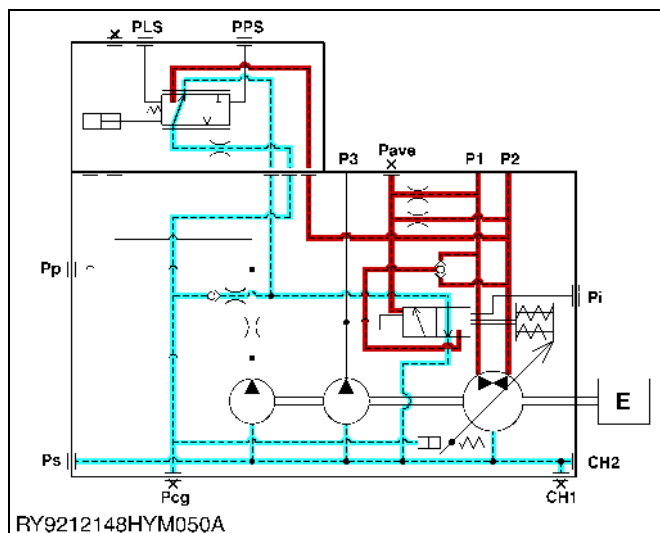

RY9212148HYM050A

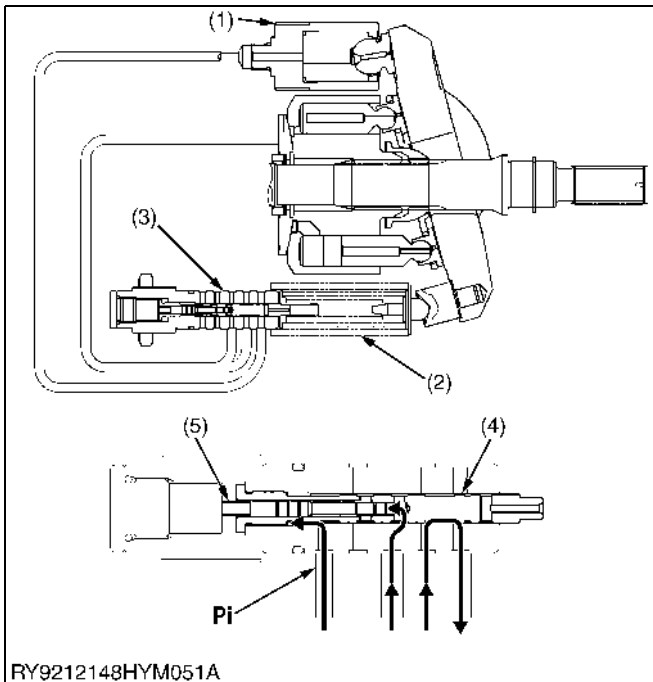

2. When pressure P increases (when the load increases)


When the piston pump discharges pressure P rises due to the load, the horsepower control spool (4) in the middle of the diagram moves to the right. This connects discharge pressure P to the control pin (1), creating pressure on the control pin (1) and thus reducing the swash-plate tilt angle and reducing discharge flow. When the swash-plate tilt angle is reduced, the horsepower control spring (2) returns the horsepower control spool (4) to the left, cutting off the connection between discharge pressure P and the control pin and this results in a balance of pressure.

Increasing pressure on the E-mode control pressure (Pi) exerts a load on the horsepower control spool (4) pushing it to the left, so compared to when pressure is not applied to the E-mode control pressure (Pi), it allows an increase in the pump's effective horsepower.


- (1) Control pin
- (2) Horsepower control spring
- (3) Horsepower control valve
- (4) Horsepower control spool
- (5) Reaction pin

Pi : From E-mode limit pressure

RY9212148HYM0061US0

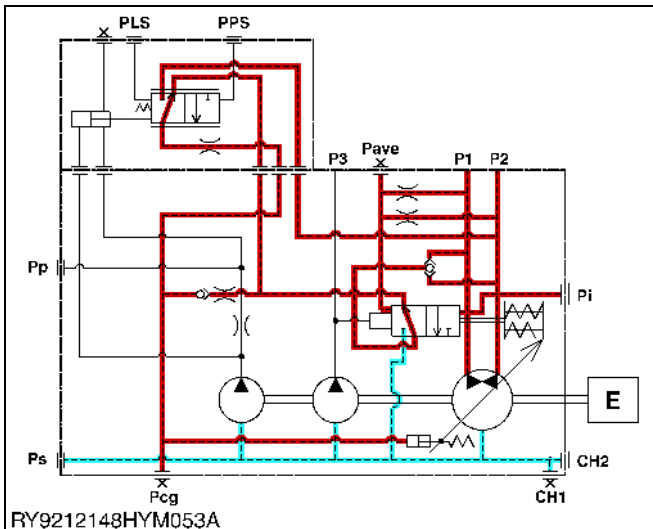

(3) Flow Control (LS Control)

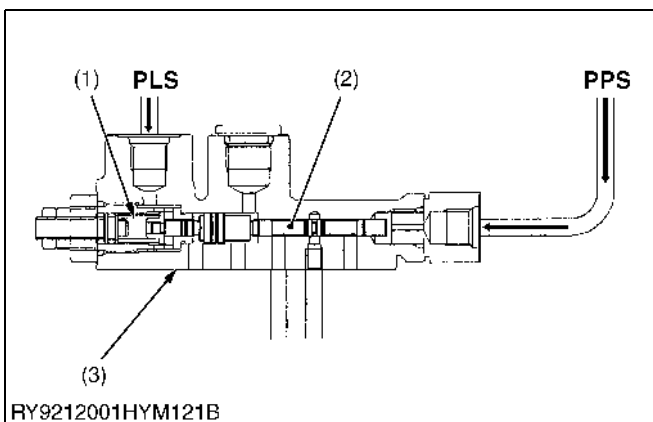


LS control supplies the pressure and flow needed for a given load by controlling the pump's discharge pressure and flow so that pump discharge pressure PPS = load pressure PLS + spring pressure.

- (10) Spring
- (11) Spool

(12) L/S Regulator

RY9212174HYM0006US0



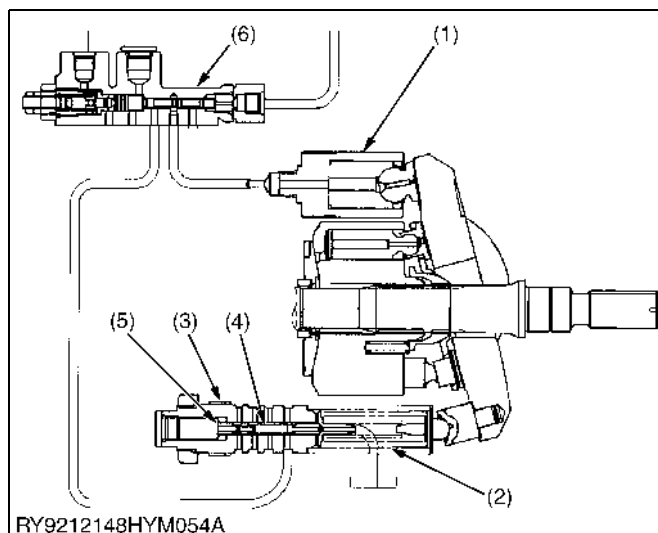



1. When the control valve is open wide

If the control valve is opened wide (9) in order to quickly actuates the actuator, the pressure differential between the pump discharge pressure P and the load pressure drops temporarily, moving the spool (7) of the L/S regulator (6) to the right; this connects the control pin (1) to the horsepower control valve (3). When this happens, the horsepower control spool (4) moves to the left, connecting the the control pin (1) to the tank, thus increasing the swash-plate tilt angle and increasing discharge flow. This equalizes the differential pressure and moves the L/S regulator spool back to the left.

(1) Control pin	(6) L/S Regulator
(2) Horsepower control spring	(7) Spool
(3) Horsepower control valve	(8) Compensator spool
(4) Horsepower control spool	(9) Opening area
(5) Reaction pin	

RY9212148HYM0062US0

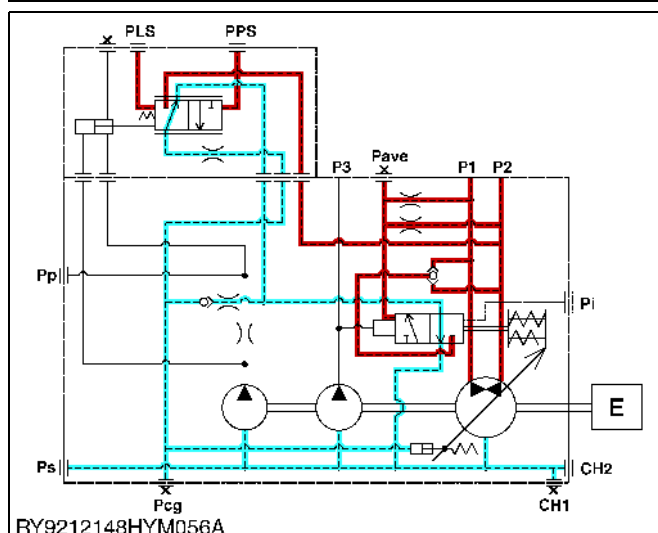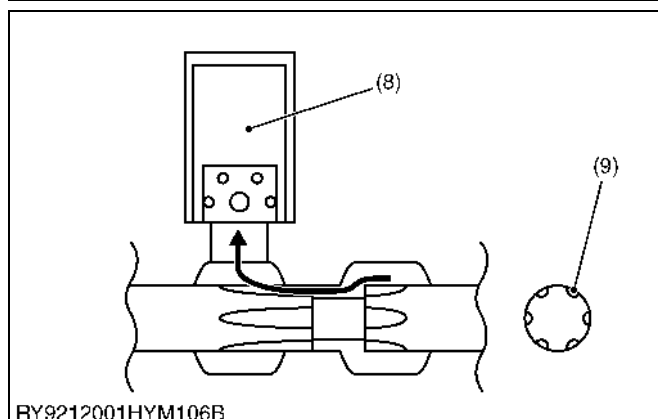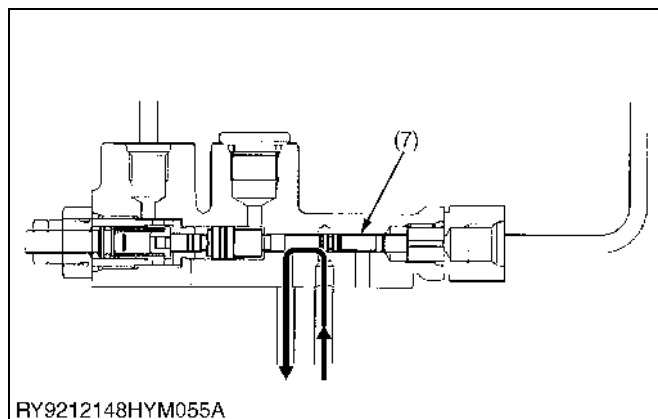


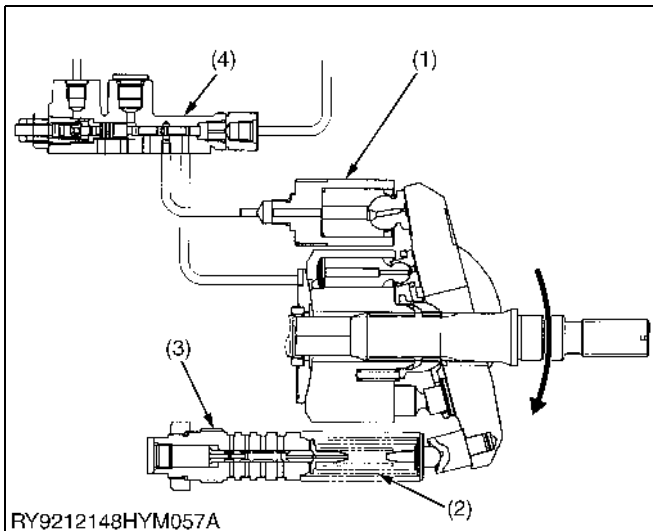


2. When the control valve is slightly open


When the control valve is only slightly open, it produces a large difference in pressure between the pump discharge pressure P and the load pressure, so the spool (5) of the L/S regulator (4) moves to the left and the discharge pressure P and the control pin (1) are connected. When this happens, it creates pressure on the control pin, thus reducing the swash-plate tilt angle and reducing the discharge flow.

(1) Control pin	(4) L/S Regulator
(2) Horsepower control spring	(5) Spool
(3) Horsepower control valve	

RY9212148HYM0063US0

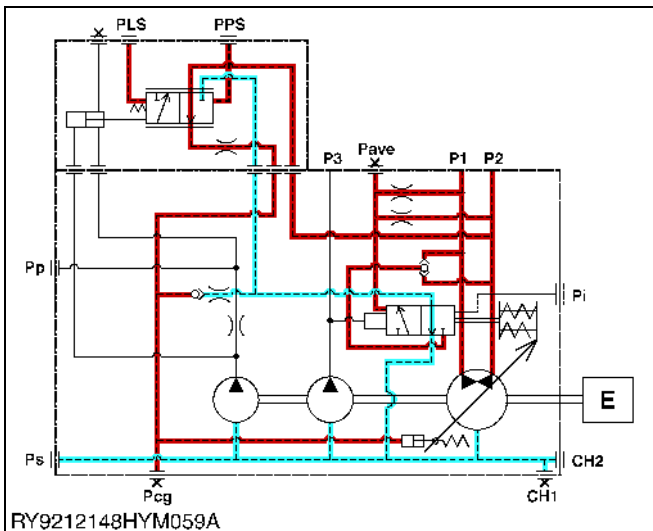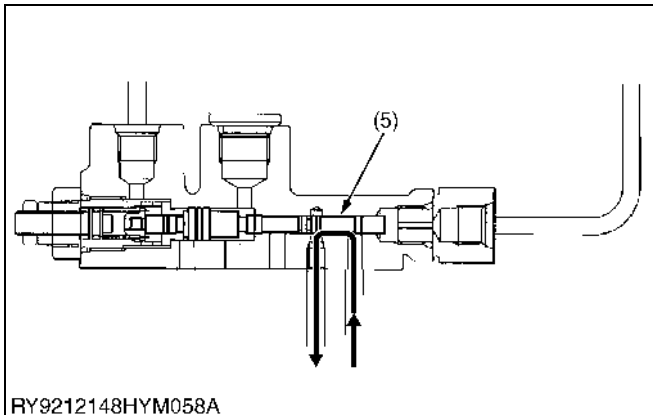

(4) Gain Control

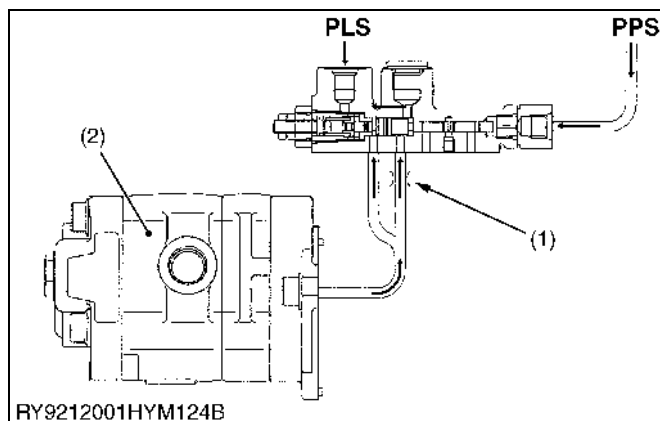


There is an orifice (1) in the discharge circuit of the pilot pump (2) that leads to the spool of the L/S regulator for differential pressures that arise from acceleration in engine RPM. This orifice makes it possible to control pump discharge pressure and flows so that pump discharge pressure $PPS = \text{load pressure } PLS + \text{spring pressure} + \text{differential pressure}$. In other words, it changes the PPS and PLS differential pressure control from a constant control to a variable control and enables the proportional flow control of the engine RPM by how wide the same control valve is open.

(1) Orifice

(2) Gear Pump (Pilot Pump)

RY9212174HYM0009US0

(5) Standby Flow Amount

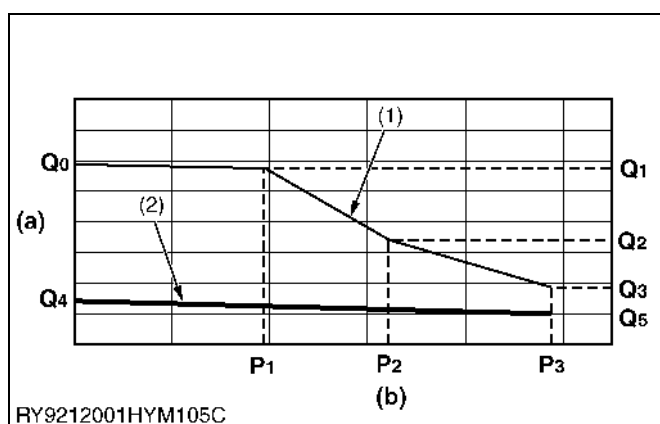

A standby flow volume is established so that oil is always flowing in the hydraulic system, even when idling. By always passing through the oil cooler, the oil temperature can be kept down. The front (arm, bucket, AUX1, boom, swing, angle) is in a center closed circuit, so when all the sections are in neutral, the hydraulic oil returns to the tank via an unload valve.


(1) Horsepower control curve

(a) Discharge pressure

(2) Standby flow amount


(b) Discharge flow

RY9212158HYM0011US0

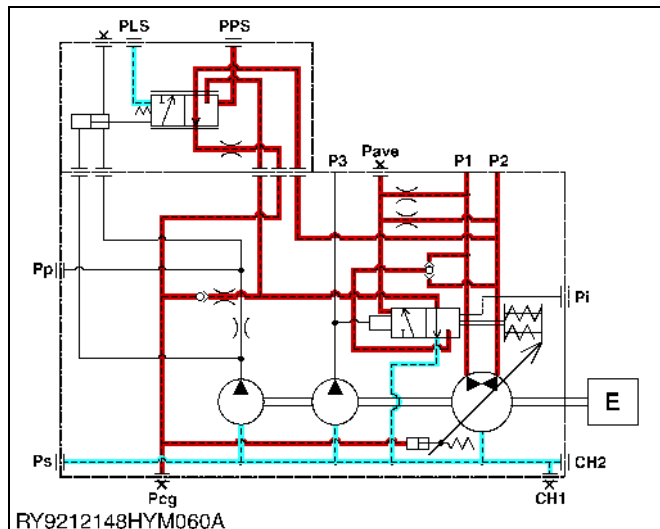

4. CONTROL VALVE

[1] SPECIFICATIONS

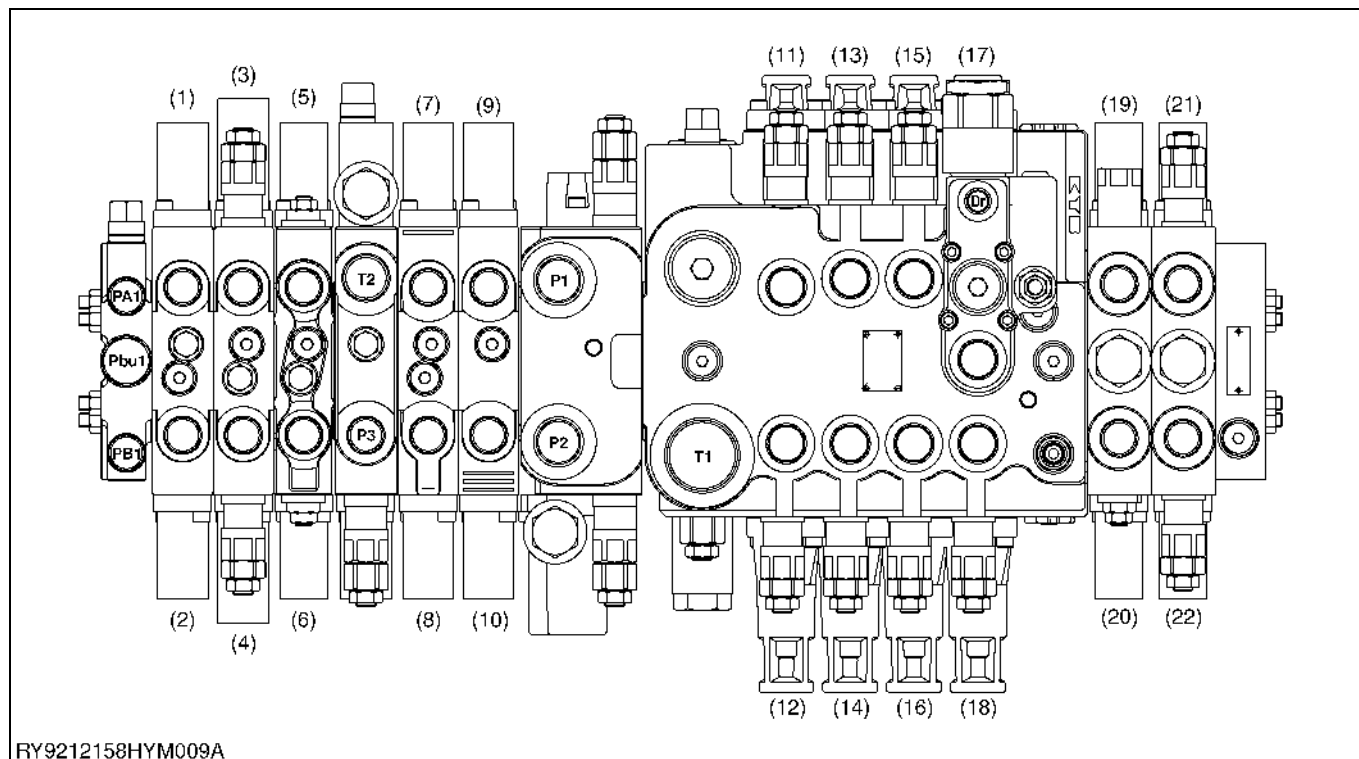


(1) Swivel right (Pbk5)	(7) Travel left forward (Pbk2)	(13) Bucket dump (Pb2)	(18) Boom down (Pa4)
(2) Swivel left (Pak5)	(8) Travel left reverse (Pak2)	(14) Bucket crowd (Pa2)	(19) Swing right (Pb5)
(3) Blade up (Pbk4)	(9) Travel right forward (Pbk1)	(15) AUX1 High (Pb3)	(20) Swing left (Pa5)
(4) Blade down (Pak4)	(10) Travel right reverse (Pak1)	(16) AUX1 Low (Pb3)	(21) Angle right (Pb6)
(5) AUX2 High (Pbk3)	(11) Arm dump (Pb1)	(17) Boom up (Pb4)	(22) Angle left (Pa6)
(6) AUX2 Low (Pak3)	(12) Arm crowd (Pa1)		

Item			Notes
Maker		KYB	
Model			
Main relief valve setting pressure	Unload (aUN)	2.7 MPa 28 kgf/cm ² 392 psi	When 23 L/min., 6.1 U.S. gals
	Main LS (aLS)	27.4 MPa 279 kgf/cm ² 3974 psi	When 48 L/min., 12.7 U.S. gals
	P1 (aTR) P2 (aTL)	29.4 MPa 300 kgf/cm ² 4264 psi	When 43 L/min., 11.4 U.S. gals
	P3 (aP3)	20.6 MPa 210 kgf/cm ² 2988 psi	When 66 L/min., 17.4 U.S. gals

Item				Notes
Overload relief valve setting pressure	Boom	b1B b1R	31.4 MPa 320 kgf/cm ² 4554 psi	At 5 L/min (300 cu.in./min, 1.3 USGPM)
	Arm	b2B	30.4 MPa 310 kgf/cm ² 4409 psi	
		b2R	31.4 MPa 320 kgf/cm ² 4554 psi	
	Bucket	b3B b3R	31.4 MPa 320 kgf/cm ² 4554 psi	
	Blade	b4B	27.4 MPa 279 kgf/cm ² 3974 psi	
		b4R	17.2 MPa 175 kgf/cm ² 2495 psi	
	AUX1	b6L b6R	20.6 MPa 210 kgf/cm ² 2988 psi	
	Angle	b8B	19.0 MPa 194 kgf/cm ² 2756 psi	
		b8R	31.4 MPa 320 kgf/cm ² 4554 psi	

RY9212158HYM0012US0

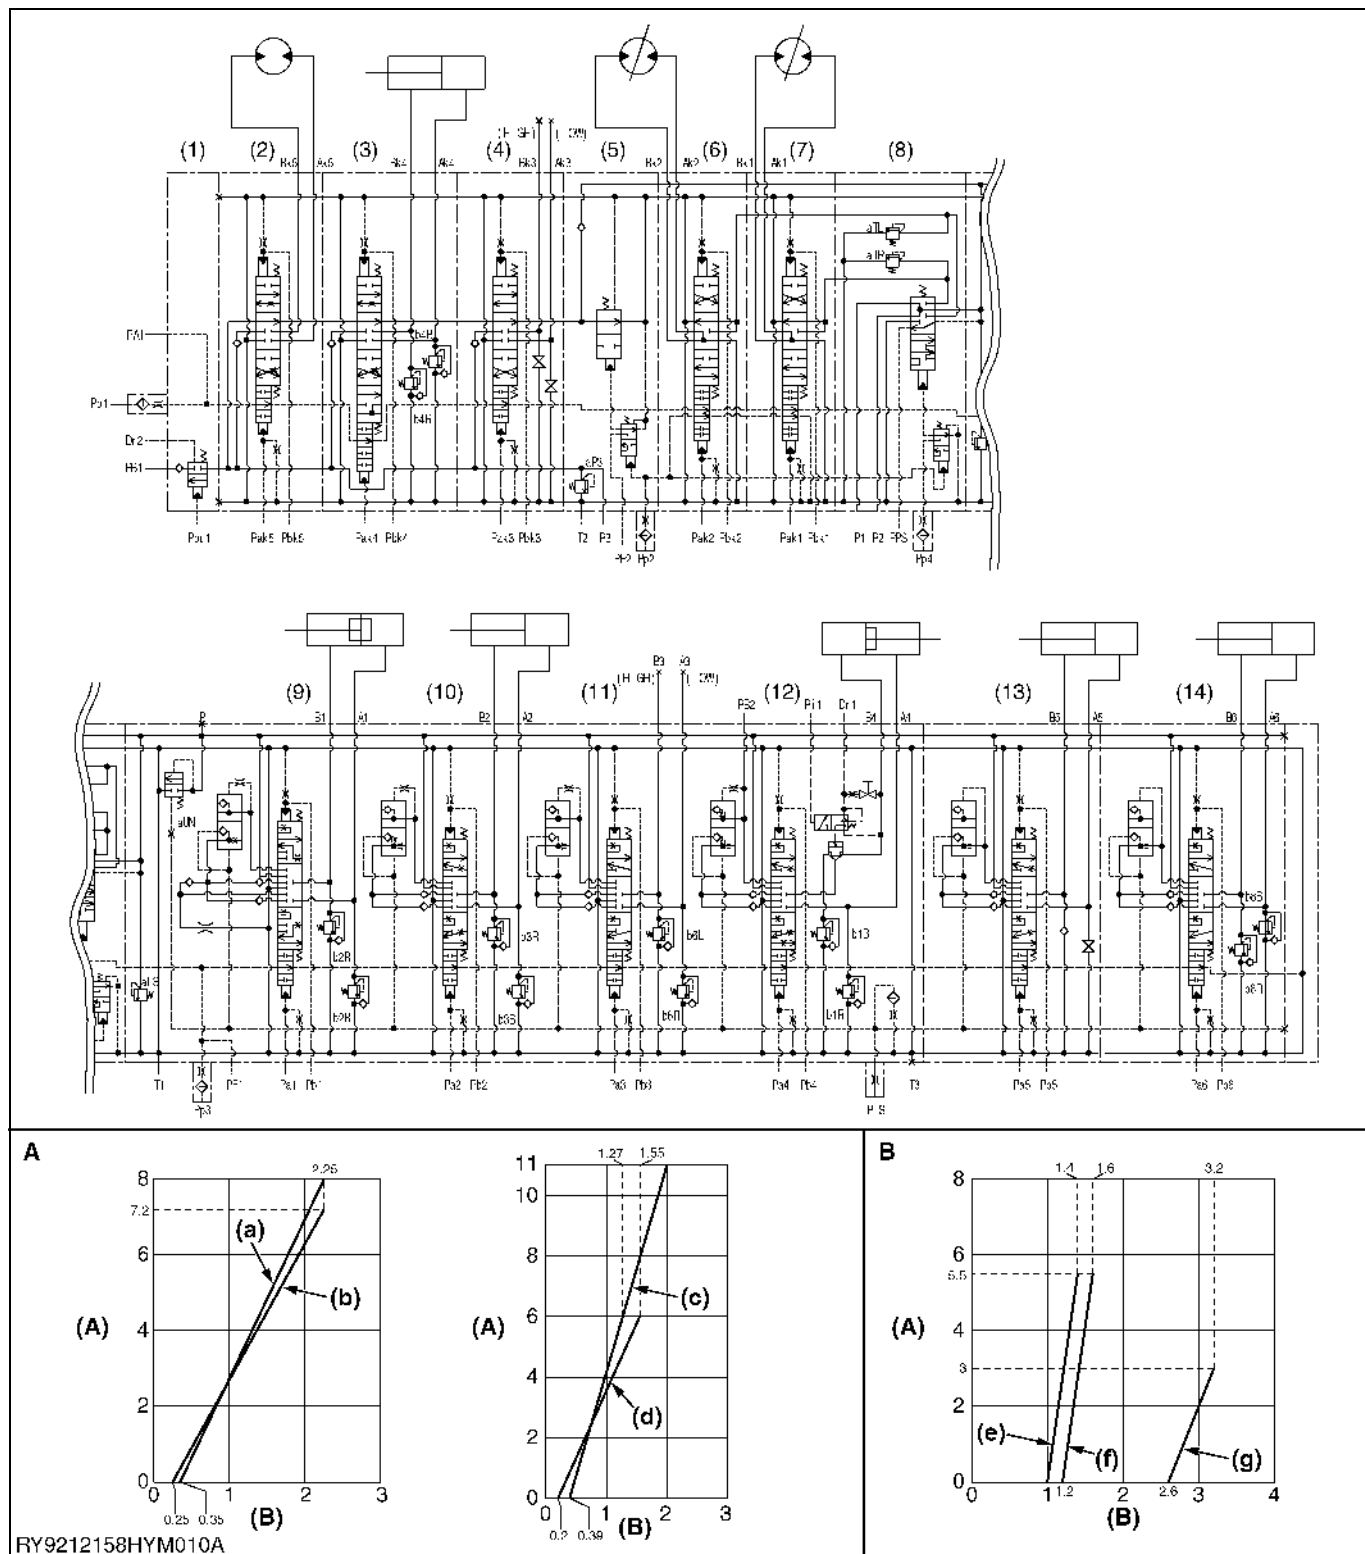Hydraulic Circuit Diagram (Angle Spec.)

- (1) P3 bypass valve
(2) Swivel
(3) Blade
(4) AUX2
(5) Communication valve
(6) Travel left
(7) Travel right
(8) Independent travel valve
(9) Arm
(10) Bucket
(11) AUX1
(12) Boom
(13) Swing
(14) Angle

A : Main spool pressure receiver characteristics
B : Independent travel valve, etc. pressure receiver characteristics

(A) Spool stroke (mm)
(B) Pilot pressure (MPa)


- (a) Other
(b) Swing, angle
(c) Blade Pa pressure
(d) Blade Pb pressure
(e) Communication valve
(f) Independent travel valve
(g) P3 bypass valve

RY9212158HYM0013US0

[2] FUNCTION AND STRUCTURE

(1) Unload Valve Section

When in neutral

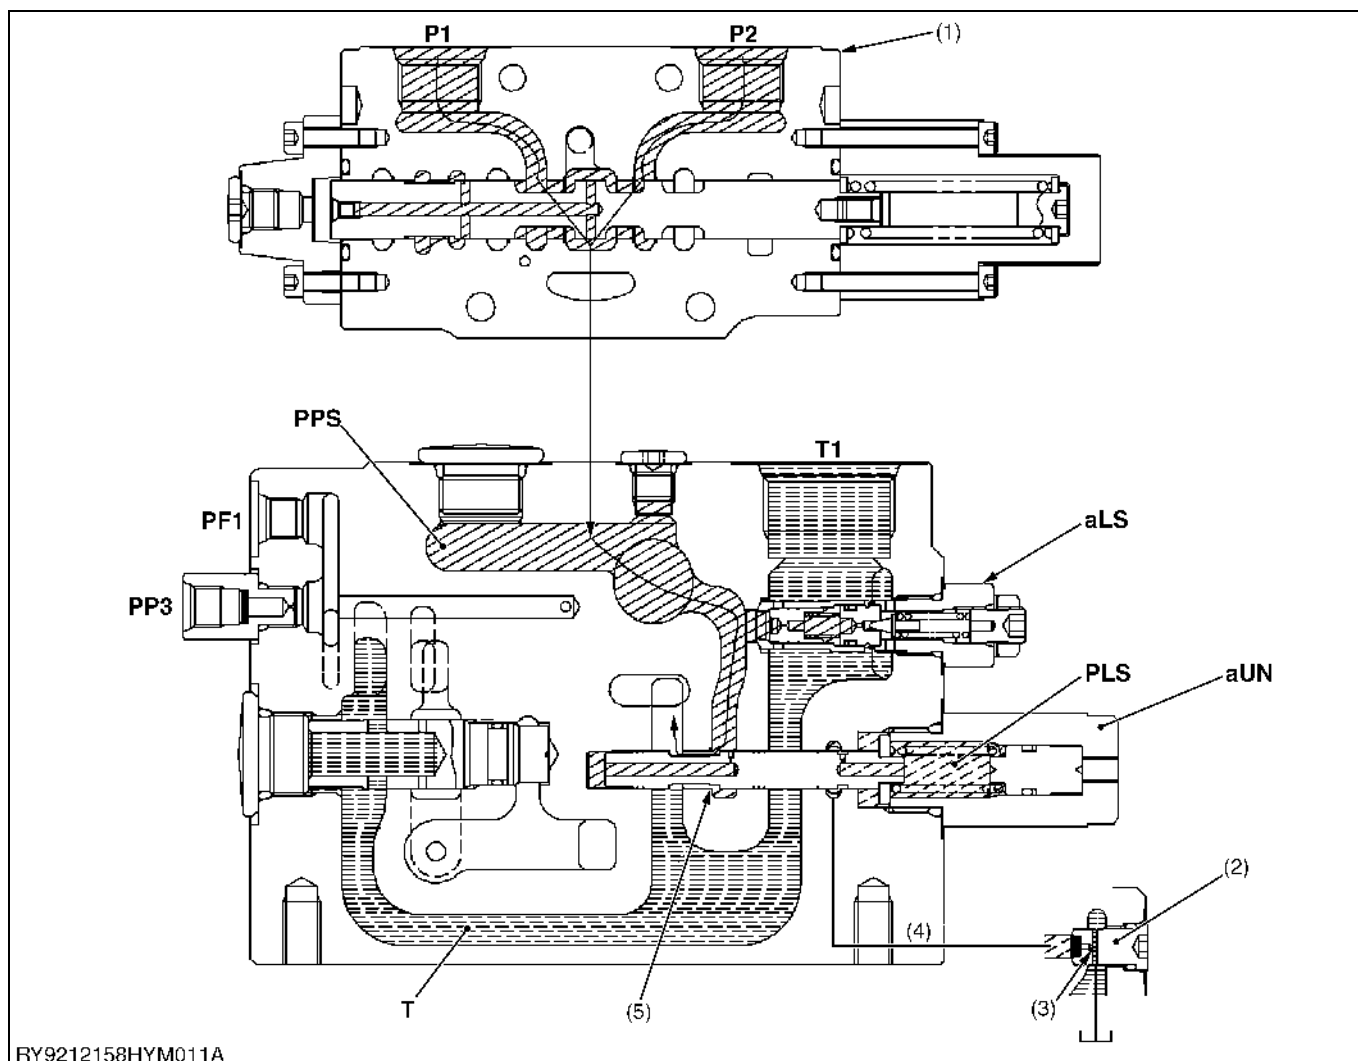

(1) Independent travel valve
section

(3) Micro-orifice


(4) PLS pressure passage

(5) Notch

(2) LS drain plug

- Pump discharge pressure PPS and maximum load pressure PLS act on either end of the unload spool.
- The PLS pressure passage (4) is connected to the tank circuit via the micro-orifice (3) in the LS drain plug (2).
- When the spool section is in neutral, no PLS pressure is generated, so $PLS = \text{tank pressure} \approx 0$ and only spring pressure (unload valve setting pressure) acts on the right side of the unload spool.
- Hydraulic oil that flows in from the pump ports PP1 and PP2 is combined inside the independent travel valve section (1) and guided to the pump pressure passage, but when a spool section is in neutral, the pump pressure passage is stopped and pump discharge pressure PPS rises.
- When pump discharge pressure PPS rises to the unload valve setting pressure, the unload spool moves to the right side, and the pump pressure passage is connected to the tank circuit via the notch (5) in the unload spool. This mechanism maintains the pump pressure passage PPS at the unload valve setting pressure.
- The unload valve is set at a pressure somewhat higher than the LS control differential pressure value set for the pump, so the pump maintains it at standby flow rate discharge status (fixed flow rate).

RY9212158HYM0014US0

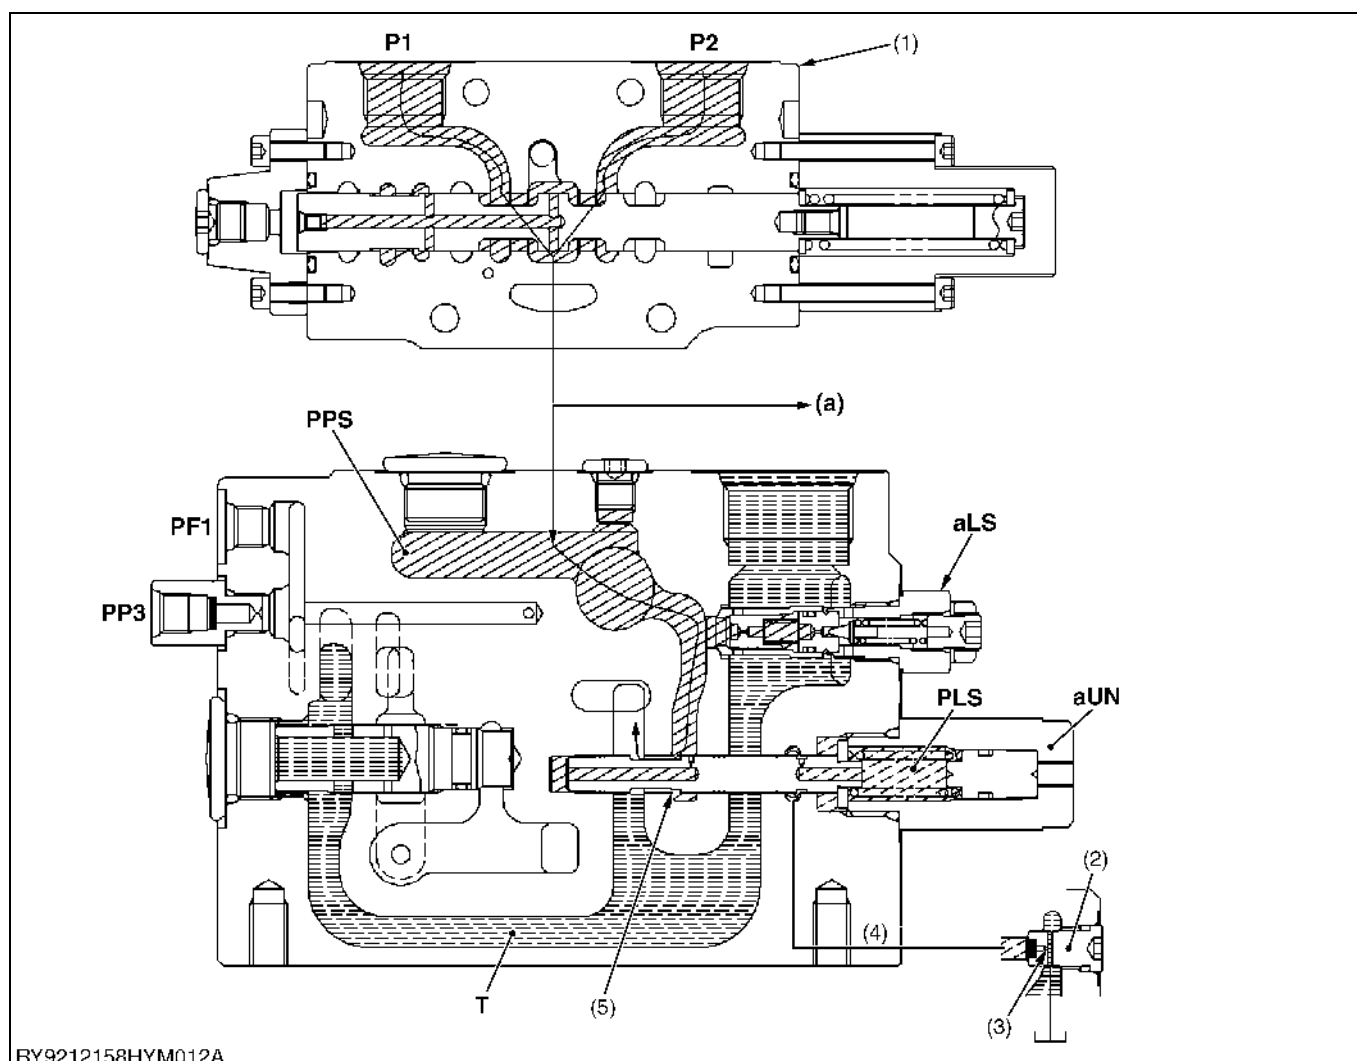
During fine operation of LS section

RY9212158HYM012A

(1) Independent travel valve section	(3) Micro-orifice	(5) Notch	(a) To each spool section
(2) LS drain plug	(4) PLS pressure passage		

- When the spool section is switched, the oil in the pump pressure passage passes through the main spool and is discharged to the cylinder port. The operating load pressure of the cylinder port is guided from inside the spool section to the PLS pressure passage (4) and becomes the PLS pressure. (Refer to the explanation of how the spool section operates.)
- As long as the amount switched from the spool section is small (fine operation), the open area of the spool section becomes also small, so it increases the pressure differential (PPS-PLS) between the pump pressure PPS and PLS.
- Once the pressure differential (PPS-PLS) between the pump pressure PPS and PLS reaches the unload valve setting pressure, the unload spool moves to the right side, automatically adjusting the open area in the notch between the pump pressure passage and the tank passage, thus maintaining a steady pressure differential (PPS-PLS) between the pump pressures PPS and PLS.
- The mechanism described above maintains a constant pressure differential (PPS-PLS) between the pump pressures PPS and PLS, even when there is a change in the spool section operating load pressure.
- The unload valve is set at a pressure somewhat higher than the LS control differential pressure value set for the pump, so the pump maintains it at standby flow rate discharge status (fixed flow rate).

RY9212158HYM0015US0

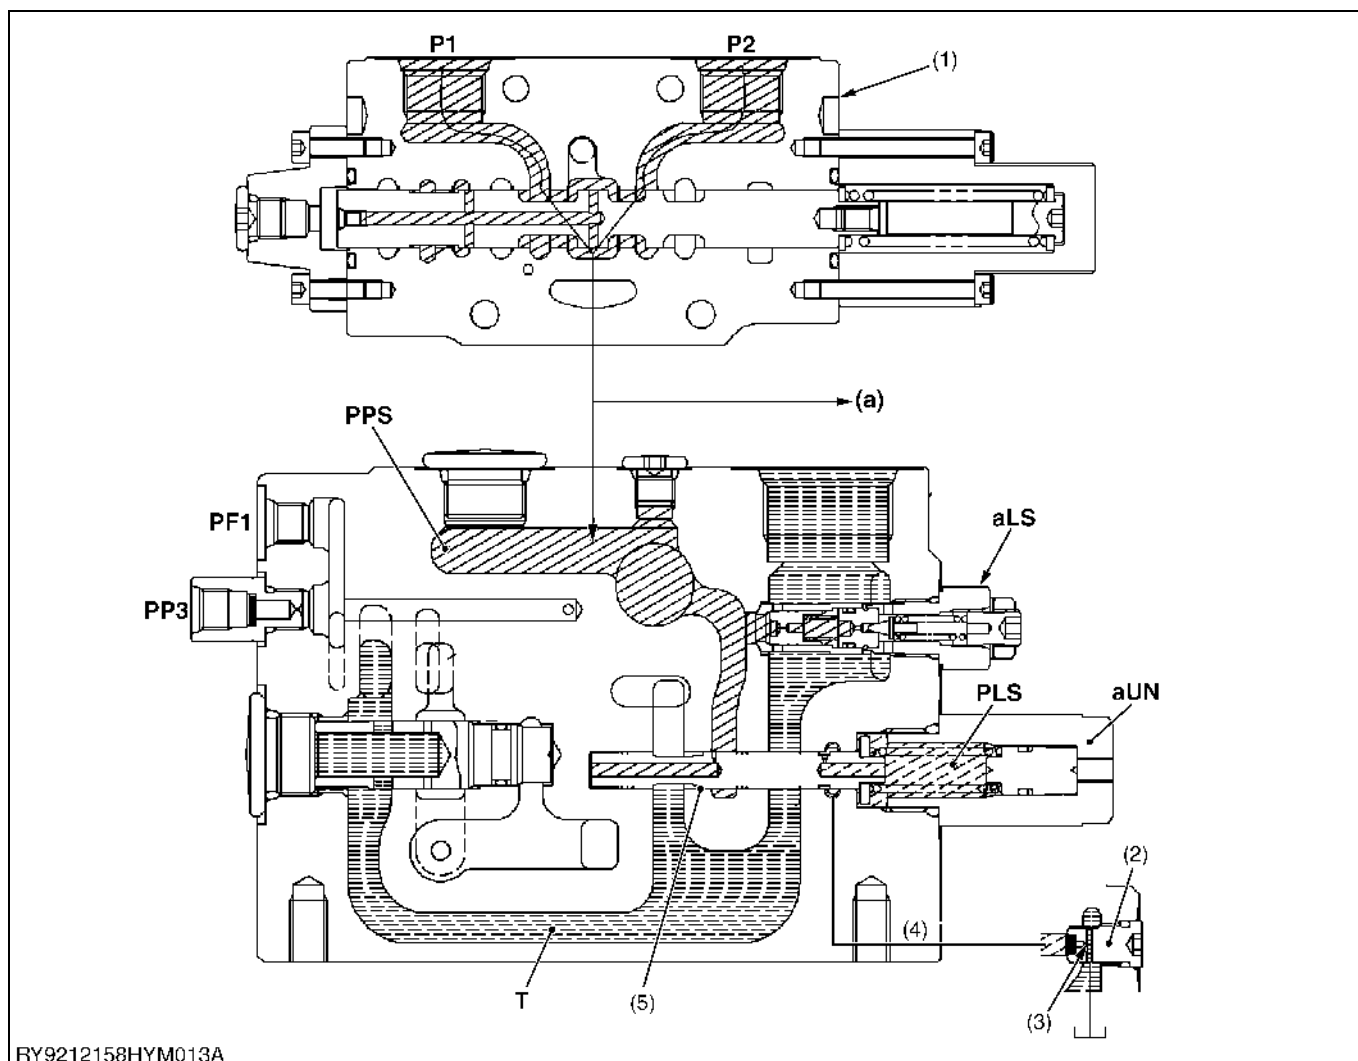During operation of LS section

RY9212158HYM013A


(1) Independent travel valve section	(3) Micro-orifice	(5) Notch	(a) To each spool section
(2) LS drain plug	(4) PLS pressure passage		

- When the spool section is switched, the oil in the pump pressure passage passes through the main spool and is discharged to the cylinder port. The operating load pressure of the cylinder port is guided from inside the spool section to the PLS pressure passage (4) and becomes the PLS pressure. (Refer to the explanation of how the spool section operates.)
- When the amount switched from the spool section is great, the area of the spool section that opens is large, so it reduces the pressure differential (PPS-PLS) between the pump pressure PPS and PLS.
- When the pressure differential (PPS-PLS) between the pump pressure PPS and PLS drops to the unload valve setting pressure, the unload spool moves to the left side, closing the opening at the notch between the pump pressure passage and the tank circuit, thus completely closing the unload spool.
- If the pressure differential (PPS-PLS) between the pump pressure PPS and PLS drops further to the LS limit pressure differential setting set for the pump, it increases the pump's swash-plate tilt angle, thus increasing the pump's discharge flow rate.
- The pump automatically changes the discharge flow rate according to the amount the spool section is switched and changes in the operating load pressure, thus limiting it to maintain a constant differential pressure (PPS-PLS) between the pump pressure PPS and PLS.

RY9212158HYM0016US0

(2) Mono-Block Section Operation (LS Control)

When in neutral

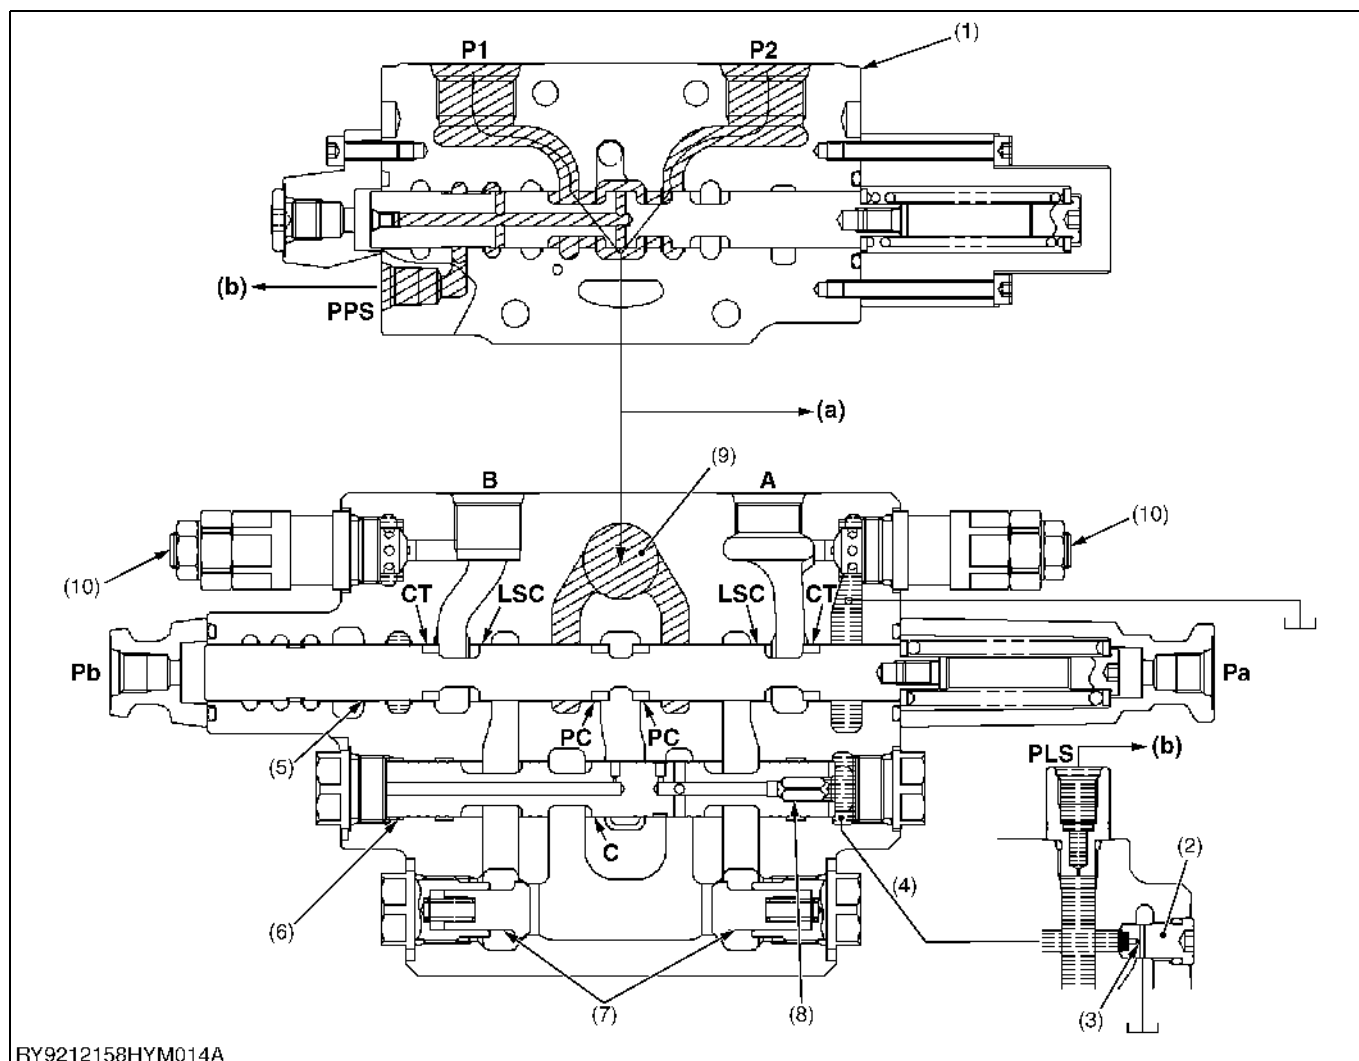


RY9212158HYM014A

(1) Independent travel valve section	(5) Main spool	(9) Pump pressure passage	(a) From unload valve to tank circuit
(2) LS drain plug	(6) Compensator spool	(10) Overload relief valve	(b) To pump
(3) Micro-orifice	(7) Load check valve		
(4) PLS pressure passage	(8) Shuttle valve		

- Oil that flows in from P1 and P2 is combined inside the independent travel valve section (1) and guided to the pump pressure passage (9).
- The main spool PC notch, which opens/closes the pump pressure passage (9) and the compensator upstream passage, is closed.
- The PLS pressure passage (4) is connected to the tank circuit via the micro-orifice (3) in the LS drain plug (2), so PLS=tank circuit pressure.
- Pump pressure PPS becomes the unload valve setting pressure and with the pump discharge flow rate at standby flow, the entire flow from the unload valve is returned to the tank circuit. (Refer to the explanation of the unload valve operation.)
- The main spool LSC and CT notches, which are connected to the cylinder port, are closed, keeping the actuator connected to the cylinder port in a stopped state.

RY9212158HYM0017US0

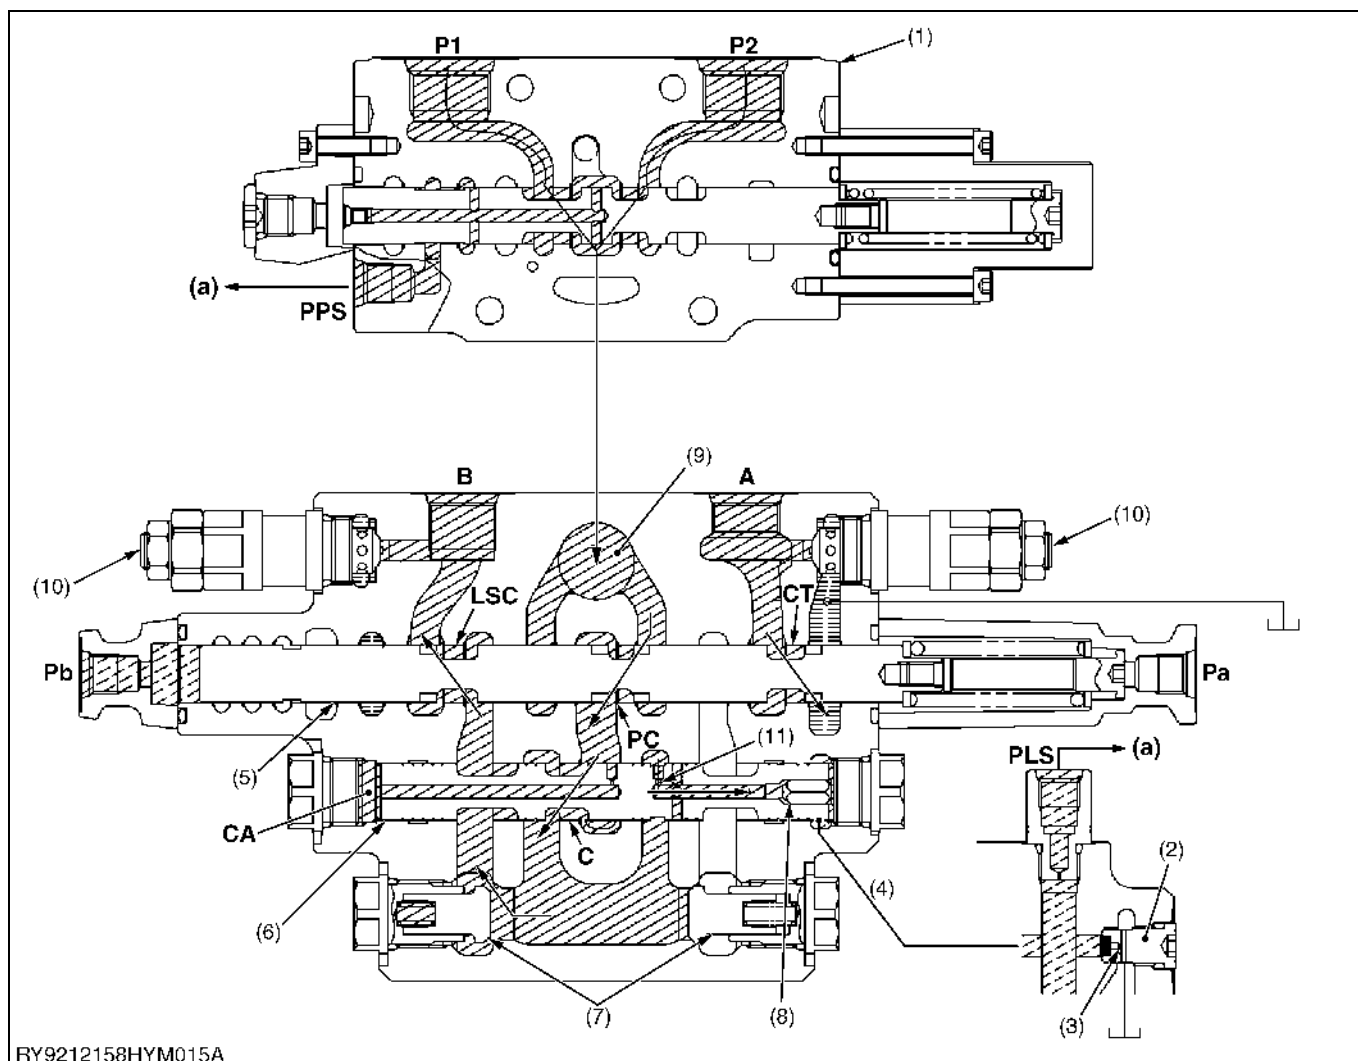When Pb port pressurized


RY9212158HYM015A

(1) Independent travel valve section	(5) Main spool	(9) Pump pressure passage	(a) From unload valve to tank circuit
(2) LS drain plug	(6) Compensator spool	(10) Overload relief valve	(b) To pump
(3) Micro-orifice	(7) Load check valve	(11) LS pressure guide orifice	
(4) PLS pressure passage	(8) Shuttle valve		

- When the spool is shifted by the Pb port pressure, the pump pressure PPS flows to cylinder port B1 via the main spool PC notch, compensator spool C notch, the right load check and the main spool LSC notch.
- The pressure (load pressure) in the load check upstream passage is guided to the PLS pressure passage via the compensator spool LS pressure guide orifice (11), opening the shuttle poppet and becoming the PLS pressure; it is then guided to the pump as the PLS signal pressure from the PLS port.
- Part of the flow of oil in the PLS pressure passage passes through the micro-orifice (3) in the LS drain plug (2) and returns to the tank circuit.
- The pressure PPS in the pump pressure passage is guided to the pump from the independent travel valve's PPS port as the pump signal pressure.
- Part of the oil flowing back from the actuator returns from cylinder port A to the tank circuit via the main spool CT notch.

RY9212158HYM0018US0

(3) Arm Regenerative Function

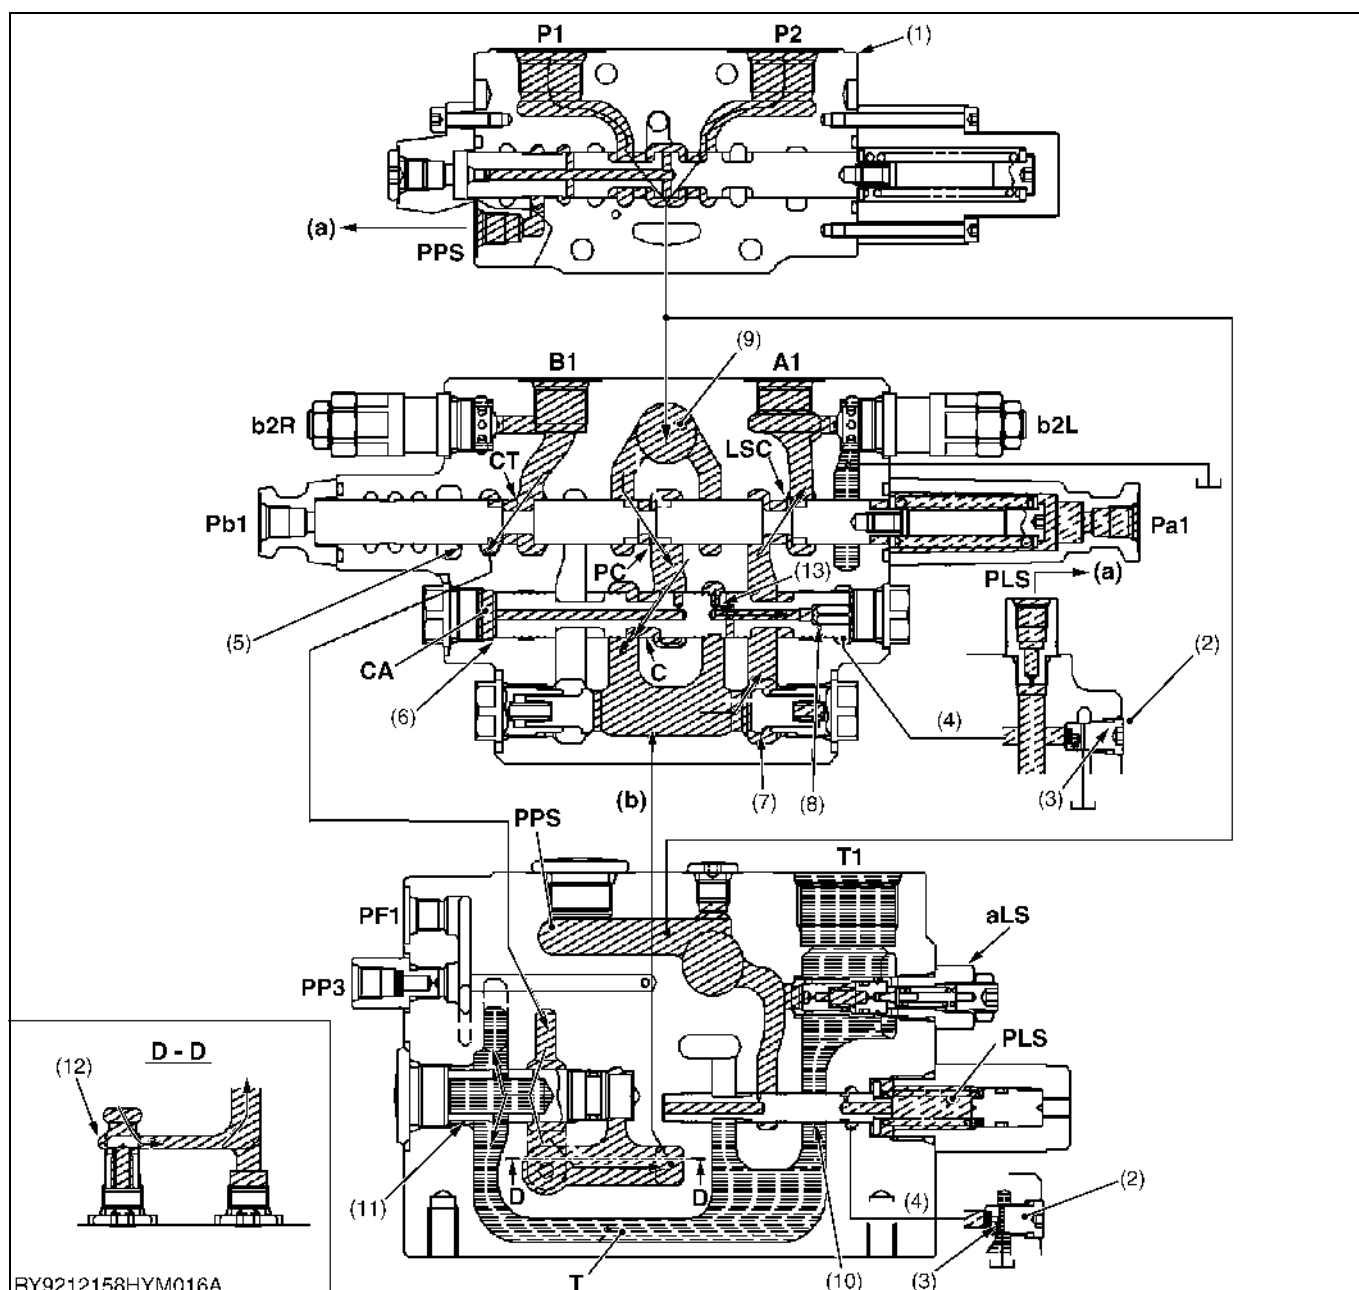


RY9212158HYM016A

(1) Independent travel valve section	(5) Main spool	(9) Pump pressure passage	(13) LS pressure guide orifice
(2) LS drain plug	(6) Compensator spool	(10) Unload spool	(a) To pump
(3) Micro-orifice	(7) Load check valve	(11) Arm regenerative sleeve	(b) Regenerative flow
(4) PLS pressure passage	(8) Shuttle valve	(12) Regenerative poppet	

- When the spool is shifted, the pump pressure PPS flows to cylinder port A1 via the main spool PC notch, compensator spool C notch, the right load check and the main spool LSC notch.
- The pressure (load pressure) in the load check upstream passage is guided to the PLS pressure passage via the compensator spool LS pressure guide orifice (13), opening the shuttle poppet and becoming the PLS pressure; it is then guided to the pump as the PLS signal pressure from the PLS port.
- Part of the flow of oil in the PLS pressure passage passes through the micro-orifice (3) in the LS drain plug (2) and returns to the tank circuit.
- The pressure PPS in the pump pressure passage is guided to the pump from the independent travel valve's PPS port as the pump signal pressure.
- Part of the oil flowing back from the actuator flows from cylinder port B2 via the CT notch in the main spool and the regenerative poppet to the upstream passage of the load check poppet and is combined as a regenerative flow. And part of the returning oil passes through the arm regenerative sleeve and returns to the tank circuit.

RY9212158HYM0019US0

(4) Swing Section Operation (LS Control)

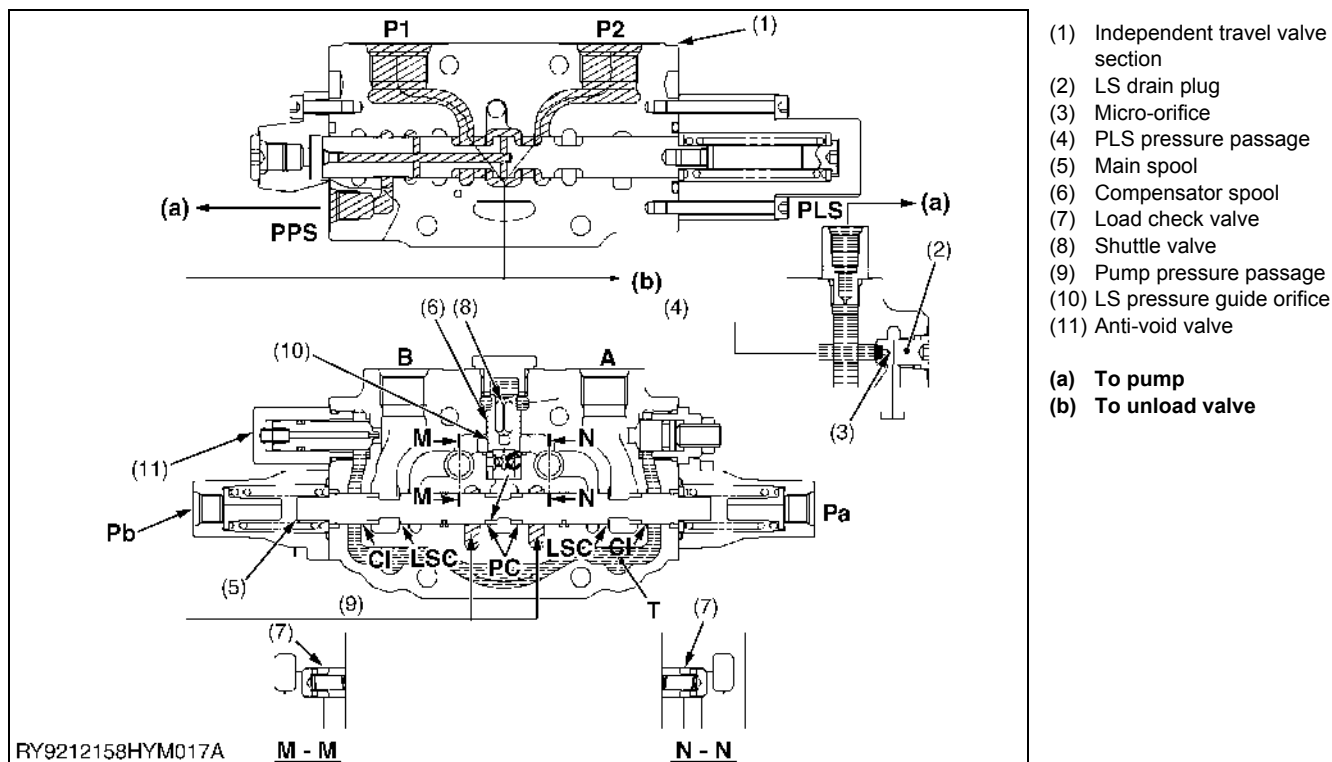

[In neutral]


- Oil that flows in from P1 and P2 is combined inside the independent travel valve section (1) and guided to the pump pressure passage (9).
- The main spool PC notch, which opens/closes the pump pressure passage (9) and the compensator upstream passage, is closed.
- The PLS pressure passage (4) is connected to the tank circuit via the micro-orifice (3) in the LS drain plug (2), so PLS=tank circuit pressure.
- Pump pressure PPS becomes the unload valve setting pressure and with the pump discharge flow rate at standby flow, the entire flow from the unload valve is returned to the tank circuit. (Refer to the explanation of the unload valve operation.)
- The main spool LSC and CT notches, which are connected to the cylinder port, are closed, keeping the actuator connected to the cylinder port in a stopped state.

[When port is pressurized]

- When the spool is shifted by the Pa port pressure, the pump pressure PPS flows to cylinder port A via the main spool PC notch, compensator spool C notch, the right load check and the main spool LSC notch.
- The pressure (load pressure) in the load check upstream passage is guided to the PLS pressure passage via the compensator spool LS pressure guide orifice, opening the shuttle poppet and becoming the PLS pressure; it is then guided to the pump as the PLS signal pressure from the PLS port.
- Part of the flow of oil in the PLS pressure passage passes through the micro-orifice (3) in the LS drain plug (2) and returns to the tank circuit.
- The pressure PPS in the pump pressure passage is guided to the pump from the independent travel valve's PPS port as the pump signal pressure.
- Part of the oil flowing back from the actuator returns from cylinder port B to the tank circuit via the main spool CT notch.

RY9212158HYM0020US0

(5) Travel Section Operation (Open Center Control)

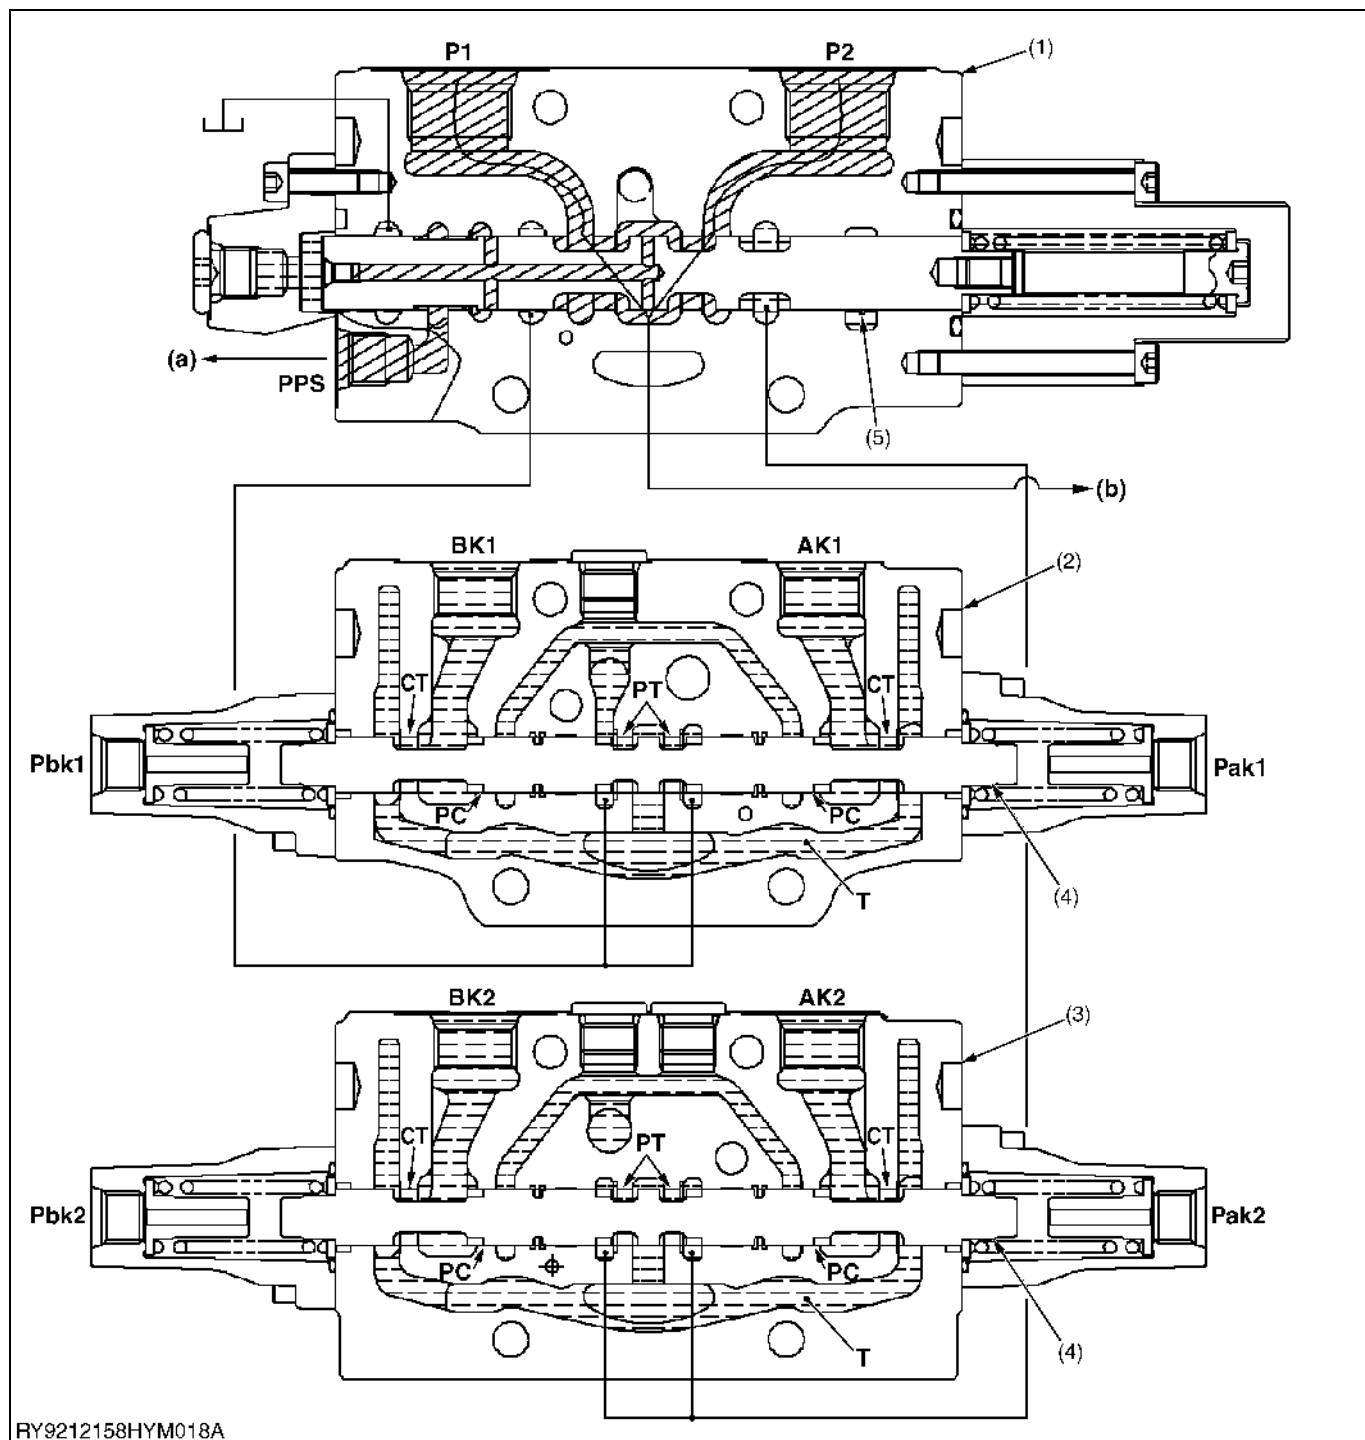

(1) Independent travel valve section	(3) Travel left section	(5) PP2 signal pressure	(a) To pump
(2) Travel right section	(4) Main spool		(b) To unload valve

[In neutral]

- Oil that flows in from P1 and P2 is combined inside the independent travel valve section (1) and guided from the unload valve to the tank circuit.
- Pump pressure PPS becomes the unload valve setting pressure and with the pump discharge flow rate at standby flow, the entire flow from the unload valve is returned to the tank circuit. (Refer to the explanation of the unload valve operation.)
- Thus the pressure in the main spool spring chamber of the independent travel valve is PT pressure=tank circuit pressure.
- Cylinder ports AK1 (AK2), BK1 (BK2) are connected to the tank circuit via the CT notch in the main spool.


(To be continued)

(Continued)**[When Pak1 (Pak2) port pressurized]**

- When the main spool is shifted, it closes the PT notch, cutting off the connection between the center bypass passage and the tank circuit.
- At the same time, it generates a PP2 signal pressure (refer to the explanation of the signal circuit) and switches the main spool of the independent travel valve.
- By shifting the main spool of the independent travel valve, the pump pressure P1 (P2) is guided to the center bypass of the travel 1st (2nd) section and oil flows to the cylinder port AK1 (AK2) via the bridge passage and the PC notch.
- At the same time, the pressure at the PPS port, which is connected to the pump, is connected to the tank circuit and the pump discharges a large volume of oil.
- The PT passage controls the volume of oil supplied to the cylinder port AK1 (AK2) according to how much the travel main spool is shifted, and varies the P1 (P2) pressure in line with the change, from fully open to fully closed.
- Oil flowing back from the actuator returns from cylinder port BK1 (BK2) to the tank circuit via the main spool CT notch.

RY9212158HYM0021US0

(6) Blade Section Operation (Open Center Control)

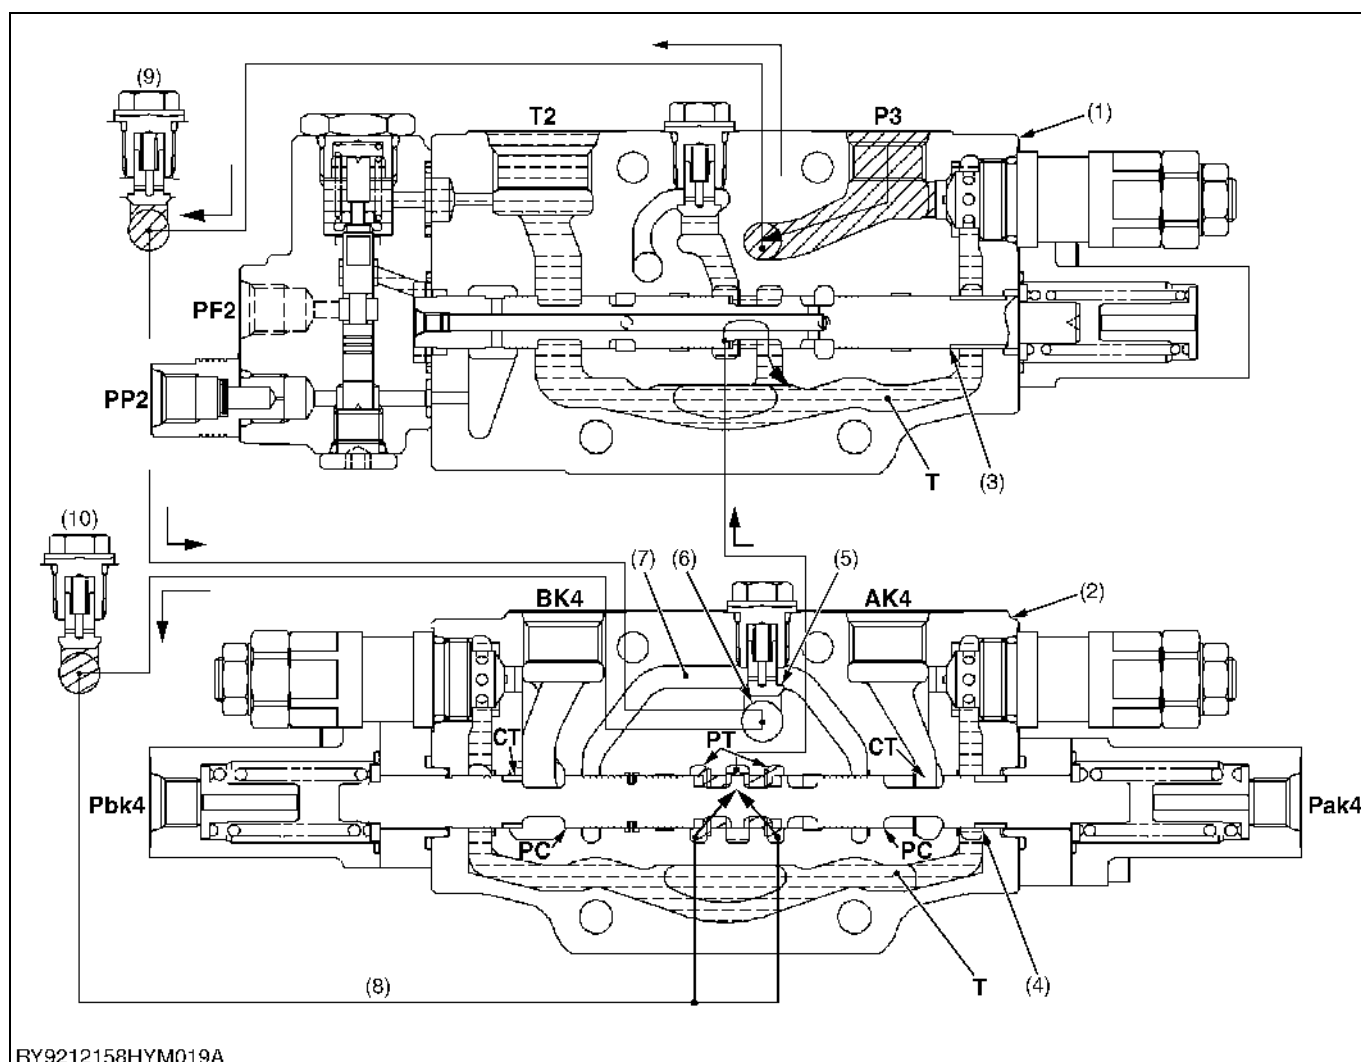

(1) Independent travel valve section	(4) Main spool	(7) Bridge passage	(9) AUX2
(2) Blade section	(5) Load check valve	(8) Center bypass passage	(10) Swivel
(3) Communication valve spool	(6) Parallel passage		

[In neutral]

- The oil flowing from P3 passes through the parallel passage (6) of each section (AUX2, blade, swivel), going through the center bypass passage (8) of each section (swivel, blade, AUX2) and returns to the hydraulic oil tank via the communication valve spool (3) of the communication section.
- The main spool PC and CT notches are closed, keeping the actuator connected to the cylinder ports AK4 and BK4 in a stopped state.

[When port pressurized (6mm, 0.24in. stroke)]


- When the spool is shifted by pressure from the Pak4 port (6 mm, 0.24 in.), it closes the PT notch of the main spool, cutting off the connection between the center bypass passage (8) and the tank circuit.
- Pump pressure P3 presses up the load check poppet from the parallel passage and oil returns to the cylinder port AK4 via the bridge circuit (7) and the PC notch.
- The PT passage controls the volume of oil supplied to the cylinder port AK4 according to how much the travel main spool (4) is shifted, and varies the P3 pressure in line with the change, from fully open to fully closed.
- Oil flowing back from the actuator returns from cylinder port BK4 to the tank circuit via the main spool CT notch.

[When port is pressurized (full stroke=float position)]

- When the main spool (4) is shifted by the Pak4 port pressure (full stroke), cylinder port AK4 and BK4 are connected to the tank circuit.

RY9212158HYM0022US0

(7) Anti-Drift Function

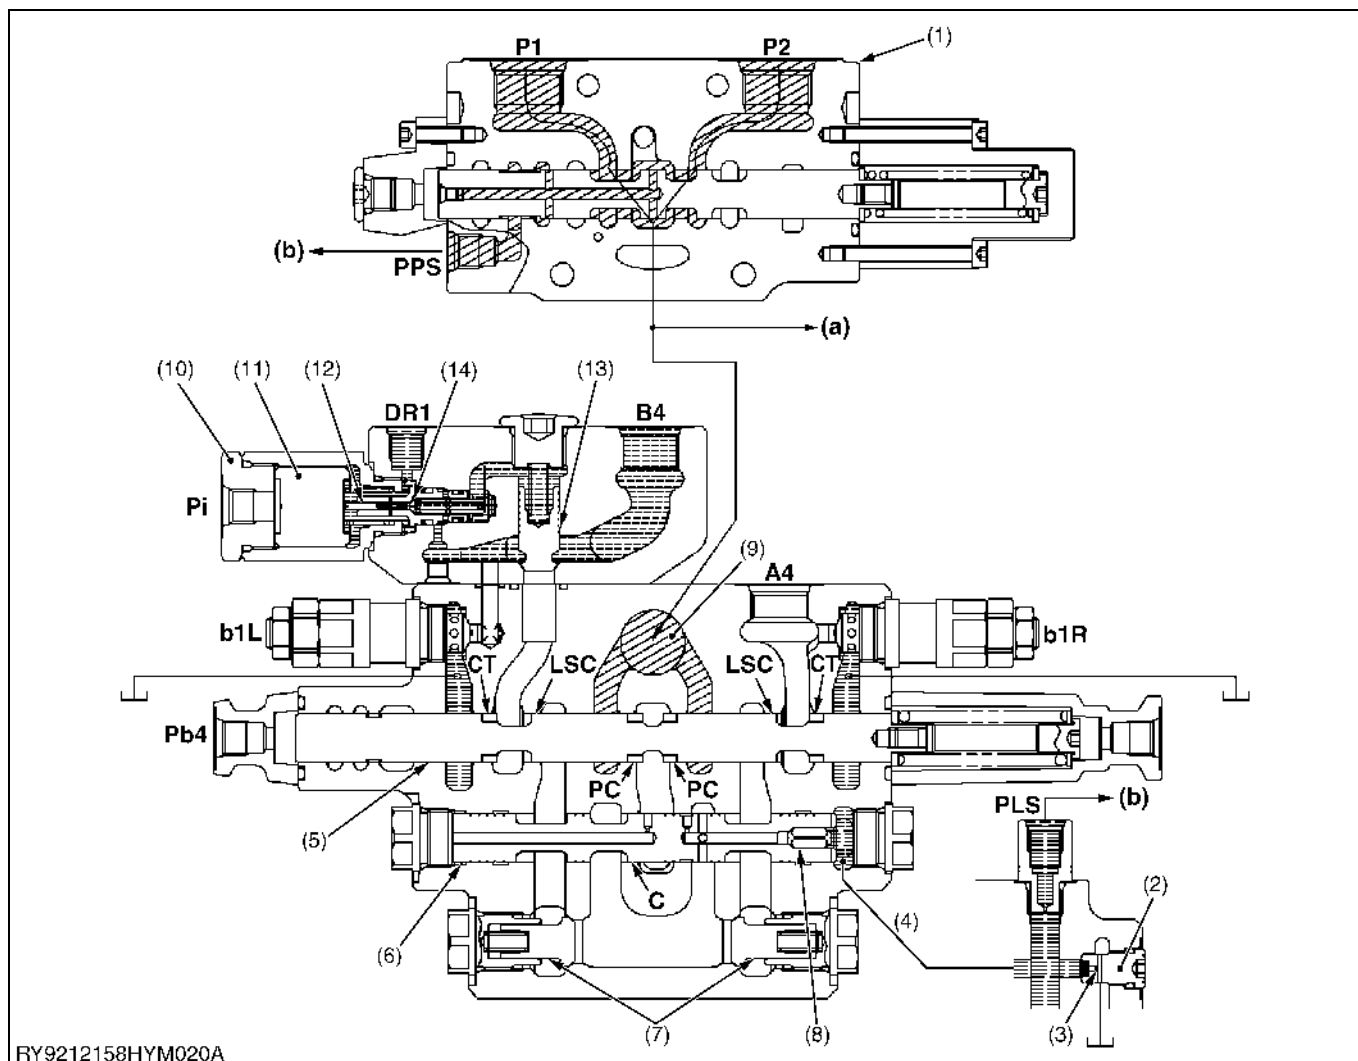

RY9212158HYM020A

- (1) Independent travel valve section
- (2) LS drain plug
- (3) Micro-orifice
- (4) PLS pressure passage
- (5) Main spool

- (6) Compensator spool
- (7) Load check valve
- (8) Shuttle valve
- (9) Pump pressure passage
- (10) Anti-drift valve

- (11) Piston
- (12) Spool
- (13) Poppet A
- (14) Poppet B

- (a) From unload valve to tank circuit
- (b) To pump

[In neutral]


- The boom cylinder holding pressure (pressure from port B connected to the bottom side) acts on the spring chamber side of anti-drift valve poppet A, thus seating poppet A and contributing to reducing the amount leaked (reducing boom drift).

[During boom down operation]

- When port Pa is pressurized, both port Pa and port Pi, which are connected to it externally, are pressurized, so the piston (11), spool (12) and poppet B are actuated and the spring chamber of poppet A is connected to DR1; this opens poppet A and the oil returning from the actuator passes from cylinder port B via main spool CT notch back to the tank circuit.

RY9212158HYM0025US0

(8) P3 Bypass Section Operation (Simultaneous Boom Up + Swivel Operation)

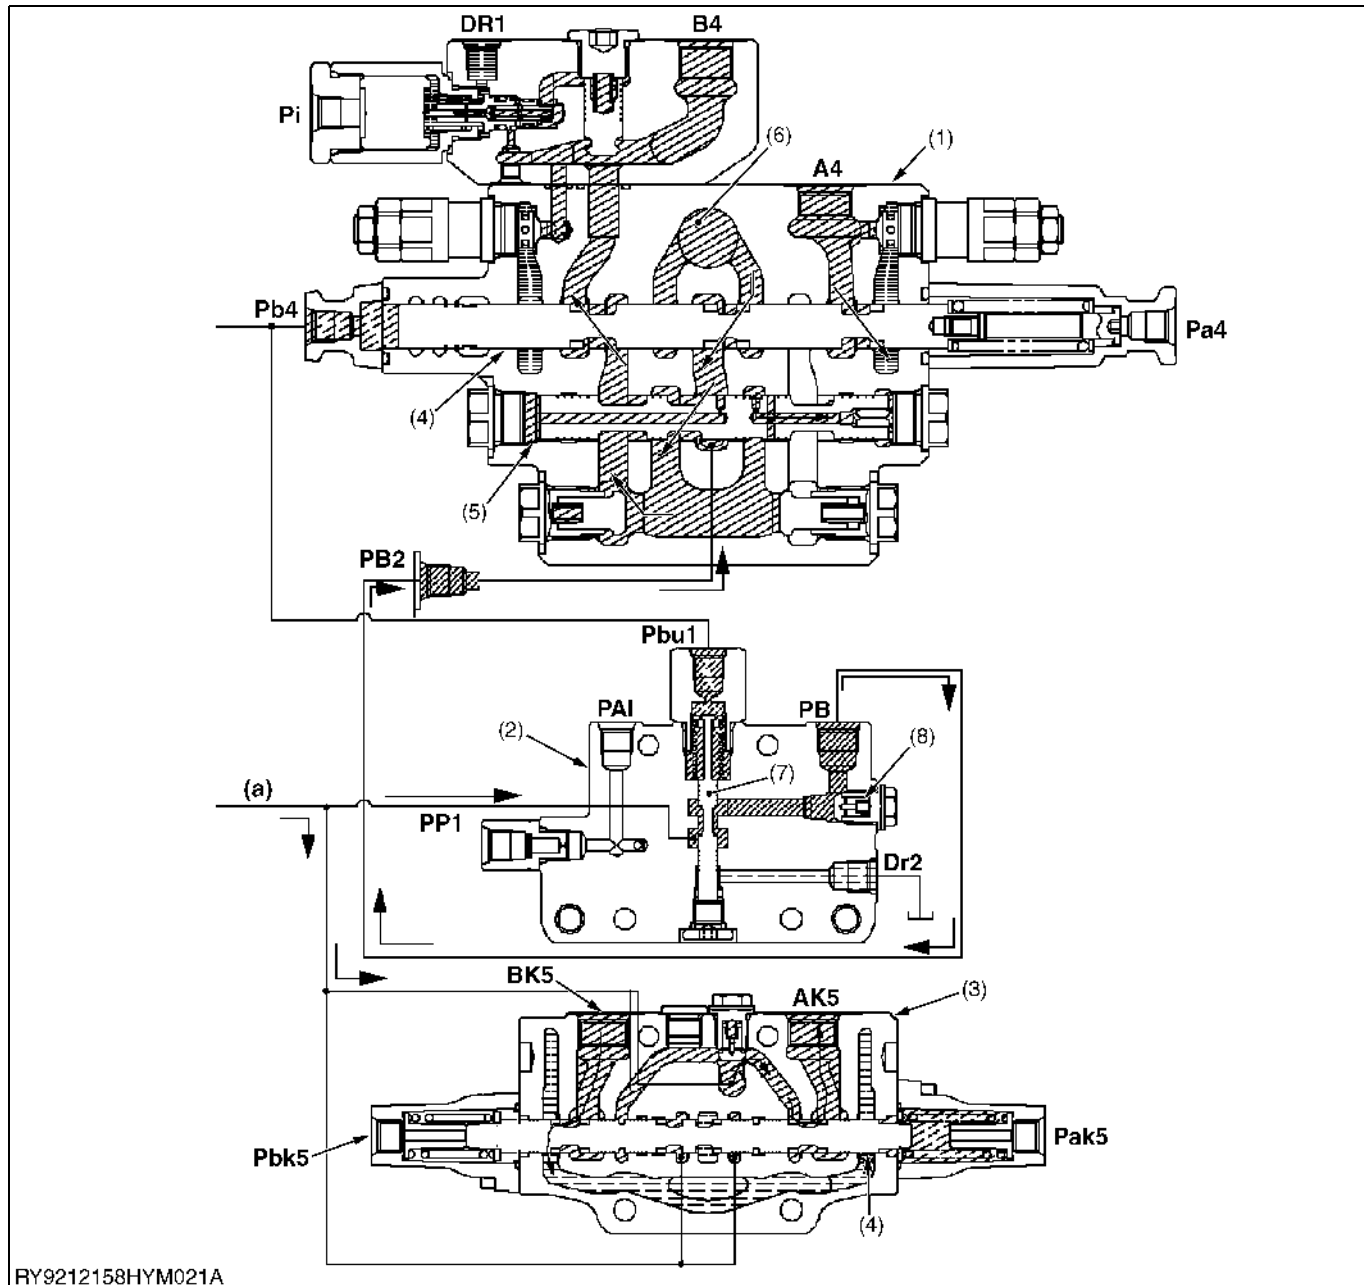

(1) Boom section	(4) Main spool	(7) Switch spool
(2) P3 bypass section	(5) Compensator spool	(8) Check valve
(3) Swivel section	(6) Pump pressure passage	

(a) From P3 port

- Boom up operation pressurizes the Pb4 port and switches the boom section. At the same time, the Pbu1 port, which is connected via external lines, is also pressurized and the switch spool of the P3 bypass valve is switched.
- The Pak5 (Pbk5) port is pressurized and when the swivel section is switched, the P3 pump pressure is guided to the cylinder port of the swivel section, while simultaneously being guided to the switch spool of the P3 bypass valve.

[Swivel section operating load pressure > boom section operating load pressure]


- The P3 pump pressure passes through the switch spool of the P3 bypass valve, presses up on the check valve and flows together with oil from the PB1 port to the PB2 port.

[Swivel section operating load pressure < boom section operating load pressure]

- As the check valve of the P3 bypass valve does not open, the P3 pump pressure is not combined to the PB2 port and operates independently.

RY9212158HYM0023US0

(9) Signal Circuit

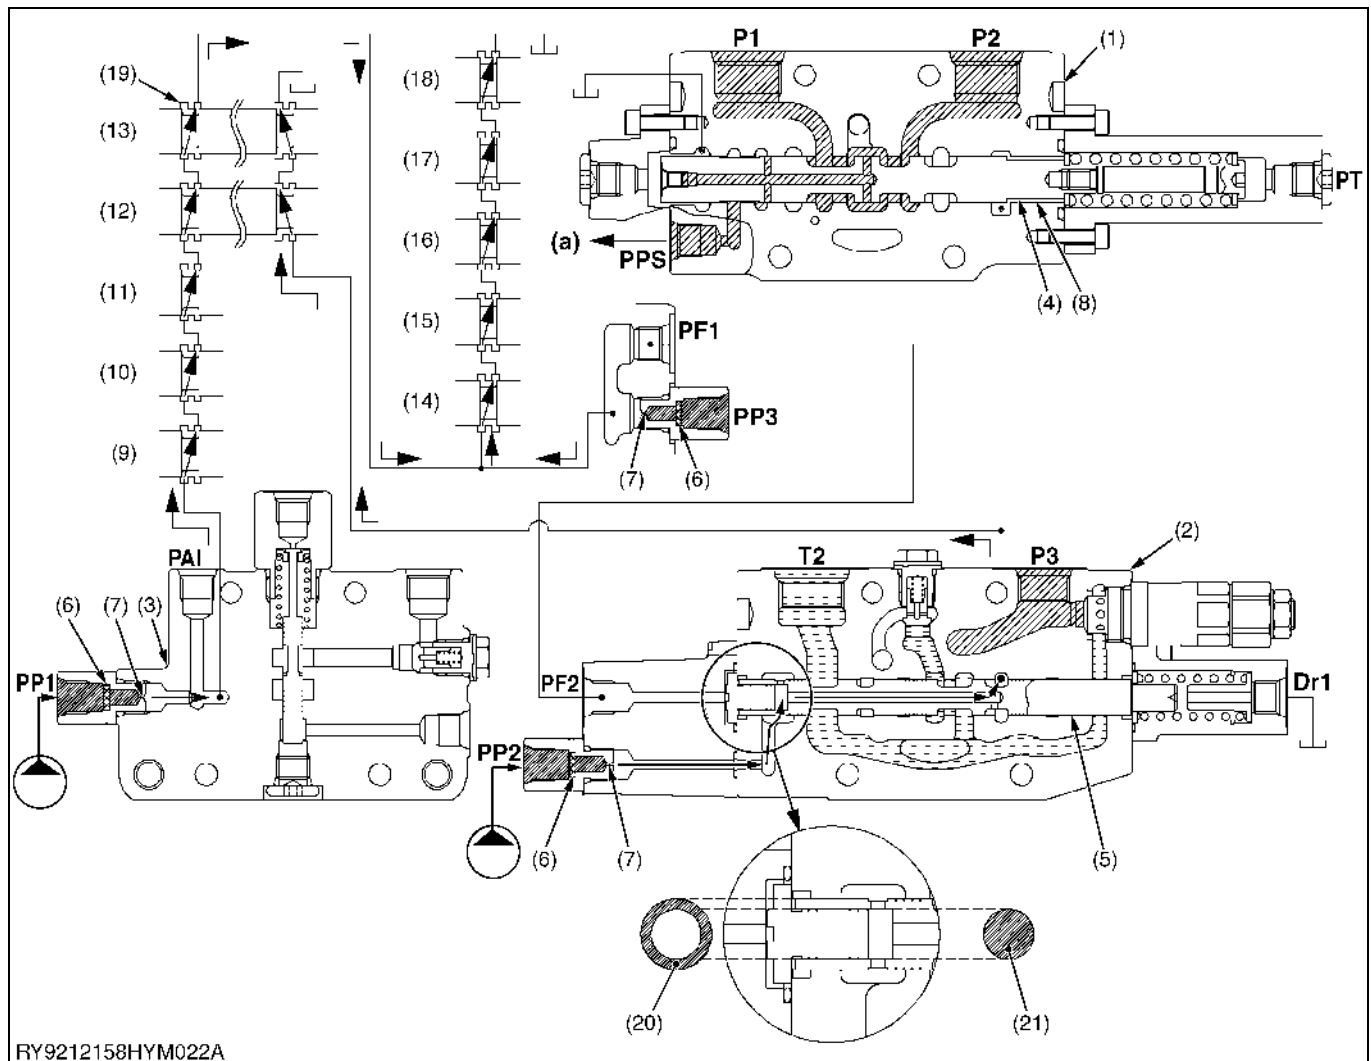

(1) Independent travel valve section	(7) Micro-orifice	(13) Travel right	(19) Main spool signal passage section
(2) Communication valve section	(8) Ring gap	(14) Arm	(20) Area receiving pressure: A1
(3) P3 bypass section	(9) Swivel	(15) Bucket	(21) Area receiving pressure: A2
(4) Independent travel valve spool	(10) Blade	(16) AUX1	
(5) Communication valve spool	(11) AUX2	(17) Boom	
(6) Filter	(12) Travel left	(18) Swing	
- (a) To pump

[In neutral]

- Pilot pump pressure is guided to the hydraulic supply ports PP1, PP2 and PP3 of the signal circuit.
- The pilot pump pressure supplied to port PP1 of the P3 bypass section returns to the tank circuit via the filter (6) and micro-orifice (7) and via the main spool signal passage switch (19) of all sections so port PAI port=tank pressure.
- The pilot pump pressure supplied to port PP2 of the communication valve section (2) returns to the tank circuit via the filter (6), micro-orifice (7) and the open center passage of the communication valve spool (5), and via the main spool signal passage switch of the travel section. And oil in the passage split at a point upstream of the travel section's main spool signal passage switch is guided to the independent travel valve section as well, and is connected to the PT port pressure chamber via the ring-shaped gap (8) of the independent travel valve spool (4).
- The pilot pump pressure supplied to port PP3 of the main valve returns to the tank circuit via the filter (6) and micro-orifice (7) and via the main spool signal passage switch of each of the arm→bucket→S/P1→boom→swing section, so port PF1 port=tank pressure.
- The PF1 port is connected via external lines with the PF2 port of the communication valve section (2), so PF1=PF2=tank pressure.

(To be continued)

(Continued)**[When AI signal pressure rises (idling signal)]**

- It switches the main spool of each section to either the A or the B port side and cuts off the passage that connects the PP1 port micro-orifice downstream and the tank circuit.
- This raises the PAI port pressure to the PP1 port pressure (that is, the pilot pump pressure).
- If the switched section above is the arm, bucket S/P1, boom or swing, the passage connecting the downstream side of the PP3 port micro-orifice and the tank circuit is cut off at the same time.
- This raises the PF1 port pressure, along with the PF2 port, which is connected by external lines, to the PP3 port pressure (in other words, the pilot pump pressure).
- Raising the PF2 port pressure pressurizes the pressure receiving chamber on the left side of the communication valve spool, and the pressure acts on the pressure receiving area A1, generating switching force toward the right; the communication valve spool does not move as it is configured with spring force so it switches when pressure receiving areas A1 and A are pressurized at the same time.
(communication valve spring pressure setting=pressure receiving area A1 switch force + pressure receiving area A2 switching force)

[During independent travel operation]

- It switches the main spool of the travel section to either the A or the B port side and cuts off the passage that connects the PP2 port micro-orifice downstream and the tank circuit.
- This results in the pressure on the spring chamber, which is on the right side of the independent travel valve spool connected to the downstream of the PP2 micro-orifice, being equal to the PT port pressure, which rises to the PP2 port pressure (in other words, the pilot pump pressure).
- When the PT port pressure rises, it shifts the independent travel valve spool and P1 and P2 pump pressure is supplied to the travel sections.
- Further, raising the PT port pressure pressurizes the pressure receiving chamber on the left side of the communication valve spool, and the pressure acts on the pressure receiving area A2, generating switching force toward the right; however, the communication valve spool does not move as it is configured with spring force that makes it switch when pressure receiving areas A1 and A2 are pressurized at the same time.
(communication valve spring pressure setting=pressure receiving area A1 switch force + pressure receiving area A switching force)


[During travel + front operation]

- When the travel section is switched, as mentioned above, the actuation of the independent travel valve supplies P1, P2 pump pressure independently to the section. (P1, P2 pump supply is cut off from the closed center section)
- In this situation, if one of the closed center sections (arm, bucket, S/P1, boom, swing) is switched, it pressurizes the PT port and PF2 port simultaneously.
- When pressure at the PT port and PF2 ports rises at the same time, the pressure receiving chamber on the left side of the communication valve spool is pressurized, exerting pressure on the receiving areas A1 and A2.
- As the communication valve spool is configured with spring pressure so it switches when receiving areas A1 and A2 are pressurized at the same time, the communication valve spool shifts to the right.
(communication valve spring pressure setting=pressure receiving area A1 switch force + pressure receiving area A2 switching force)
- Once the communication valve spool shifts, the passage that connects to the tank circuit via the communication valve spool is cut off, and the P3 pump pressure presses up on the check valve, communicating with the pump pressure passage of the closed center section. (operates the communication valve)
- Thus the travel section operates independently via P1 and P2 pumps and the closed center section operates using pump P3 pressure.

RY9212158HYM0024US0

5. SWIVEL MOTOR

[1] SPECIFICATIONS

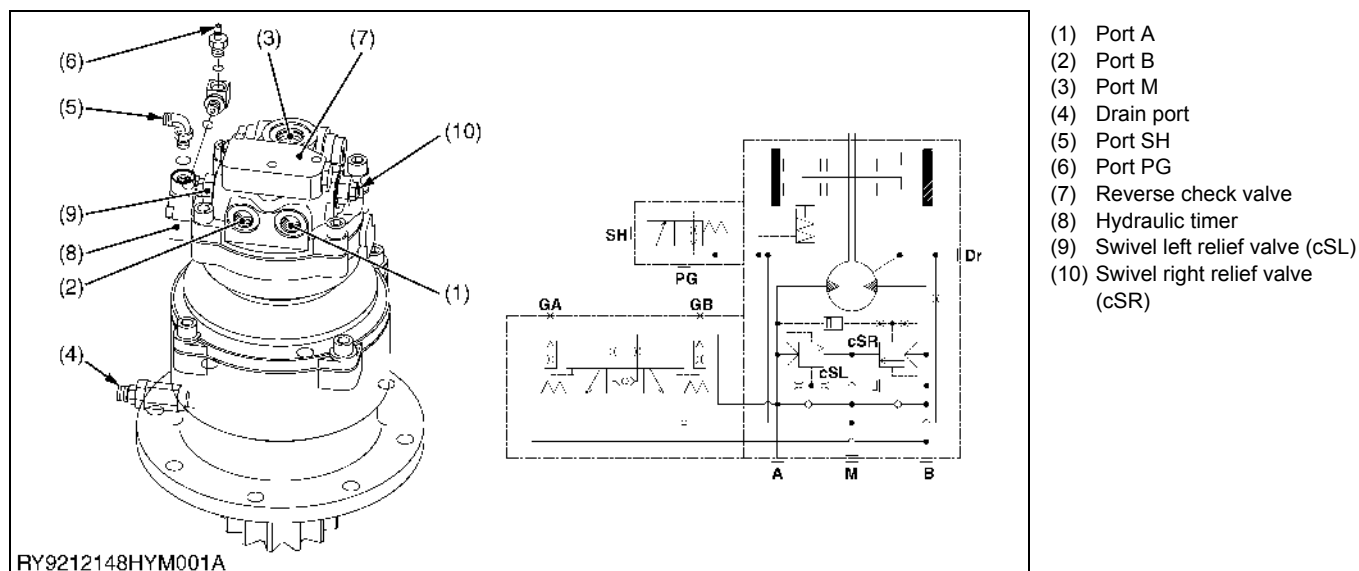


Item			Notes
Maker		KYB	
Model		MSG-44P-21-19	
Total displacement		909 cm ³ /rev 55.5 cu.in./rev	
Motor displacement		44.1 cm ³ /rev 2.7 cu.in./rev	
Reduction ratio		20.615	
Relief valve	cSR cSL	21.6 MPa 220 kgf/cm ² 3133 psi	At 66 L/min., 17.4 U.S. gals
	Shockless pressure	8.3 ± 0.1 MPa 84.70 ± 1.02 kgf/cm ² 1203.8 ± 14.5 psi	
	Shockless time	0.03 ± 0.05 sec	
Useful flow		66 L/min 17.4 U.S.gals	
Parking brake release pressure	PG	1.5 to 4.9 MPa 15.3 to 50.0 kgf/cm ² 217.6 to 711.0 psi	
	SH	0.4 ± 0.1 MPa 4.10 ± 1.02 kgf/cm ² 58.0 ± 14.5 psi	
	Hydraulic timer	5.0 ± 1.5 sec	

RY9212148HYM0030US0

[2] FUNCTION AND STRUCTURE

(1) Operating Principles

[A] Motor

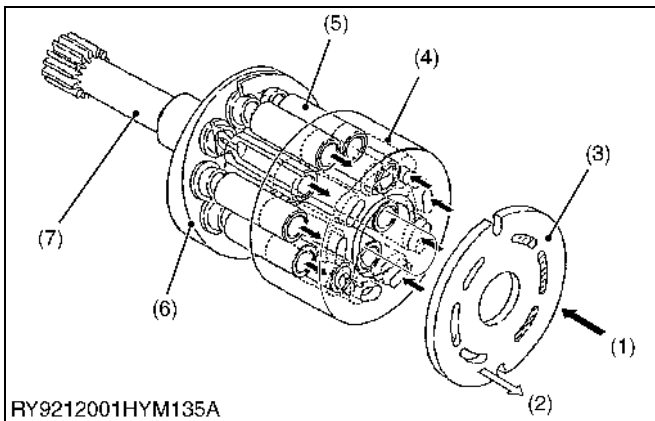


- The pressurized oil from port A (1) goes through valve plate (3), enters piston (5) inside cylinder block (4) and presses against the swash-plate (6). The pistons receive the counterforce from the swash-plate, part of which becomes rotational force, and the block rotates due to the sum total of the rotational forces exerted by the pistons that the hydraulic oil entered.
- The cylinder block and the shaft (7) are linked via a spline, so rotation is transferred to the shaft.
- When in reverse, hydraulic oil flows in via port B (2) and is discharged via port A.

(1) Port A	(5) Piston
(2) Port B	(6) Swash Plate
(3) Valve Plate	(7) Shaft
(4) Cylinder Block	

RY9212148HYM0056US0

[B] Make Up Circuit

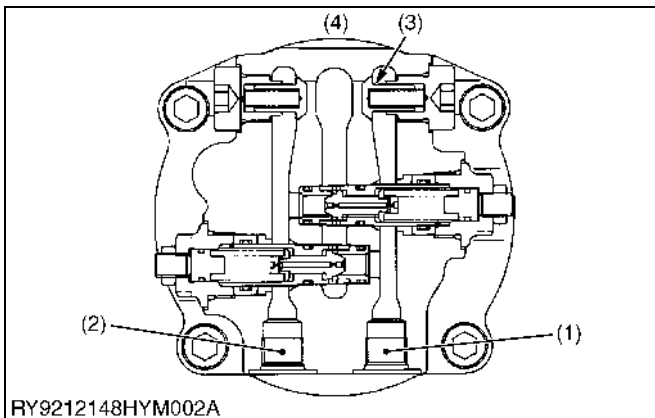


- If the swivel is decelerated with pressurized oil supplied via port A (1), the motor rotates due to the inertia of the swiveling equipment, and the motor drives the pump.
- This results in load on the port A side; in order to prevent this, the oil on the return side passes through the poppet (3) in the make up circuit and is supplied to the port A side.

(1) Port A	(3) Poppet
(2) Port B	(4) Port M

RY9212148HYM0001US0


[C] Relief Valve

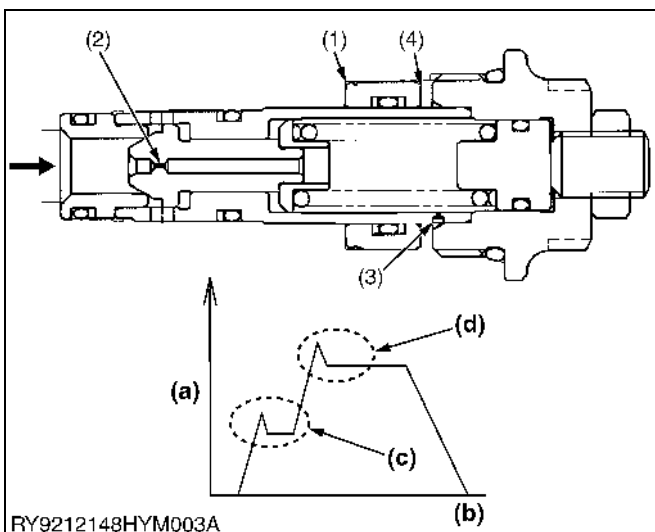

- The relief valve is the valve that determines the drive and brake forces during swiveling and it's equipped with main ports A/B lines for each.
- Oil that enters port B is guided to the piston chamber (4) via the relief valve orifice (2) and the body orifice (3). While the piston is moving to the left side, the spring chamber is at low pressure, so it acts on the piston with the low force provided by the spring. (Primary relief pressure)
- When the piston in the diagram reaches the left side, the pressure in the spring chamber rises, and acts on the piston with the total force of the spring and the pressure. (Secondary relief pressure)
- Because of this, the system can suppress dramatic changes in pressure and can mitigate the shock of starting up and stopping the equipment.

(1) Piston	(a) Pressure
(2) Relief valve orifice	(b) Time
(3) Body orifice	(c) Primary relief pressure
(4) Piston chamber	(d) Secondary relief pressure

RY9212148HYM0031US0

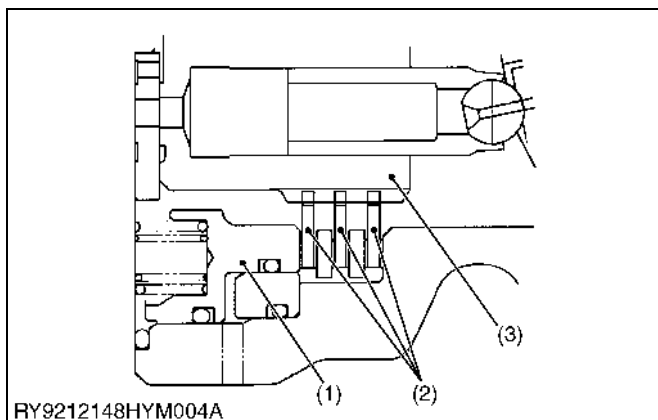
[D] Parking Brake**a)When the parking brake is operated**

- When the brake release pressure is interrupted, springs press the brake piston (1) against the disc (2) that meshes with the spline on the circumference of the cylinder block (3).
- Friction holds the cylinder block (3) to the case, preventing it from turning.

(1) Brake piston
(2) Disc

(3) Cylinder block

RY9212148HYM0032US0

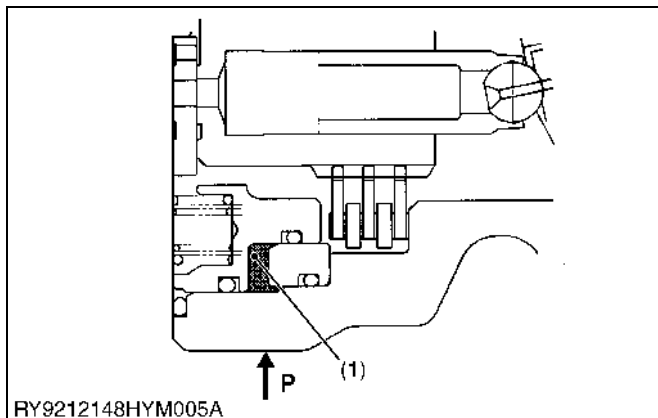
**b)When the parking brake is released**

- When the brake release pressure is guided to the brake piston chamber (1) via the PG port (P), the release pressure acts against the resistance of the brake piston's spring, eliminating the friction with the disc and allowing the cylinder block to turn freely.

(1) Brake piston chamber

P: Port PG

RY9212148HYM0033US0

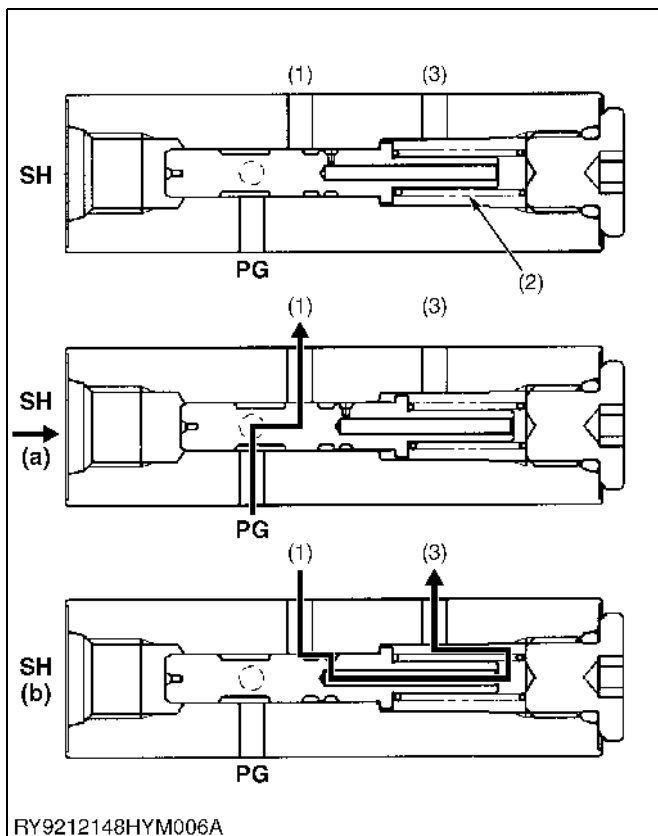[E] Hydraulic Timer


- The hydraulic timer is a function for preventing drag on the parking brake when the swivel brake is used and it plays the role of ensuring delayed timing so the parking brake does not operate while hydraulic dynamic braking is absorbing inertial energy from the turning of the swivel; the delayed timing is achieved via flow control through an orifice that slows the discharge of oil from the brake piston chamber (1).
- From the state of the motor turning, when the pilot valve returns to neutral, the pilot valve switch signal and the linked timer valve switch pressure SH go to low pressure, and the brake piston chamber (1) and drain port (3) are linked by the spring (2).
- The pressure on the brake piston chamber (1) moves it in the direction to allow it to press against the disc via the force of the spring acting on the brake piston, but as flow is restricted by the timer valve orifice, until a certain amount of time passes, the brake piston does not touch the disc and the parking brake does not engage.

(1) Brake piston chamber
(2) Spring
(3) Drain port

(a) ON
(b) OFF

RY9212148HYM0034US0

[F] Reverse Check Valve

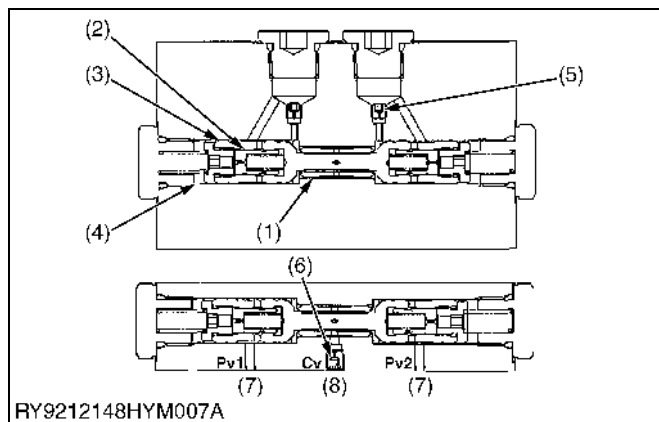

- When the motor is stopped, the reverse check valve prevents the swivel body from turning in reverse when it is stopped due to accumulated pressure by linking the motor's main line and makeup line for a certain period of time.


(1) Sleeve	(5) Orifice A
(2) Flow regulating valve	(6) Orifice B
(3) Check valve	(7) To high-pressure passage
(4) Damper chamber	(8) To makeup

RY9212148HYM0035US0

a) In neutral

- The check valve is held in balance in the middle by the spring. (Equal pressure on ports P1 and P2)

RY9212148HYM0036US0

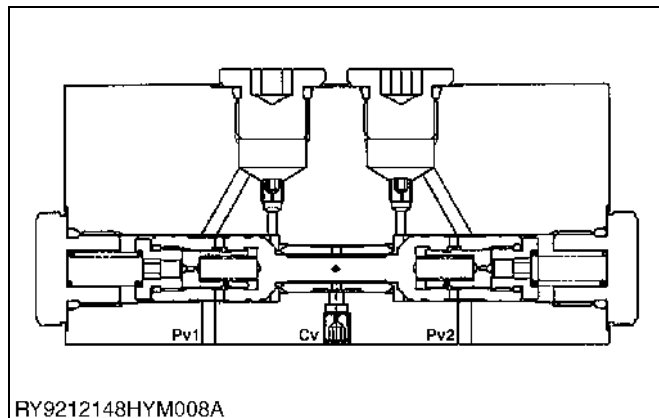


b) Accelerating to uniform RPM

- When swiveled, the check valve is pressed on the high-pressure side, seating the check valve.

(1) Supply pressure	(2) Seat

RY9212148HYM0037US0

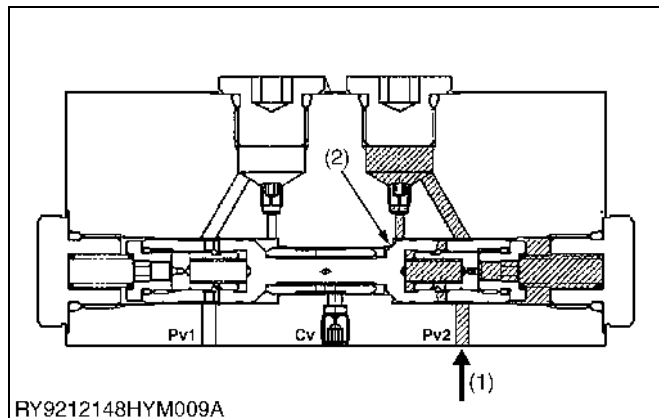



c) When braking

- Brake pressure shifts the check valve full stroke, seating it.

(1) Brake pressure	(2) Seat

RY9212148HYM0038US0

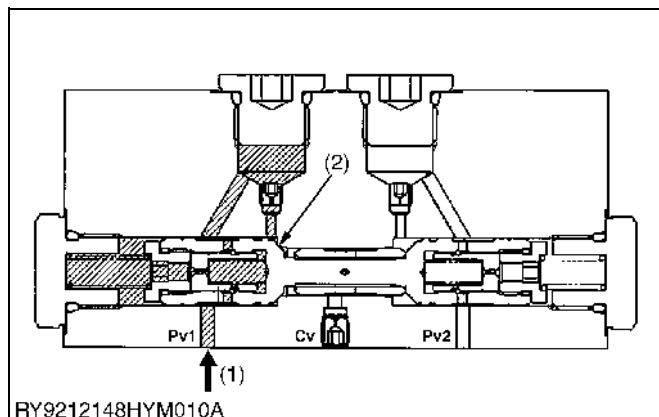

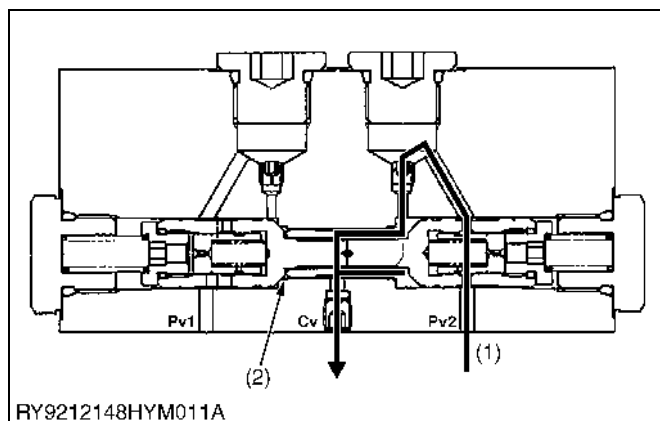
**d)When reversing 1**

- After valve unit braking makes it stop, the motor tries to turn in reverse due to accumulated pressure in its main line.
- This reverse pressure makes the shuttle valve (sleeve) inside the check valve seat on the low-pressure side of the check valve; this forms a passage between the port (Pv2) pressurized by the reverse pressure and the port (Cv) linked by the main line, giving the reverse pressure access to the Cv port.

(1) Reverse pressure

(2) Seat


RY9212148HYM0039US0

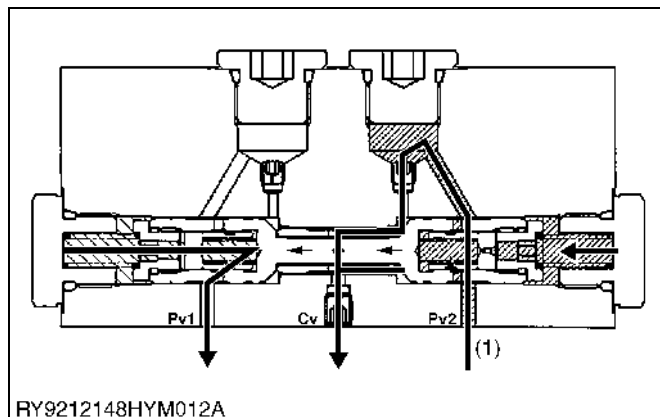**e)When reversing 2**

- The reverse pressure pushes in the opposite direction during check valve braking at the same time.
- The flow regulating valve inside the check valve, which is now on the low-pressure side, is open at a certain flow rate to oil from inside the damper chamber. As a result, the check valve is shifted at a certain speed.
- The check valve eventually seats, so the passage formed between the Pv2 and Cv ports is blocked.

(1) Reverse pressure

RY9212148HYM0040US0

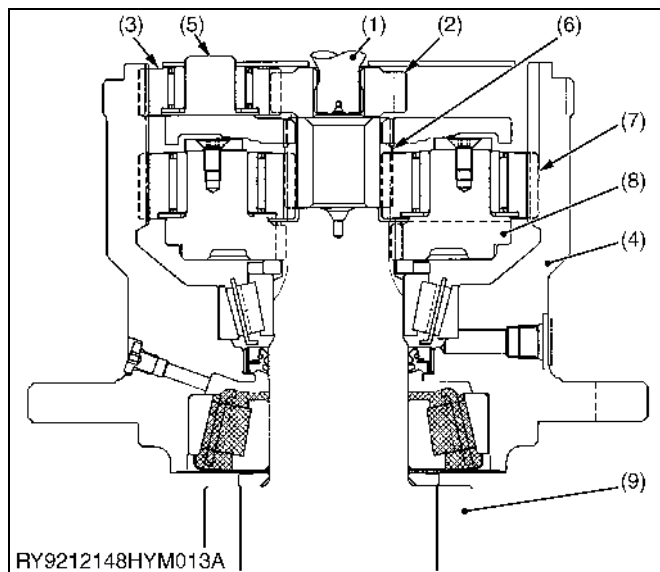[G] Two-Stage Planetary Gear Decelerator

- The motor shaft (1) is coupled to the drive gear (2) and the spline, so the drive force of the motor is transmitted to planetary gear A (3), which meshes with the drive gear (2).
- Planetary gear A (3) meshes with the ring gear of the decelerator housing (4). As a result, when it rotates, it turns around the ring gear.
- Planetary gear A (3) is held to holder (5) by the bearing and the holder (5) transmits the rotary motion of planetary gear A (3) to the sun gear (6), which is coupled to the spline.
- Sun gear (6) meshes with planetary gear B (7) and transmits the rotary motion to planetary gear B (7) in the same way as the first stage.
- As planetary gear B (7) meshes with the ring gear of the housing (4), it rotates around it as it turns.
- Planetary gear B (7) is held to holder (8) by the bearing and the holder (8) transmits the rotary motion of planetary gear B (7) to the pinion shaft, which is coupled to the spline.

(1) Motor shaft

(6) Sun gear

(2) Drive gear

(7) Planetary gear B

(3) Planetary gear A

(8) Holder

(4) Housing


(9) Pinion shaft

(5) Holder

RY9212148HYM0041US0

6. TRAVEL MOTOR

[1] SPECIFICATIONS

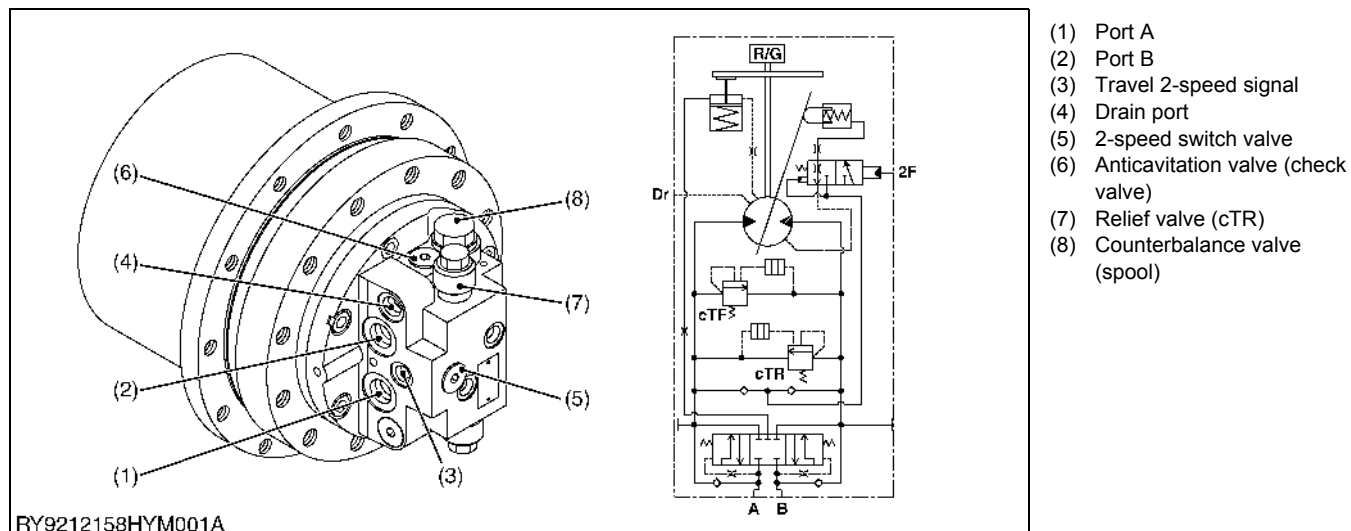


Item			Notes
Maker		Mitsubishi Heavy Industries	
Model		SGM-04D-S-09KT	
Reduction ratio	Reduction ratio	54.8	
	Output torque (1F/2F)	10349 to 5322 N·m 1055.6 to 542.8 kgf·m 7633.4 to 3925.5 lbf·ft	
	RPM (1F/2F)	26.6 / 49.4 rpm	
Hydraulic motor	Displacement (1F/2F)	46.90 / 25.29 cm ³ /rev 2.86 / 1.54 cu.in./rev	
	Flow Rate	72.0 L/min 19.0 U.S.gals	
	Relief valve (cTF, cTR)	29.4 MPa 300 kgf/cm ² 4264 psi	
	2-speed switch pressure	4.0 MPa 40.8 kgf/cm ² 580 psi	
	Auto 2-speed switch pressure	24.0 MPa 245 kgf/cm ² 3481 psi	
Parking brake	Release pressure	0.98 MPa 10.0 kgf/cm ³ 142.1 psi	

RY9212158HYM0026US0

[2] FUNCTION AND STRUCTURE

(1) Operating Principles

[A] Motor

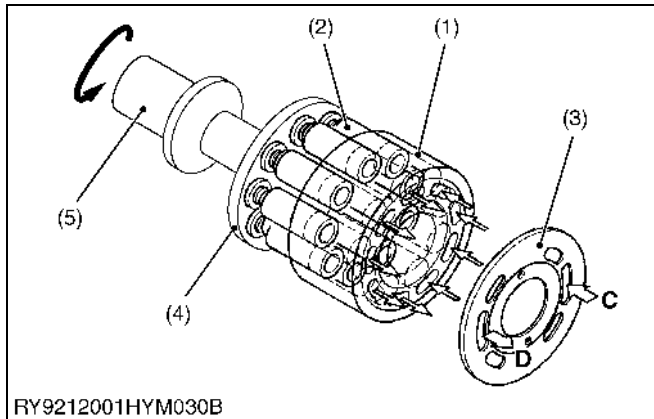


- Nine pistons (2) are built into the cylinder block (1), and the end section of the block is in contact with a valve plate (3), which has two half-moon shaped ports (port C and port D for switching between high and low pressure).
- If high-pressure oil is guided to port C, the pressurized oil passes through port C and presses on the swash-plate (4). The pistons receive the counterforce from the swash-plate, part of which is converted into rotational force, and the block rotates due to the sum total of the rotational forces exerted by pistons that the hydraulic oil entered.
- The cylinder block and the shaft (5) are linked via a spline, so the rotation is transferred to the shaft.

- (1) Cylinder Block
- (2) Piston
- (3) Valve Plate
- (4) Swash Plate
- (5) Shaft

C : Port C
D : Port D

RY9212148HYM0002US0

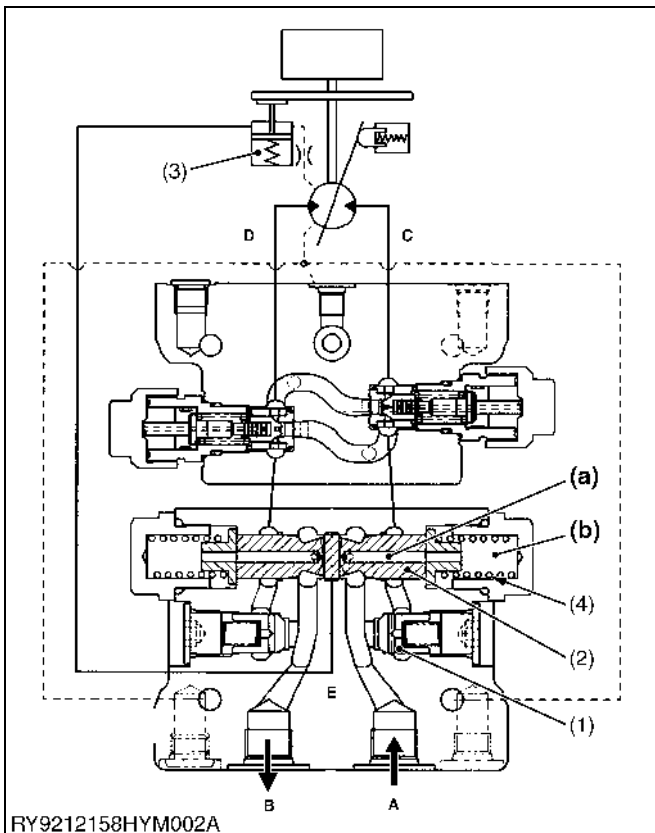[B] Brake Valve**a) During normal operation**

- Oil supplied by the pump enters port A and opens the check valve (1). The oil passes through the check valve and goes from port C into the hydraulic motor, providing rotary force to the motor.
- On the other hand, oil enters port A, passes through passage a from the small hole in the spool (2) and enters chamber b. The hydraulic force from chamber b shifts the spool from the center position to the left side.
- The shifting of the spool makes a link between port D and port B, allowing the oil to return from the control valve to the tank and the motor turns.
- And by shifting the spool, oil enters port E and the oil in port E flows to the parking brake (3) and the 2-speed switch valve.

b) When stopping (brake operation)

- When the oil supplying port A is stopped, the pressure at port A and chamber b drops. As a result of the pressure drop, the spring starts pushing the spool (2) from left to right toward its neutral position. At that time, the oil in chamber b tries to go out toward the port A side via line a inside the spool, but the effect of the orifice in line a creates back pressure, limiting the return speed of the spool.
- Conversely, even though the oil from port A is stopped, the inertial force tries to keep the motor turning, and the oil discharged from the motor tries to return to port B from port D.

Once the spool returns completely to neutral, the return passage from the spool to the motor is completely cut off and the motor stops.

The check valve (1) moves under the slightest of loads, opening a passage between the circuit on the port A side and port C of the motor intake, preventing motor cavitation.




c) Runaway check function (for descending steep slopes)

- Under normal operation, the pressure on the supply side drops when the motor is driven by external forces. When the pressure approaches that required to start running away, the spool (2) starts moving toward the neutral position in the middle.
- The surface area in the passage to port B from port D on the motor outlet side drops in relation to the distance the spool moves, limiting the amount of oil discharged. At the same time, the pressure at port D (back pressure) rises as well, preventing the machine from running away down a hill.

- (1) Check valve
- (2) Spool
- (3) Parking brake
- (4) Spring

- (a) Line a
- (b) Chamber b

RY9212158HYM0031US0

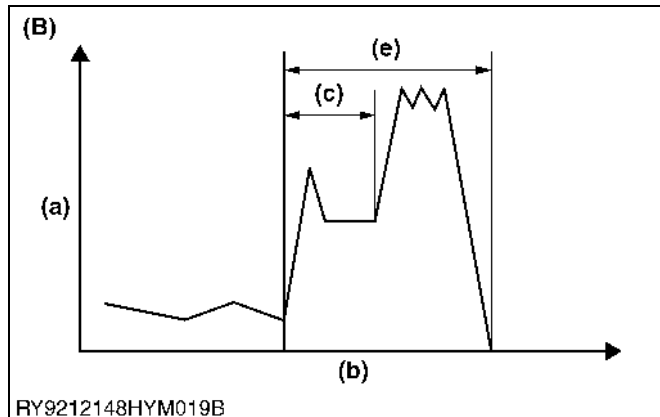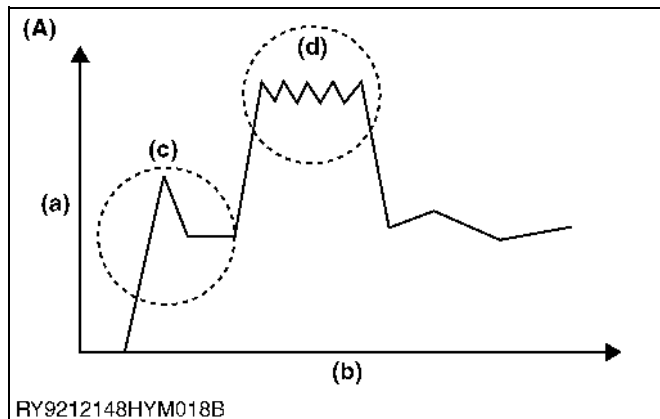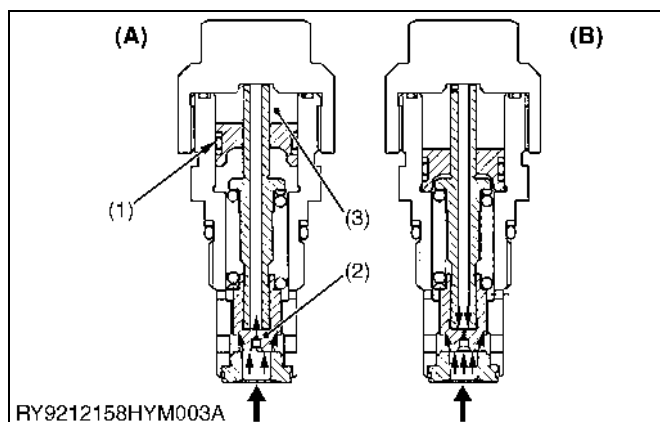[C] Relief Valve**(A) At start up**

- Until the shockless piston (1) reaches the end of its stroke, the oil is released by the setting pressure (low pressure relief) of the poppet (2).
- When the shockless piston (1) reaches the end of its stroke, the pressure in the chamber (3) rises, and the poppet (2) closes and the main relief valve of the control valve opens.

These mechanisms raise the port pressure, applying rotary force to the motor.

(B) When stopping

- When the pressure on the motor outlet side rises, it is guided to the chamber (3) via the internal orifice.
- Until the oil supplied to the chamber (3) shifts the position of the shockless piston and it reaches the end of its stroke, the oil from the port is released at the pressure setting (low-pressure relief) of the shockless piston (1) and is guided to the port.
- Once the shockless piston (1) reaches the end of its stroke, the pressure in the chamber (3) rises, closing the poppet (2) and acting with the total force of the spring and the pressure inside the chamber. (Secondary relief pressure)


The mechanisms above stop the motor.

- (1) Shockless piston
- (2) Poppet
- (3) Chamber

- (a) Pressure
- (b) Time
- (c) Low-pressure relief (primary relief pressure)
- (d) Main relief
- (e) Relief valve A release timing

RY9212158HYM0032US0

[D] Parking Brake

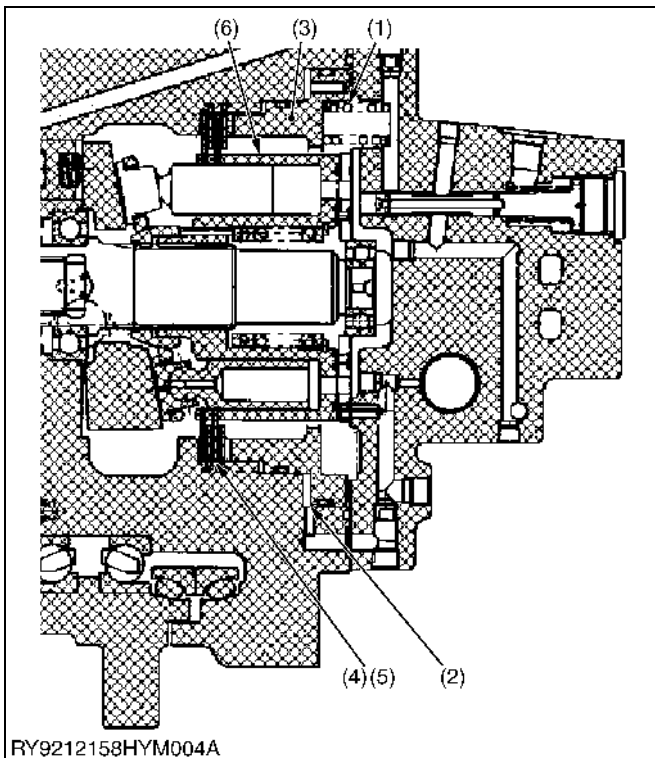


- The parking brake is a negative brake composed of a rotating disc (friction material) (4), an opposing plate (5) a brake piston (3) and a spring (1).
- When the travel motor is stopped (the travel lever in neutral), the parking brake takes effect.
- The cylinder block (6) and the disc are linked via a spline and a friction material is applied to both sides of the disc. The disc is spring-loaded and friction is generated between the flange holder and the brake piston, and this limits the force with which the motor can turn, allowing it to function as a parking brake
- When pressurized oil is guided into the brake piston chamber (2), it generates an amount of thrust that matches the area of the brake piston that receives the pressure and overcomes the spring, thus moving the brake piston. The disk rotates freely between the flange holder and the brake piston, eliminating the parking brake function.

(1) Spring	(4) Disc (friction material)
(2) Brake piston chamber	(5) Opposing plate (plate)
(3) Brake piston	(6) Cylinder block

RY9212158HYM0001US0

[E] Auto-Decelerator Function

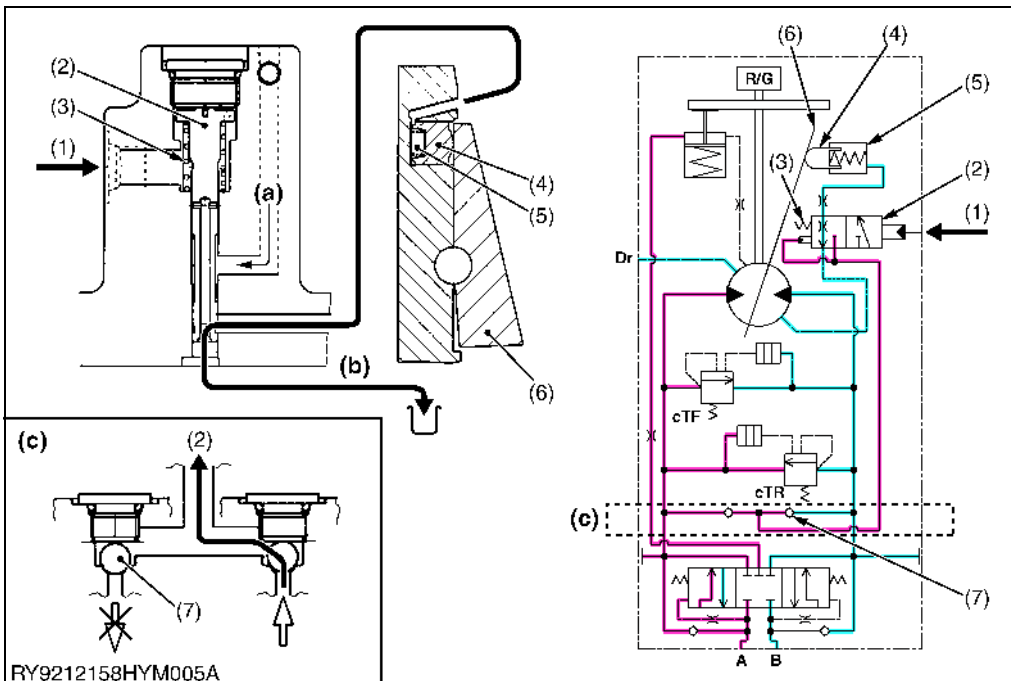

- | |
|---------------------------|
| (1) 2-speed port |
| (2) Ridged spool |
| (3) Spring |
| (4) 2-speed switch piston |
| (5) S chamber |
| (6) Swash-plate |
| (7) Ball |


- (a) Motor load pressure
(b) Drain
(c) High pressure selector valve

- This function gives priority to power for traveling and when the mini-excavator is traveling in the 2nd speed, if the travel load becomes great, such as when climbing or turning, it automatically decelerates to 1st speed (low-speed). When the load is low, it returns to the 2nd speed (high-speed).
- When the speed button on top of the blade lever is pressed, it actuates the solenoid of the unload valve, thus guiding oil from the pilot pump to the 2-speed port (1). When pressure oil flows to the 2-speed port, it moves the ridged spool (2) to the right.
- Conversely, when the load (a) on the motor rises, pressure is guided against the small area of the ridged spool (2), overcoming the pilot pressure and pressing the ridged spool (2) to the left, which releases the oil in chamber S (5) to the drain via the ridged spool.

RY9212158HYM0027US0

7. HYDRAULIC CYLINDER

[1] SPECIFICATIONS

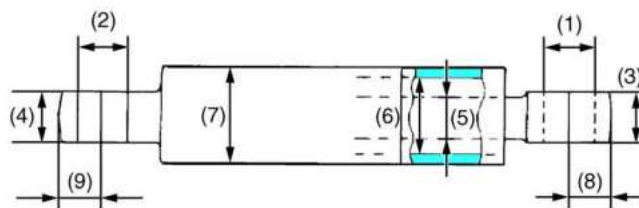

RY9212148HYM022A

	Boom	Arm	Bucket	Blade	Swing	Angle
(1)	82 mm 3.23 in.	70 mm 2.76 in.	70 mm 2.76 in.	82 mm 3.23 in.	82 mm 3.23 in.	60 mm 2.36 in.
(2)	82 mm 3.23 in.	70 mm 2.76 in.	70 mm 2.76 in.	82 mm 3.23 in.	82 mm 3.23 in.	60 mm 2.36 in.
(3)	90 mm 3.54 in.	85 mm 3.35 in.	75 mm 2.95 in.	75 mm 2.95 in.	80 mm 3.15 in.	60 mm 2.36 in.
(4)	90 mm 3.54 in.	85 mm 3.35 in.	75 mm 2.95 in.	75 mm 2.95 in.	80 mm 3.15 in.	60 mm 2.36 in.
(5)	65 mm 2.56 in.	60 mm 2.36 in.	55 mm 2.17 in.	65 mm 2.56 in.	60 mm 2.36 in.	45 mm 1.77 in.
(6)	115 mm 4.53 in.	100 mm 3.94 in.	90 mm 3.54 in.	125 mm 4.92 in.	110 mm 4.33 in.	80 mm 3.15 in.
(7)	134 mm 5.28 in.	118 mm 4.65 in.	112 mm 4.41 in.	146 mm 5.75 in.	131 mm 5.16 in.	96 mm 3.78 in.
(8)	57 mm 2.24 in.	55 mm 2.17 in.	60 mm 2.36 in.	65 mm 2.56 in.	65 mm 2.56 in.	40 mm 1.57 in.
(9)	70 mm 2.76 in.	58 mm 2.28 in.	55 mm 2.17 in.	65 mm 2.56 in.	58 mm 2.28 in.	40 mm 1.57 in.
Max compress ed length	1369 mm 53.90 in.	1378 mm 54.25 in.	1138 mm 44.80 in.	689 mm 27.13 in.	1165 mm 45.87 in.	733 mm 28.86 in.
Stroke	878 mm 34.57 in.	912 mm 35.91 in.	747 mm 29.41 in.	250 mm 9.84 in.	715 mm 28.15 in.	455 mm 17.91 in.

RY9212158HYM0002US0

[2] FUNCTION AND STRUCTURE


(1) Operating Principles

- Cushion Function

The device is equipped with a cushion to prevent spilling of earth or the like when it reaches the end of the cylinder.

RY9212148HYM0050US0

Cushion function on the lift end of the boom

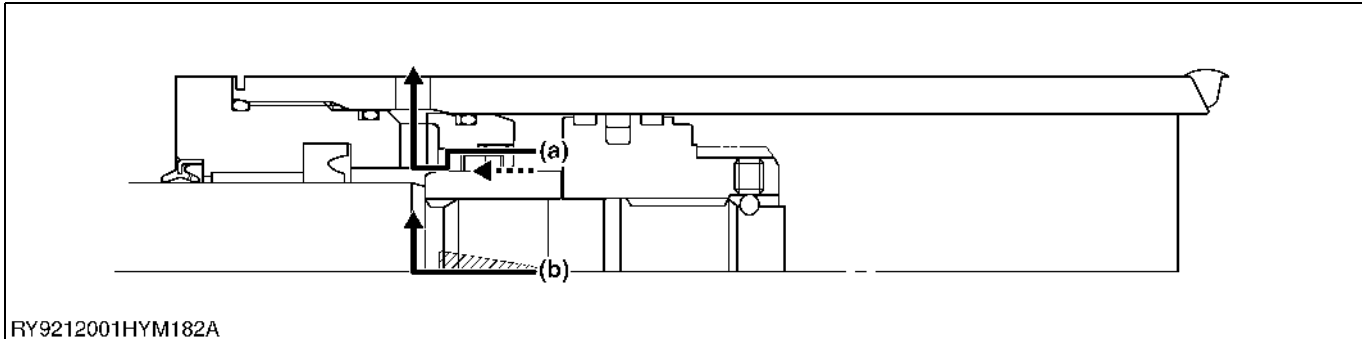


(a) Flow Via a Slit (b) Flow from Indentation

The discharge pressurized oil is automatically reduced on the lift end of the boom, slowing the operation of the cylinder and cushioning the shock on the lift end of the boom. An indentation and a split in the cushion bearing are provided as a means to reduce the pressure.

RY9212148HYM0027US0


Cushion function on the rake end of the arm

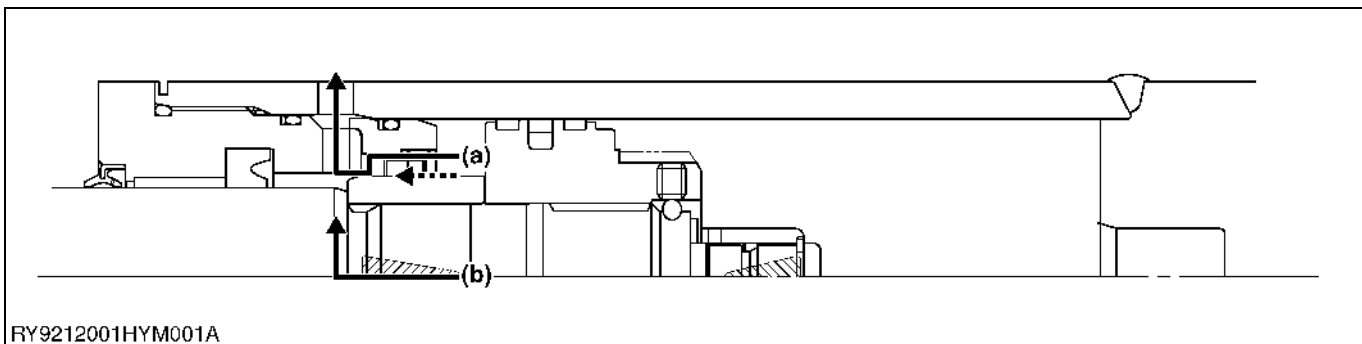

(a) Flow Via a Slit (b) Flow from Indentation

The discharge pressurized oil is automatically reduced on the rake end of the arm, slowing the operation of the cylinder and cushioning the shock on the rake end of the arm. An indentation and a split in the cushion bearing are provided as a means to reduce the pressure.

RY9212148HYM0028US0

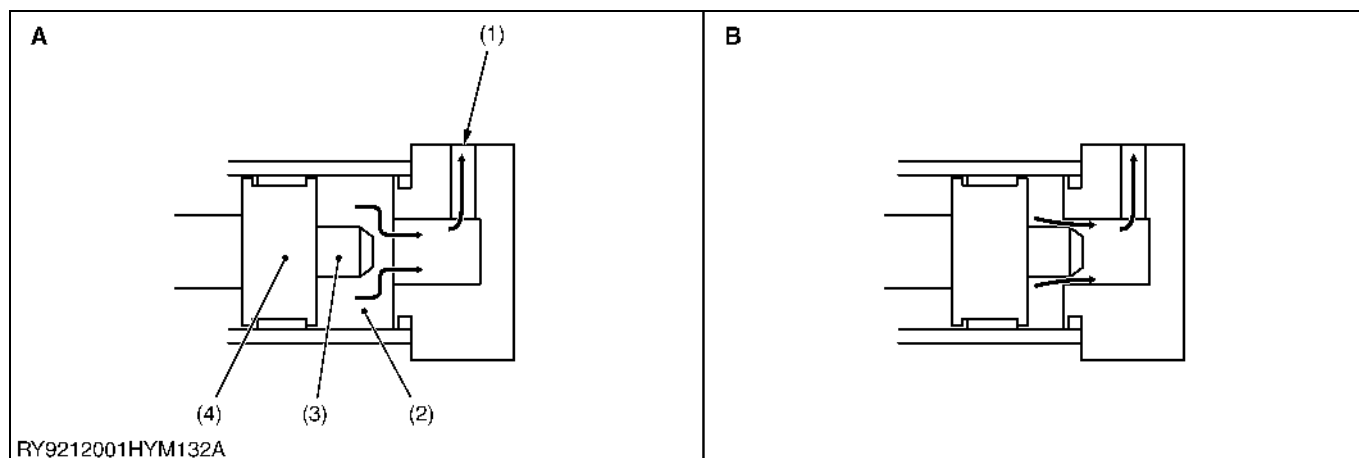Cushion function on dumping end of arm

(1) Port

(2) Cushion Chamber

(3) Cushion Plunger

(4) Piston


A : Before Cushion Enters**B : After Cushion Enters**

RY9212148HYM0029US0

8. PILOT VALVE

[1] CONTROL PILOT VALVES

(1) Specifications

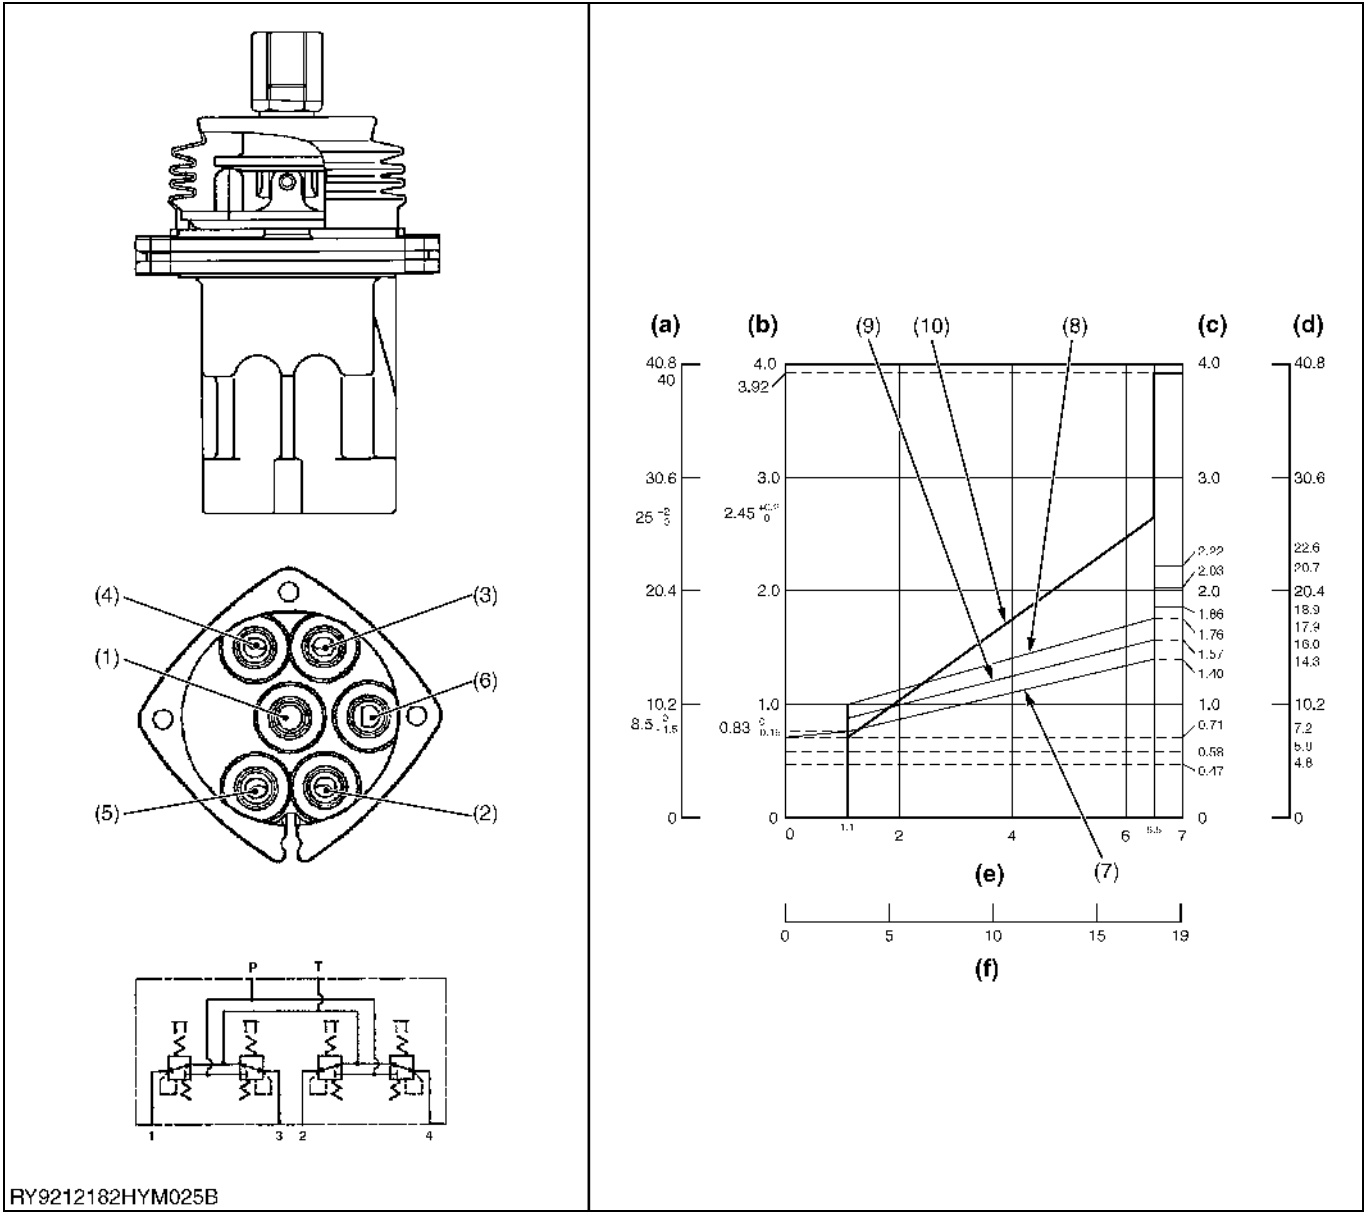

- (1) Port P

(2) Port 1 (Left)

(3) Port 2 (Front)

(4) Port 3 (Right)

(5) Port 4 (Rear)

(6) Port T
- (7) Independent operation torque (ports 1, 3)

(8) Independent operation torque (port 2)

(9) Independent operation torque (port 4)

(10) Secondary pressure
- (a) Secondary pressure (kgf/cm²)

(b) Secondary pressure (MPa)

(c) Operating torque (N·m)

(d) Operating torque (kgf·cm)
- (e) Pushrod stroke (mm)

(f) Operating angle (deg)

Maker		Kawasaki Heavy Industries, Ltd.
Model	Left	PV48M2199
	Right	PV48M2198

RY9212148HYM0004US0


(2) Function and Structure

[A] Function

The pilot valve is the valve that controls the direction and volume of the stroke of the control valve, and lowers the primary pressure from the unload valve to a secondary pressure only as much as is necessary to move the control valve spool.

RY9212001HYM0001US0

[B] Operation

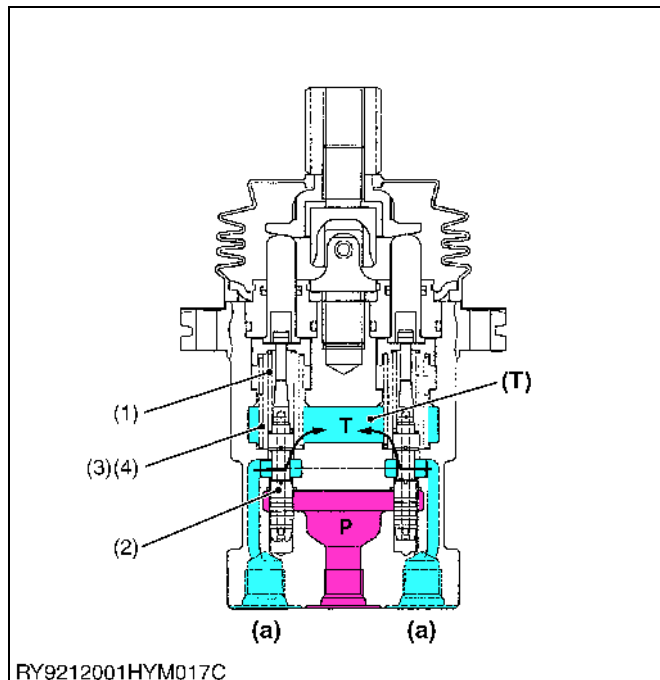


1. When the control lever is in neutral

The force of the secondary pressure spring (1) does not press on the spool (2). As a result, the spool is held in a neutral position by the return spring (3) or (4). At such time, the output port (control valve port) (a) and port T (T) are connected.

(1) Secondary Pressure Spring	(a) Output Port
(2) Spool	(T) Port T
(3) Return Spring	
(4) Return Spring	

RY9212148HYM0005US0

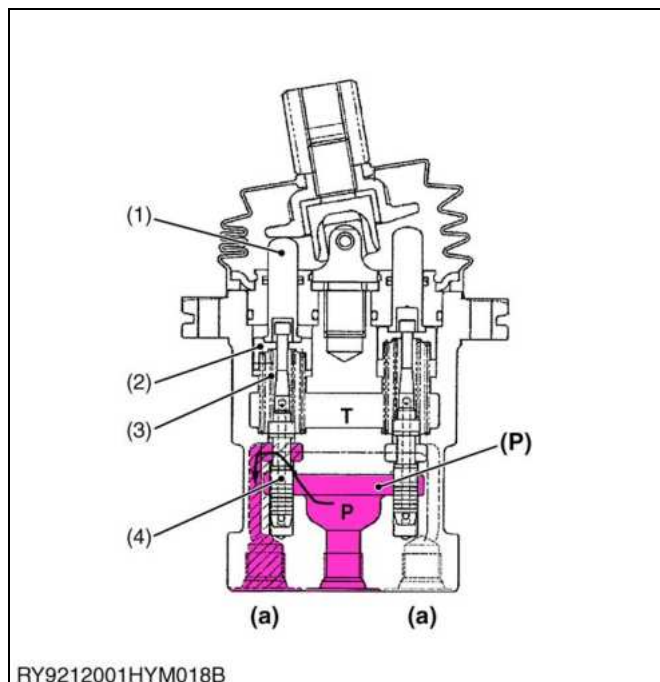

2. When the control lever has been actuated

When the control lever is actuated, the pushrod (1) presses down on the spool (4) via the spring seat (2) and the secondary pressure spring (3). In doing so, port P (P) and the output port (a) are connected, so the oil from the pilot pump flows through the output port to the control valve.


The pressure at the output port rises until it is equivalent to the force of the secondary pressure spring, thus balancing the hydraulic pressure on the spool with the tension of the secondary pressure spring and maintaining a fixed output port pressure.

(1) Pushrod	(a) Output Port
(2) Spring Seat	(P) Port P
(3) Secondary Pressure Spring	
(4) Spool	

RY9212148HYM0006US0

[2] TRAVEL PILOT VALVE

(1) Specifications

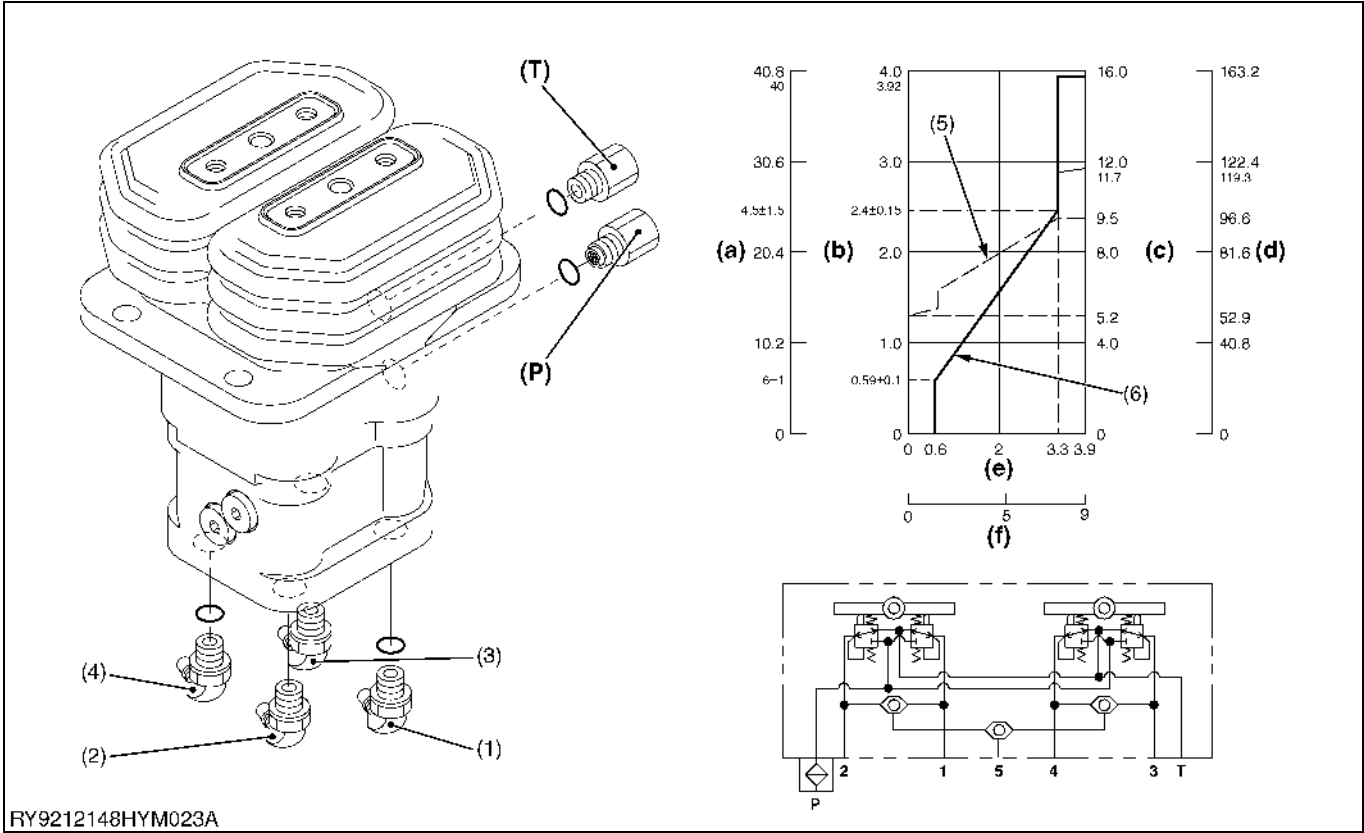

- (1) Port 1 (L Bwd)

(2) Port 2 (L Fwd)

(3) Port 3 (R Bwd)

(4) Port 4 (R Fwd)
- (5) Operating torque

(6) Secondary pressure

(P) Port P

(T) Port T
- (a) Secondary pressure (kgf/cm²)

(b) Secondary pressure (MPa)

(c) Operating torque (N·m)

(d) Operating torque (kgf·cm)
- (e) Pushrod stroke (mm)

(f) Operating angle (deg)

Maker	Kawasaki Heavy Industries, Ltd.
Model	PVD8PC6004A

RY9212148HYM0051US0


(2) Function and Structure

[A] Function

The pilot valve is the valve that controls the direction and volume of the stroke of the control valve, and lowers the primary pressure from the unload valve to a secondary pressure only as much as is necessary to move the control valve spool.

RY9212001HYM0001US0

[B] Operation

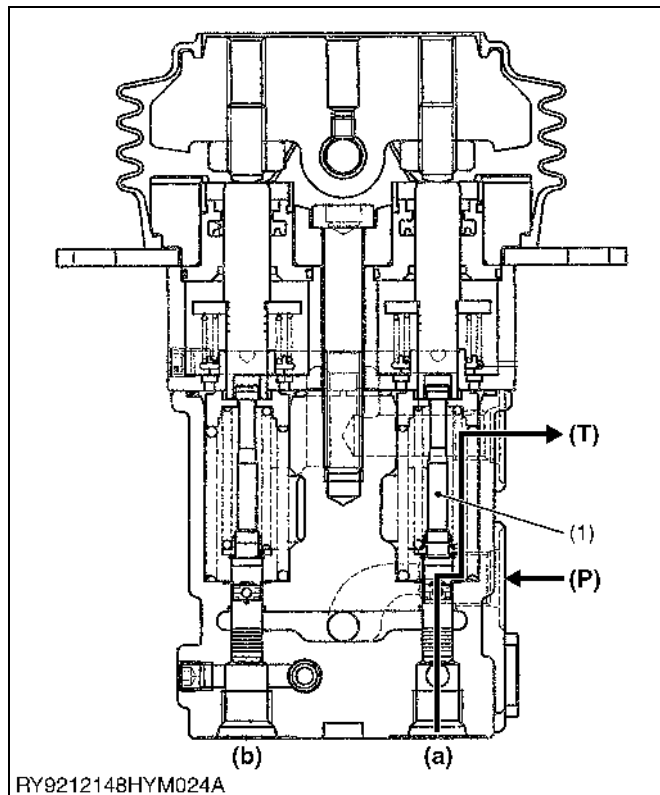


1. When the control lever is in neutral

The oil from the pilot pump that flows into Port P (P) via the unload valve is cut off from port T (T) and port 1 (a) by the spool (1).

And port 1 is connected to port T through the inside of the spool, so port 1 is at the tank pressure.

(1) Spool	(a) Port 1
	(b) Port 2
	(P) Port P
	(T) Port T

RY9212148HYM0007US0

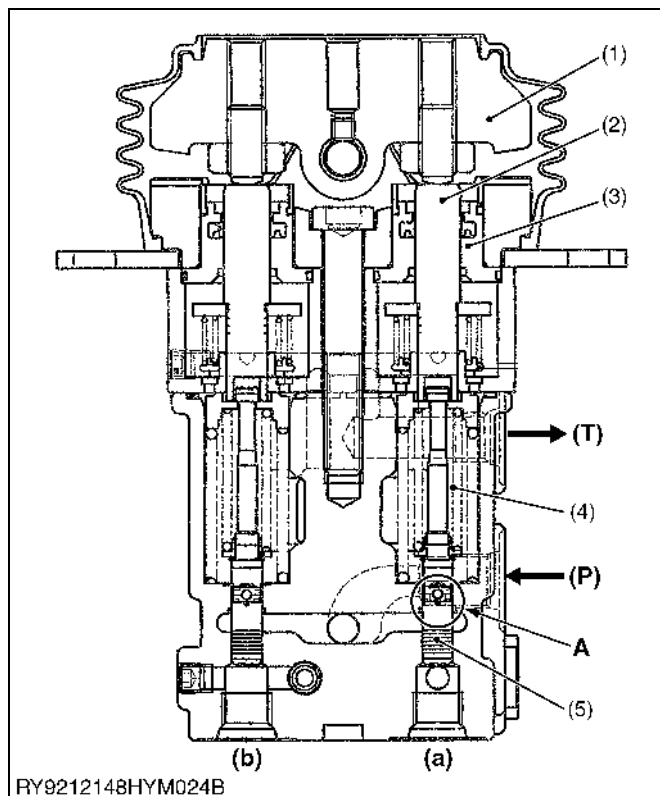

2. When the control lever has been actuated (when governing pressure)

When the cam (1) operating angle exceeds 1.9°, the pushrod (2) presses down on the spool (5) via the spring seat (3) and the secondary pressure spring (4).

At part A, port P (P) and port 1 (a) are connected, while port 1 and port T (T) at part A are cut off, so the oil flows from port P to port 1.

When the pressure at port 1 gets high enough, it counters the secondary pressure spring and presses the spool up, thus cutting off port P and port 1 at part A and allowing port 1 and port T to be connected and lowering the pressure at port 1. The repetition of this process maintains a constant pressure equal to the secondary pressure spring load.

If the cam is depressed further, the position of the spool does not change and the pushrod and spring seat move downwards, compressing the secondary pressure spring and putting a large load on the spring; this generates pressure equivalent to this load at port 1.

(1) Cam	(a) Port 1
(2) Pushrod	(b) Port 2
(3) Spring seat	(P) Port P
(4) Secondary pressure spring	(T) Port T
(5) Spool	A : Part A

RY9212148HYM0008US0


3. When the control lever has been actuated (when shorted)

Once the pushrod on cam (1) exceeds a stroke of 3.3mm (0.13 in.), the pushrod (2) touches the spool (3) at point **B** and the spool (3) stops providing control by balancing the pressure. As a result, part **A** is left open and the pressures of port P and port 1 equalize.

- (1) Cam
- (2) Pushrod
- (3) Spool

- (a) Port 1
- (b) Port 2
- (P) Port P
- (T) Port T


RY9212148HYM0009US0

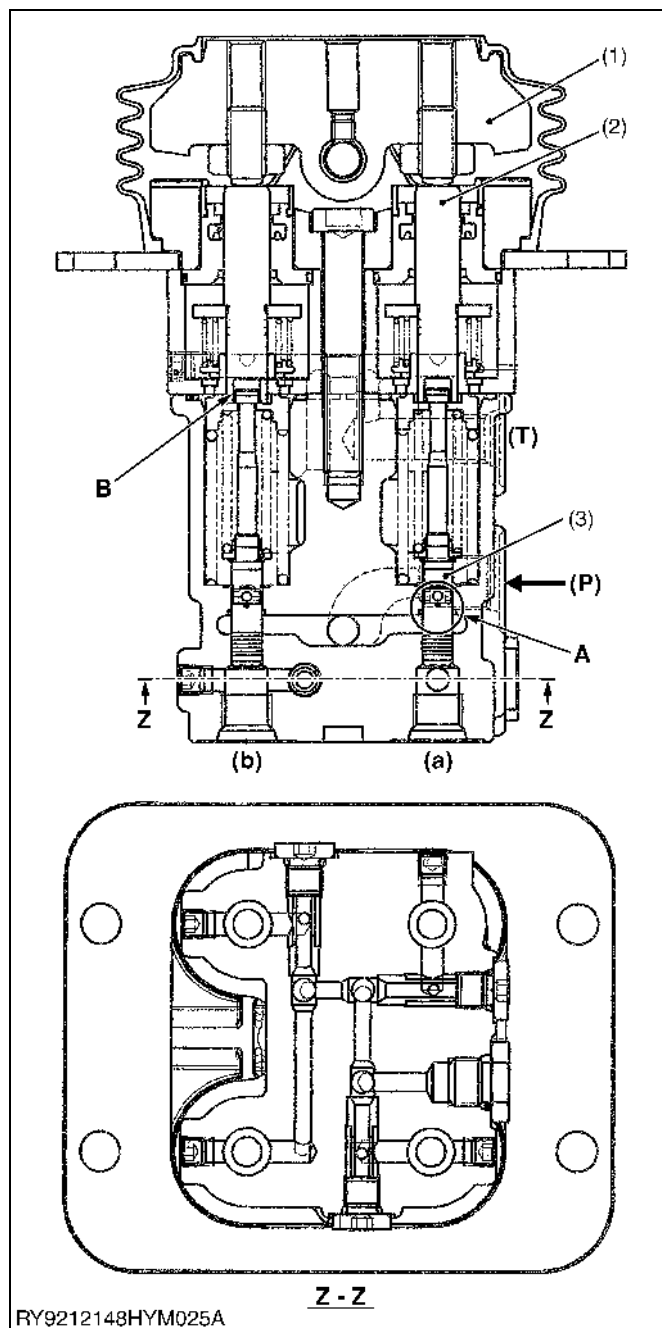

RY9212148HYM025A

[3] SWING PILOT VALVE

(1) Specifications

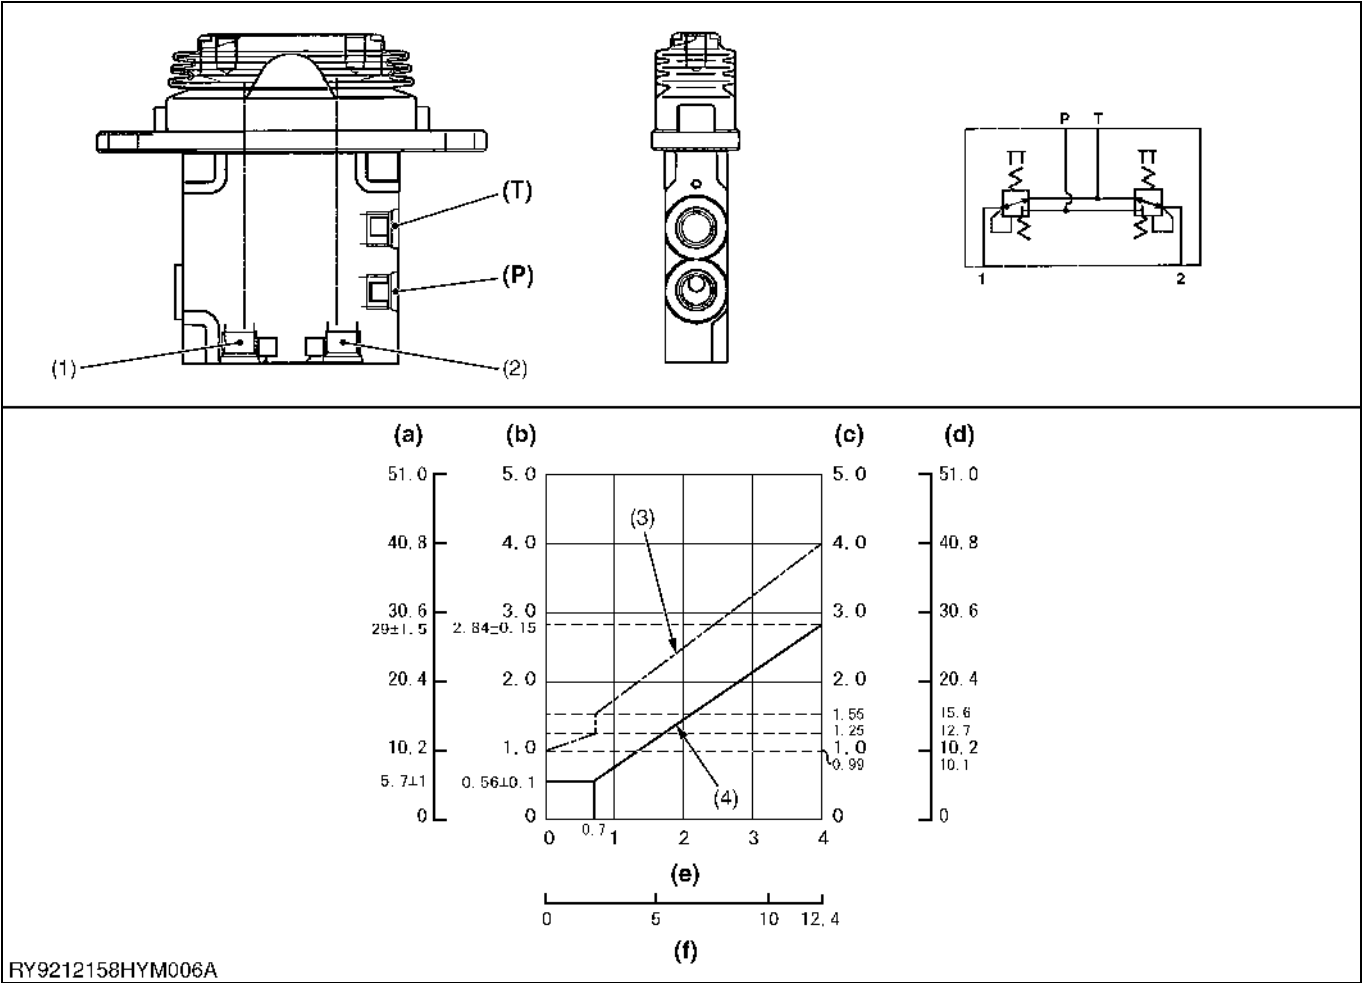

- (1) Port 1

(2) Port 2

(3) Operating torque

(4) Secondary pressure
- (P) Port P

(T) Port T
- (a) Secondary pressure (kgf/cm²)

(b) Secondary pressure (MPa)

(c) Operating torque (N·m)

(d) Operating torque (kgf·cm)
- (e) Pushrod stroke (mm)

(f) Pedal operating angle (deg)

• For Swing

Maker	Kawasaki Heavy Industries, Ltd.
Model	PV6P1005A

RY9212158HYM0003US0


(2) Function and Structure

[A] Function

The pilot valve is the valve that controls the direction and volume of the stroke of the control valve, and lowers the primary pressure from the unload valve to a secondary pressure only as much as is necessary to move the control valve spool.

RY9212001HYM0001US0

[B] Operation

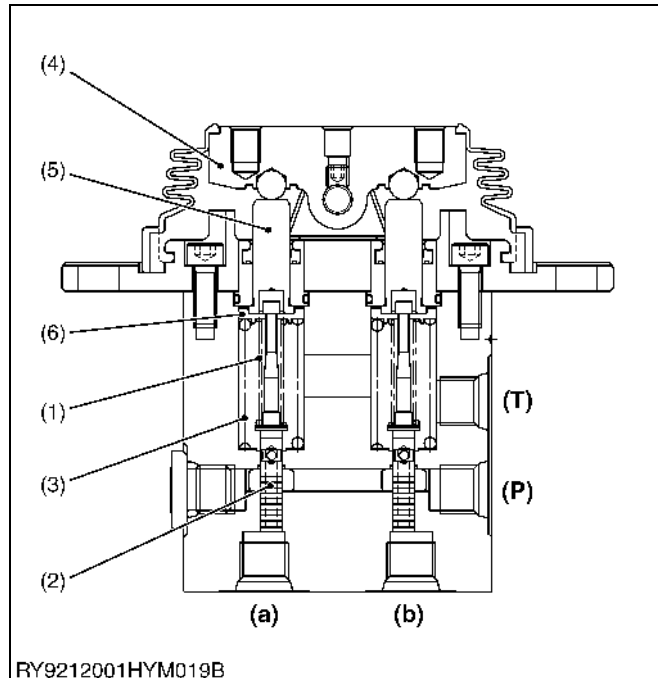

1. When the control lever or pedal is in neutral

The force of the secondary pressure spring (1) does not press on the spool (2). As a result, the spool is held in a neutral position by the return spring (3). At such time, the output ports (ports to the control valve port) port 1 **(a)** and port 2 **(b)** and port T **(T)** are connected.

2. When a control lever or pedal has been actuated

The cam (4) is turned counterclockwise, the port 1 side pushrod (5) presses down on the spool (2) via the spring seat (6) and the secondary pressure spring (1). When doing so, port P **(P)** and port 1 **(a)** are connected, so the oil from the pilot pump flows through port 1 to the control valve.


The pressure at port 1 rises until it is equivalent to the force of the secondary pressure spring, thus balancing the hydraulic pressure on the spool with the tension of the secondary pressure spring and maintaining a fixed port 1 pressure.

(1) Secondary pressure spring	(a) Port 1
(2) Spool	(b) Port 2
(3) Return spring	(P) Port P
(4) Cam	(T) Port T
(5) Pushrod	
(6) Spring seat	

RY9212148HYM0011US0

[4] BLADE PILOT VALVES

(1) Specifications

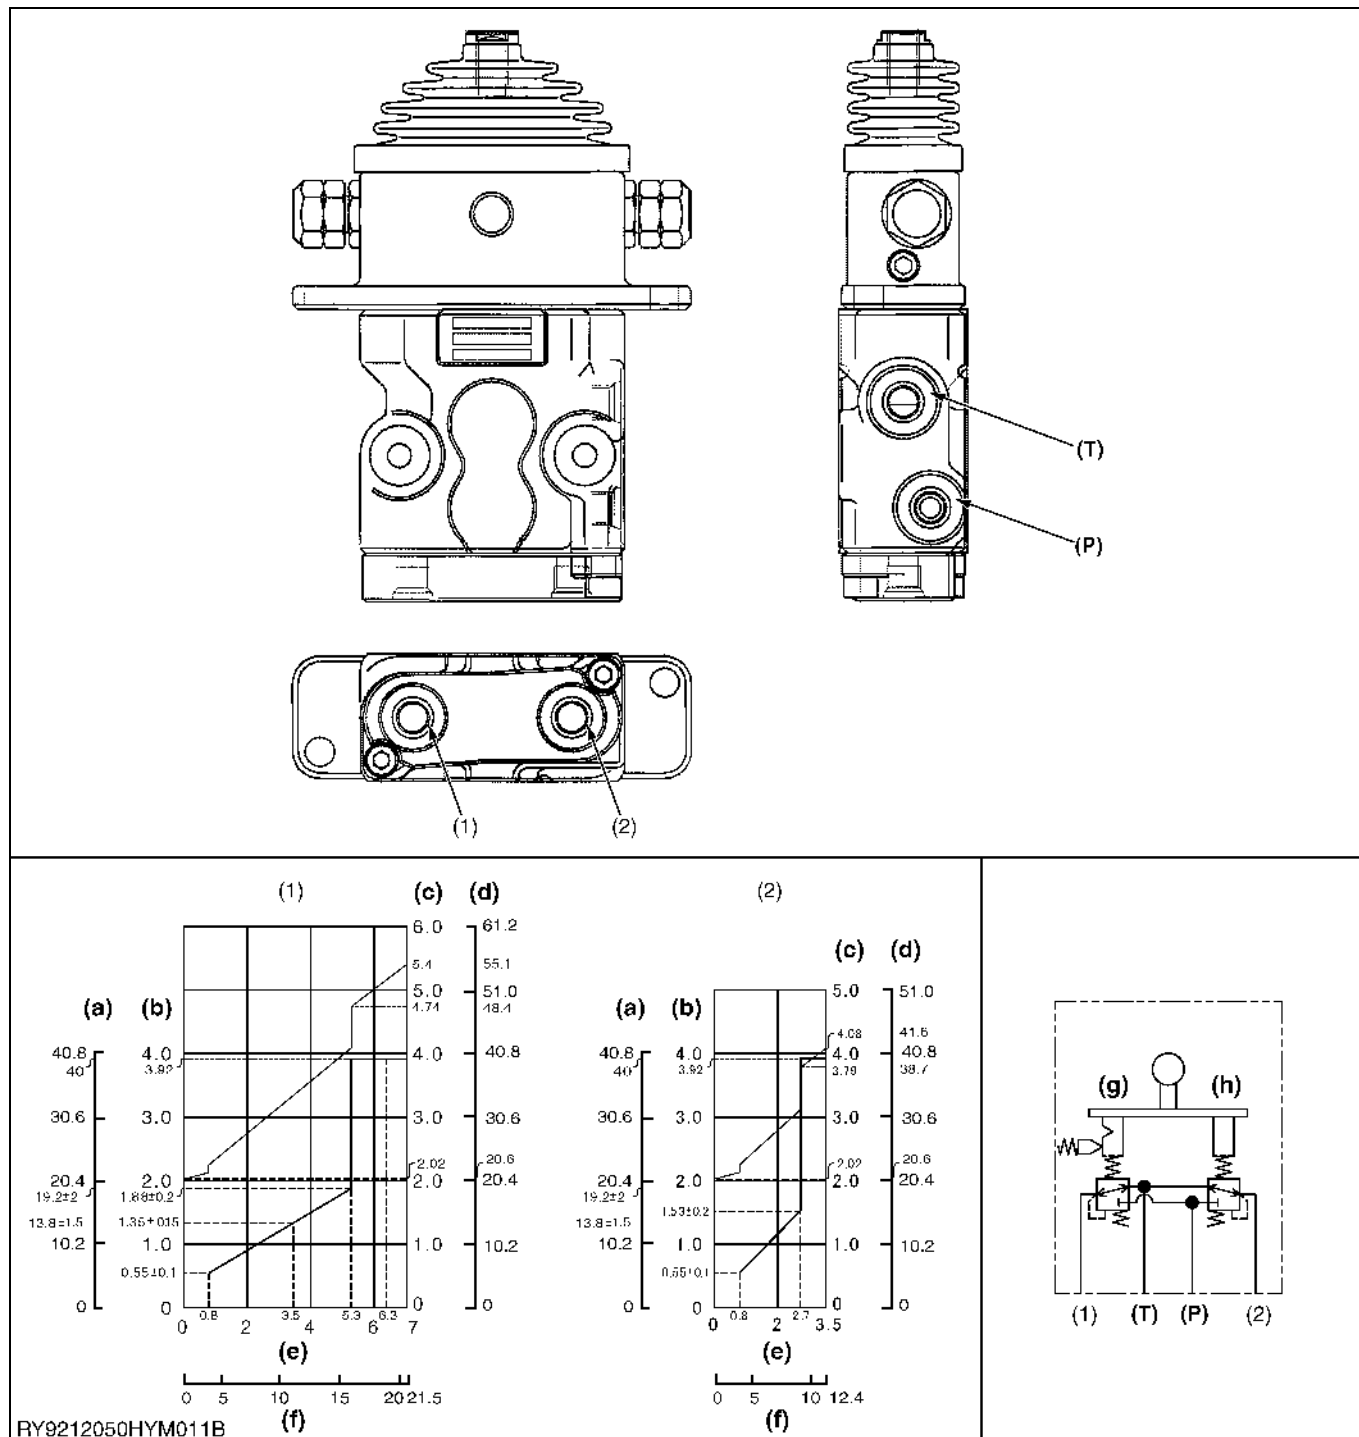

(1) Port 1
(2) Port 2

(P) Port P
(T) Port T

(a) Secondary Pressure
(kgf/cm²)
(b) Secondary Pressure (MPa)
(c) Operating Torque (N·m)
(d) Operating Torque (kgf·m)

(e) Pushrod stroke (mm)
(f) Operating Angle (deg)
(g) Down
(h) Up

Maker	Kawasaki Heavy Industries, Ltd.
Model	TH40P1048B

RY9212158HYM0004US0


(2) Function and Structure

[A] Function

The pilot valve is the valve that controls the direction and volume of the stroke of the control valve, and lowers the primary pressure from the unload valve to a secondary pressure only as much as is necessary to move the control valve spool.

RY9212001HYM0001US0

[B] Operation

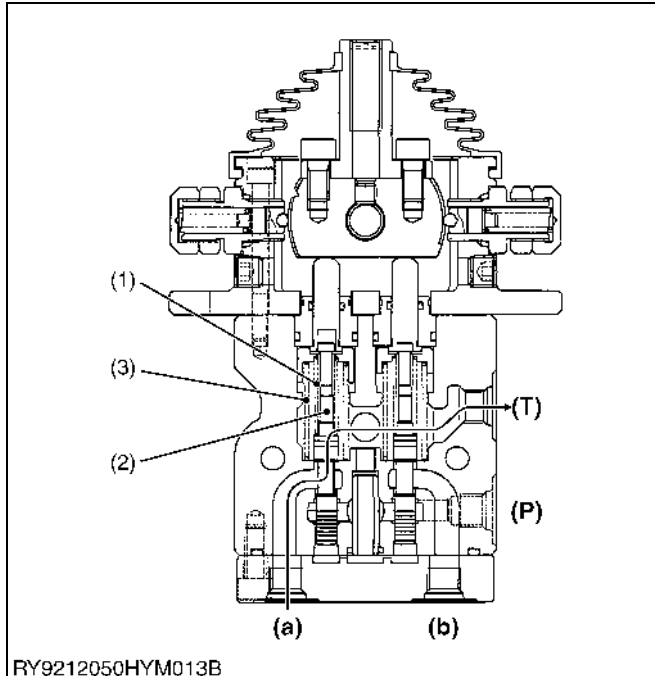


1. When the control lever is in neutral

The force of the secondary pressure spring (1) does not press on the spool (2). Consequently, spool (2) is pushed up by the return spring (3), and port 1 (a) and port T (T) are connected.

(1) Secondary Pressure Spring	(a) Port 1
(2) Spool	(b) Port 2
(3) Return Spring	(P) Port P
	(T) Port T

RY9212158HYM0005US0

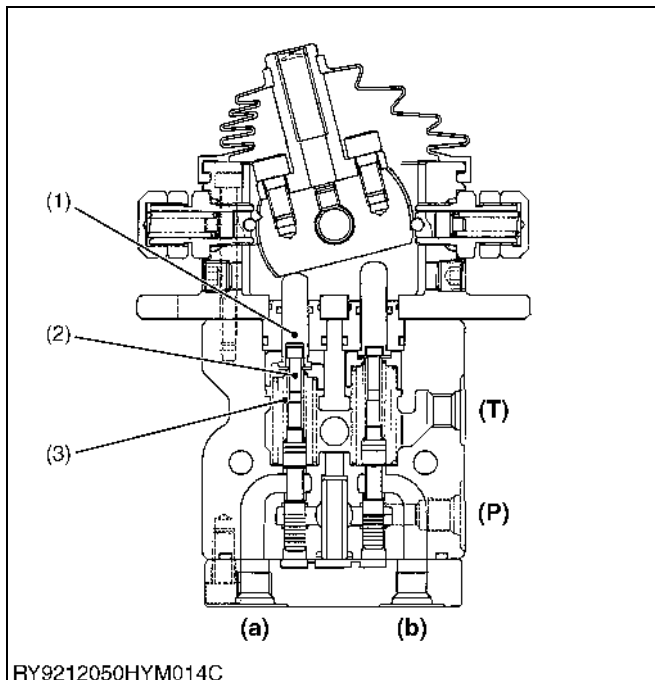


2. When the control lever has been actuated

When the control lever is tilted and pushrod (1) goes through its stroke, spool (2) moves downwards, port P (P) and port 1 (a) are connected, and oil from the pilot pump flows via port 1 to the control valve.

The pressure at the port rises until it is equivalent to the force of the secondary pressure spring (3), thus balancing the hydraulic pressure on the spool with the tension of the secondary pressure spring and maintaining a fixed port pressure.

(1) Pushrod	(a) Port 1
(2) Spool	(b) Port 2
(3) Secondary Pressure Spring	(P) Port P
	(T) Port T

RY9212158HYM0006US0

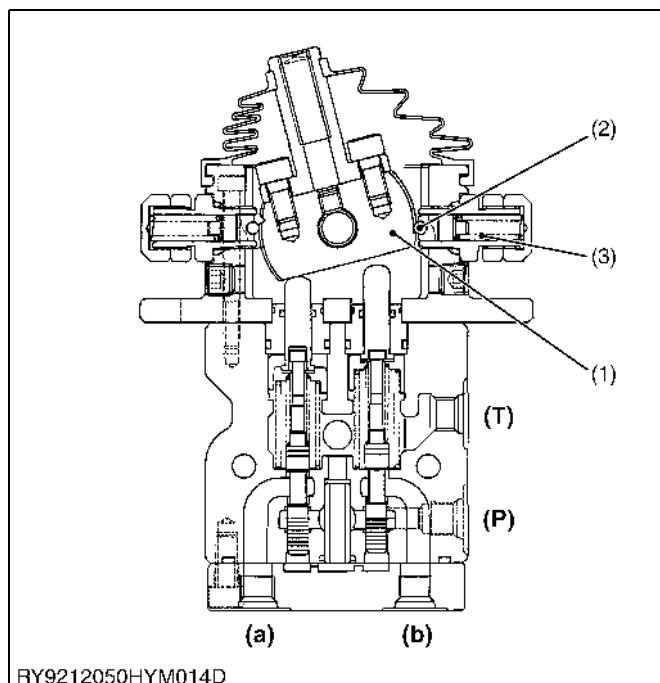


3. Pre-detent operation

Pre-detent is activated at a specified operating angle. When steel ball (2) in the stepped section of the disc (1) passes the step, operating torque increases owing to compression of the spring (3). Due to this change in operating torque, the operator knows he is close to the actuation angle of detent operation at a predetermined actuation angle.

(1) Disc	(a) Port 1
(2) Steel Ball	(b) Port 2
(3) Spring	(P) Port P
	(T) Port T

RY9212158HYM0007US0

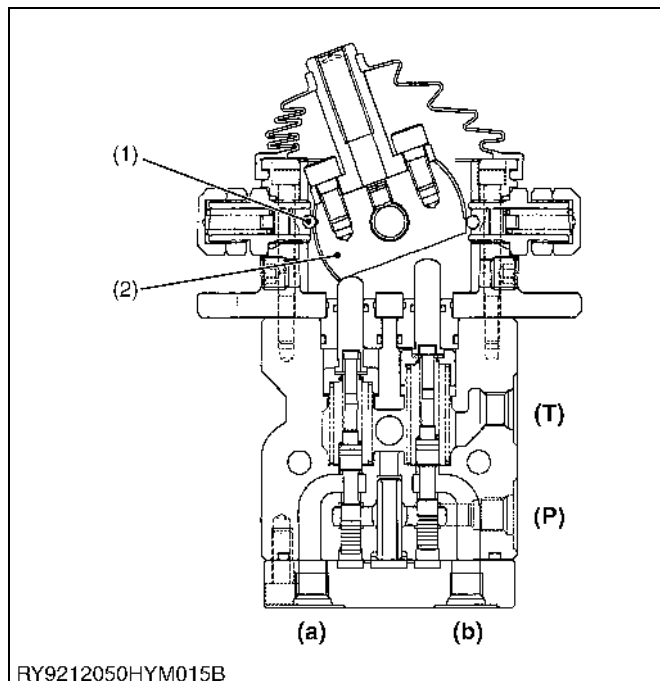

4. When detent is activated

At the detent operation activation angle before the end of stroke, the steel ball (1) slides into the V-shaped groove of the disc (2), which is detent operation status.

If the operator releases the lever during detent operation, the lever control angle is maintained and a fixed secondary pressure continues to be applied.

(1) Steel Ball	(a) Port 1
(2) Disc	(b) Port 2
	(P) Port P
	(T) Port T

RY9212158HYM0008US0


5. When detent is released

Detent can be released manually by applying a force greater than the release torque to the operating lever in the direction of neutral.

RY9212050HYM0022US0

9. SHOCKLESS VALVES

[1] SPECIFICATIONS

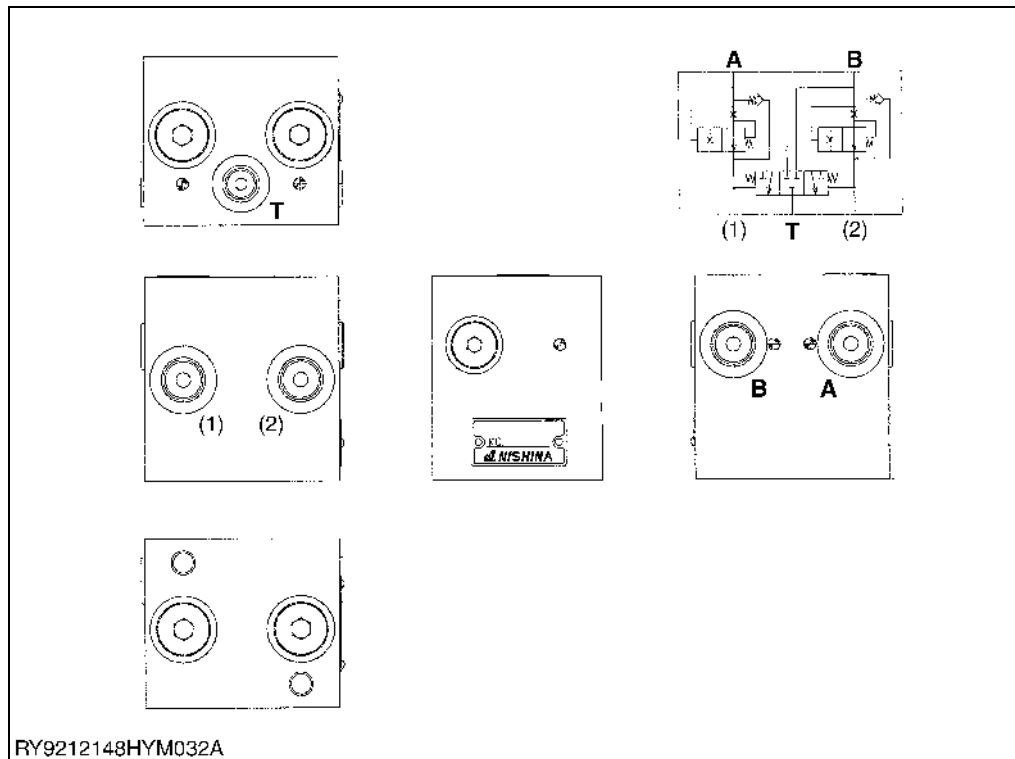

- (1) Port 1 (Pilot valve side, boom up)
 (2) Port 2 (Pilot valve side, boom down)

A : Port A (control valve side, boom up)

B : Port B (control valve side, boom down)


T: Port T

RY9212148HYM0052US0

[2] FUNCTION AND STRUCTURE

The boom circuit is equipped with a shockless valve, which operates when stopping boom movement up or down.


RY9212148HYM0053US0

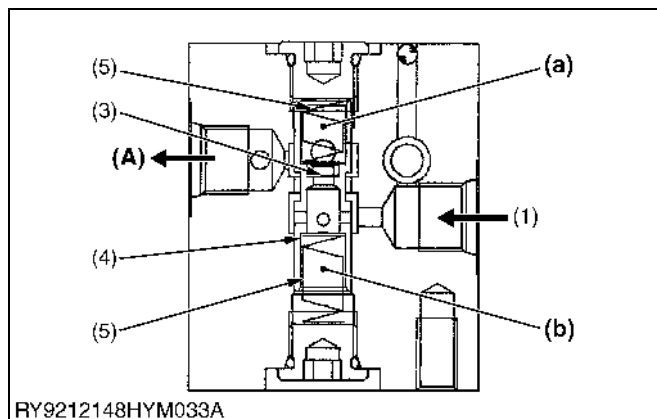

RY9212148HYM0033A

a) During boom up operation

- When pilot pressure enters port 1 (1), the oil passes through the orifice (3) and is discharged to port A (**A**). At such time the resistance to passing through the orifice (3) results in the pressure of chamber a (**a**) being less than that of chamber b (**b**), so the plunger (4) moves upwards.
- The movement of the plunger (4) causes the entire flow of the oil that connects port 1 and port A to be discharged to port A.
- Conversely, normally the spool (6) is held in the neutral position by the left/right spring (7), and the oil returning from port B is cut off at point X (**x**) from port T.
- When the pilot oil from port 1 (1) generates enough pressure to overcome the spring (7), it moves the spool, connecting port B and port T and the oil returning from port B returns directly to the tank.

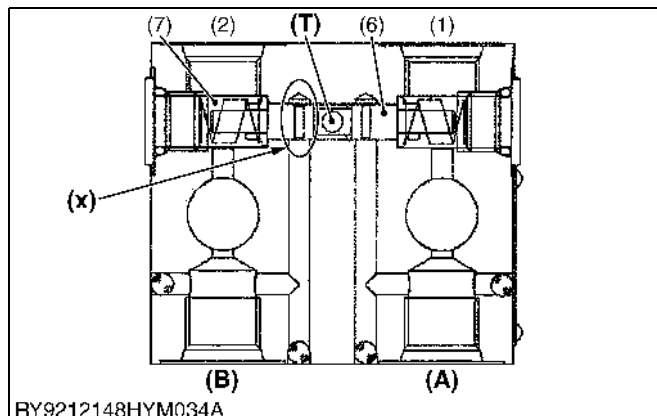



RY9212148HYM0034A

- (1) Port 1
 (2) Port 2
 (3) Orifice
 (4) Plunger
 (5) Spring
 (6) Spool
 (7) Spring

- (A) Port A**
(B) Port B
(T) Port T

- (a) Chamber a**
(b) Chamber b
(x) Chamber X

RY9212148HYM0054US0

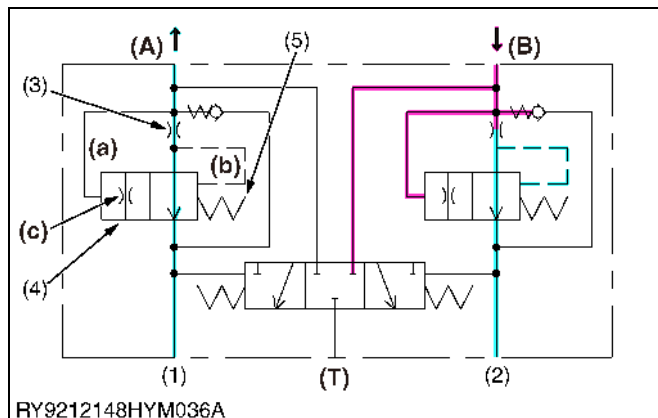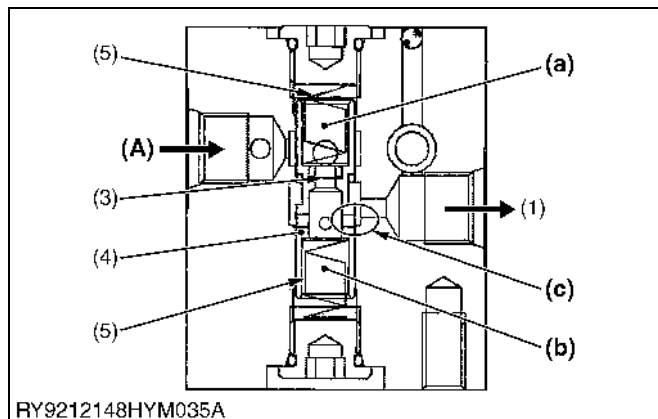

b) During boom down operation (return circuit operation)

- The return oil from the control valve enters port A **(A)**, passes through the orifice (3) and is discharged to port 1 **(1)**. When it does, the resistance to passing through the orifice (3) results in the pressure of chamber a **(a)** being greater than that of chamber b **(b)**, so the plunger (4) moves downwards.
- The movement of the plunger (4) closes orifice c **(c)**, raising the pressure in chamber b **(b)**.
- Once the pressures of chamber a **(a)** and chamber b **(b)** equalize, the plunger (4) is returned toward neutral by the spring (5). Repetition of this dynamic keeps the plunger (4) at a balanced position. As a result, the pressure differential across the orifice (3) is fixed, allowing the flow of oil through the orifice (3) to be steady without maintaining the pilot pressure.
- When the pilot valve is returned to its neutral position, no oil comes from the pilot valve and the control valve tries to return to the neutral position.
- Return oil from port B flows to port 1 via the orifice (3). The speed of the main spool of the control valve is limited by passing through the orifice (3). (Shockless function)

- (1) Port 1
- (2) Port 2
- (3) Orifice
- (4) Plunger
- (5) Spring

- (A) Port A**
- (B) Port B**
- (T) Port T**


- (a) Chamber a**
- (b) Chamber b**
- (c) Orifice c**

RY9212148HYM0055US0

10. SOLENOID VALVE

[1] UNLOAD VALVE

(1) Specifications

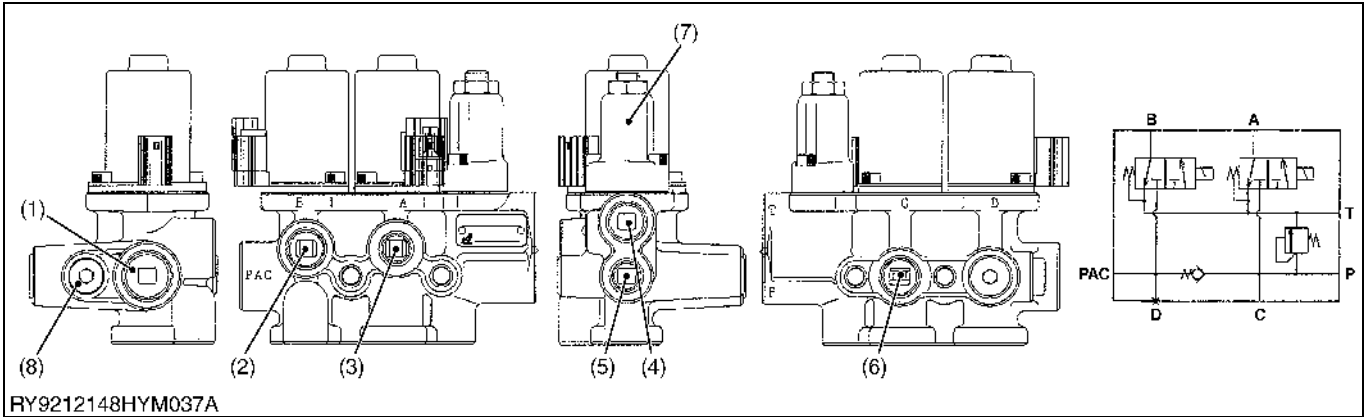

- (1) PAC Port (Accumulator)

(2) Port A (2-Speed Travel Switch)
- (3) Port B (Pilot Operation, Swivel Parking Brake)

(4) Drain Port (to Hydraulic Oil Tank)
- (5) Port P (to Control Valve)

(6) Port C (from Pilot Pump)
- (7) Pilot Primary Relief Valve (aPP)

(8) Check Valve

Maker	Nishina Industrial	Notes
Rated Voltage	12 V	
Relief Valve Pressure Setting (aPP)	3.92 + 0.29 MPa 40.0 + 3.0 kgf/cm ² 570 + 42 psi	at Temp. 50 °C (144 °F), 14.7 L/min (897 cu.in./min, 3.9 USGPM)
Leak volume port P → port T	130 ml/min 7.9 cu.in./min 0.03 USGPM	at 2.5 MPa (25.5 kgf/cm ² , 363 psi)
Leak volume port PAC → other ports	90 ml/min 5 cu.in./min 0.02 USGPM	at 3.9 MPa (40.0 kgf/cm ² , 569 psi)

RY9212148HYM0022US0

(2) Function and Structure

[A] Function


The unload valve consists of two directional change valves operated by solenoid, a check valve and a relief valve; it perform functions such as unloading control pressure from the pilot pump (returning oil to the hydraulic oil tank) and supplying control pressures to pilot valves for operation and travel, as well as to the swivel motor (for the parking brake) and the travel motor (for switching the two speeds).

RY9212001HYM0124US0

[B] Operation

With this device, oil from the pilot pump enters port C and is supplied to the control valve from port P, but that is functionally identical to when oil from the pilot pump enters from port P and supplied to the control valve from port C. Following is a description of when oil enters from port P from the pilot pump.

RY9212001HYM0125US0

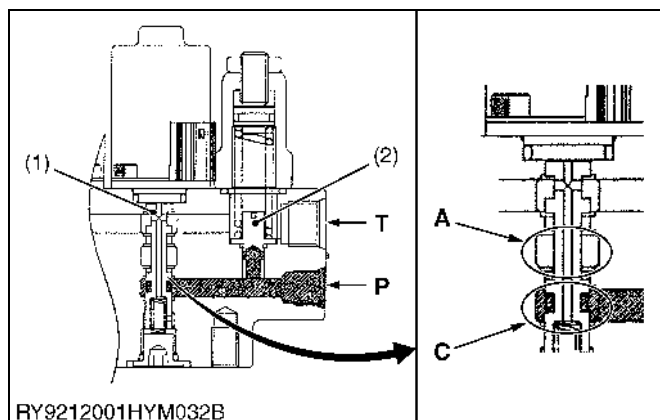

1. When the solenoid is off


Oil from port P is cut off from passages to port A and port T by a spool (1) and plunger (2). Ports A and T are connected. And Port C and Port P are connected, so the pressures at port C and port P are always the same.

When the pressure from port P reaches the relief valve pressure setting, the oil from port P returns to the tank via the relief valve (pushes the plunger up).

- (1) Spool
- (2) Plunger


A : Port A
C : Port C
P : Port P
T : Port T

RY9212148HYM0023US0

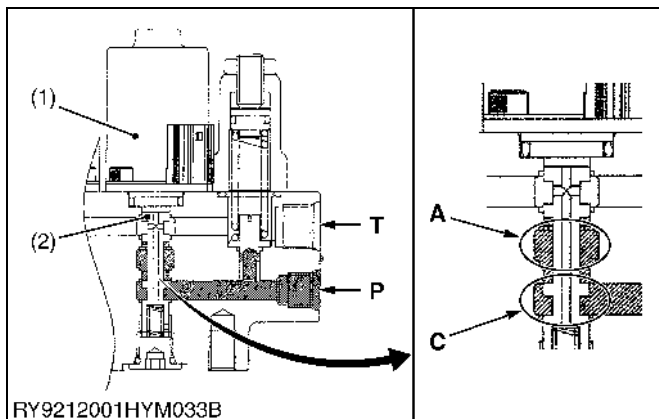


2. When the solenoid is on

When the solenoid (1) is energized, the solenoid's pushrod presses the spool (2) down, connecting port P to port A and cutting off port A and port T, so the oil from port P flows to port A.

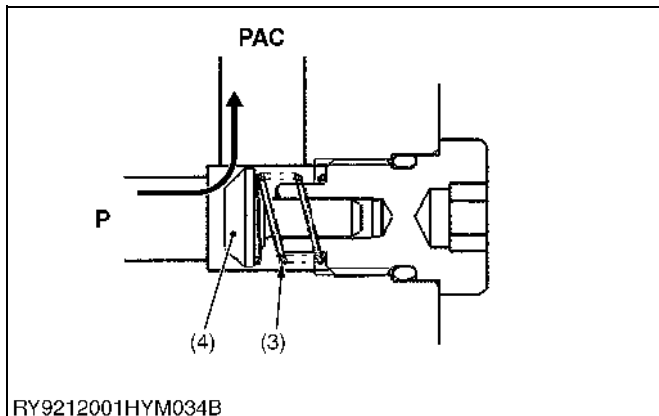

When port P pressure reaches a pressure at or greater than the spring (3), the plunger (4) moves to the right and pressure oil flows from port P to port PAC.

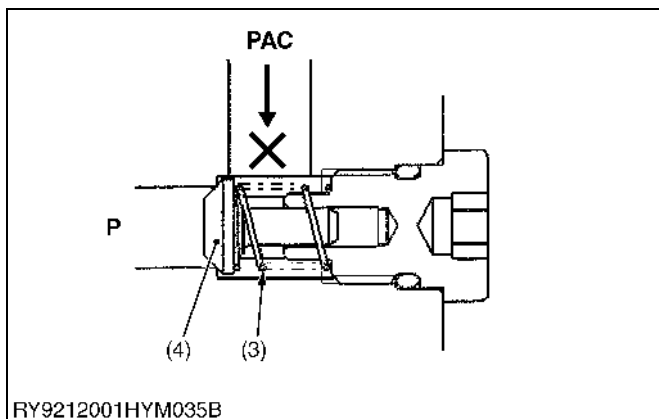

When the pressure at port P is low, the oil from port PAC is cut off, preventing backflow.

- (1) Solenoid
- (2) Spool
- (3) Spring
- (4) Plunger

A : Port A
C : Port C
P : Port P
T : Port T




RY9212148HYM0024US0

[2] AUX SOLENOID VALVE

(1) Specifications

Proportional Control Solenoid Valve

This valve is an electromagnetic solenoid valve. Normally a solenoid valve is turned off and on via 12V battery voltage, but this valve is controlled via pulsed signals from the computer built into the ECU and the meter panel.
(Duty Control)

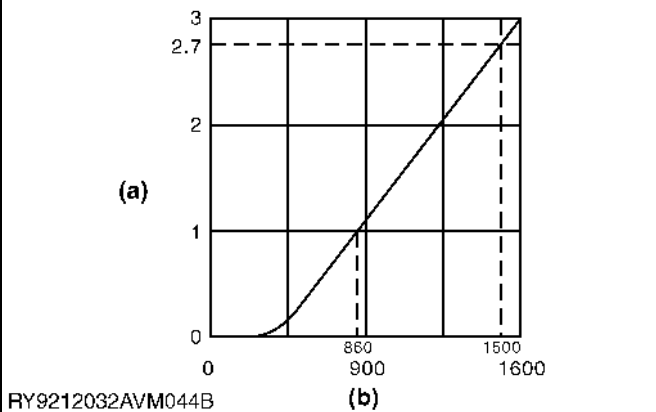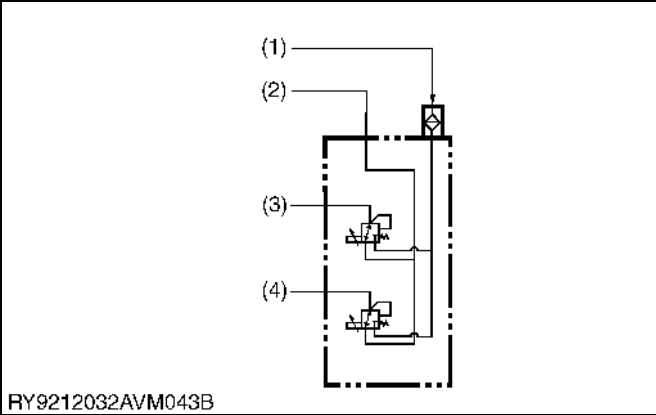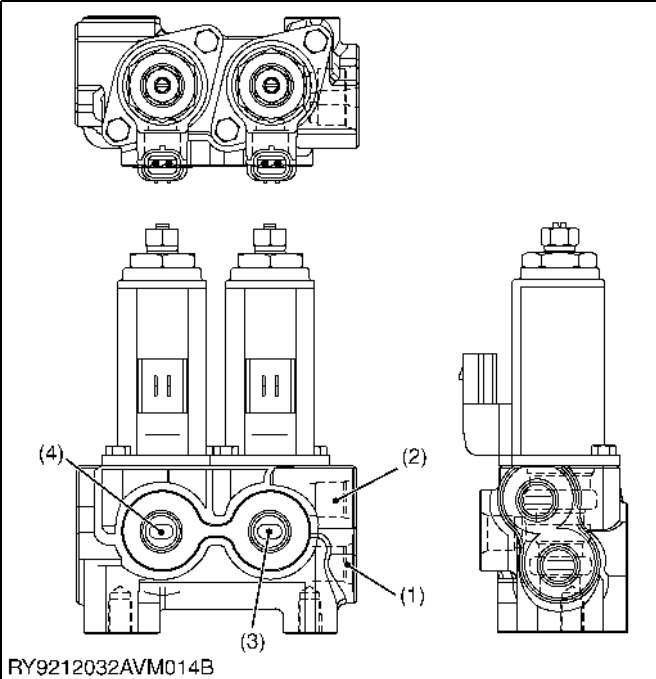

Item	Specifications
Max operating pressure (input pressure)	3.9 MPa 40 kgf/cm ² 570 psi
Allowable back pressure (pressure T)	1.0 MPa 10 kgf/cm ² 100 psi
Maximum proportional valve operating flow volume (input flow volume)	15.6 L/min (4.1 GPM)
Drain volume when solenoid off	0.4 L/min ≥ [at 20 cST, port P pressure = 4.9 MPa (50 kgf/cm ² , 710 psi)]
Waterproof Standard	JIS D 0203 S2 equivalent
Vibration Proof Standard	JIS D 1601-1995
Hydraulic Oil Grade	ISO VG32 to 68 equivalent
Hydraulic Oil Contamination Level	NAS Class 10 or less
Electrical Specifications	Rated Amperage: 1600 mA Coil resistance: 3.2 ± 0.5 Ω [at 20 deg C (68 deg F)]
Secondary pressure control range	0 to 2.7 MPa 0 to 27 kgf/cm ² 0 to 390 psi

- (1) P port

(2) T port

(3) A1 Port (Hi)

(4) A2 Port (Low)
- (a) Secondary Pressure (MPa)


(b) Input Amperage (mA)

RY9212148HYM0025US0

(2) Function and Structure

The pressure from port P is supplied or cut off from port A or port B by the solenoid valve used when operating the AUX.

RY9212095HYM0019US0

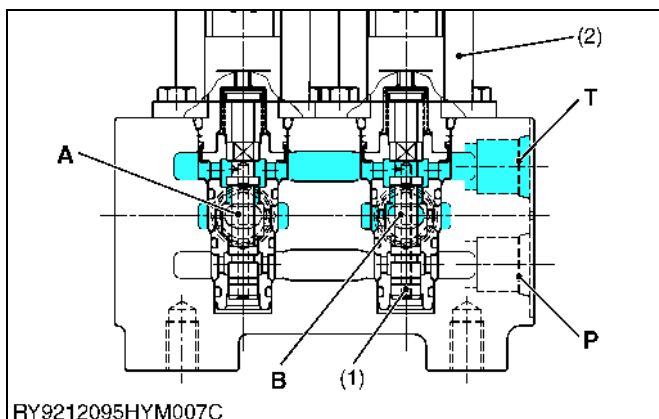


1. When the solenoid is off

When the solenoid is off, port P and port B are cut off by the spool. Port B and port T are connected, so no pressure is produced at port B.

- (1) Spool
(2) Solenoid

A : Port A
B : Port B
P : Port P
T : Port T

RY9212095HYM0020US0

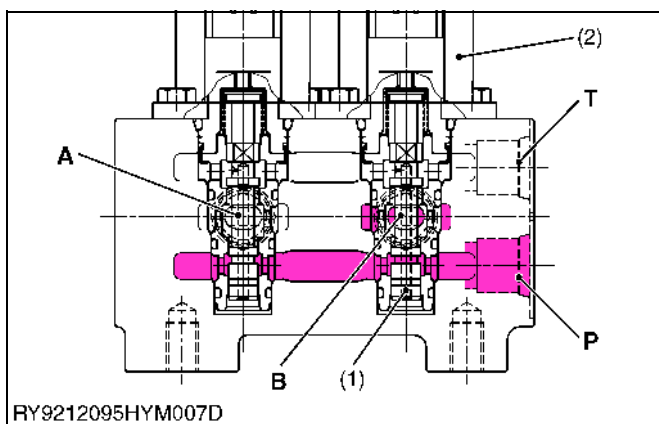

2. When the solenoid is on

When the solenoid is on, the spool is pressed down, connecting port P and port B. And as port B and port T are cut off, the oil from port P flows to port B.


- (1) Spool
(2) Solenoid

A : Port A
B : Port B
P : Port P
T : Port T

RY9212095HYM0021US0

[3] ANGLE SOLENOID VALVE

(1) Specifications

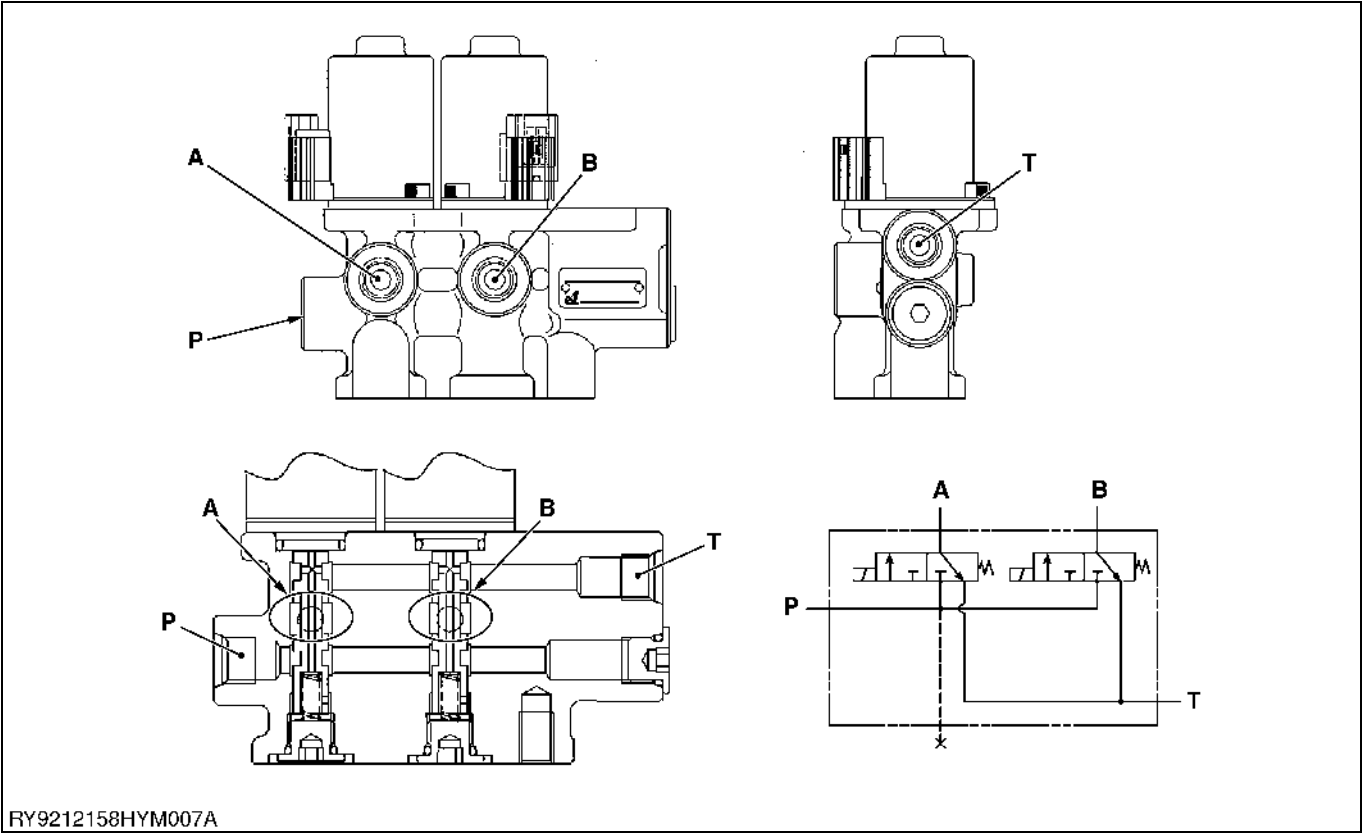

A : Port A (Left)

B : Port B (Right)

P : Port P


T : Port T

Maker	Nishina Industrial
Rated Voltage	DC 12 V
Leak Volume	220 ml/min or less at Temp. 50 °C (122 °F), 4.9 MPa (50 kgf/cm ² , 3130 psi) pressure

RY9212158HYM0009US0

[4] EP MODE SOLENOID VALVE

(1) Specifications

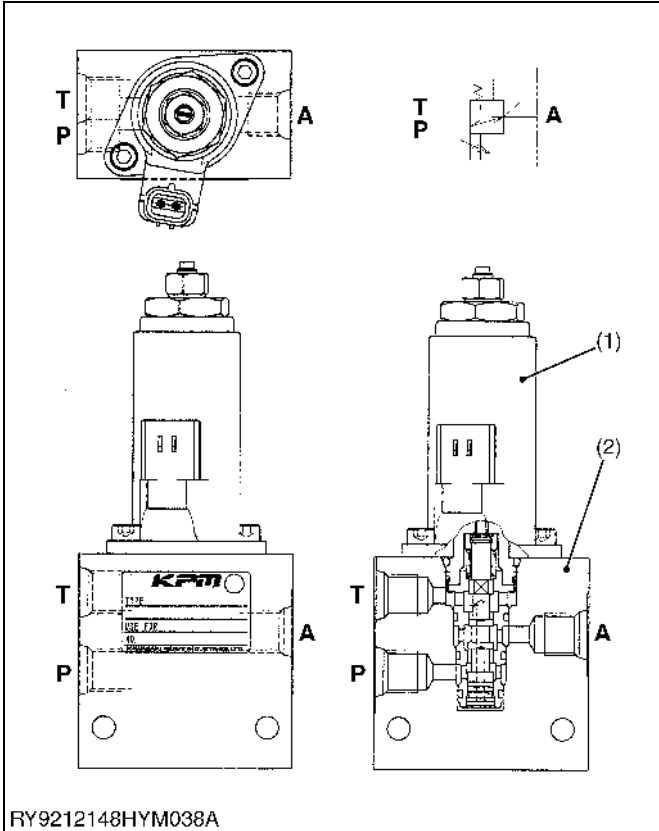

Item	Specifications
Max operating pressure (input pressure)	3.9 MPa 40 kgf/cm ² 570 psi
Allowable back pressure (pressure T)	1.0 MPa 10 kgf/cm ² 100 psi
Maximum proportional valve operating flow volume (input flow volume)	10.0 L/min (2.64 U.S.gals./min)
Drain volume when solenoid off	0.6 L/min (0.2 U.S.gals./min) ≥ [At 20 cST, port P pressure = 4.9 MPa (50 kgf/cm ² , 710 psi)]
Electrical Specifications	Rated Amperage: 1600 mA Coil resistance: 3.3 Ω [at 20 °C (68 °F)]

- (1) Solenoid

(2) Case
- A : Port A

P : Port P

T : Port T

RY9212148HYM0026US0

SERVICING

CONTENTS

1. PUMP	3-S1
[1] PUMP DISASSEMBLY / ASSEMBLY	3-S1
[2] PUMP DISASSEMBLY PROCEDURES	3-S4
(1) Disassembly Procedures.....	3-S7
(2) Assembly Procedures.....	3-S12
2. CONTROL VALVE.....	3-S17
[1] CONTROL VALVE REMOVAL.....	3-S17
[2] CONTROL VALVE ASSEMBLY/DISASSEMBLY	3-S19
3. SWIVEL MOTOR.....	3-S26
[1] SWIVEL MOTOR REMOVAL AND INSTALLATION	3-S26
[2] SWIVEL MOTOR DISASSEMBLY/ASSEMBLY PROCEDURES	3-S28
(1) Disassembly Procedures.....	3-S30
(2) Assembly Procedures.....	3-S34
(3) Special Tools	3-S40
4. SWIVEL JOINT	3-S41
[1] REMOVAL AND INSTALLATION OF THE SWIVEL JOINT.....	3-S41
[2] SWIVEL JOINT DISASSEMBLY / ASSEMBLY PROCEDURES	3-S44
(1) Disassembly Procedures.....	3-S45
(2) Assembly Procedures.....	3-S47
5. TRAVEL MOTOR	3-S49
[1] REMOVAL AND INSTALLATION OF THE TRAVEL MOTOR	3-S49
[2] TRAVEL MOTOR DISASSEMBLY / ASSEMBLY PROCEDURES	3-S50
(1) Disassembly Procedures.....	3-S52
(2) Assembly Procedures.....	3-S59
(3) Special Tools	3-S67
6. CYLINDER.....	3-S69
[1] TIGHTENING TORQUE	3-S69
7. PILOT VALVE	3-S71
[1] CONTROL PILOT VALVES.....	3-S71
(1) Disassembly	3-S72
(2) Assembly	3-S75
(3) Special Tools	3-S79
[2] TRAVEL PILOT VALVE	3-S80
(1) Disassembly	3-S81
(2) Assembly	3-S85
(3) Special Tools	3-S89
[3] SWING PILOT VALVE	3-S89
(1) Disassembly	3-S90
(2) Assembly	3-S93
[4] BLADE PILOT VALVES	3-S98
(1) Disassembly	3-S100
(2) Assembly	3-S102
8. SHOCKLESS VALVES.....	3-S106
9. SWIVEL SHUTTLE VALVE	3-S107
10. SOLENOID VALVE.....	3-S108
[1] UNLOAD VALVE	3-S108
[2] AUX PROPORTIONAL CONTROL SOLENOID VALVE	3-S109
[3] ANGLE SOLENOID VALVE	3-S110
[4] EP MODE SOLENOID VALVE	3-S111

11. ROUTING OF HYDRAULIC HOSES	3-S112
[1] HYDRAULIC HOSE SPECIFICATIONS	3-S112
[2] HIGH-PRESSURE HOSES	3-S113
(1) Deliver Hose Routing	3-S113
(2) PLS Hose Routing	3-S116
(3) Front Hose Routing	3-S117
(4) Boom Hose Routing	3-S120
(5) Undercarriage Hose Routing	3-S121
(6) Angle Blade Hose Routing	3-S122
[3] LOW-PRESSURE HOSES	3-S123
(1) Suction Pipe and Hose Routing	3-S123
(2) Drain Hose Routing	3-S124
[4] PILOT HOSES	3-S125
(1) Deliver Hose Routing	3-S125
(2) Port P Hose Routing	3-S126
(3) Port T Hose Routing	3-S127
(4) Ports P and T Pilot Valve Hose Routing	3-S128
(5) Pilot Valve Hose Routing	3-S130
12. MEASURING HYDRAULIC DEVICE PERFORMANCE	3-S133
[1] PISTON PUMP AIR BLEEDING PROCEDURE	3-S133
[2] RELEASE OF PRESSURE IN THE HYDRAULIC SYSTEM	3-S134
[3] MANUAL BOOM LOWERING PROCEDURE	3-S135
[4] MEASURING THE FLOW RATE	3-S136
(1) Measuring Main Pump Flow	3-S136
(2) Measuring the AUX Proportional Settings	3-S138
(3) Measuring AUX Discharge Flow	3-S139
[5] MEASURING PRESSURE	3-S140
(1) Main Relief Valve Measuring Procedure	3-S140
(2) Measuring Pilot Secondary Pressure	3-S142
(3) Measuring EP Proportional Solenoid Pressure	3-S143
(4) Measuring the Overload Relief Valve Pressure	3-S144
(5) Pressure Measuring Kit	3-S146
(6) Adjusting Swivel Relief Valve Pressure	3-S147
(7) Adjust the LS Control Differential Pressure Adjusting Spring Force	3-S147
[6] MEASURING SWIVEL PERFORMANCE	3-S148
(1) Measuring Swivel Motor Drain Volume	3-S148
(2) Measuring Swivel Block Performance	3-S149
(3) Measuring Swivel Speed	3-S150
[7] MEASURING TRAVEL PERFORMANCE	3-S151
(1) Measuring Travel Motor Drain Volume	3-S151
(2) Measuring Travel Block Performance	3-S152
(3) Measuring Travel Speed	3-S153
(4) Measuring Travel Drift	3-S153
[8] MEASURING CYLINDER SPEED	3-S154
(1) Measuring Hydraulic Cylinder Operating Time	3-S154
(2) Measuring Hydraulic Cylinder Drift	3-S156
(3) Measuring Swing Cylinder Deviation	3-S157
13. HYDRAULIC DEVICE PERFORMANCE STANDARDS	3-S158
[1] FLOW RATE	3-S158
(1) Main Pump Discharge Flow Rate Data (Measured Values)	3-S158
(2) Flow Rate Data for AUX Proportional Control (Measured Values)	3-S160
(3) AUX Discharge Flow Rate Data (Measured Values)	3-S161
[2] RELIEF PRESSURE (MEASURED VALUES)	3-S162
[3] SWIVEL PERFORMANCE	3-S163
[4] TRAVEL PERFORMANCE	3-S163
[5] CYLINDER SPEED	3-S164
14. TROUBLESHOOTING	3-S165
[1] TROUBLESHOOTING ALL ACTUATORS	3-S165
[2] TROUBLESHOOTING FRONT SYSTEMS	3-S165

[3]	TRAVEL SYSTEM TROUBLESHOOTING	3-S167
[4]	SWIVEL SYSTEM TROUBLESHOOTING	3-S168
[5]	TROUBLESHOOTING MULTIPLE OPERATIONS	3-S169

1. PUMP

[1] PUMP DISASSEMBLY / ASSEMBLY



CAUTION

- When removing a hydraulic device after operating the mini-excavator, lower the bucket and blade to the ground and turn off the engine.
- Each of the devices and the hydraulic oil are hot right after stopping the mini-excavator. The oil is hot enough to cause a burn, so always let it cool down before starting any work.
- Oil gushing out under pressure has enough force to injure you by piercing your skin. Always relieve any pressure remaining in the system prior to working to remove any hydraulic equipment or lines.

RY9212148HYS0149US0



RY9212148MBS018A

1. Remove the left and rear hoods.

■ IMPORTANT

- For hood removal, a minimum of 2 persons is needed.

(1) Rear hood

(2) Left hood

RY9212148HYS0203US0



RY9212148MBS019A

2. Remove the air cleaner.

(1) Air cleaner

RY9212148HYS0204US0



RY9212148HYS126A

3. Attach a vacuum pump and depressurize the inside of the tank.

■ IMPORTANT

- Plug the breather hose.

(1) Vacuum pump

RY9212148HYS0205US0



RY9212148HYS127A

4. Remove the bottom cover of the pump and disconnect all the hoses connected to the pump.

■ IMPORTANT

- Plug the disconnected hoses and adapters.

RY9212148HYS0206US0



5. Suspend the pump with a crane and remove the pump mounting bolts (two).
Use the crane to remove the pump.

Tightening torque	Bolt	196.1 to 225.6 N·m 20.0 to 23.0 kgf·m 144.6 to 166.4 lbf·ft

Pump weight	Approx. 50 kg (110 lbs)


(1) Pump


RY9212148HYS0207US0

Adapter angles

(1) P1	(a) 45°(0.79 rad)
(2) P2	(b) 30°(0.52 rad)
(3) P3	
(4) P4	
(5) Pps	
(6) Pls	
(7) Pi	

RY9212148HYS0208US0

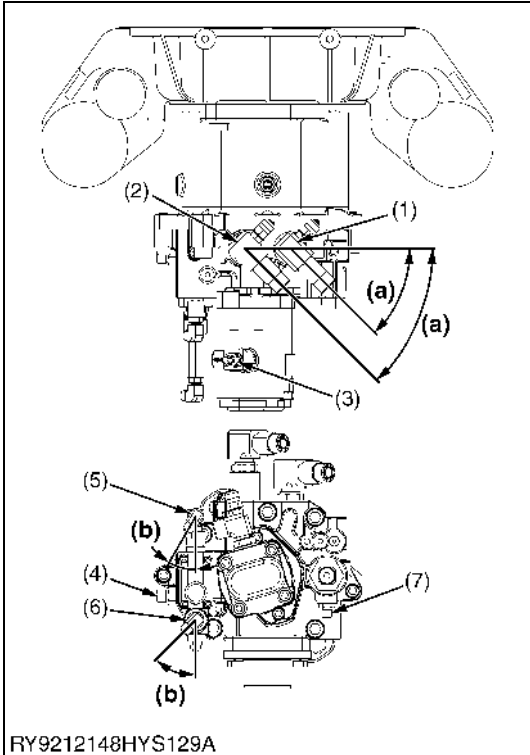

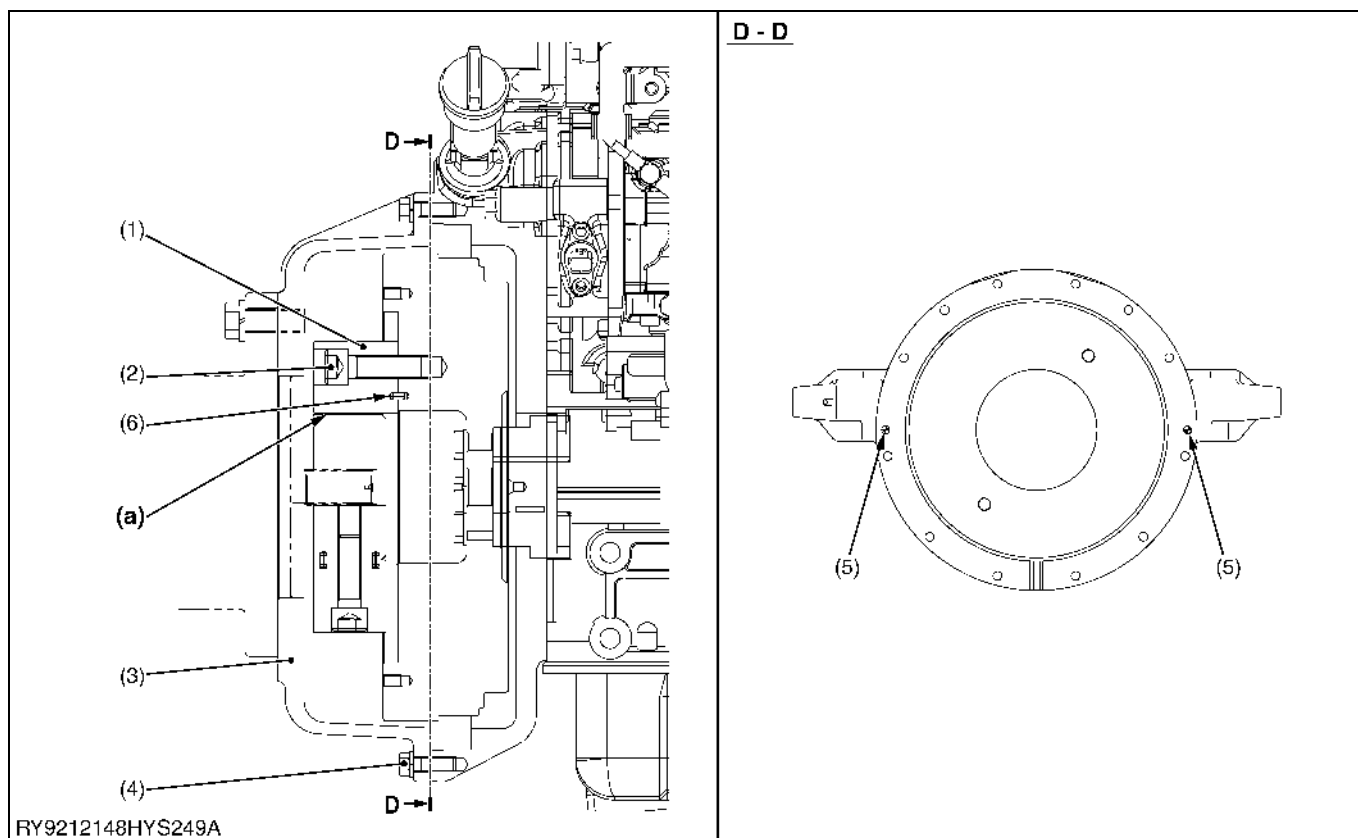Pump Connector and Housing Assembly Diagram

- (1) Connector (3) Pump housing (5) Parallel pin (6) Spring pin
 (2) Connector mounting bolt (4) Housing mounting bolt
- (a) Apply grease to the spline.


IMPORTANT

- **Align the spring pin before tightening the connector mounting bolts.**
- **Do not use a thread lock on the connector mounting bolts.**
- **Do not apply grease to the connector rubber seal.**
- **Align the parallel pin before tightening the pump housing mounting bolts.**

Tightening torque	Connector mounting bolt	210.0 to 230.0 N·m 21.4 to 23.5 kgf·m 154.9 to 169.6 lbf·ft
	Housing mounting bolt	48.1 to 55.9 N·m 4.9 to 5.7 kgf·m 35.5 to 41.2 lbf·ft


RY9212148HYS0371US0

[2] PUMP DISASSEMBLY PROCEDURES

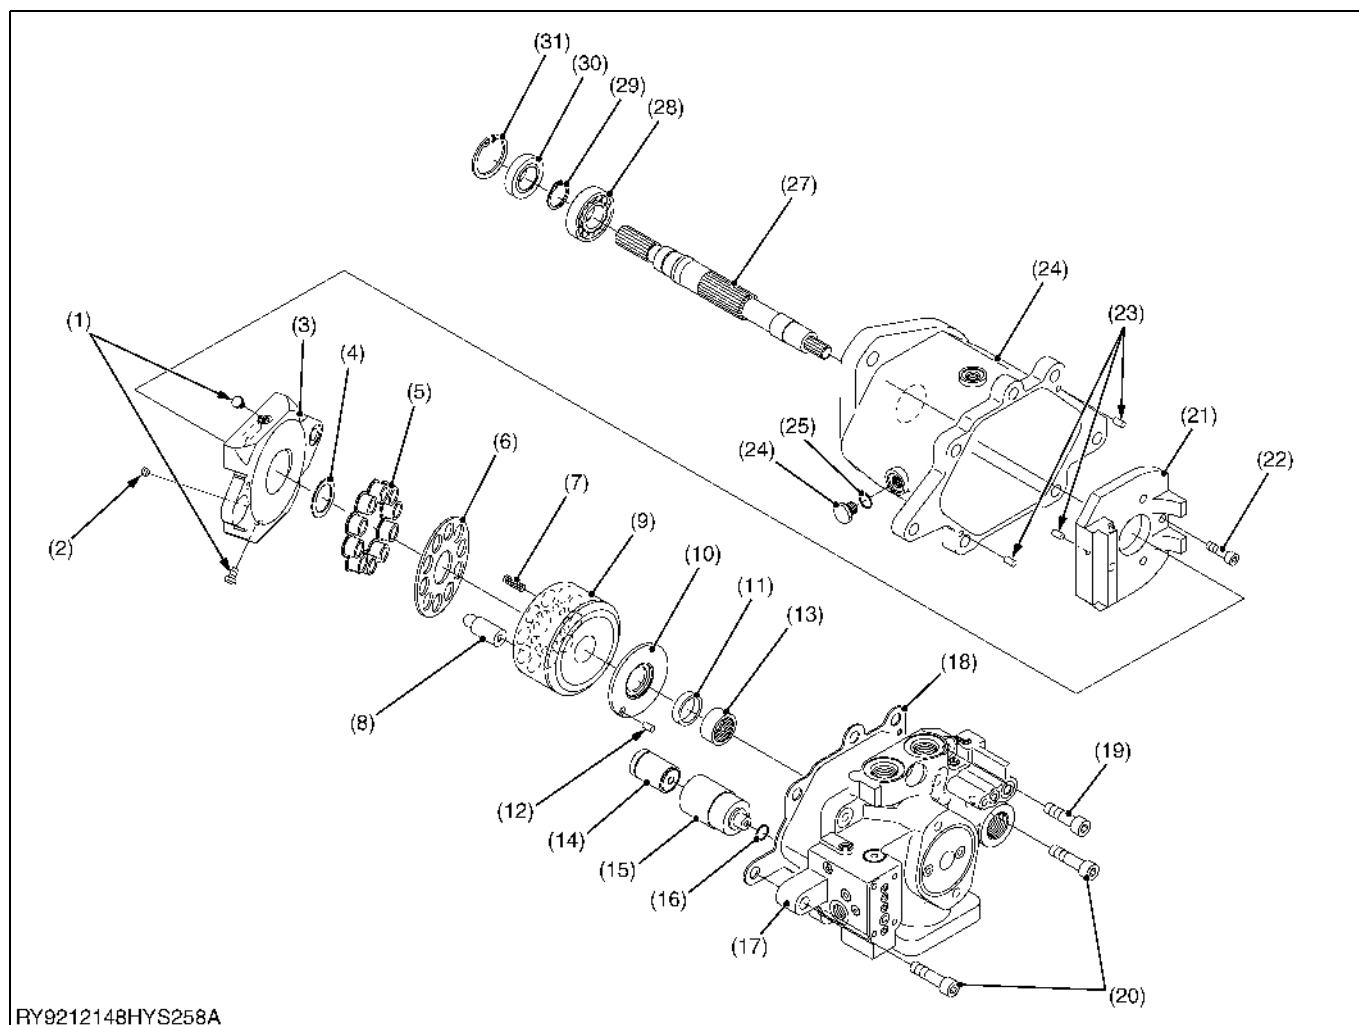

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Plug	2	(17)	Port block	1
(2)	Orifice	1	(18)	Gasket	1
(3)	Swash plate	1	(19)	Bolt	5
(4)	Collar	1	(20)	Bolt	2
(5)	Shoe	10	(21)	Bearing case	1
(6)	Retainer plate	1	(22)	Bolt	4
(7)	Spring	10	(23)	Pin	3
(8)	Piston	10	(24)	Case	1
(9)	Cylinder block	1	(25)	Plug	1
(10)	Valve plate	1	(26)	O-ring	1
(11)	Collar	1	(27)	Shaft	1
(12)	Pin	4	(28)	Roller bearing	1
(13)	Needle bearing	1	(29)	Cir-clip	1
(14)	Piston assy	1	(30)	Oil seal	1
(15)	Spool guide	1	(31)	Cir-clip	1
(16)	O-ring	1			


RY9212148HYS0382US0

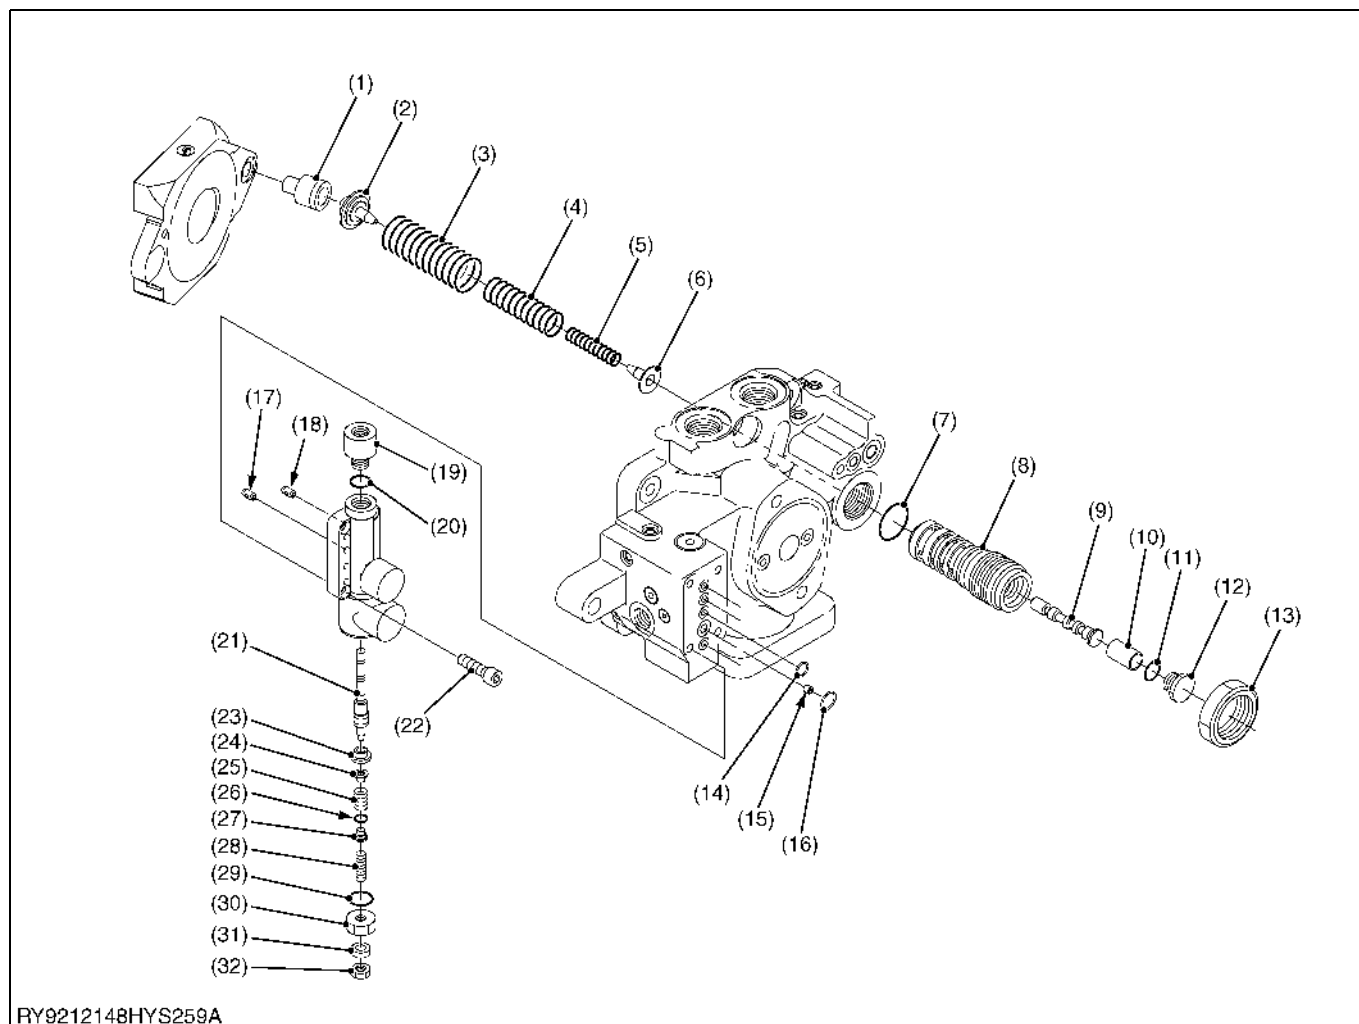

RY9212148HYS259A

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Holder	1	(17)	Orifice	1
(2)	Spring seat	1	(18)	Orifice	1
(3)	Spring	1	(19)	Plug	1
(4)	Spring	1	(20)	O-ring	1
(5)	Spring	1	(21)	Spool	1
(6)	Spring seat	1	(22)	Bolt	4
(7)	O-ring	1	(23)	Bushing	1
(8)	Valve sleeve	1	(24)	Spring seat	1
(9)	Spool	1	(25)	Spring	1
(10)	Pin	1	(26)	O-ring	1
(11)	O-ring	1	(27)	Holder	1
(12)	Plug	1	(28)	Set screw	1
(13)	Nut	1	(29)	O-ring	1
(14)	O-ring	1	(30)	Nut	1
(15)	Orifice	1	(31)	Cap	1
(16)	O-ring	1	(32)	Nut	1

RY9212148HYS0383US0

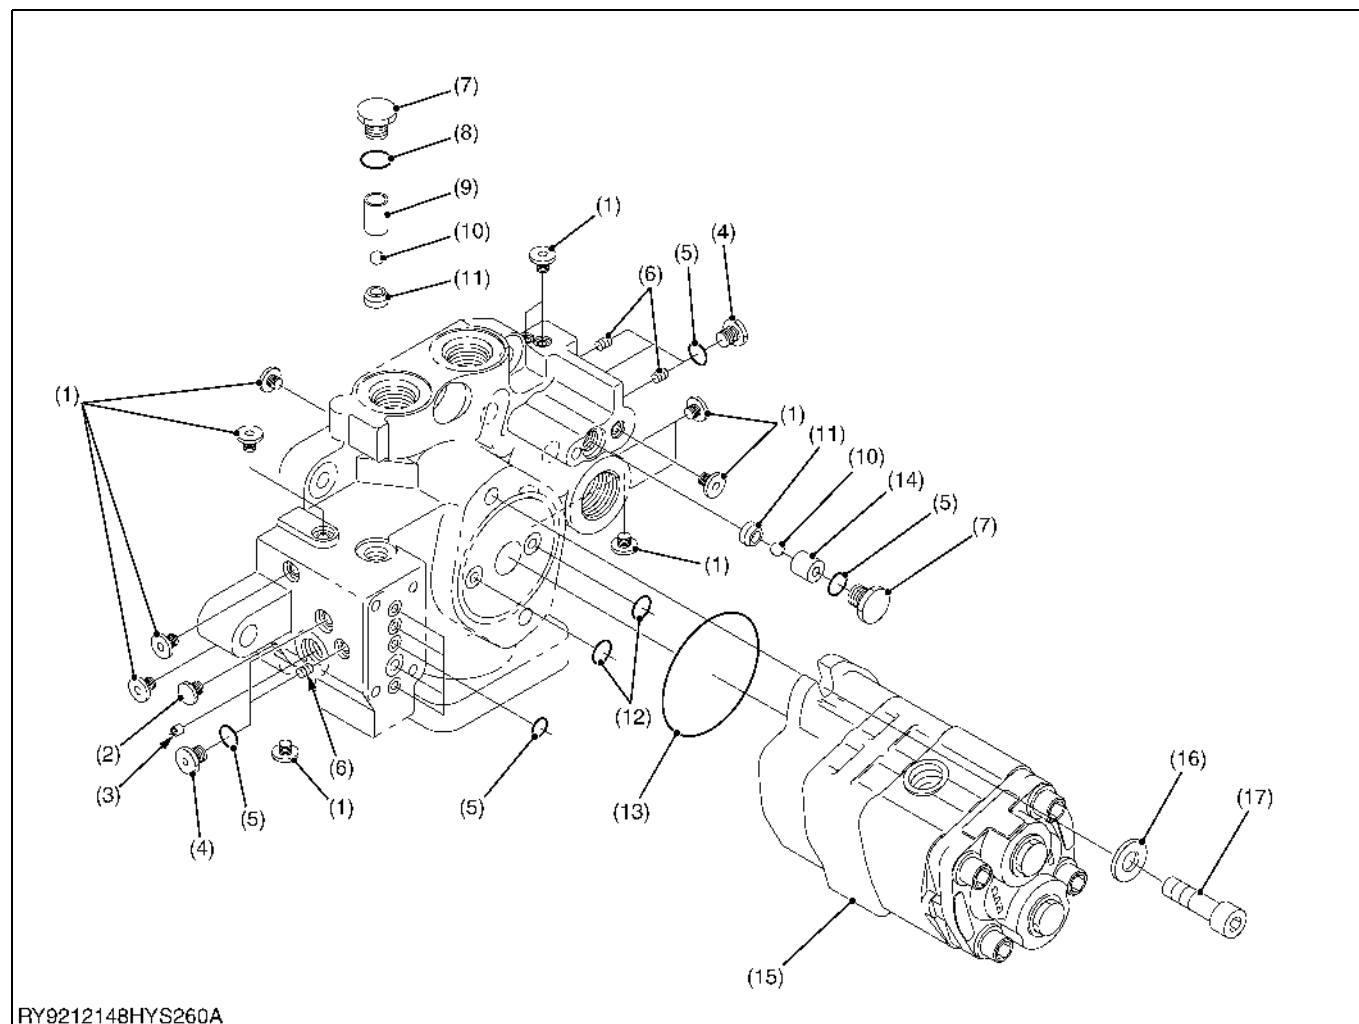


RY9212148HYS260A

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Socket head bolt	11	(10)	Ball	2
(2)	Plug	1	(11)	Seat	2
(3)	Orifice	1	(12)	O-ring	2
(4)	Plug	5	(13)	O-ring	1
(5)	O-ring	11	(14)	Valve seat	1
(6)	Orifice	3	(15)	Oil pressure pump	1
(7)	Plug	2	(16)	Plain washer	2
(8)	O-ring	1	(17)	Bolt	2
(9)	Collar	1			

RY9212148HYS0384US0

(1) Disassembly Procedures

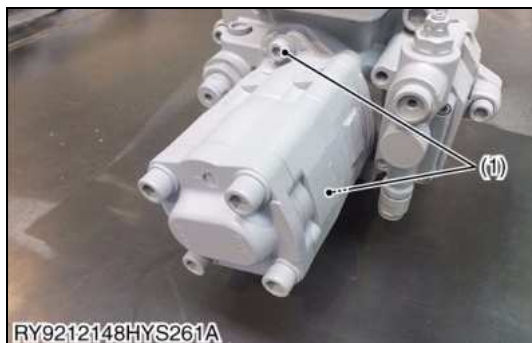

1. Remove the hex socket bolts and then the gear pump.
 - Tool to use: 10 mm hex socket



CAUTION

- Don't pinch your fingers between the port block and the gear pump.
- If it is difficult to remove, tap lightly on it with a plastic hammer and remove.

- (1) Hex Socket Bolt (with / washer)
M10 x 20 x 2

RY9212148HYS0385US0



2. Remove the O-rings.

IMPORTANT

- Take care not to scratch the surface of the port.

- (1) O-Ring
- (2) O-Ring

RY9212148HYS0386US0



3. Remove the hex socket bolts and then the port block.
 - Tool to use: 10, 16 mm hex socket




CAUTION

- Don't pinch your fingers between the port block and the case.
- If it is difficult to remove, tap lightly on it with a plastic hammer and remove.

- (1) Hex Socket Bolt M16 x 40 x 5
- (2) Hex Socket Bolt M10 x 40 x 2
- (3) Port Block

RY9212148HYS0387US0

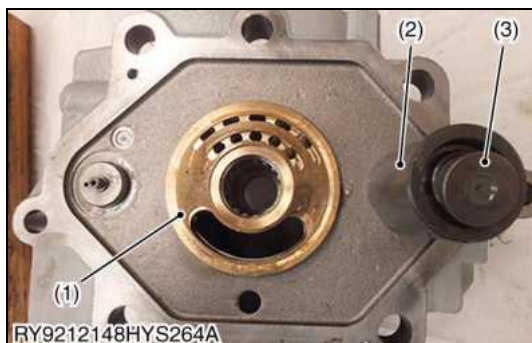

4. Remove the valve plate, spool guide and the piston.
 - Tool to use: 24 mm wrench

IMPORTANT

- Take care not to scratch the valve plate.

- (1) Valve Plate
- (2) Spool Guide
- (3) Piston

RY9212148HYS0388US0



5. Remove the collar and the needle bearing.

- (1) Collar
- (2) Needle Bearing

RY9212148HYS0389US0



6. Remove the plug.
- Tool to use: 6 mm hex socket

(1) Plug

RY9212148HYS0390US0



7. Remove the collar and ball.
- Tool to use: Magnet

(1) Collar

(2) Ball


RY9212148HYS0391US0



8. Remove the plug.
- Tool to use: 6 mm hex socket

(1) Plug

RY9212148HYS0392US0

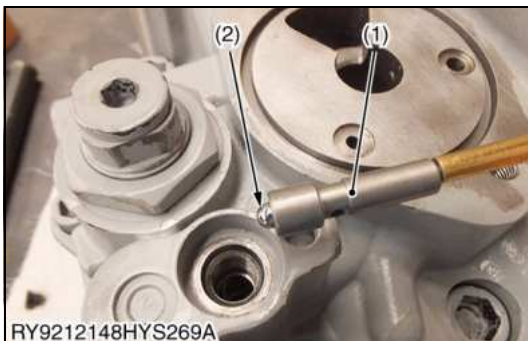

9. Remove the seat and the ball.
- Tool to use: Magnet

(1) Seat

(2) Ball

RY9212148HYS0393US0



10. Remove the hex socket bolts and then the L/S regulator.
- Tool to use: 5 mm hex socket

(1) L/S Regulator

(2) Hex Socket Bolt M6 x 15 x 4

RY9212148HYS0394US0




11. Remove the O-rings.

■ **IMPORTANT**

- Take care not to scratch the surface of the port.

(1) O-Ring

RY9212148HYS0395US0

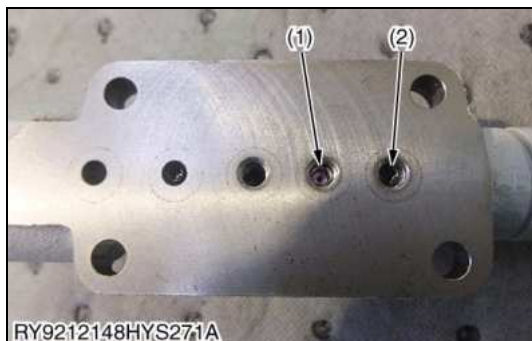


12. Remove the orifices.

- Tool to use: 3 mm hex socket

(1) Orifice

(2) Orifice

RY9212148HYS0396US0

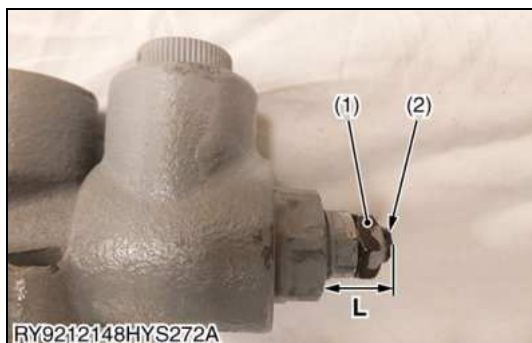

13. After measuring the distance of **L**, loosen the nut and remove the set screw.


14. Remove the parts inside the L/S regulator.

- Tool to use: 13, 24 mm wrench, 4 mm hex socket

(1) Nut

(2) Set Screw

RY9212148HYS0397US0

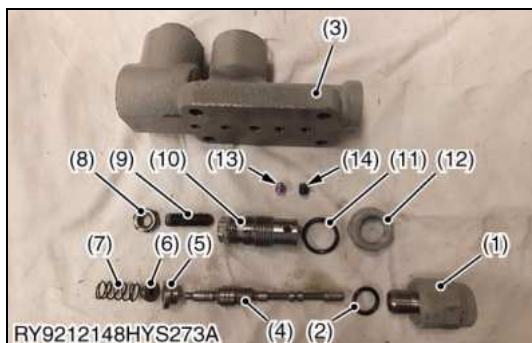


L/S Regulator Components

- (1) Plug
- (2) O-Ring
- (3) Valve Body
- (4) Spool
- (5) Bushing
- (6) Spring Seat
- (7) Spring

- (8) Nut
- (9) Set Screw
- (10) Holder
- (11) O-Ring
- (12) Nut
- (13) Orifice
- (14) Orifice

RY9212148HYS0398US0

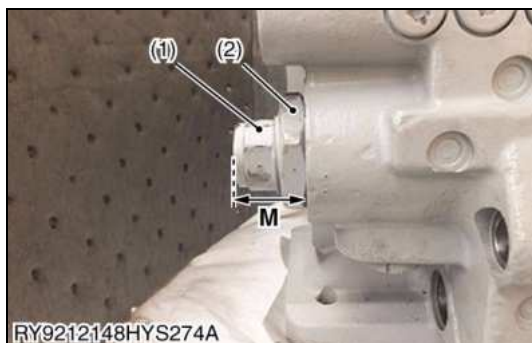

15. After measuring the distance of **M**, loosen the nut and remove the horsepower control valve.

- Tool to use: 41 mm wrench, 8 mm hex socket

(1) Horsepower Control Valve

(2) Nut


RY9212148HYS0399US0



Horsepower Control Valve Components

(1) Horsepower Control Valve	(4) Pin
(2) Nut	(5) Plug
(3) Spool	

RY9212148HYS0400US0

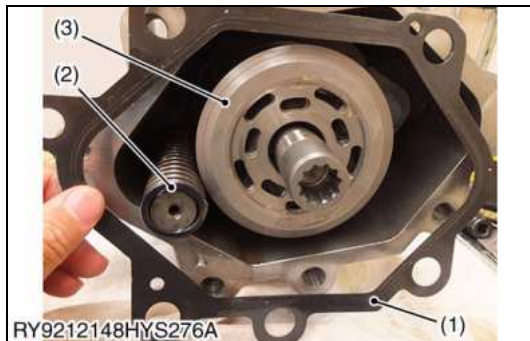

16. Remove the gasket, spring ASSY and the cylinder block ASSY.



CAUTION

- Be careful not to cut your fingers on the gasket.

(1) Gasket	(3) Cylinder Block ASSY
(2) Spring ASSY	

RY9212148HYS0401US0



Spring ASSY Components

(1) Spring Seat	(4) Inner Spring
(2) Assist Spring	(5) Spring Seat
(3) Outer spring	

RY9212148HYS0402US0



Cylinder Lock ASSY Components

(1) Piston	(4) Spring
(2) Retainer Plate	(5) Retainer Holder
(3) Cylinder Block	

RY9212148HYS0403US0



17. Remove the swash-plate and the holder.

(1) Swash-Plate	(2) Holder

RY9212148HYS0404US0



18. Remove the shaft.

- Tool to use: plastic hammer



CAUTION

- **Be careful not to hit your fingers with the hammer.**

(1) Shaft

RY9212148HYS0405US0



19. Remove the shaft from the bearing case.

- Tool to use: plastic hammer




CAUTION

- **Be careful not to hit your fingers with the hammer.**

(1) Shaft

(2) Bearing Case

RY9212148HYS0406US0

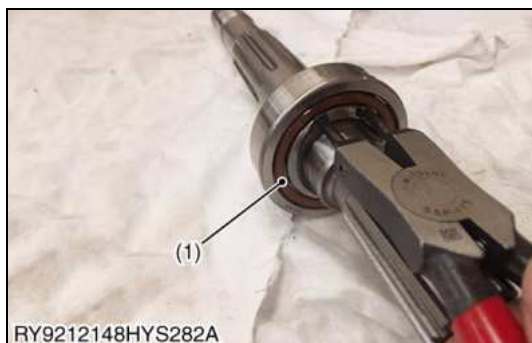

20. Remove the snap ring.

- Tool to use: Snap ring pliers



CAUTION

- **Take care not to cut yourself, such as in the face, with the snap ring.**

(1) Snap Ring

RY9212148HYS0407US0



21. Remove the bearing.

- Tool to use: punch and plastic hammer



CAUTION

- **Be careful not to hit your fingers with the hammer.**

(1) Snap Ring


(3) Thrust Washer

(2) Bearing

RY9212148HYS0408US0



(2) Assembly Procedures

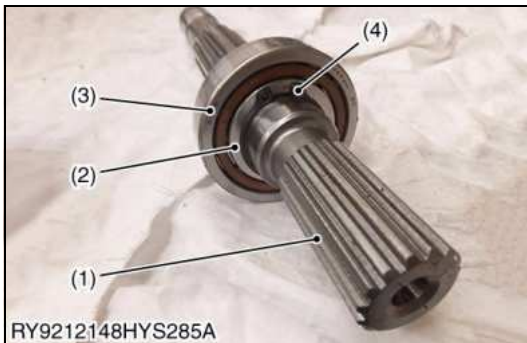

1. Mount the thrust washer and bearing on the shaft.
2. Install the snap ring.



CAUTION

- Be careful not to hit your fingers with the hammer.

(1) Shaft	(3) Bearing
(2) Thrust Washer	(4) Snap Ring

RY9212148HYS0409US0



3. Mount the shaft in the bearing case.
- Tool to use: plastic hammer



CAUTION

- Be careful not to hit your fingers with the hammer.

(1) Bearing Case	(2) Pin

RY9212148HYS0410US0



4. Mount the shaft in the case.

(1) Shaft	(2) Case

RY9212148HYS0411US0




5. Mount the swash-plate and the holder.

■ IMPORTANT

- Mount so the surfaces of the swash-plate are not scratched.

(1) Swash-Plate	(2) Holder

RY9212148HYS0412US0

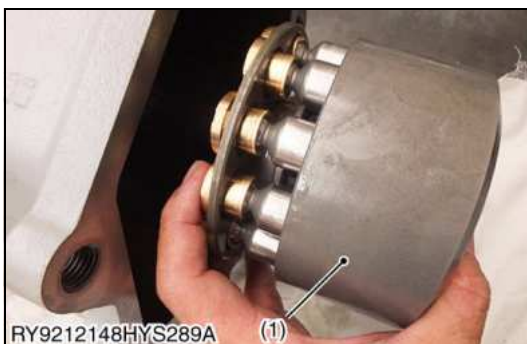


6. Install the cylinder block ASSY.

■ IMPORTANT

- Do not scratch the pistons.
- Do not use a hammer.
- Apply hydraulic oil to the body and shoe face of the pistons.

- | |
|-------------------------|
| (1) Cylinder Block ASSY |
|-------------------------|

RY9212148HYS0413US0

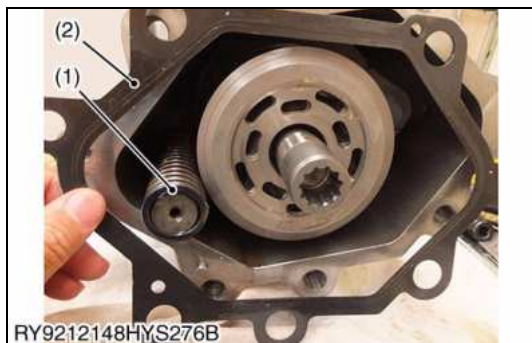

7. Install the spring ASSY and the gasket.

■ **IMPORTANT**

- Take care to orient the spring ASSY correctly and not to drop it.
- Be careful not to cut your fingers on the gasket.

(1) Spring ASSY

(2) Gasket

RY9212148HYS0414US0



8. Install the seat and ball into the port block.

- Tool to use: Magnet

(1) Seat

(2) Ball

RY9212148HYS0415US0



9. Install the plug.

- Tool to use: 6 mm hex socket

Tightening torque	Plug (1)	29.4 N·m 3.0 kgf·m 21.7 lbf·ft

(1) Plug

RY9212148HYS0416US0



10. Assemble the horsepower control valve and install it in the port block.

■ **IMPORTANT**


- Make sure the spool is facing the right way.

(1) Horsepower Control Valve

(2) Port Block

RY9212148HYS0417US0



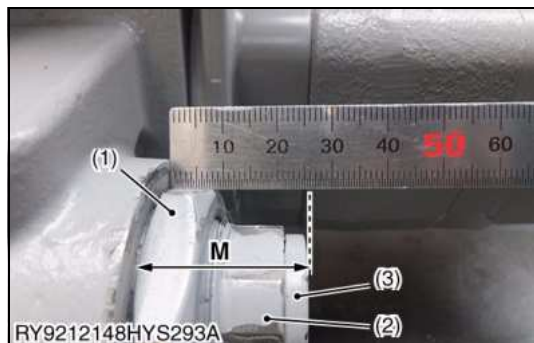

11. Adjust the horsepower control valve to the measurement **M** taken before disassembly.

- Tool to use: ruler, 24, 41 mm wrench, 8 mm hex socket

■ **IMPORTANT**

- Pay attention to the initial position.

Tightening torque	Nut (1)	68.6 N·m 6.70 kgf·m 50.6 lbf·ft
	Plug (3)	57.0 N·m 5.81 kgf·m 42.0 lbf·ft

(1) Nut

(3) Plug

(2) Horsepower Control Valve

RY9212148HYS0418US0



12. Install the collar and ball.

- Tool to use: Magnet

(1) Collar

(2) Ball

RY9212148HYS0419US0



13. Install the plug.

- Tool to use: 6 mm hex socket

Tightening torque	Plug (1)	29.4 N·m 3.0 kgf·m 21.7 lbf·ft

(1) Plug

RY9212148HYS0420US0



14. Assemble the L/S regulator.

■ **IMPORTANT**


- Make sure the spool is facing the right way.
- Pay attention to the sizes of the orifices and insert them in the right locations.

Tightening torque	Orifice (1), (2)	2.45 N·m 0.250 kgf·m 1.81 lbf·ft

(1) Orifice

(2) Orifice

RY9212148HYS0421US0

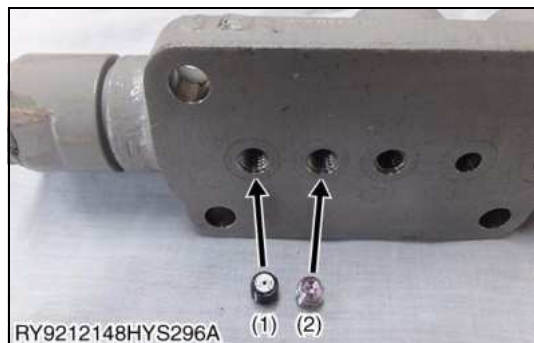




15. Install the O-rings.

■ **IMPORTANT**

- Take care not to scratch the surface of the port.

(1) O-Ring

RY9212148HYS0422US0

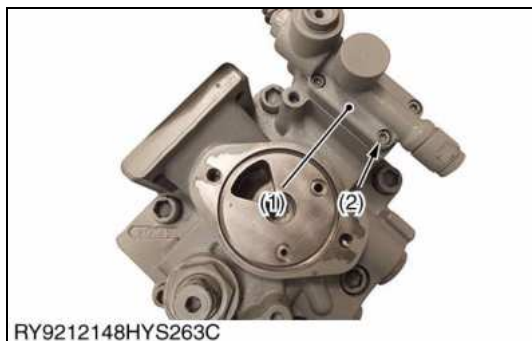

16. Install the L/S regulator.

- Tool to use: 5 mm hex socket

Tightening torque	Socket head bolt (2)	12.65 N·m 1.29 kgf·m 9.93 lbf·ft

(1) L/S Regulator

(2) Hex Socket Bolt M6 x 15 x 4

RY9212148HYS0423US0



17. Adjust the L/S regulator to the measurement prior to disassembly.

- Tool to use: ruler, 13, 24 mm wrench

(1) Nut

(2) Set Screw

RY9212148HYS0424US0



18. Install the needle bearing and the collar.


■ **IMPORTANT**

- Install so the machined surface of the collar is facing the needle bearing.

(1) Needle Bearing

(2) Collar

RY9212148HYS0425US0

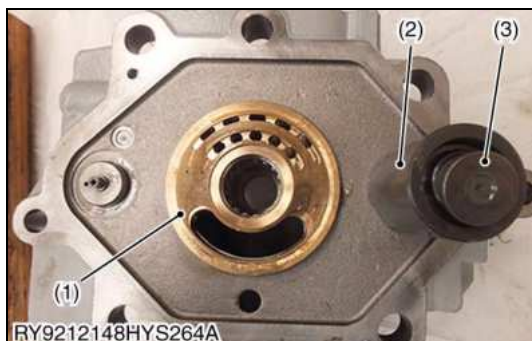

19. Install the valve plate, spool guide and the piston.

- Tool to use: ruler, 24 mm wrench

■ **IMPORTANT**

- Position so the notch is aligned with the pin.
- Apply hydraulic oil to both faces of the valve plate.


Tightening torque	Spool guide (2)	51.0 N·m 5.20 kgf·m 37.6 lbf·ft

(1) Valve Plate

(3) Piston

(2) Spool Guide

RY9212148HYS0426US0

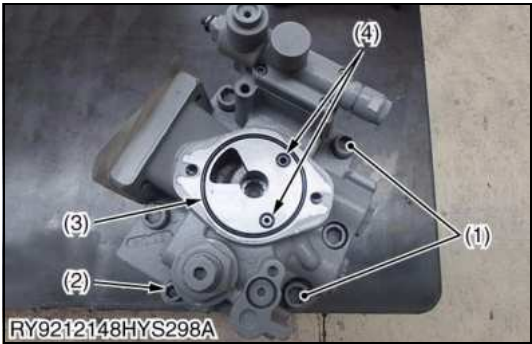

20. Install the O-rings.
21. Mount the port block on the case.
- Tool to use: 10, 16 mm hex socket


CAUTION

- Don't pinch your fingers between the port block and the case.

Tightening torque	Socket head bolt (1)	196.0 N·m 19.99 kgf·m 144.6 lbf·ft
	Socket head bolt (2)	106.9 N·m 10.90 kgf·m 78.85 lbf·ft

- (1) Hex Socket Bolt M16 x 40 x 5 (3) O-Ring
(2) Hex Socket Bolt M10 x 40 x 2 (4) O-Ring

RY9212148HYS0427US0

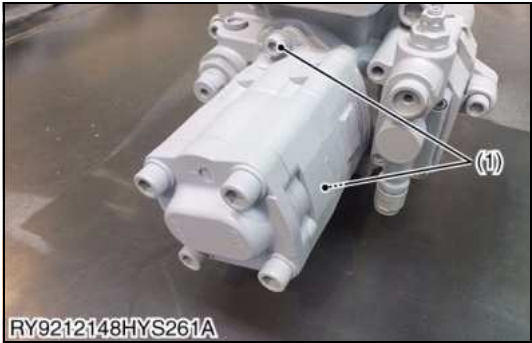

22. Install the gear pump.
- Tool to use: 10 mm hex socket

CAUTION

- Don't pinch your fingers between the port block and the gear pump.

Tightening torque	Socket head bolt (1)	44.1 N·m 4.50 kgf·m 32.5 lbf·ft

- (1) Hex Socket Bolt (w/washer)
M10 x 20 x 2

RY9212148HYS0428US0

2. CONTROL VALVE


[1] CONTROL VALVE REMOVAL



1. Remove the cover.
2. Attach a vacuum pump and depressurize the inside of the tank.

(1) Cover


RY9212158HYS0044US0

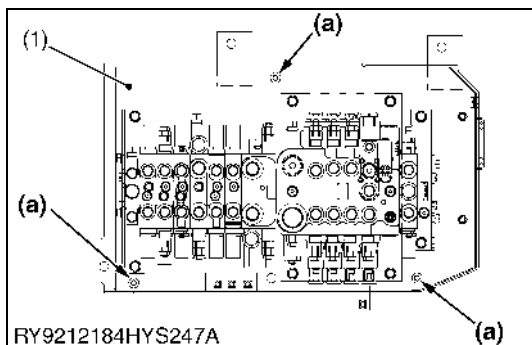

3. Disconnect all the hoses and wiring connected to the control valve.
4. Attach eye bolts to the base of the control valve and suspend the control valve with a crane.

■ IMPORTANT

- Plug the disconnected hoses and adapters.
- Label all of the disconnected hoses so you can identify them during assembly.

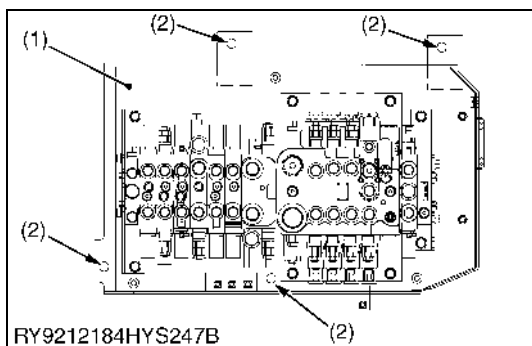

5. Remove the 4 base mounting bolts, then lift with the crane and remove it.


(1) Cover

(2) Bolt

(a) Eye bolt mounting hole (M12, pitch 1.75)

RY9212158HYS0106US0

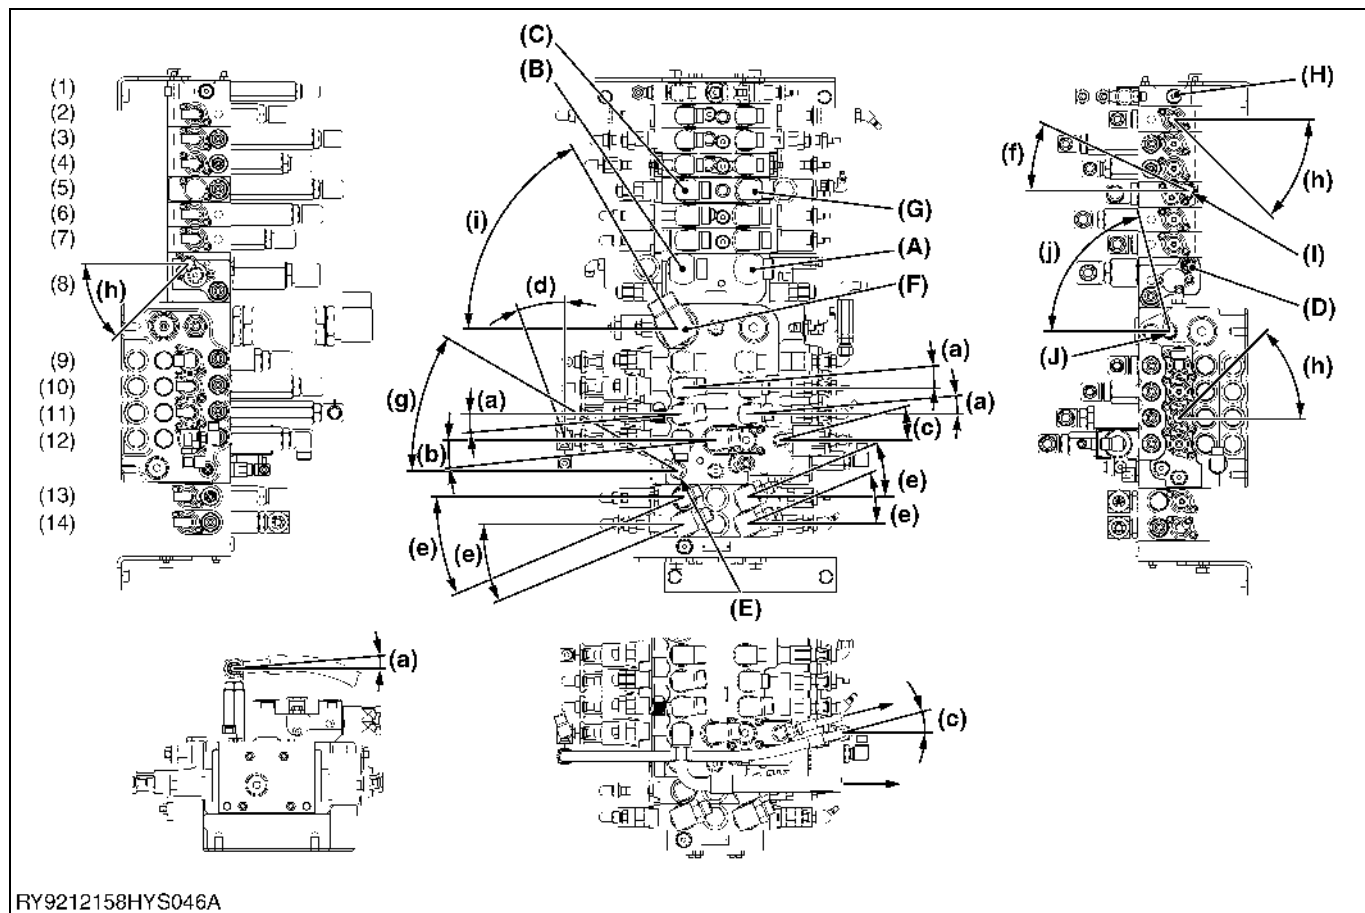

Control valve adapter angles (angle spec.)

(1) P3 bypass	(11) AUX1
(2) Swivel	(12) Boom
(3) Blade	(13) Swing
(4) AUX2	(14) Angle
(5) Communication valve	
(6) Travel left	
(7) Travel right	
(8) Independent travel valve	
(9) Arm	
(10) Bucket	

- | |
|---------|
| (A) P1 |
| (B) P2 |
| (C) P3 |
| (D) Pps |
| (E) Pls |
| (F) T1 |
| (G) T2 |
| (H) PP1 |
| (I) PP2 |
| (J) PP3 |

- | |
|--------------------|
| (a) 5° (0.09 rad) |
| (b) 6° (0.10 rad) |
| (c) 15° (0.26 rad) |
| (d) 20° (0.35 rad) |
| (e) 23° (0.40 rad) |
| (f) 25° (0.44 rad) |
| (g) 30° (0.52 rad) |
| (h) 45° (0.79 rad) |
| (i) 60° (1.05 rad) |
| (j) 75° (1.31 rad) |

RY9212158HYS0031US0

[2] CONTROL VALVE ASSEMBLY/DISASSEMBLY

Precautions during Disassembly / Assembly

Precautions during Disassembly


1. Generally, hydraulic devices are precision machined, and disassembly should therefore be conducted in a clean environment to prevent entry of debris into the narrow interstices formed in the device structure.
2. Always use clean tools and cleaning oil.
3. After removing from the machine, first wash the outside of the assembly.
4. Before starting work, prepare the necessary parts for the aims and extent of disassembly. Before reassembling, as a rule you should replace all seals and O-rings, etc. Also, since a subassembly is available with the required parts if parts cannot be supplied as single items, refer to the parts catalog beforehand in preparation.

Precautions on Assembly

1. Apply clean grease or hydraulic fluid to O-rings and their countersunk parts for mounting.
2. There should be no flaws in O-rings due to forming, and no marks or heat deformation incurred when handling.
3. If permanently deformed, O-rings will not straighten out. (Make sure that no flaws are incurred by an O-ring when passing it through sharp angled sections of a spool.)
4. Do not turn over O-rings on installation. (Fouled O-rings are difficult to re-install and can easily result in oil leakage.)

Before assembling, at the mating surface of each section, make sure no cleaning oil, hydraulic fluid, etc., is adhered to the outer surface of the O-ring groove. (If you assemble with oil adhered to a mating surface, this may be mistakenly recognized as oil leakage from that location when the machine is running.)

RY9212001HYS0140US0

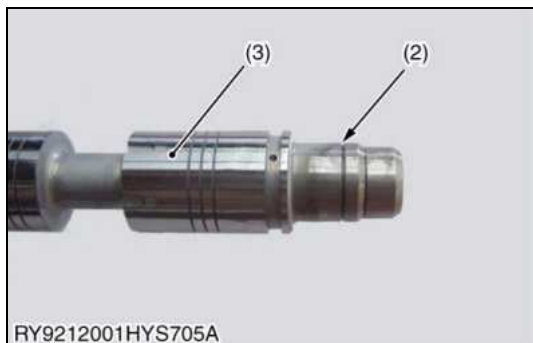

Control Valve Disassembly / Assembly Procedures

1. Loosen the nuts on one side with a ring spanner.

Tightening torque	Nut (four locations)	26.5 to 29.4 N·m 2.7 to 3.0 kgf·m 19.6 to 21.7 lbf·ft

2. Pull out each section with a tie rod, and arrange in order on a workbench.




CAUTION

- When removing each section, take care not to lose the load check valve and spring of the mating surface.
- Identify the load check valve and spring of each section so that they are not mismatched.
- Apply a location mark for each section.
- Excess torque on threads will cause defective spool operation. Therefore, be sure to use the specified torque.
- Take care over the direction of installation of each spool, align with the holes and insert slowly.

- (1) Nut (3) Spool
(2) Identification groove for spool assembly orientation

RY9212148HYS0372US0


LS Section Components

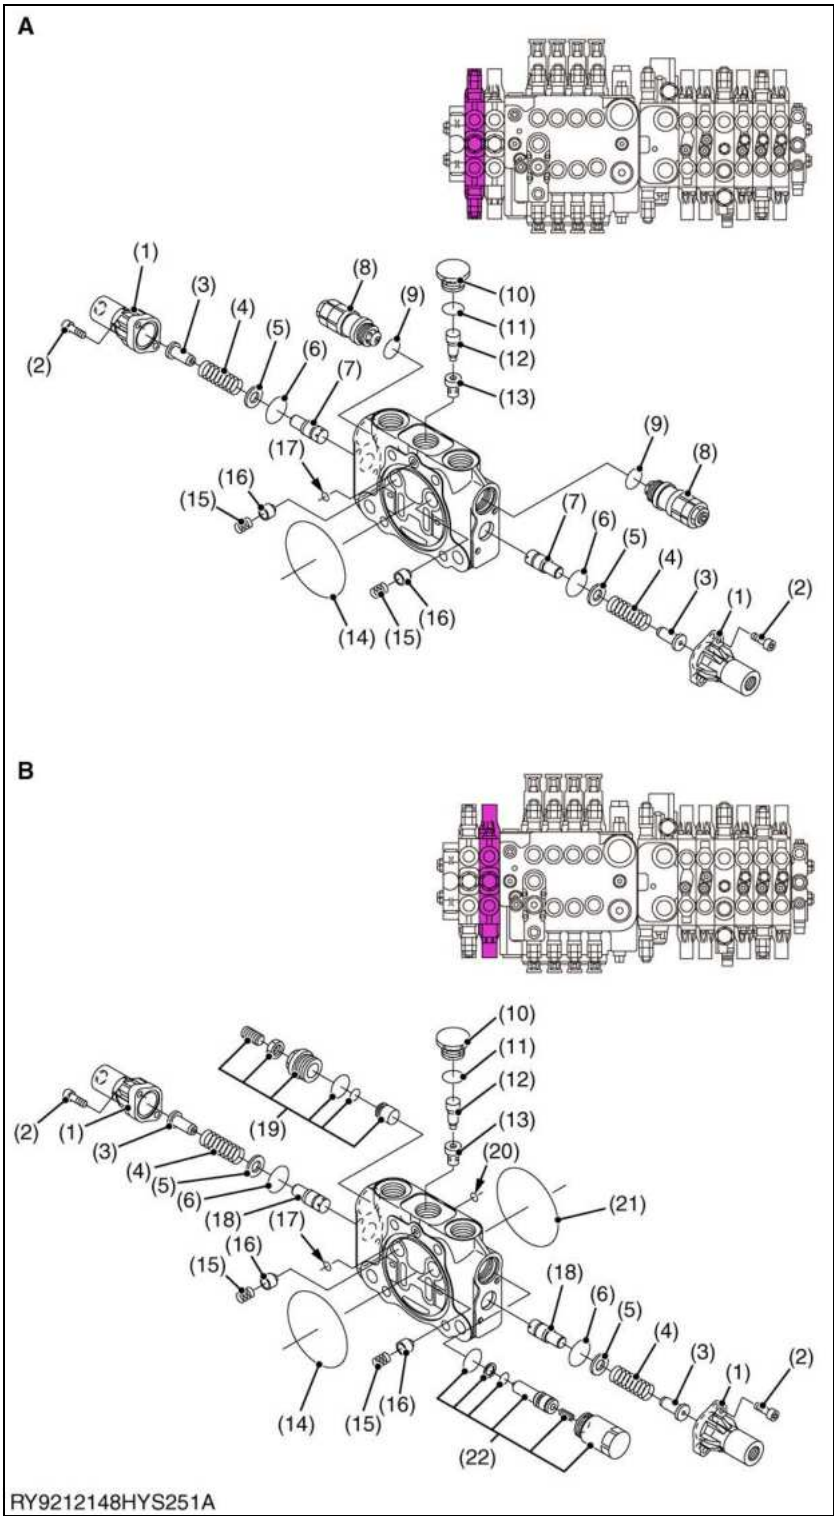

No.	Name of part	Qty	Torque
(1)	Cap	4	
(2)	Hex socket bolt	8	8.8 to 11.0 N·m 0.9 to 1.1 kgf·m 6.5 to 8.1 lbf·ft
(3)	Spring seat	4	
(4)	Spring	4	
(5)	Plate	4	
(6)	O-ring	4	
(7)	Spool	1	
(8)	Relief valve ASSY	2	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft
(9)	O-ring	2	
(10)	Plug	2	67.7 to 73.5 N·m 6.9 to 7.5 kgf·m 49.9 to 54.2 lbf·ft
(11)	O-ring	2	
(12)	Poppet	2	
(13)	Spool	2	
(14)	O-ring	2	
(15)	Spring	4	
(16)	Poppet	4	
(17)	O-ring	2	
(18)	Spool	1	
(19)	Shutoff valve	1	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft
(20)	O-ring	1	
(21)	O-ring	1	
(22)	Anti-void valve	1	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft

A : Angle section
B : Swing section

RY9212158HYS0107US0

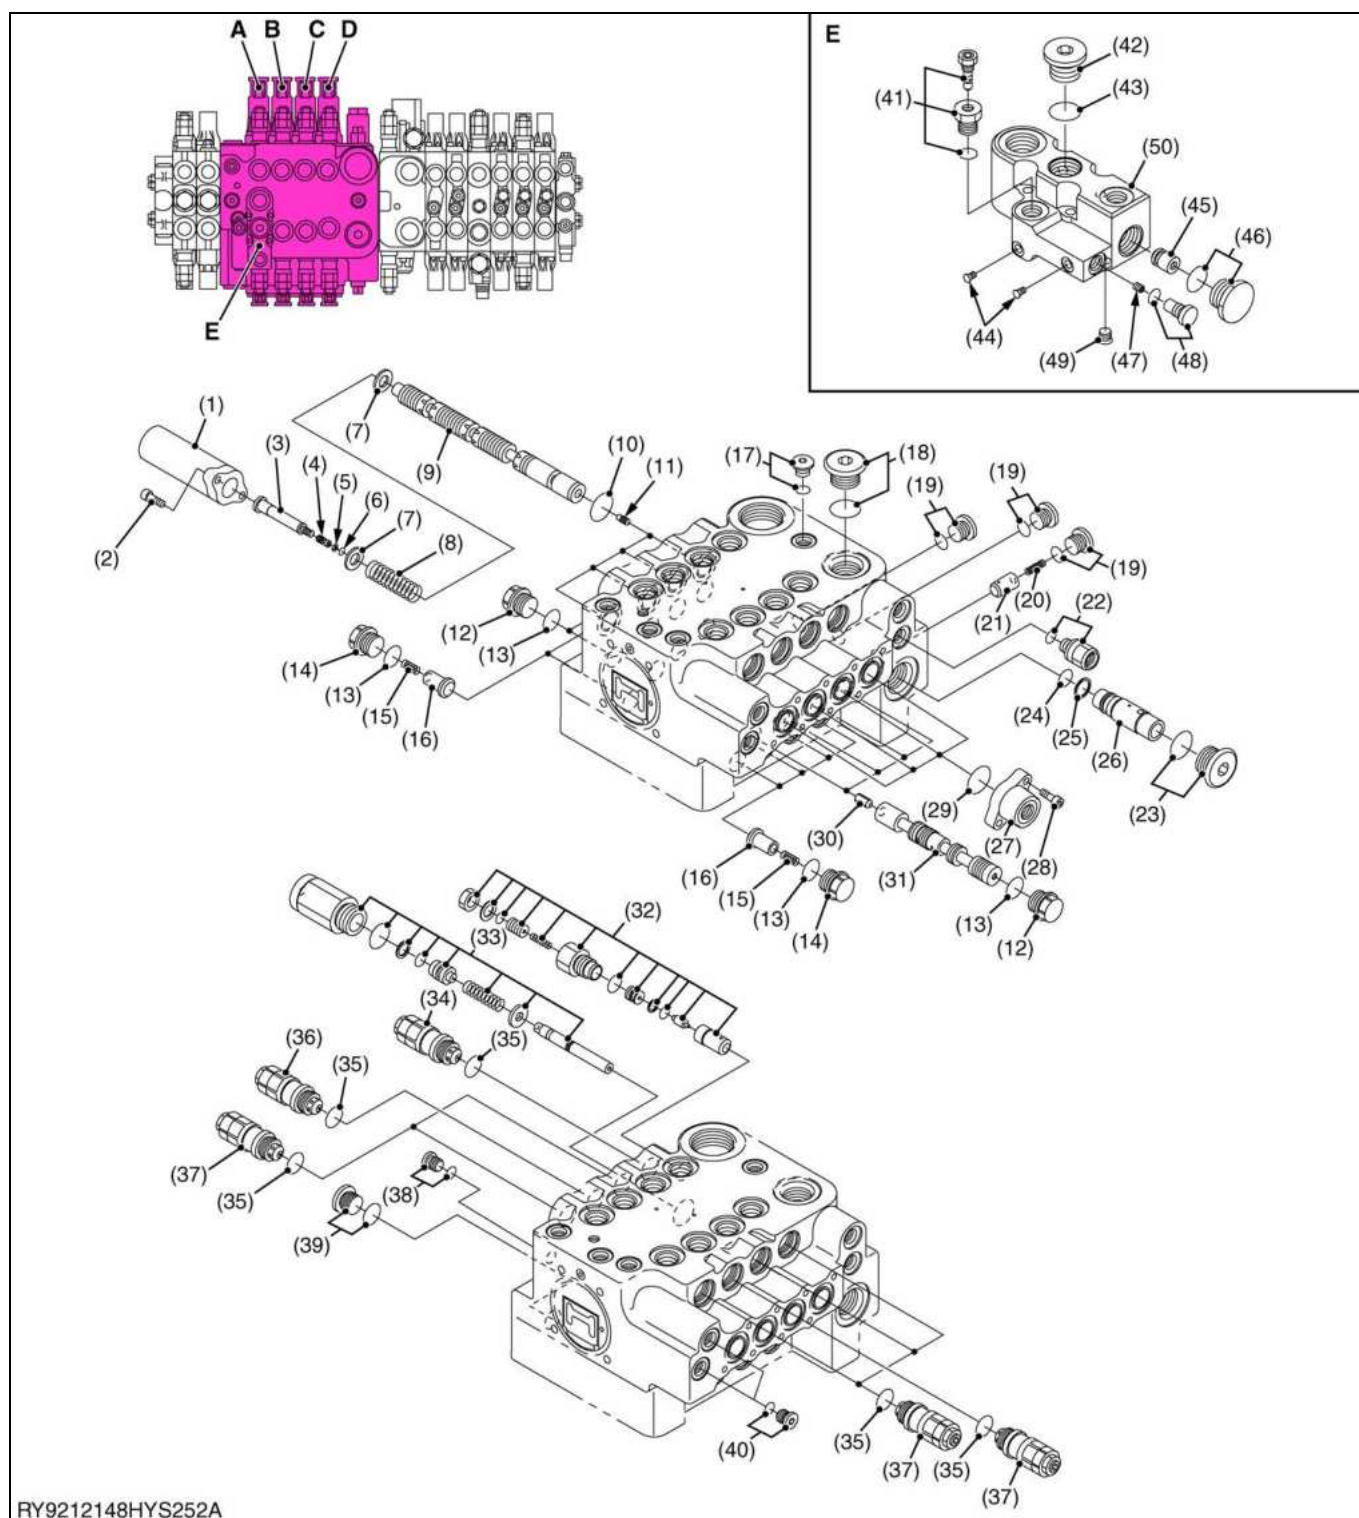Mono-block Section Components**A : Boom section****C : Bucket section****D : Arm section****E : Emergency valve****B : AUX1 section**


- In the N. Am. spec., part E is different as it has an anti-drift valve.

No.	Name of part	Qty	Torque
(1)	Cap	4	
(2)	Hex socket bolt	8	8.8 to 11.0 N·m (0.9 to 1.1 kgf·m, 6.5 to 8.1 lbf·ft)
(3)	Spool stopper	4	
(4)	Spacer	2	
(5)	Backup ring	2	

No.	Name of part	Qty	Torque
(6)	O-ring	2	
(7)	Plate	8	
(8)	Spring	4	
(9)	Spool	4	
(10)	O-ring	4	
(11)	Plug	4	
(12)	Plug	8	106.0 to 141.0 N·m (10.8 to 14.4 kgf·m, 78.2 to 104.0 lbf·ft)
(13)	O-ring	8	
(14)	Plug	8	106.0 to 141.0 N·m (10.8 to 14.4 kgf·m, 78.2 to 104.0 lbf·ft)
(15)	Spring	8	
(16)	Poppet	8	
(17)	Plug assembly	1	28.0 to 30.0 N·m (2.9 to 3.1 kgf·m, 20.7 to 22.1 lbf·ft)
(18)	Plug assembly	1	167.0 to 197.0 N·m (17.0 to 20.1 kgf·m, 123.2 to 145.3 lbf·ft)
(19)	Plug assembly	3	61.8 to 82.4 N·m (6.3 to 8.4 kgf·m, 45.6 to 60.8 lbf·ft)
(20)	Spring	1	
(21)	Poppet	1	
(22)	Plug assembly	1	28.0 to 30.0 N·m (2.9 to 3.1 kgf·m, 20.7 to 22.1 lbf·ft)
(23)	Plug assembly	1	167.0 to 197.0 N·m (17.0 to 20.1 kgf·m, 123.2 to 145.3 lbf·ft)
(24)	O-ring	1	
(25)	Backup ring	1	
(26)	Sleeve	1	
(27)	Cap	4	
(28)	Hex socket bolt	8	8.8 to 11.0 N·m (0.9 to 1.1 kgf·m, 6.5 to 8.1 lbf·ft)
(29)	O-ring	4	
(30)	Poppet	4	
(31)	Spool	4	
(32)	Main relief valve (aLS)	1	49.0 to 54.0 N·m (5.0 to 5.5 kgf·m, 36.1 to 39.8 lbf·ft)
(33)	Main relief valve (aUN)	1	167.0 to 197.0 N·m (17.0 to 20.1 kgf·m, 123.2 to 145.3 lbf·ft)
(34)	Relief valve ASSY	1	59.0 to 69.0 N·m (6.0 to 7.0 kgf·m, 43.5 to 50.9 lbf·ft)
(35)	O-ring	8	
(36)	Relief valve ASSY	2	59.0 to 69.0 N·m (6.0 to 7.0 kgf·m, 43.5 to 50.9 lbf·ft)
(37)	Relief valve ASSY	5	59.0 to 69.0 N·m (6.0 to 7.0 kgf·m, 43.5 to 50.9 lbf·ft)
(38)	Plug assembly	1	28.0 to 30.0 N·m (2.9 to 3.1 kgf·m, 20.7 to 22.1 lbf·ft)
(39)	Plug assembly	1	106.0 to 141.0 N·m (10.8 to 14.4 kgf·m, 78.2 to 104.0 lbf·ft)
(40)	Plug assembly	1	28.0 to 30.0 N·m (2.9 to 3.1 kgf·m, 20.7 to 22.1 lbf·ft)
(41)	Valve ASSY	1	28.0 to 30.0 N·m (2.9 to 3.1 kgf·m, 20.7 to 22.1 lbf·ft)
(42)	Plug	1	106.0 to 141.0 N·m (10.8 to 14.4 kgf·m, 78.2 to 104.0 lbf·ft)
(43)	O-ring	1	
(44)	Metal plug	2	
(45)	Spacer	1	
(46)	Plug assembly	1	106.0 to 141.0 N·m (10.8 to 14.4 kgf·m, 78.2 to 104.0 lbf·ft)
(47)	Orifice	1	
(48)	Plug assembly	1	11.2 to 12.4 N·m (1.1 to 1.3 kgf·m, 8.3 to 9.1 lbf·ft)
(49)	Metal plug	1	
(50)	Anti-drift housing	1	

RY9212158HYS0108US0

Independent Travel Valve and Travel Section Components

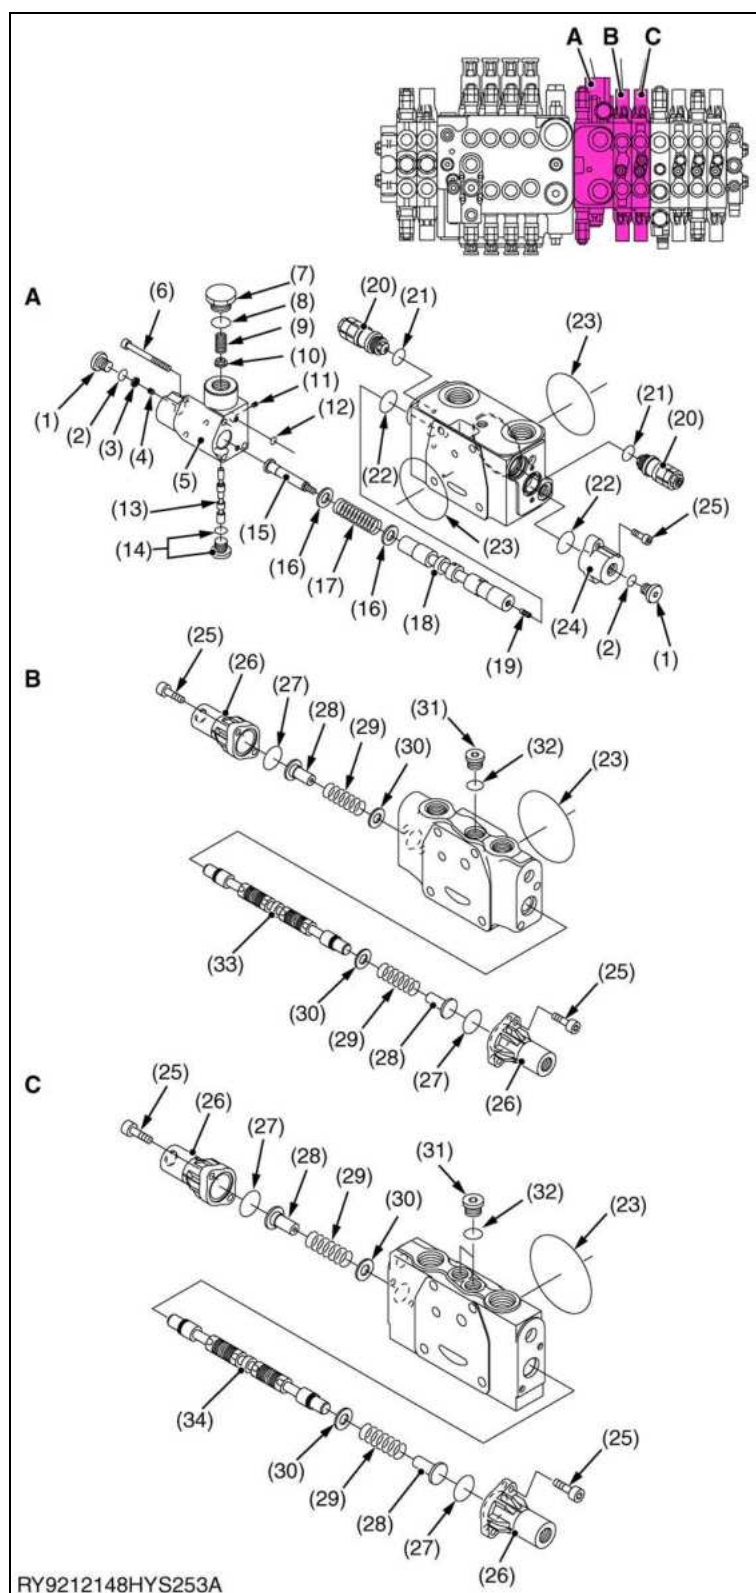

No.	Name of part	Qty	Torque
(1)	Plug	2	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(2)	O-ring	2	
(3)	Filter	1	
(4)	Spring	1	
(5)	Body assembly	1	
(6)	Hex socket bolt	3	8.8 to 11.0 N·m 0.9 to 1.1 kgf·m 6.5 to 8.1 lbf·ft
(7)	Plug	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(8)	O-ring	1	
(9)	Spring	1	
(10)	Spring seat	1	
(11)	Plug	1	
(12)	O-ring	1	
(13)	Spool	1	
(14)	Plug assembly	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(15)	Stopper	1	
(16)	Plate	2	
(17)	Spring	1	
(18)	Spool	1	
(19)	Plug	1	
(20)	Relief valve ASSY	2	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft
(21)	O-ring	2	
(22)	O-ring	2	
(23)	O-ring	4	
(24)	Cap	1	
(25)	Hex socket bolt	10	8.8 to 11.0 N·m 0.9 to 1.1 kgf·m 6.5 to 8.1 lbf·ft
(26)	Cap	4	
(27)	O-ring	4	
(28)	Spring seat	4	
(29)	Spring	4	
(30)	Plate	4	
(31)	Plug	3	30.0 to 32.0 N·m 3.1 to 3.3 kgf·m 22.1 to 23.6 lbf·ft
(32)	O-ring	3	
(33)	Spool	1	
(34)	Spool	1	


A : Independent travel valve

B : Travel right section

C : Travel left section

RY9212148HYS0375US0

Communication Valve and AUX2 Section Components

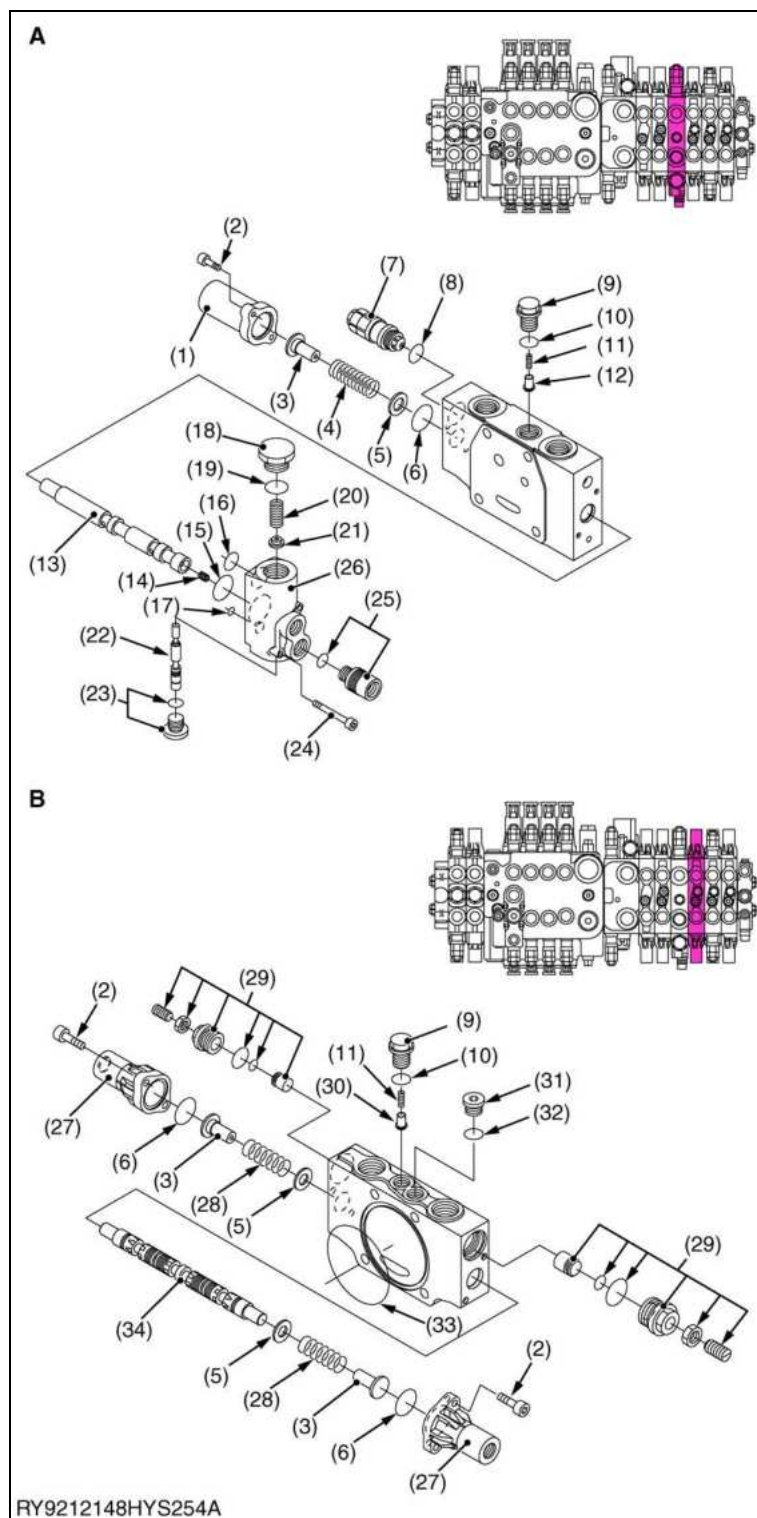


No.	Name of part	Qty	Torque
(1)	Cap	1	
(2)	Hex socket bolt	2	8.8 to 11.0 N·m 0.9 to 1.1 kgf·m 6.5 to 8.1 lbf·ft
(3)	Spring seat	4	
(4)	Spring	1	
(5)	Plate	3	
(6)	O-ring	3	
(7)	Relief valve ASSY	1	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft
(8)	O-ring	1	
(9)	Plug	2	30.0 to 32.0 N·m 3.1 to 3.3 kgf·m 22.1 to 23.6 lbf·ft
(10)	O-ring	2	
(11)	Spring	2	
(12)	Poppet	1	
(13)	Spool	1	
(14)	Plug	1	
(15)	O-ring	1	
(16)	O-ring	1	
(17)	O-ring	1	
(18)	Plug	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(19)	O-ring	1	
(20)	Spring	1	
(21)	Spring seat	1	
(22)	Spool	1	
(23)	Plug assembly	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(24)	Hex socket bolt	2	8.8 to 11.0 N·m 0.9 to 1.1 kgf·m 6.5 to 8.1 lbf·ft
(25)	Plug assembly	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(26)	Body assembly	1	
(27)	Cap	2	
(28)	Spring	2	
(29)	Shut-off valve	2	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft
(30)	Poppet	1	
(31)	Plug	1	30.0 to 32.0 N·m 3.1 to 3.3 kgf·m 22.1 to 23.6 lbf·ft
(32)	O-ring	1	
(33)	O-ring	1	
(34)	Spool	1	

A : Communication valve

B : AUX2 section

RY9212148HYS0376US0

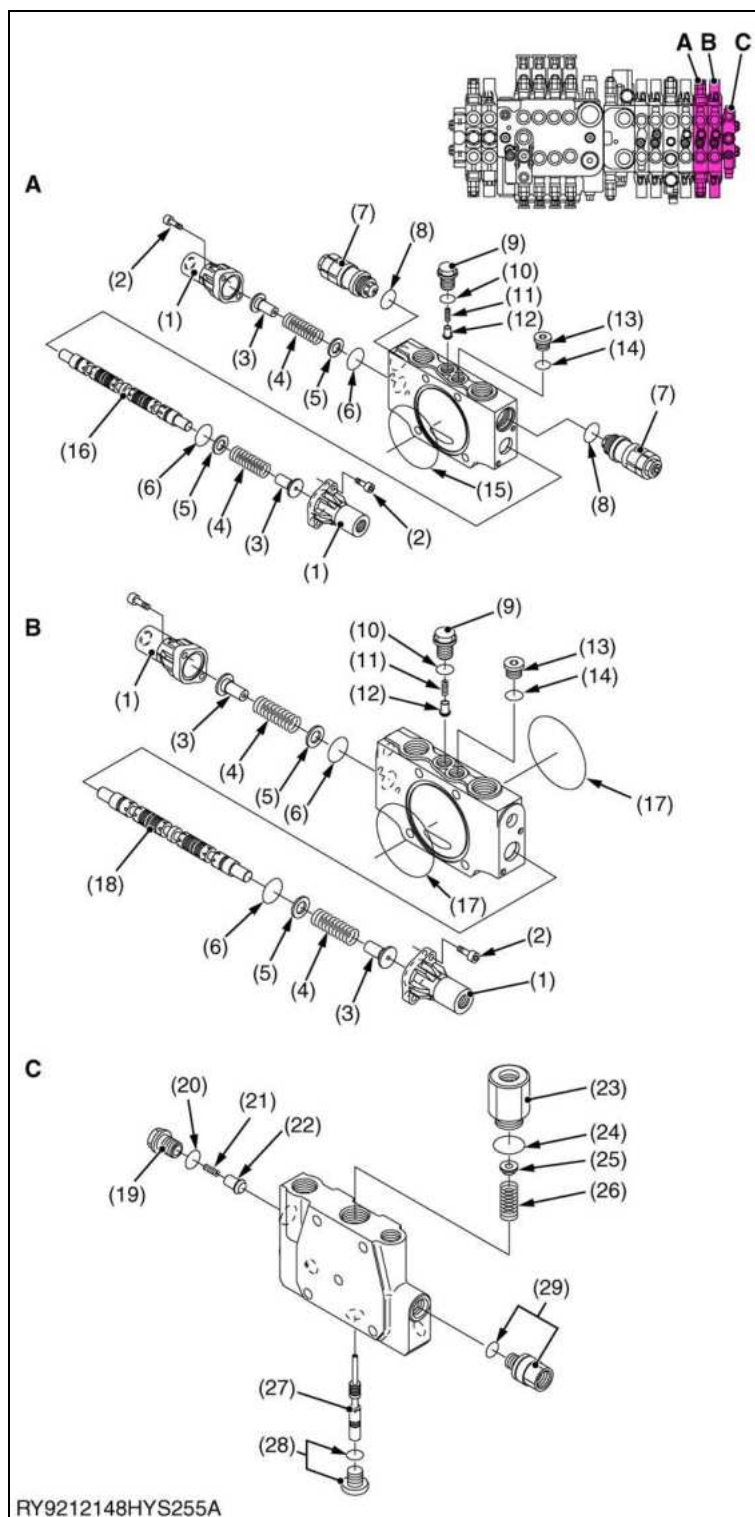Blade, Swivel and P3 Bypass Section Components

No.	Name of part	Qty	Torque
(1)	Cap	4	
(2)	Hex socket bolt	8	8.8 to 11.0 N·m 0.9 to 1.1 kgf·m 6.5 to 8.1 lbf·ft
(3)	Spring seat	4	
(4)	Spring	4	
(5)	Plate	4	
(6)	O-ring	4	
(7)	Relief valve ASSY	2	59.0 to 69.0 N·m 6.0 to 7.0 kgf·m 43.5 to 50.9 lbf·ft
(8)	O-ring	2	
(9)	Plug	2	30.0 to 32.0 N·m 3.1 to 3.3 kgf·m 22.1 to 23.6 lbf·ft
(10)	O-ring	2	
(11)	Spring	2	
(12)	Poppet	2	
(13)	Plug	2	30.0 to 32.0 N·m 3.1 to 3.3 kgf·m 22.1 to 23.6 lbf·ft
(14)	O-ring	2	
(15)	O-ring	1	
(16)	Spool	1	
(17)	O-ring	2	
(18)	Spool	1	
(19)	Plug	1	30.0 to 32.0 N·m 3.1 to 3.3 kgf·m 22.1 to 23.6 lbf·ft
(20)	O-ring	1	
(21)	Spring	1	
(22)	Poppet	1	
(23)	Plug	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(24)	O-ring	1	
(25)	Spring seat	1	
(26)	Spring	1	
(27)	Spool	1	
(28)	Plug assembly	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft
(29)	Plug assembly	1	28.0 to 30.0 N·m 2.9 to 3.1 kgf·m 20.7 to 22.1 lbf·ft

A : Blade section

B : Swivel section

C : P3 bypass section

RY9212148HYS0377US0

3. SWIVEL MOTOR

[1] SWIVEL MOTOR REMOVAL AND INSTALLATION

CAUTION

- When removing a hydraulic device after operating the mini-excavator, lower the bucket and blade to the ground and turn off the engine.
- Each of the devices and the hydraulic oil are hot right after stopping the mini-excavator. The oil is hot enough to cause a burn, so always let it cool down before starting any work.
- Oil gushing out under pressure has enough force to injure you by piercing your skin. Always relieve any pressure remaining in the system prior to working to remove any hydraulic equipment or lines.

RY9212148HYS0149US0



RY9212148HYS131A


1. Remove the cover, electric fan, tank cover and center cover.

[Work Tip]

- Move the condenser toward the rear of the machine with the AC hoses still installed.

(1) Cover	(3) Tank cover
(2) Electric fan	(4) Center cover

RY9212148HYS0212US0

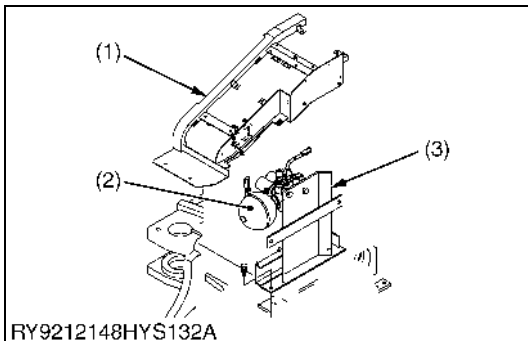

RY9212148HYS132A


2. Remove the center frame, unload valve and unload valve bracket in order.

■ IMPORTANT

- **Disconnect the wire harness prior to removing the center frame.**
- **Plug the disconnected hoses and adapters.**

(1) Center frame	(3) Unload valve bracket
(2) Unload valve	

RY9212148HYS0213US0

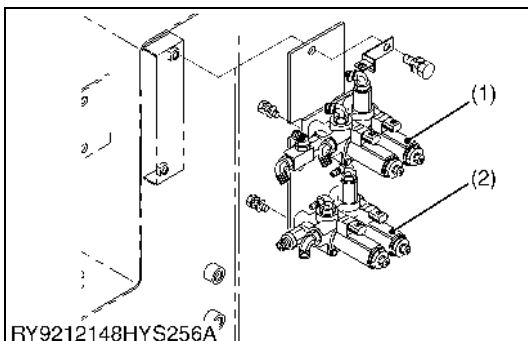

RY9212148HYS256A


3. Remove the AUX1 and AUX2 solenoid valves.

■ IMPORTANT

- **Plug the disconnected hoses and adapters.**

(1) AUX1 solenoid valve	(2) AUX2 solenoid valve

RY9212148HYS0214US0

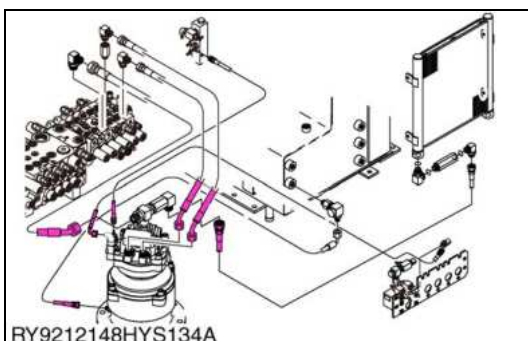

RY9212148HYS134A

4. Disconnect all the hoses connected to the swivel motor.

■ IMPORTANT

- **Plug the disconnected hoses and adapters.**

RY9212148HYS0215US0




Swivel motor adapter angles

5. Remove the 8 swivel motor mounting bolts and remove the swivel motor.

Tightening torque	Bolt	259.9 to 304.0 N·m 26.5 to 31.0 kgf·m 191.7 to 224.2 lbf·ft

Swivel motor weight	Approx. 80 kg (180 lbs)

RY9212148HYS0216US0

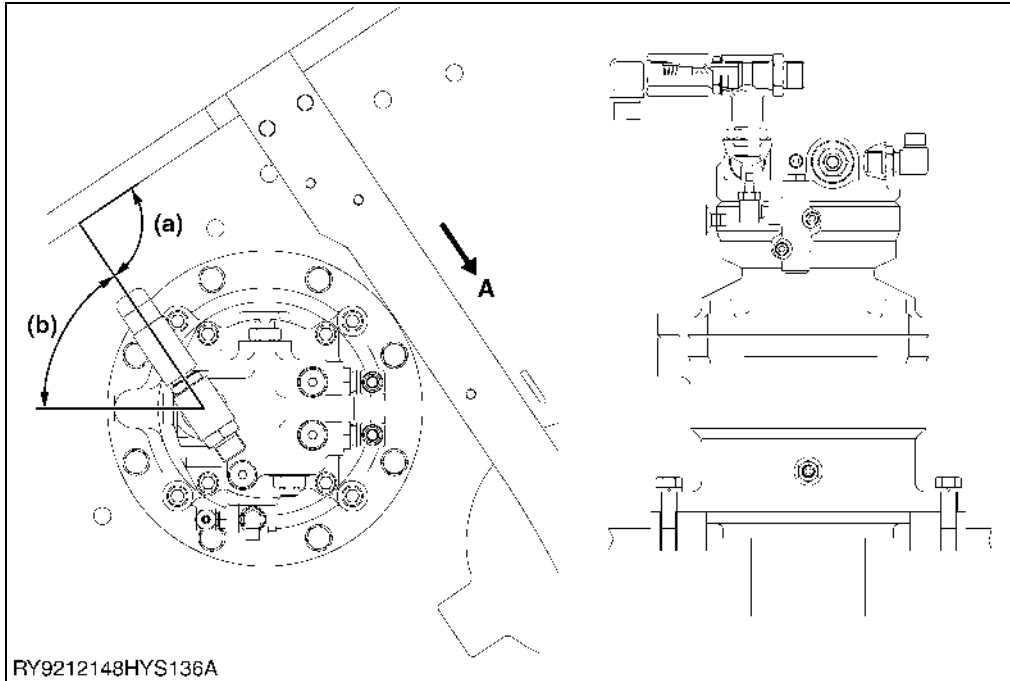


(a) 90 ° (1.57 rad)

(b) 55 ° (0.96 rad)

A : Front side

RY9212148HYS0217US0

[2] SWIVEL MOTOR DISASSEMBLY/ASSEMBLY PROCEDURES

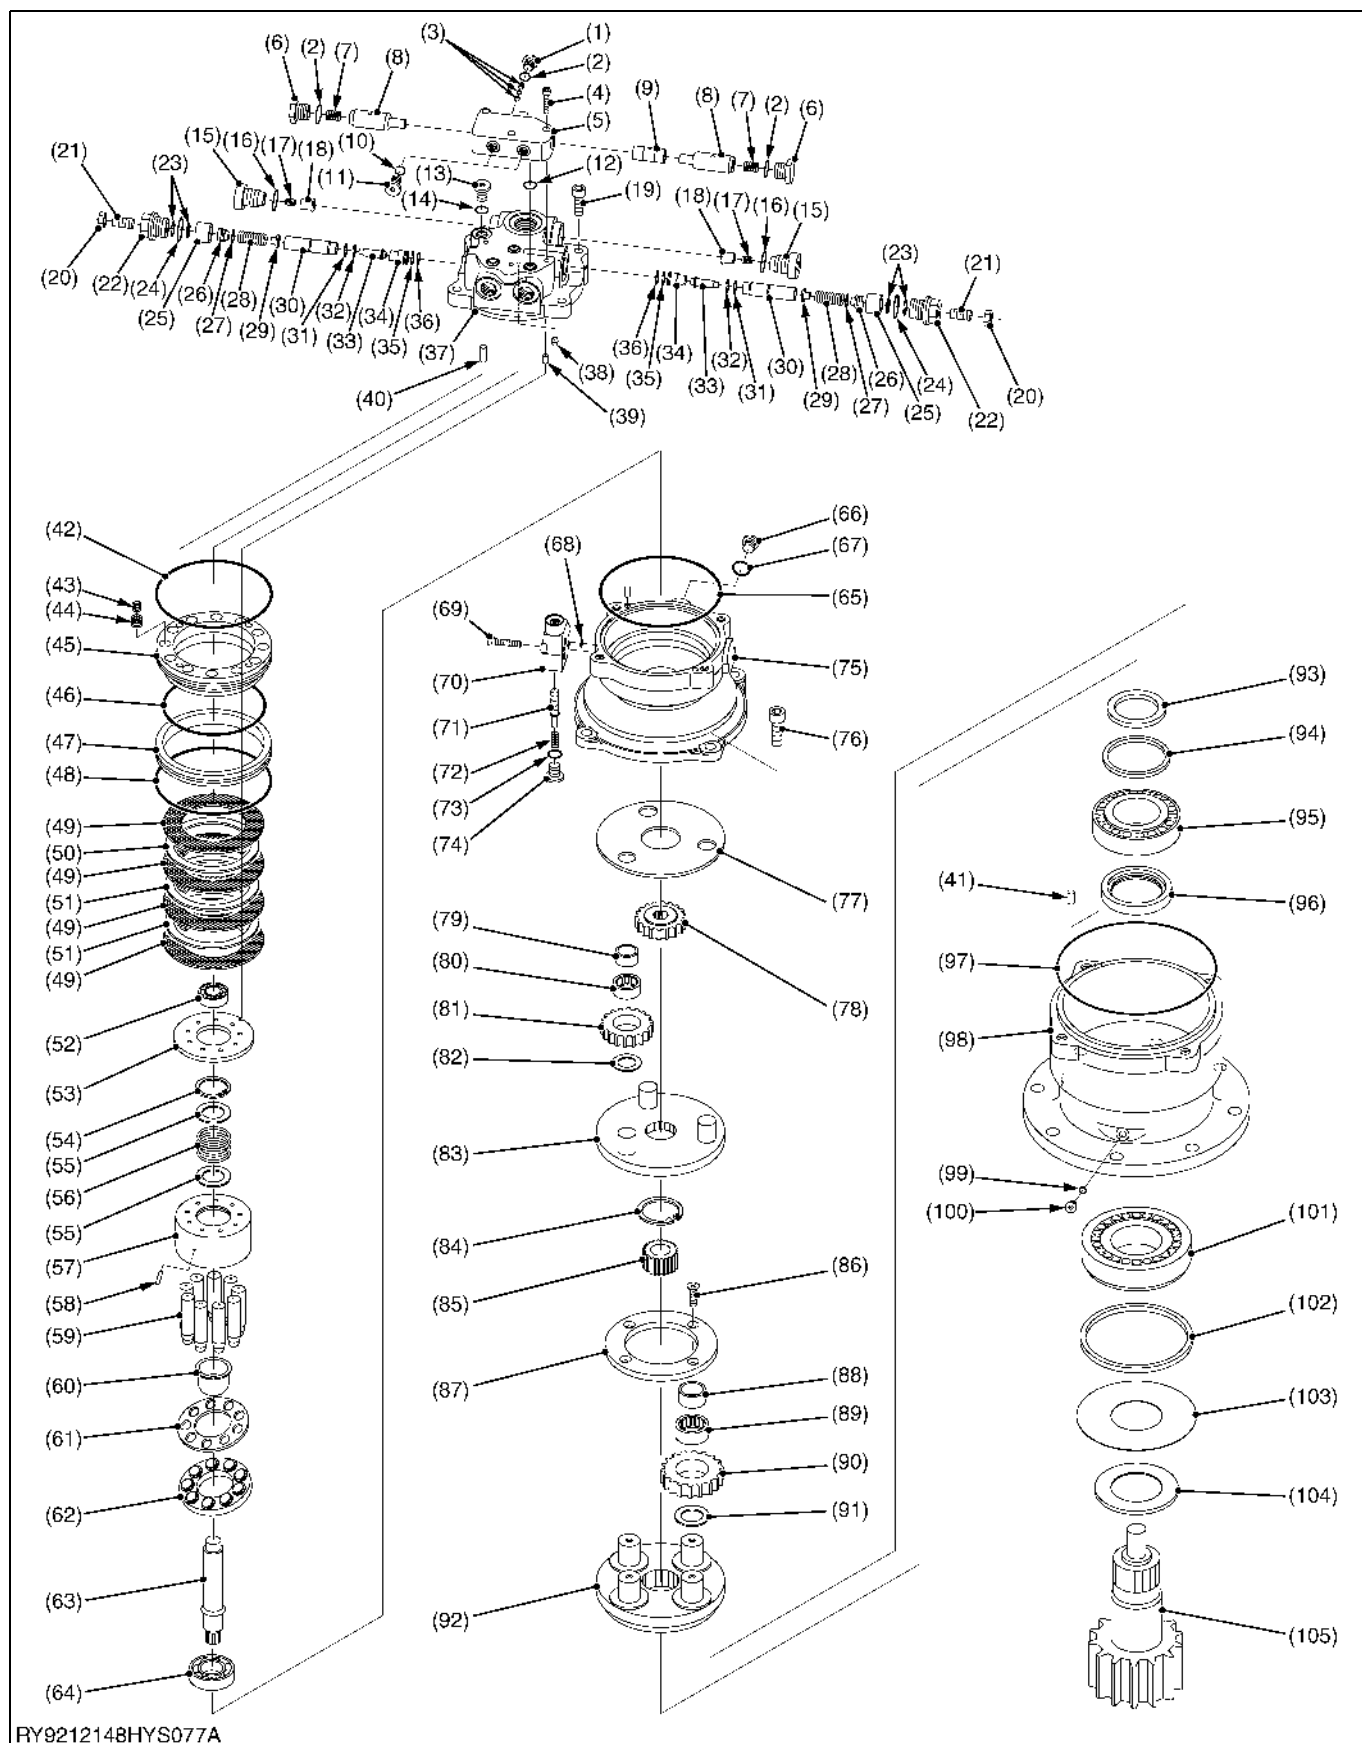


(To be continued)

(Continued)

No.	Part Name	Qty	No.	Part Name	Qty	No.	Part Name	Qty
(1)	Plug	2	(36)	O-ring	2	(71)	Spool	1
(2)	O-ring	4	(37)	Cover	1	(72)	Spring	1
(3)	Orifice	2	(38)	Orifice	1	(73)	O-ring	1
(4)	Hex socket bolt	3	(39)	Knock pin	1	(74)	Plug	1
(5)	Body	1	(40)	Pin	2	(75)	Housing	1
(6)	Plug	2	(41)	Pin	2	(76)	Hex socket bolt	4
(7)	Spring	2	(42)	O-ring	1	(77)	Plate	1
(8)	Check valve	2	(43)	Spring, small	8	(78)	Drive gear	1
(9)	Sleeve	1	(44)	Spring, large	12	(79)	Inner race	3
(10)	O-ring	2	(45)	Brake piston	1	(80)	Needle bearing	3
(11)	Plug	2	(46)	O-ring	1	(81)	Planetary gear A	3
(12)	O-ring	3	(47)	Collar	1	(82)	Washer	3
(13)	Plug	1	(48)	O-ring	1	(83)	Holder	1
(14)	O-ring	1	(49)	Disc	4	(84)	Circlip	1
(15)	Plug	2	(50)	Plate A	1	(85)	Sun gear	1
(16)	O-ring	2	(51)	Plate B	2	(86)	Hex flange bolt	4
(17)	Spring	2	(52)	Ball bearing	1	(87)	Plate	1
(18)	Poppet	2	(53)	Valve plate	1	(88)	Inner race	4
(19)	Hex socket bolt	4	(54)	Circlip	1	(89)	Needle bearing	4
(20)	Nut	2	(55)	Washer	2	(90)	Planetary gear B	4
(21)	Set screw	2	(56)	Spring	1	(91)	Washer	4
(22)	Plug	2	(57)	Cylinder block	1	(92)	Holder	1
(23)	Backup ring	4	(58)	Pin	3	(93)	Plate	2
(24)	O-ring	2	(59)	Piston ASSY	9	(94)	Collar	1
(25)	Piston	2	(60)	Retainer holder	1	(95)	Tapered roller bearing	1
(26)	Spring guide	2	(61)	Retainer plate	1	(96)	Oil seal	1
(27)	O-ring	2	(62)	Swash-plate	1	(97)	O-ring	1
(28)	Spring	2	(63)	Shaft	1	(98)	Housing	1
(29)	Spring seat	2	(64)	Ball bearing	1	(99)	O-ring	1
(30)	Housing	2	(65)	O-ring	1	(100)	Plug	1
(31)	Backup ring	2	(66)	Plug	1	(101)	Tapered roller bearing	1
(32)	O-ring	2	(67)	O-ring	1	(102)	Collar	1
(33)	Poppet	2	(68)	O-ring	2	(103)	Plate	1
(34)	Poppet seat	2	(69)	Hex socket bolt	2	(104)	Plate	1
(35)	Backup ring	2	(70)	Valve body	1	(105)	Shaft	1

RY9212148HYS0097US0

(1) Disassembly Procedures

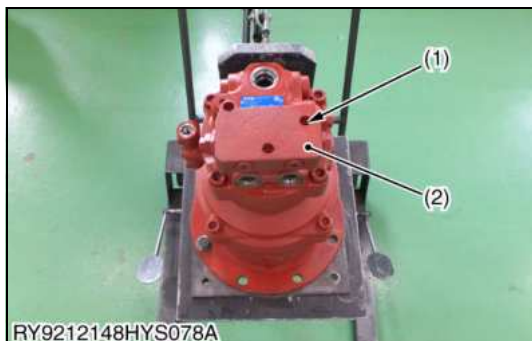

1. Mount the swivel motor on an assembly platform.
2. Remove the hex socket bolts and then the body.
 - Tool to use: 6 mm hex socket

(1) Hex socket bolt (2) Body

RY9212148HYS0098US0



3. Remove the hex socket bolts and then the valve body.
 - Tool to use: 5 mm hex socket

(1) Hex socket bolt (2) Valve body

RY9212148HYS0099US0



4. Remove the relief valve and loosen the plug (both sides).
 - Tool to use: 27 mm box wrench, 12 mm hex socket

(1) Relief valve (2) Plug

RY9212148HYS0100US0



5. Remove the hex socket bolts and then the cover.
 - Tool to use: 12 mm hex socket

(1) Hex socket bolt (2) Cover

RY9212148HYS0101US0



6. Remove the plug, spring and poppet in order.
 - Tool to use: 12 mm hex socket

(1) Plug (3) Poppet
(2) Spring

RY9212148HYS0102US0



7. Remove the large and small springs.

(1) Spring, large

(2) Spring, small

RY9212148HYS0103US0



8. While pressing down on the brake piston with a rag, blow air through the brake release oil passage hole and remove the brake piston.

- Tool to use: air gun

**CAUTION**

- Be careful because if you blast air into the passage, the brake piston may come flying out.

(A) Brake release oil passage hole

RY9212148HYS0104US0



9. Remove the 1 disc and then the cylinder block ASSY.

(1) Disc

(2) Cylinder block ASSY

RY9212148HYS0105US0



10. Remove the collar.

- Tool to use: Slotted screwdriver

**CAUTION**

- Be careful not to scratch the plate with the screwdriver.

(1) Collar

RY9212148HYS0106US0



11. Remove the plate, disc and swash-plate.

(1) Plate

(3) Swash-plate

(2) Disc

RY9212148HYS0107US0



12. Remove the shaft. Remove the hex socket bolts and then the housing.

- Tool to use: 12 mm hex socket

(1) Shaft	(3) Housing
(2) Hex socket bolt	

RY9212148HYS0108US0



13. Remove the plate.

- (1) Plate

RY9212148HYS0109US0



14. Remove the driver gear, planetary gear A, needle bearing, inner race and washer and then remove the flange holder.

(1) Drive gear	(4) Inner race
(2) Planetary gear A	(5) Washer
(3) Needle bearing	(6) Flange holder

RY9212148HYS0110US0



15. Remove the sun gear, hex flange holder and then the plate.

- Tool to use: 5 mm hex socket



CAUTION

- If the bolts are tight and you can't loosen them, heat them with a heat gun or the like.
- Always use a tap to clean the threads of any thread lock on them..

(1) Sun gear	(3) Plate
(2) Hex flange bolt	

RY9212148HYS0111US0



16. Remove planetary gear B, needle bearing, inner race and washer and then remove the flange holder.

(1) Planetary gear B	(4) Washer
(2) Needle bearing	(5) Flange holder
(3) Inner race	

RY9212148HYS0112US0



17. Remove the housing from the assembly platform and then remove the collar.

CAUTION

- If the plate comes off, the shaft may fall, so take care in handling it.
- Always have the bottom of the shaft touching the ground when removing the collar and plate.

(1) Collar

(2) Plate

RY9212148HYS0113US0



18. Remove the plate and then the shaft.

- Tool to use: punch and hammer

(1) Plate

(2) Shaft

RY9212148HYS0114US0



19. Remove the tapered roller bearing and the plug.

- Tool to use: 5 mm hex socket

(1) Tapered roller bearing

(2) Plug

RY9212148HYS0115US0



20. Remove the oil seal.

- Tool to use: slotted screwdriver and hammer

(1) Oil seal

RY9212148HYS0116US0

(2) Assembly Procedures

- Prior to assembly, clean all of the parts and make sure there is no dirt or other debris sticking to them.
- Always replace all of the O-rings, backup rings and oil seals with new ones.

RY9212148HYS0117US0



1. Install the oil seal.

- Tool to use: hammer
- Tool to use: Oil seal installation tool

■ IMPORTANT

- **Apply grease to the lip and circumference of the oil seal.**

(a) Oil seal installation tool

RY9212148HYS0118US0



2. Apply grease to the pinion shaft's tapered roller bearing.

■ IMPORTANT

- **Brand of grease: Shell Alvania Grease**
- **Amount of grease: Approx. 66 to 75 g (0.15 to 0.17 lbs)**

(1) Pinion shaft

RY9212148HYS0119US0



3. Mount the housing on the pinion shaft and install the tapered roller bearing.

■ IMPORTANT

- **Make sure the plug is not installed.**
- **If you mount the pinion shaft with the plug in place, the internal pressure rises and may blow the oil seals.**

(1) Pinion shaft

(a) Plug installation position

(2) Housing

(3) Tapered roller bearing

RY9212148HYS0120US0



4. Use a press on the plate installation tool to install the plate.

Press pressure	Factory specification	11770 N 1200 kgf 2646 lbs

- Tool to use: Plate installation tool



CAUTION

- **If the plate comes off, the shaft may fall, so take care in handling it.**

(1) Plate

(b) Plate installation tool


RY9212148HYS0121US0



5. Install the collar.

(1) Collar

RY9212148HYS0122US0

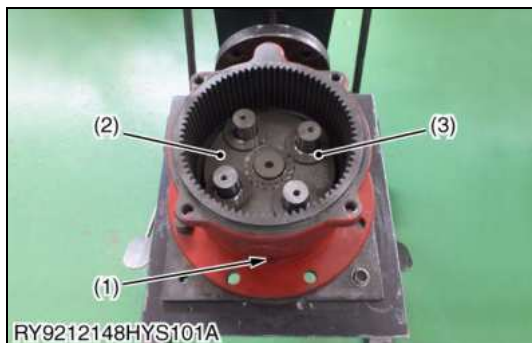

6. Put the housing on the assembly platform and install the plug.
7. Install the holder and the washer.

Tightening torque	Plug	15.7 ± 0.8 N·m 1.6 ± 0.1 kgf·m 11.6 ± 0.6 lbf·ft

- Tool to use: 5 mm hex socket

■ **IMPORTANT**

- **Install with the rounded side of the washer down.**

- (1) Plug (3) Washer
(2) Holder

RY9212148HYS0123US0



8. Install the inner race, needle bearing and planetary gear B in order.

■ **IMPORTANT**

- **Take care to install the gear facing the right direction.**

- (1) Inner race (3) Planetary gear B
(2) Needle bearing

RY9212148HYS0124US0



9. Install the plate and then the sun gear.

■ **IMPORTANT**


- **Apply a thread lock (Loctite 242) to the hex flange bolts.**

Tightening torque	Hex flange bolt	24.5 ± 4.9 N·m 2.5 ± 0.5 kgf·m 18.1 ± 3.6 lbf·ft

- Tool to use: 5 mm hex socket

- (1) Plate (3) Sun gear
(2) Hex flange bolt

RY9212148HYS0125US0

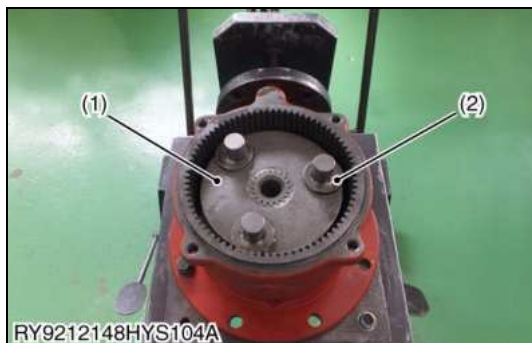


10. Install the holder and the washer.

■ **IMPORTANT**

- **Install with the rounded side of the washer down.**

- (1) Holder (2) Washer

RY9212148HYS0126US0

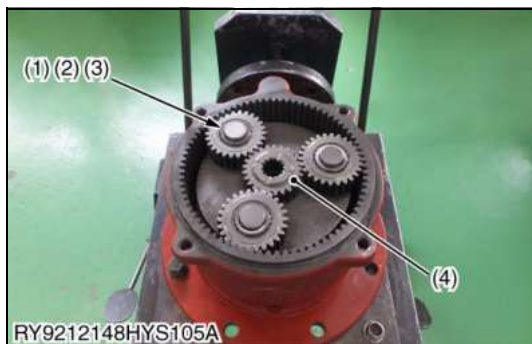

11. Install the inner race, needle bearing, planetary gear A and drive gear in order.

- (1) Inner race (3) Planetary gear A
(2) Needle bearing (4) Drive gear

RY9212148HYS0127US0



12. Install the plate and O-ring.

■ **IMPORTANT**

- Apply grease to the O-ring.

(1) Plate

(2) O-ring

RY9212148HYS0128US0



When parts inside the gear case have been replaced, take measurement C between the inner race and the housing and then select the correct plate.

- Tool to use: depth gauge

[Measurement Method]

Measurement A (Photo a) - measurement B (Photo b) = measurement C

- Housing height: measurement A (Photo a)
- Height between inner race and highest point of housing: measurement B (Photo b)



Measure- ment C	Less than 5.3 to 5.8mm (0.21 to 0.23 in.)	Less than 5.3 to 5.8mm (0.21 to 0.23 in.)	6.5 to 7.0 mm (0.26 to 0.28 in.)
Plate to use	2.8 mm (0.11 in.)	2.3 mm (0.09 in.)	1.8 mm (0.07 in.)

RY9212148HYS0148US0



13. Install the housing.

Tightening torque	Hex socket bolt	177.0 ± 10.0 N·m 18.0 ± 1.0 kgf·m 130.5 ± 7.5 lbf·ft

- Tool to use: 12 mm hex socket

(1) Housing

RY9212148HYS0130US0



14. Tap the ball bearing in and install the shaft.

■ **IMPORTANT**

- Face the ball bearing so the inscription is up.
- Apply grease to the circumference of the ball bearing.

(1) Ball bearing

(2) Shaft

RY9212148HYS0131US0



15. Install the swash-plate.

■ **IMPORTANT**

- Install with the tapered side down.
- Apply grease to the back of the swash-plate.

(1) Swash-plate

RY9212148HYS0132US0




16. Turn the assembly platform 1.6 rad (90°) and install the cylinder block.

■ **IMPORTANT**

- After installing the part, turn the platform back.

(1) Cylinder block

RY9212148HYS0133US0

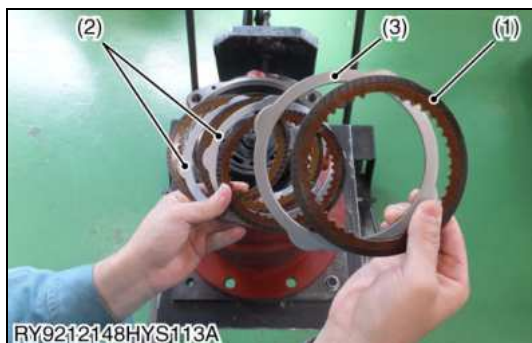

17. Install the disc, plate B and plate A.

■ **IMPORTANT**

- Install plates A and B with their rounded side up.
- Be careful to install the disc and plates in order.
- Plate A: thickness 3.0mm (0.063 in.)
- Plate B: thickness 1.6 mm (0.118 in.)

(1) Disc

(3) Plate A

(2) Plate B

RY9212148HYS0134US0



18. Mount the O-ring on the collar and install it in the housing.

■ **IMPORTANT**

- Apply grease to the collar and the O-ring.

(1) Collar

(3) Housing

(2) O-ring

RY9212148HYS0135US0



19. Mount the O-ring on the brake piston and install it in the housing.


■ **IMPORTANT**

- Apply grease to the O-ring.
- Take care to position the holes in the brake piston correctly.

(1) Brake piston

(2) O-ring

RY9212148HYS0136US0

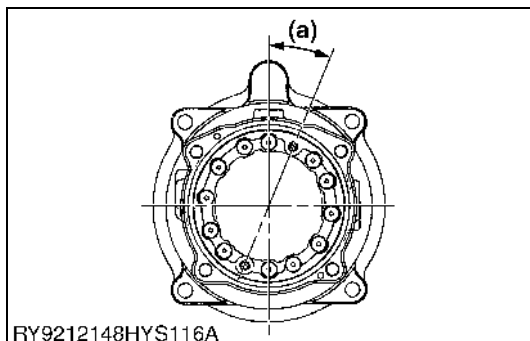

Brake piston hole alignment positions

Install so the pin hole is at position ●.

- (a) 0.393 rad (22.5 °)

RY9212148HYS0137US0




20. Install the large and small springs and the O-ring.

■ IMPORTANT

- Apply grease to the O-ring.

- (1) Spring, large (3) O-ring
(2) Spring, small

RY9212148HYS0138US0

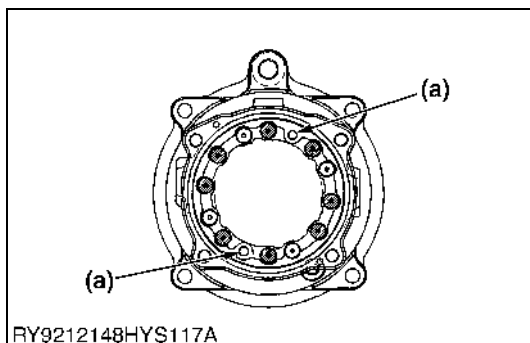

Small spring installation position

Install the small springs at position ●.

- (a) Pin hole position

RY9212148HYS0139US0



21. Insert the poppet and spring into the cover and mount the plug loosely (both sides).

■ IMPORTANT

- Apply hydraulic fluid to the spool.

- (1) Poppet (3) Plug
(2) Spring

RY9212148HYS0140US0



22. Install the ball bearing and valve plate on the cover.

■ IMPORTANT

- Take care to face the valve plate correctly.
- Apply grease to the back of the valve plate so it will not fall off.

- (1) Ball bearing (2) Valve plate

RY9212148HYS0141US0



23. Install the cover.

■ **IMPORTANT**

- Take care so the valve plate does not fall off.

Tightening torque	Hex socket bolt	177.0 ± 10.0 N·m 18.0 ± 1.0 kgf·m 130.5 ± 7.5 lbf·ft

- Tool to use: 12 mm hex socket

(1) Cover

RY9212148HYS0142US0



24. Install the plug and relief valve.

■ **IMPORTANT**

- Apply hydraulic oil to the relief valve.

Tightening torque	Plug	157.0 ± 10.0 N·m 16.0 ± 1.0 kgf·m 115.5 ± 7.5 lbf·ft
	Relief valve	373.0 ± 20.0 N·m 38.05 ± 2.05 kgf·m 275.0 ± 15.0 lbf·ft

- Tool to use: 12 mm hex wrench, 27 mm box wrench

(1) Plug

(2) Relief valve

RY9212148HYS0143US0



25. Install the O-rings and valve body.

■ **IMPORTANT**

- Apply grease to the O-ring.

Tightening torque	Hex socket bolt	9.8 ± 1.0 N·m 1.0 ± 0.1 kgf·m 7.2 ± 0.7 lbf·ft

- Tool to use: 5 mm hex socket

(1) O-ring

(2) Valve body

RY9212148HYS0144US0



26. Install the O-rings and body.

■ **IMPORTANT**

- Apply grease to the O-ring.

Tightening torque	Hex socket bolt	32.4 ± 2.0 N·m 3.3 ± 0.2 kgf·m 23.9 ± 1.5 lbf·ft


- Tool to use: 6 mm hex socket

(1) O-ring

(2) Body

RY9212148HYS0145US0

(3) Special Tools

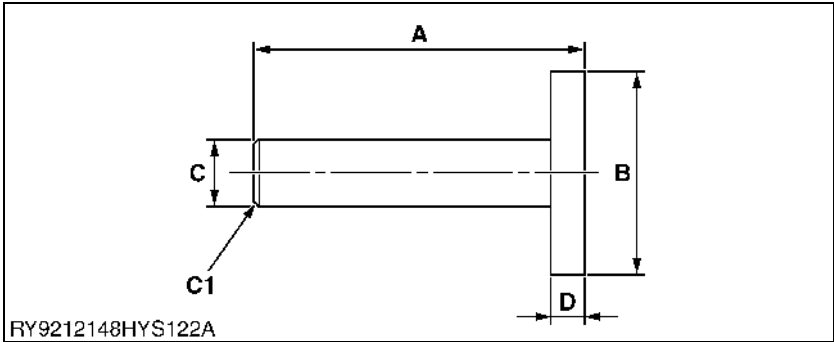


(a) Oil seal installation tool

A	150 mm (5.9 in.)
B	ϕ 94.8 - 94.9 mm (ϕ 3.73 - 3.74 in.)
C	ϕ 30 mm (ϕ 1.18 in.)
D	15 mm (0.59 in.)
C1	1 mm (0.04 in.) bevel

- If angle is not specified, there must not be any burrs. Corner to be max of R0.4 mm (0.016 in.)

RY9212148HYS0146US0

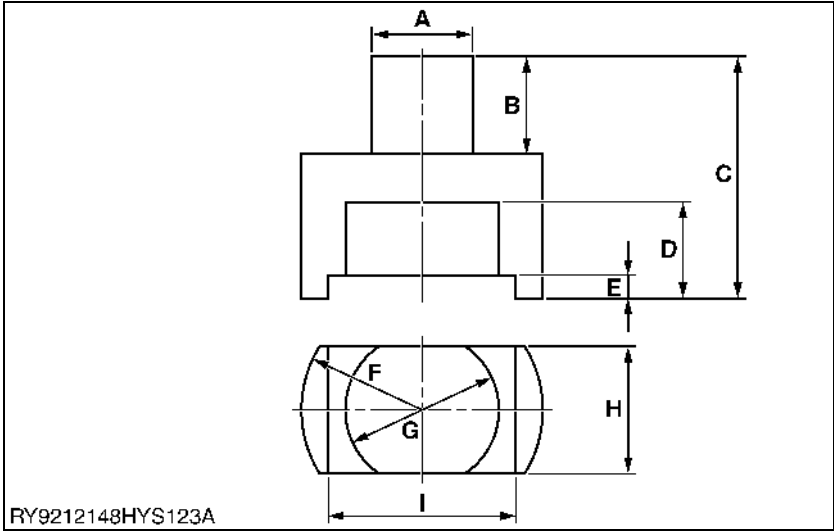

(b) Plate installation tool

A	ϕ 40 mm (ϕ 1.57 in.)
B	40 mm (1.57 in.)
C	100 mm (3.93 in.)
D	40 mm (1.57 in.)
E	10 mm (0.39 in.)
F	50 mm (1.96 in.)
G	ϕ 63.2 - 63.4 mm (ϕ 2.48 - 2.49 in.)
H	53 mm (2.08 in.)
I	78.2 to 78.4 mm (3.07 to 3.08 in.)

- If angle is not specified, there must not be any burrs. Corner to be max of R0.4 mm (0.016 in.)

RY9212148HYS0147US0

4. SWIVEL JOINT


[1] REMOVAL AND INSTALLATION OF THE SWIVEL JOINT



CAUTION

- When removing a hydraulic device after operating the mini-excavator, lower the bucket and blade to the ground and turn off the engine.
- Each of the devices and the hydraulic oil are hot right after stopping the mini-excavator. The oil is hot enough to cause a burn, so always let it cool down before starting any work.
- Oil gushing out under pressure has enough force to injure you by piercing your skin. Always relieve any pressure remaining in the system prior to working to remove any hydraulic equipment or lines.

RY9212148HYS0149US0

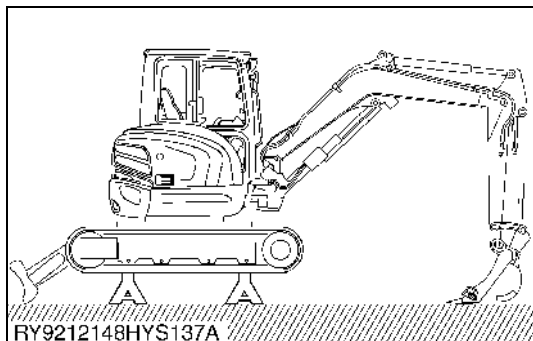

1. Use the front and the blade to jack up the excavator.



CAUTION

- Always put stands under the track while the excavator is jacked up.

RY9212148HYS0218US0




2. Remove the cover, electric fan, tank cover and center cover.

[Work Tip]

- Move the condenser toward the rear of the machine with the AC hoses still installed.

(1) Cover	(3) Tank cover
(2) Electric fan	(4) Center cover

RY9212148HYS0219US0

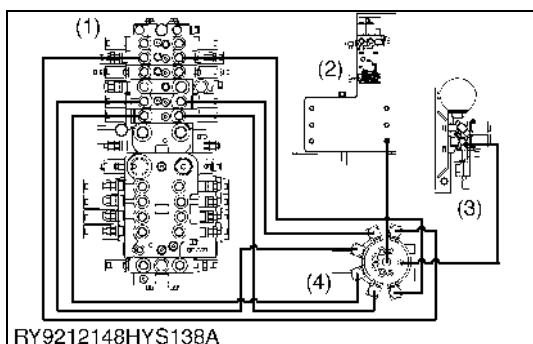

3. Disconnect the 2-speed pilot hose and drain hose from the swivel joint.
4. Disconnect the R/L travel fwd/bwd hoses from the control valve side.

■ IMPORTANT

- Plug the disconnected hoses and adapters.

(1) Control valve	(3) Unload valve
(2) Hydraulic oil tank	(4) Swivel joint

RY9212148HYS0220US0




5. Remove the bottom cover of the track frame and disconnect all the hoses connected to the swivel joint body.

■ IMPORTANT

- Plug the disconnected hoses and adapters.

RY9212148HYS0221US0

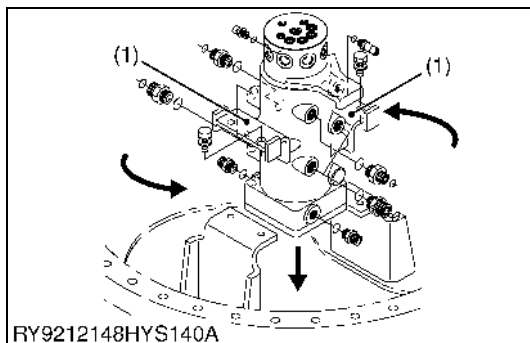

6. To prevent the swivel joint from falling, support the bottom of the body with a hydraulic jack, then remove the swivel joint mounting bracket and remove the swivel joint.

■ IMPORTANT

- Apply a thread lock (Loctite 271).

Tightening torque	Swivel joint mounting bracket	77.5 to 90.2 N·m 7.9 to 9.2 kgf·m 57.2 to 66.5 lbf·ft
Swivel joint weight	Approx. 45 kg (99 lbs)	


- (1) Swivel joint mounting bracket

RY9212148HYS0222US0

7. Perform the procedure in reverse for assembly.

RY9212148HYS0096US0

Adapter angles

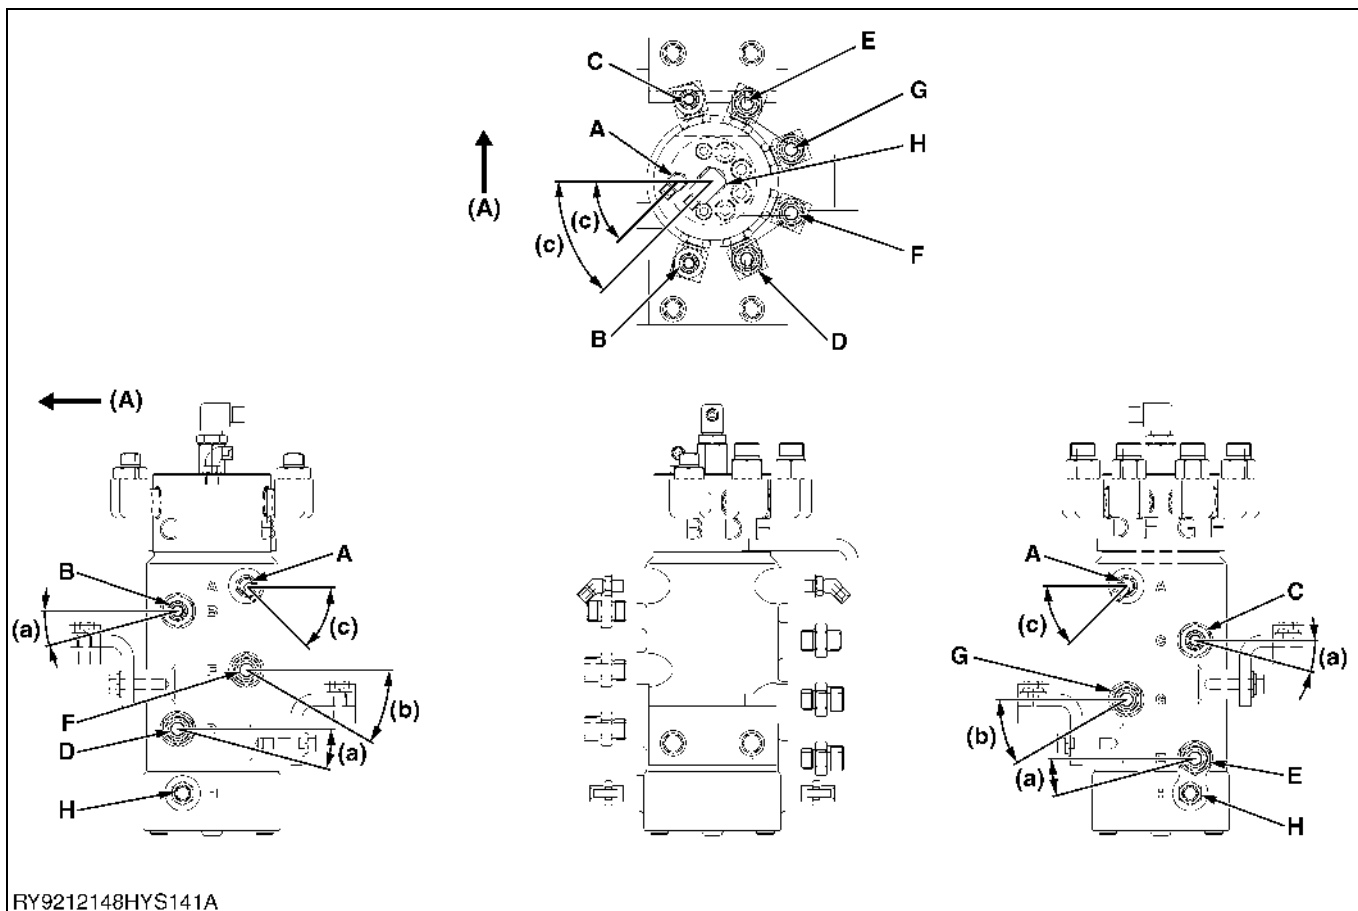


A : 2-speed pilot
B : Blade down
C : Blade up

D : Left forward
E : Right forward
F : Left backward

G : Right backward
H : Drain
(A) Blade side

(a) 15 ° (0.26 rad)
(b) 30 ° (0.52 rad)
(c) 45 ° (0.79 rad)

RY9212148HYS0224US0

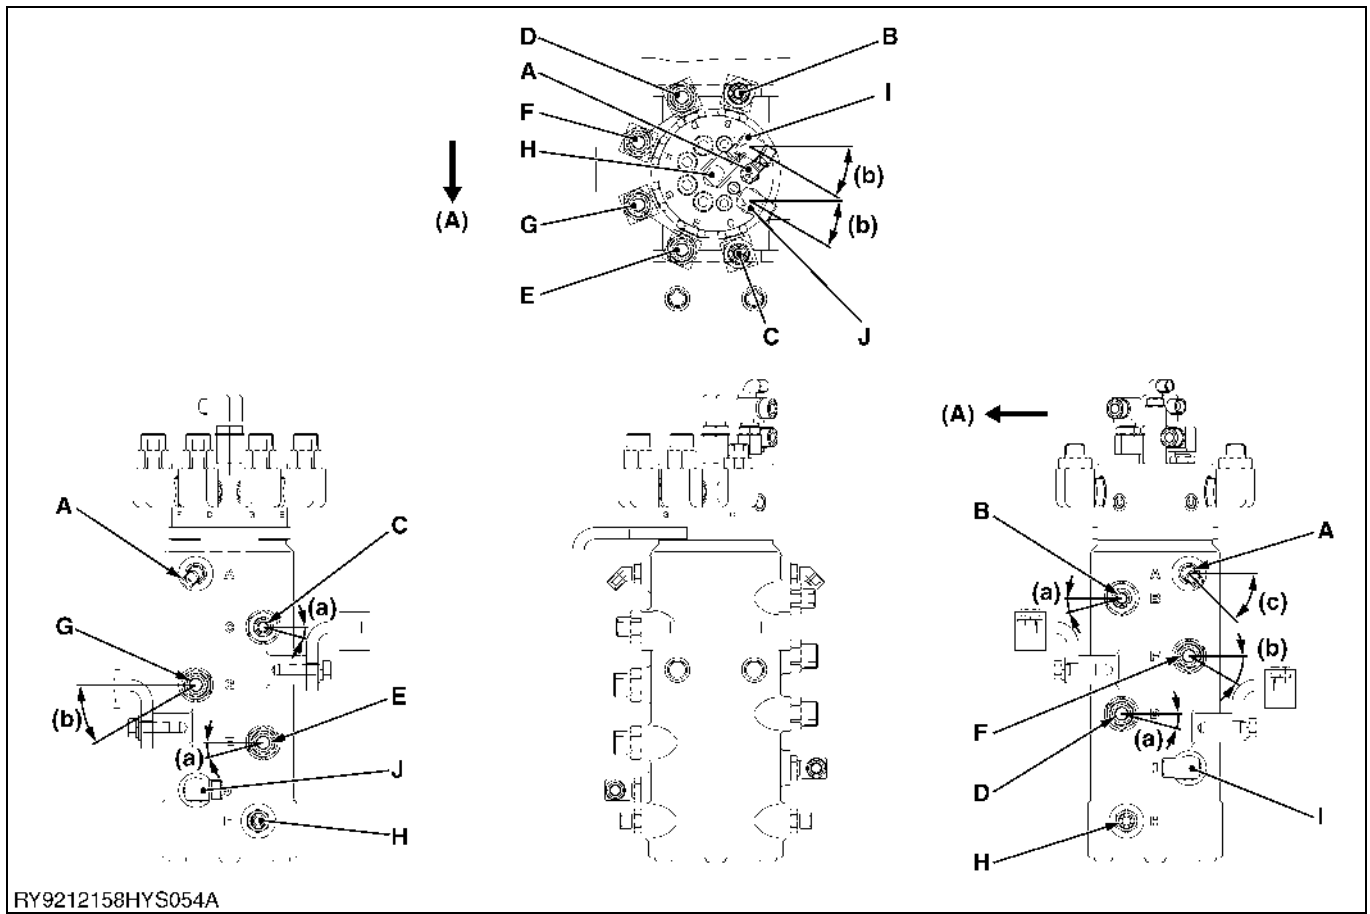Adapter angle (angle spec.)

RY9212158HYS054A

A : 2-speed pilot
 B : Blade down
 C : Blade up
 D : Left forward

E : Right forward
 F : Left backward
 G : Right backward
 H : Drain


I : Angle Right
 J : Angle Left
 (A) Blade side

(a) 15° (0.26 rad)
 (b) 30° (0.52 rad)
 (c) 45° (0.79 rad)

RY9212158HYS0032US0

[2] SWIVEL JOINT DISASSEMBLY / ASSEMBLY PROCEDURES

Components

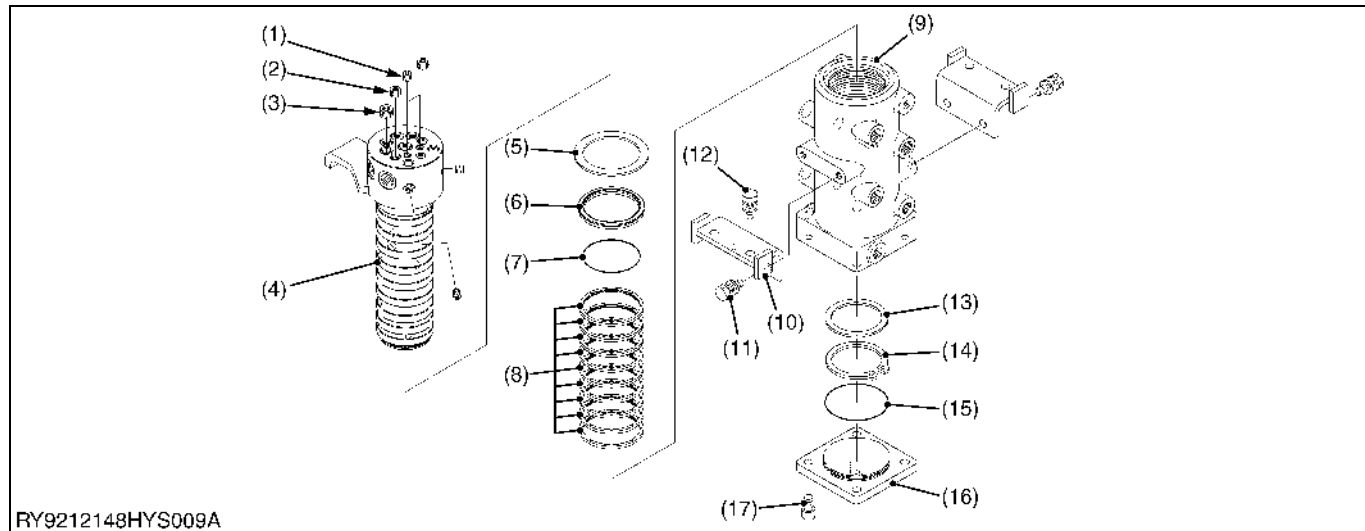

No.	Part Name	Qty		Notes
		Standard Spec	Angle Specification	
(1)	Plug (PT1/4)	—	4	40.2 ± 3.9 N·m 4.1 ± 0.4 kgf·m 29.6 ± 2.9 lbf·ft
(2)	Plug (PT3/8)	2	2	71.1 ± 2.5 N·m 7.2 ± 0.2 kgf·m 52.4 ± 1.8 lbf·ft
(3)	Plug (PT1/2)	4	4	85.9 ± 2.5 N·m 8.8 ± 0.2 kgf·m 63.3 ± 1.8 lbf·ft
(4)	Shaft	1	1	
(5)	Collar	1	1	
(6)	Packing (U)	1	1	
(7)	O-ring	1	1	
(8)	Seal	7	9	
(9)	Body	1	1	
(10)	Bracket	2	2	
(11)	Bolt	4	4	84.0 ± 6.0 N·m 8.6 ± 0.6 kgf·m 62.0 ± 5.0 lbf·ft Thread lock (Loctite 1324 or equivalent)
(12)	Bolt	4	4	84.0 ± 6.0 N·m 8.6 ± 0.6 kgf·m 62.0 ± 5.0 lbf·ft Thread lock (Loctite 271)
(13)	Collar	1	1	
(14)	Circlip	1	1	
(15)	O-ring	1	1	
(16)	Bottom cover	1	1	
(17)	Hex socket bolt	4	4	84.0 ± 6.0 N·m 8.6 ± 0.6 kgf·m 62.0 ± 5.0 lbf·ft Thread lock (Loctite 1324 or equivalent)

- During disassembly always tap out threads that have thread lock sticking to them.

RY9212148HYS0001US0

(1) Disassembly Procedures



1. Prior to disassembly, mark the alignment of the shaft and body.

RY9212148HYS0002US0



2. Remove the hex socket bolts and then the bottom cover.
 - Tool to use: 10 mm hex socket

(1) Bottom cover

RY9212148HYS0003US0



3. Mount an eye bolt on the bottom cover and put a bar through the hole in the eye bolt. Knock upwards on both sides of the bar and remove the bottom cover.

(1) Bottom cover


RY9212148HYS0004US0



4. Remove the O-ring.

(1) O-ring

RY9212148HYS0005US0

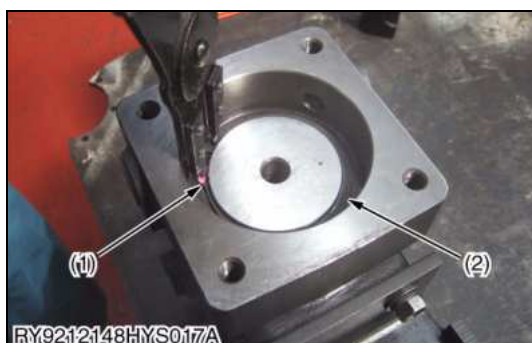

5. Remove the circlip and then the collar.

■ IMPORTANT

- Be careful so the circlip does not go flying.

- Tool to use: snap ring pliers

(1) Circlip

(2) Collar

RY9212148HYS0006US0



6. Use a press to remove the shaft.

■ **IMPORTANT**

- Spread a protective mat to prevent the shaft from hitting if it falls.
- Be careful so the shaft does not fall all of a sudden.

(1) Swivel joint

(2) Protective mat

RY9212148HYS0007US0




7. Remove the U packing and the collar in order.

- Tool to use: Slotted screwdriver

(1) Packing (U)

(2) Collar

RY9212148HYS0008US0

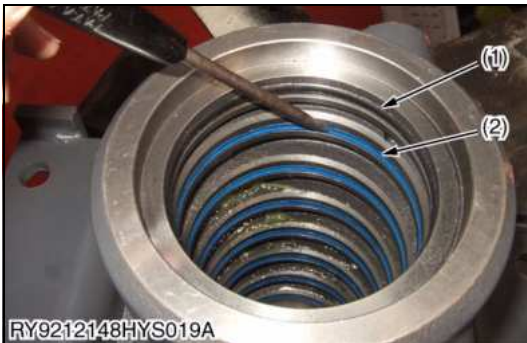

8. Remove the O-ring and seal inside the body.

- Tool to use: awl

■ **Work Tip**

- Depending on the position where the seal is inserted, turn the body counterclockwise to remove it.

(1) O-ring

(2) Seal

RY9212148HYS0009US0

(2) Assembly Procedures

- Prior to assembly, clean all of the parts and make sure they are not damaged and there is no dirt or other debris sticking to them.
- After washing parts, blow them dry to remove any detergent. (Be particularly careful to remove any detergent around port holes and bolt holes.)
- Always replace all of the O-rings, seals and U packings with new ones.

RY9212174HYS0001US0



1. Install the seal and O-ring in the body.

■ IMPORTANT

- Apply grease uniformly to the O-ring and the seal.
- Manipulate the seal and O-ring until they seat perfectly into the groove.

■ Work Tip

- Depending on where the seal is being inserted, turn the body the opposite direction to mount it.
- If it is difficult to get the seal in, use a spatula with rounded edges to mount it.

(1) Seal

(2) O-ring

RY9212148HYS0010US0



2. Mount the collar and U packing in order on the top of the shaft.

■ IMPORTANT

- Apply grease uniformly on the U packing.
- Make sure the collar and U packing stick to the head of the shaft.

(1) Collar

(2) Packing (U)

RY9212148HYS0011US0



3. Apply grease uniformly onto the shaft.

RY9212148HYS0012US0



4. Check the positioning of the alignment mark and insert the shaft.

■ IMPORTANT

- Make sure there are no scratches or debris.

(1) Shaft

(2) Body

RY9212148HYS0013US0



5. After inserting the collar, install the circlip.

■ **IMPORTANT**

- **Install the circlip with the rounded side down.**

- Tool to use: snap ring pliers

(1) Circlip

RY9212148HYS0014US0



6. Install the O-ring on the bottom cover.

■ **IMPORTANT**

- **Apply grease to the O-ring.**

(1) O-ring

RY9212148HYS0015US0



7. Mount the bottom cover.

Tightening torque	Hex socket bolt	$84.0 \pm 6.0 \text{ N}\cdot\text{m}$ $8.6 \pm 0.6 \text{ kgf}\cdot\text{m}$ $62.0 \pm 5.0 \text{ lbf}\cdot\text{ft}$

- Tool to use: 10 mm hex socket

■ **IMPORTANT**

- **Apply thread lock (ThreeBond 1324 or equivalent) to the hex bolts.**

(1) Bottom cover

RY9212148HYS0016US0

5. TRAVEL MOTOR

[1] REMOVAL AND INSTALLATION OF THE TRAVEL MOTOR



CAUTION

- Before removing hydraulic devices, lower the bucket and blade to the ground and stop the engine.
- Each of the devices and the hydraulic oil are hot right after stopping the mini-excavator. The oil is hot enough to cause a burn, so always let it cool down before starting any work.
- When hydraulic oil is under pressure, it has enough force to pierce your skin or eyes. When working with hydraulic lines always relieve any residual pressure before starting work.

RY9212148HYS0091US0



1. Remove the track and cover.

- Tool to use: 14 mm socket




DANGER

- Always support the track frame with blocks.

(1) Cover

(2) Bolt

RY9212148HYS0092US0

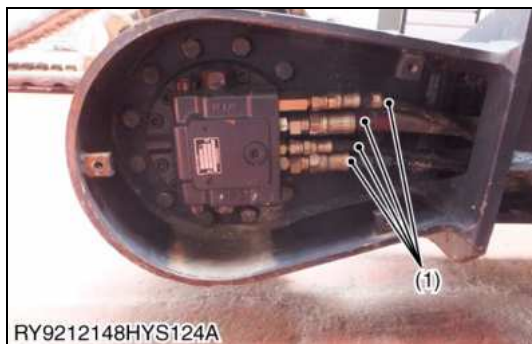

2. Use a vacuum pump to depressurize the hydraulic oil tank and then disconnect the hoses that are connected to the travel motor.

(1) Hose

RY9212148HYS0093US0



3. Suspend the travel motor with a nylon sling and remove the bolts.

■ IMPORTANT

- Apply a thread lock (Loctite 271).

Tightening torque	Travel motor	282.0 ± 22.0 N·m 28.8 ± 2.3 kgf·m 208.0 ± 16.0 lbf·ft

(1) Bolt

RY9212148HYS0094US0



4. Use a crane to hoist and remove the travel motor.

■ IMPORTANT

- Apply a thread lock (Loctite 271).

Tightening torque	Sprocket	181.4 ± 14.7 N·m 18.5 ± 1.5 kgf·m 133.8 ± 10.8 lbf·ft


(1) Travel motor

RY9212148HYS0095US0

5. Perform the procedure in reverse for assembly.

RY9212148HYS0096US0

[2] TRAVEL MOTOR DISASSEMBLY / ASSEMBLY PROCEDURES

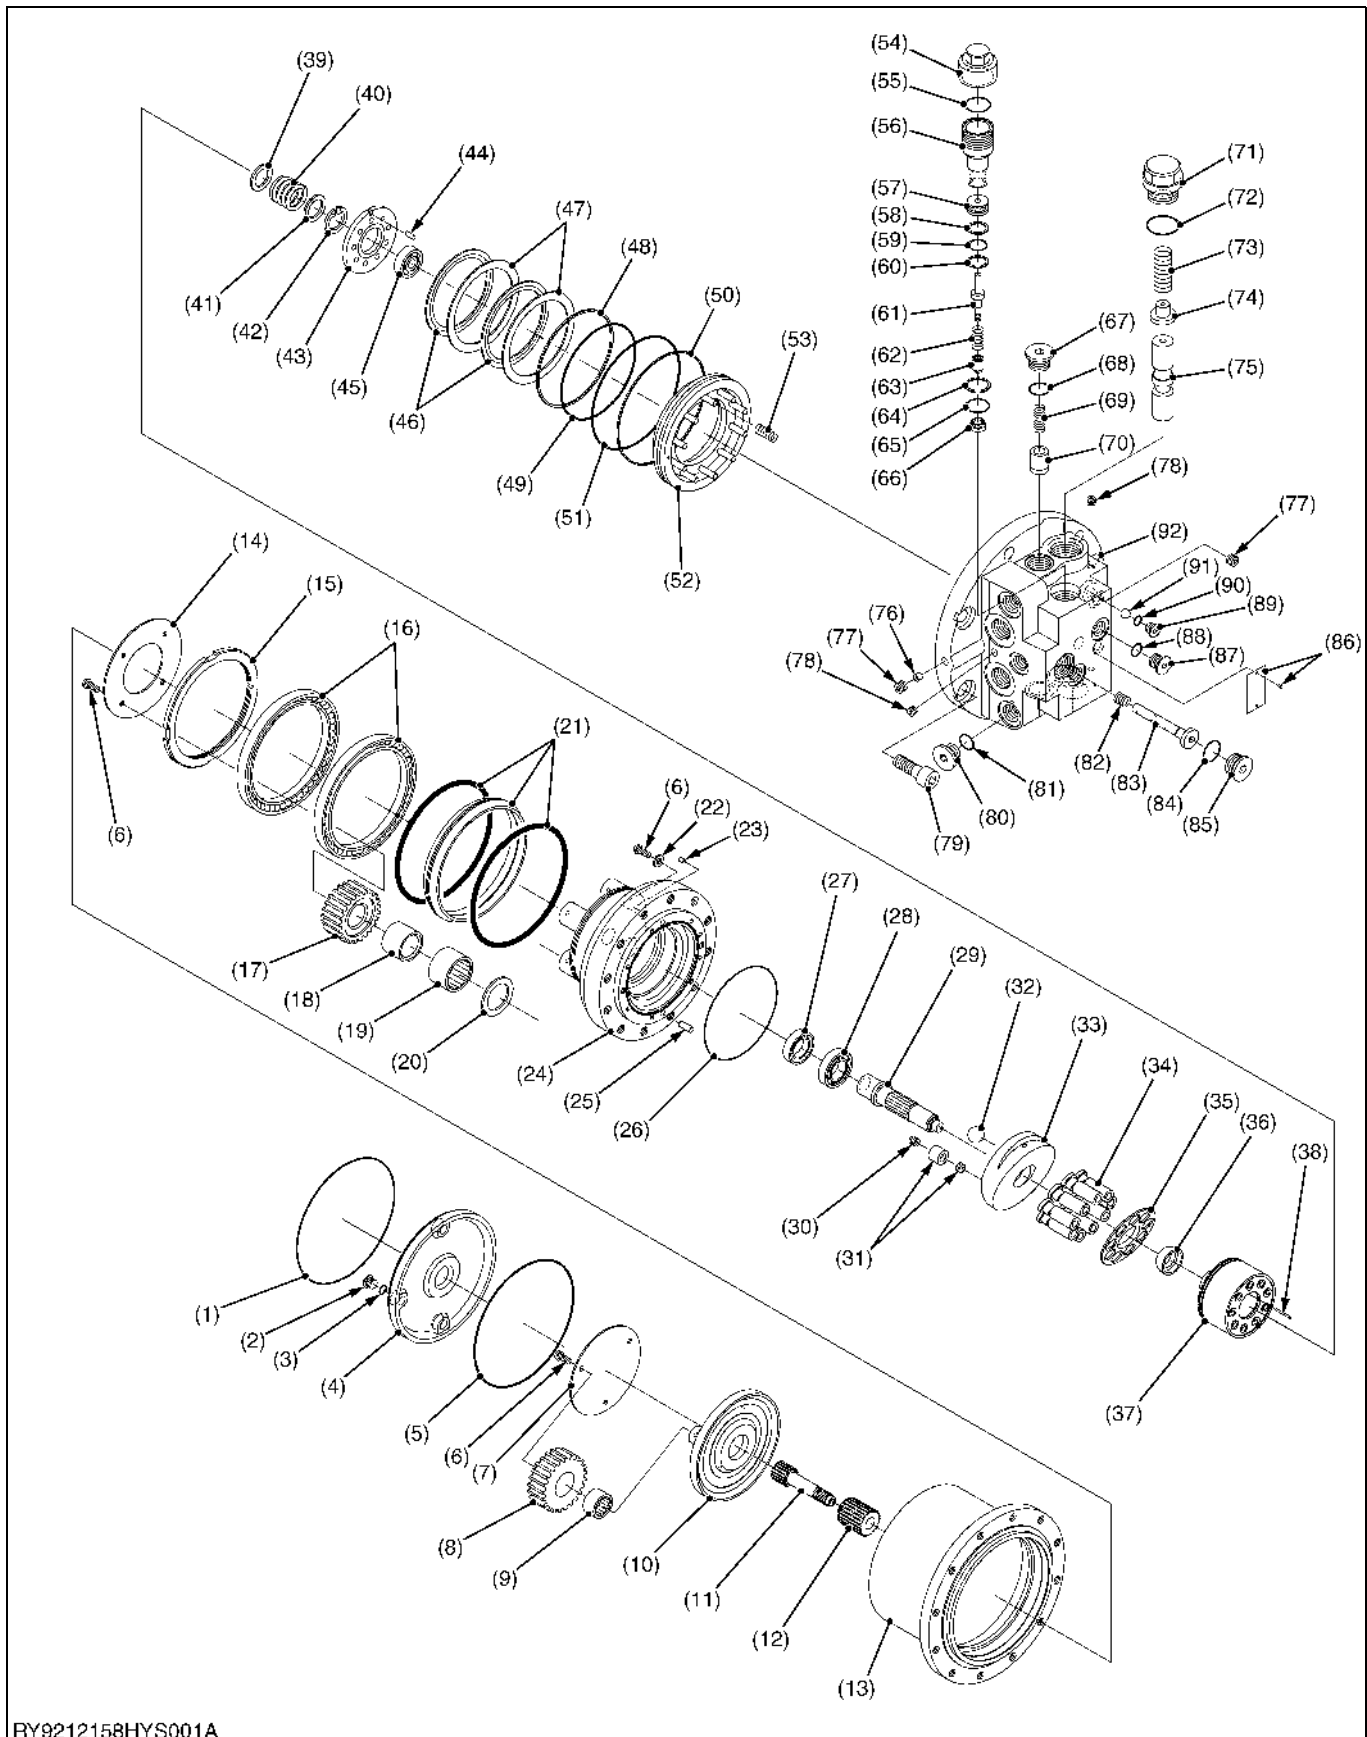

RY9212158HYS001A

(To be continued)

(Continued)

No.	Part Name	Qty	No.	Part Name	Qty	No.	Part Name	Qty
(1)	Wire	1	(32)	Ball	2	(63)	Poppet	2
(2)	Plug	3	(33)	Swash-plate	1	(64)	Backup ring	2
(3)	O-ring	3	(34)	Piston ASSY	1	(65)	O-ring	2
(4)	Cover	1	(35)	Retainer plate	1	(66)	Seat	2
(5)	O-ring	1	(36)	Retainer holder	1	(67)	Plug	2
(6)	Bolt	8	(37)	Cylinder block	1	(68)	O-ring	2
(7)	Plate	1	(38)	Pin	3	(69)	Spring	2
(8)	Planetary gear B	3	(39)	Plate A	1	(70)	Poppet	2
(9)	Needle bearing	3	(40)	Spring	1	(71)	Plug	2
(10)	Holder	1	(41)	Plate B	1	(72)	O-ring	2
(11)	Drive gear	1	(42)	Circlip	1	(73)	Spring	2
(12)	Sun gear	1	(43)	Valve plate	1	(74)	Spring seat	2
(13)	Gear case	1	(44)	Knock pin	1	(75)	Spool	1
(14)	Plate	1	(45)	Ball bearing	1	(76)	Orifice	1
(15)	Ring nut	1	(46)	Disc	2	(77)	Plug	4
(16)	Angular bearing	2	(47)	Plate	2	(78)	Plug	6
(17)	Planetary gear A	4	(48)	Backup ring	1	(79)	Hex socket bolt	8
(18)	Collar	4	(49)	O-ring	1	(80)	Plug	1
(19)	Needle bearing	4	(50)	Backup ring	1	(81)	O-ring	1
(20)	Thrust washer	4	(51)	O-ring	1	(82)	Spring	1
(21)	Floating seal	1	(52)	Brake piston	1	(83)	Spool	1
(22)	Washer	1	(53)	Spring	10	(84)	O-ring	1
(23)	Parallel pin	1	(54)	Nut	2	(85)	Plug	1
(24)	Flange holder	1	(55)	O-ring	2	(86)	Nameplate	1
(25)	Pin	2	(56)	Body	2	(87)	Plug	2
(26)	O-ring	1	(57)	Piston	2	(88)	O-ring	2
(27)	Oil seal	1	(58)	Backup ring	2	(89)	Plug	2
(28)	Ball bearing	1	(59)	O-ring	2	(90)	O-ring	4
(29)	Shaft	1	(60)	Backup ring	2	(91)	Ball	2
(30)	Spring	1	(61)	Rod	2	(92)	Base plate	1
(31)	2-speed piston	1	(62)	Spring	2			

RY9212158HYS0001US0

(1) Disassembly Procedures

[A] Gear Case



1. Mount the travel motor to the assembly platform and remove the plug.

- Tool to use: 8 mm hex socket

(1) Plug

RY9212158HYS0002US0




2. Remove the wire.

- Tool to use: Slotted screwdriver

(1) Wire

RY9212158HYS0003US0

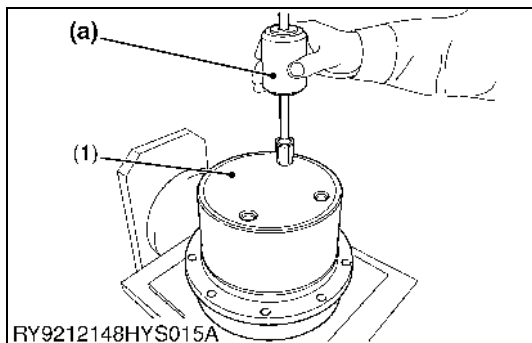

3. Attach the cover removal tool and knock it up to remove the cover.

- Tool to use: Cover removal tool


■ If a cover removal tool is not available:

- Mount an eye bolt on the cover and put a bar through the hole in the eye bolt.
- Knock upwards on both sides of the bar and remove the cover.

(1) Cover

(a) Cover removal tool

RY9212148HYS0022US0

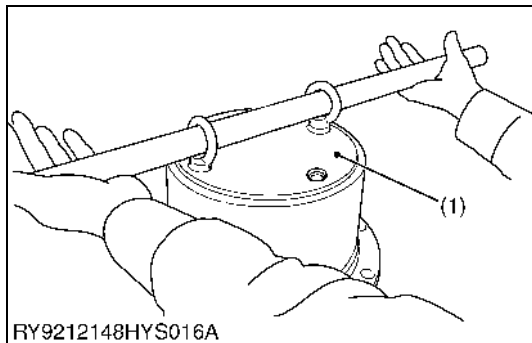


4. Remove the plate.

- Tool to use: Torx T40

(1) Plate

RY9212158HYS0045US0

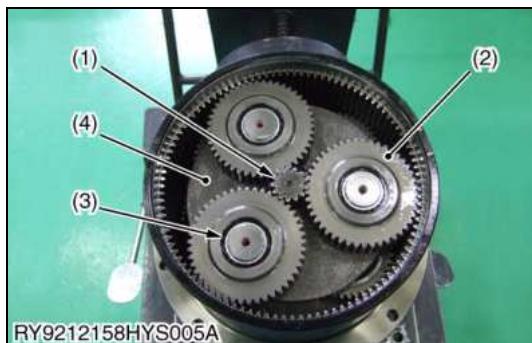

5. Remove the drive gear, planetary gear B, needle bearing, and the holder.

(1) Drive gear	(3) Needle bearing
(2) Planetary gear B	(4) Holder

RY9212158HYS0046US0



6. Remove the plate and the sun gear.

- Tool to use: Torx T40

(1) Plate	(2) Sun gear

RY9212158HYS0047US0



7. Remove planetary gear A, the needle bearing and collar in order.

(1) Planetary gear A	(3) Collar
(2) Needle bearing	

RY9212158HYS0004US0



8. Remove the thrust washer, bolt and washer in order.

- Tool to use: Torx T40

(1) Thrust washer	(3) Washer
(2) Bolt	

RY9212158HYS0048US0



9. Remove the parallel pin.

- Tool to use: Magnet

■ **IMPORTANT**

- If the parallel pin will not come out using a magnet, use the following procedure.



Drill a hole in the parallel pin and cut threads in the hole.

- Tool to use: 4.2mm drill bit, M5 tap

■ **IMPORTANT**

- Be careful not to scratch the flange holder.

(1) Parallel pin

RY9212158HYS0049US0



10. Remove the ring nut.

- Tool to use: Ring nut socket

■ **IMPORTANT**

- Be careful that the ring nut socket doesn't come off during installation/removal.

(b) Ring nut socket

RY9212158HYS0005US0



11. Use removal bolts to raise the gear case up higher than the flange holder and remove the gear case.

- Tool to use: removal bolts

■ **IMPORTANT**

- Tighten the removal bolts equally.

(1) Gear case

(c) Removal bolts

(2) Flange holder

RY9212148HYS0023US0



12. Remove the floating seal from the flange holder side.

- Tool to use: Slotted screwdriver

(1) Floating seal

RY9212148HYS0024US0



13. Remove the floating seal from the gear case side.

- Tool to use: Slotted screwdriver

(1) Floating seal

RY9212148HYS0025US0



14. Remove one of the angular bearing.


- Tool to use: pin punch and a hammer

■ **IMPORTANT**

- Tap and remove the outer race of the angular bearing.
- Tap evenly on the angular bearing with the pin punch.

(1) Angular bearing

RY9212148HYS0026US0

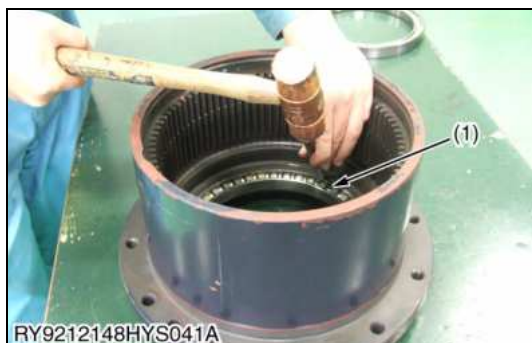

15. Turn the gear case over and remove the other angular bearing.


- Tool to use: pin punch and a hammer

■ **IMPORTANT**

- Tap and remove the outer race of the angular bearing.
- Tap evenly on the angular bearing with the pin punch.

(1) Angular bearing

RY9212148HYS0027US0

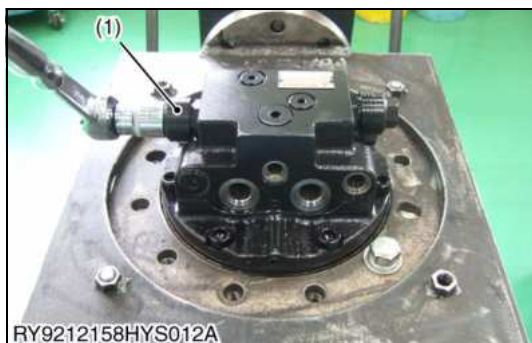
[B] Motor

1. Remove the shockless valve.

- Tool to use: 22 mm socket

- (1) Shockless valve

RY9212158HYS0006US0

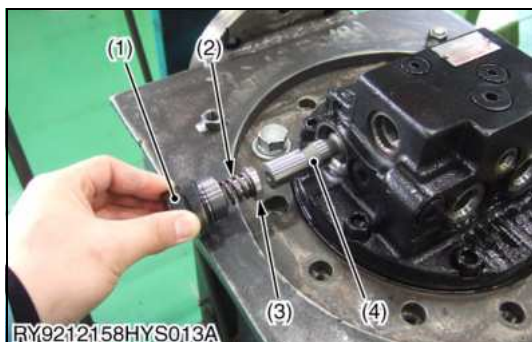


2. Remove the plug, spring, spring seat and spool in order.

- Tool to use: 30 mm socket

(1) Plug	(3) Spring seat
(2) Spring	(4) Spool

RY9212158HYS0007US0

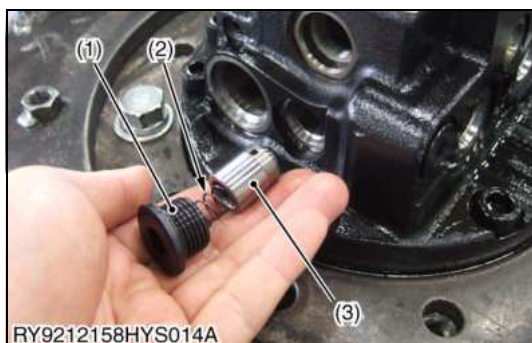

3. Remove the plug, spring and poppet in order.

- Tool to use: 10 mm hex socket

(1) Plug	(3) Poppet
(2) Spring	

RY9212158HYS0008US0



4. Remove the plug, spool and spring in order.

- Tool to use: 10 mm hex socket

(1) Plug	(3) Spring
(2) Spool	

RY9212158HYS0009US0



5. Remove the plug and then the ball.

- Tool to use: 5 mm hex socket, magnet

(1) Ball	(2) Plug

RY9212158HYS0005US0




6. Remove the hex socket bolts and then the base plate.

- Tool to use: 10 mm hex socket

(1) Hex socket bolt

(2) Base plate

RY9212158HYS0010US0

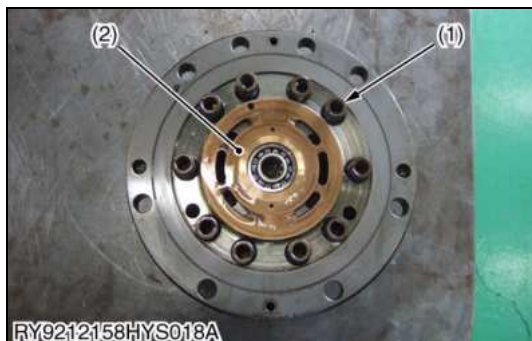

7. Remove the springs and valve plate from the base plate.

(1) Spring

(2) Valve plate

RY9212158HYS0011US0



8. While pressing down on the brake piston with a rag, blow air through the brake release oil passage hole and remove the brake piston.



CAUTION


- Be careful because if you blast air into the passage, the brake piston may come flying off.

(1) Brake Piston

(A) Brake Release Oil Passage Hole

(B) 2-Speed Switch Oil Passage Hole

RY9212158HYS0012US0

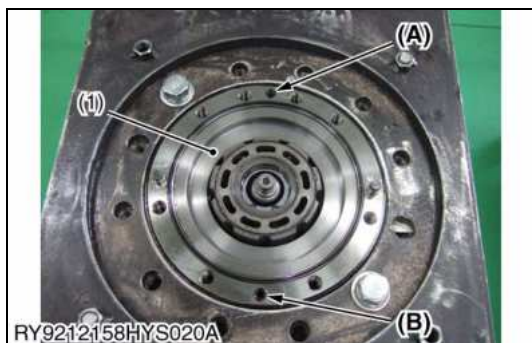



9. Remove the plates and discs.

(1) Plate

(2) Disc

RY9212158HYS0051US0

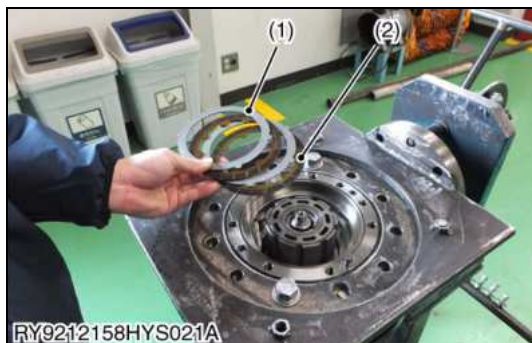


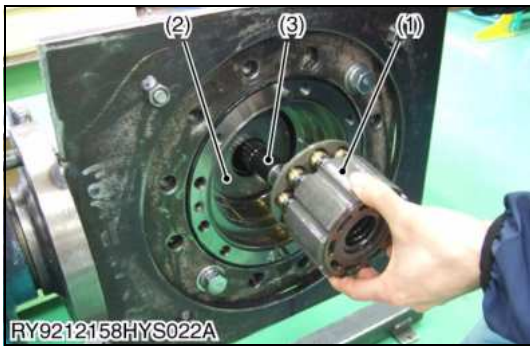

10. Turn the assembly stand 1.6 rad (90°) and remove the cylinder block sub-assembly, swash-plate and shaft in order.

- (1) Cylinder block sub-assembly (3) Shaft
(2) Swash-plate

RY9212158HYS0052US0

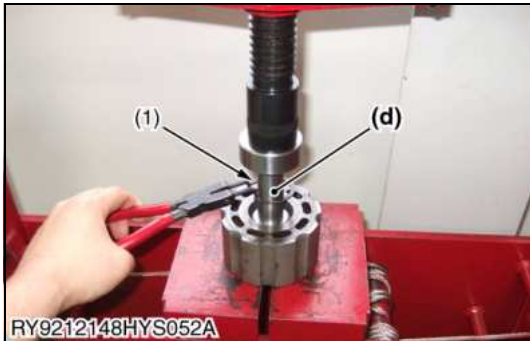

11. Use a press to press Plate A down inside the cylinder block and then remove the circlip. Remove the cylinder block from the press and remove Plate A, the springs and Plate B.

- Tool to use: snap ring pliers
- Tool to use: Tool for pressing cylinder block

- (1) Circlip (d) Tool for pressing cylinder block

RY9212158HYS0013US0



12. Turn the assembly platform back as it was and remove the 2-speed piston, springs and balls.

- (1) 2-speed piston (2) Ball

RY9212158HYS0053US0



13. Remove the oil seal.

- Tool to use: slotted screwdriver and hammer

■ IMPORTANT

- When you removed the shaft, if the ball bearing had not been removed, remove them together now.


RY9212158HYS0014US0

(2) Assembly Procedures

[A] Motor

- Prior to assembly, clean all of the parts and make sure they are not damaged and there is no dirt or other debris sticking to them.
- Always replace all of the O-rings, backup rings, oil seals and floating seals with new ones.

RY9212148HYS0028US0

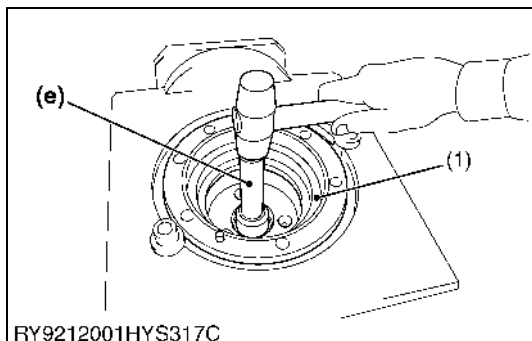

1. Put the flange holder on the assembly platform and tap in the oil seal with an oil seal installation tool.

- Tool to use: Oil seal installation tool

■ IMPORTANT


- Take care to face the oil seal the right direction.
- Apply grease to its lip and circumference.

- (1) Flange holder

- (a) Oil seal lip

- (e) Oil seal installation tool

RY9212148HYS0029US0

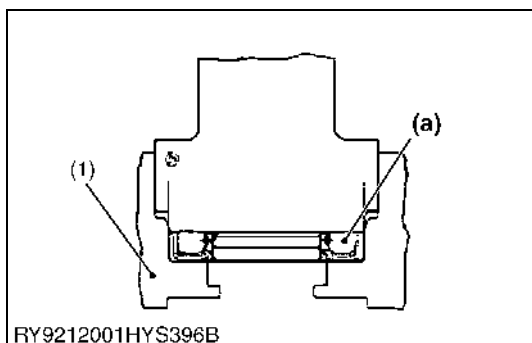

2. Tap the ball bearing in.

■ IMPORTANT

- Face the ball bearing so the inscription is up.
- Apply grease to the circumference of the ball bearing.

- (1) Ball Bearing

RY9212158HYS0015US0



3. Install the 2-speed piston, springs and balls.

■ IMPORTANT

- The spring comes out easily, so apply some grease to it.
- Press the piston down and make sure it moves smoothly.

- (1) 2-speed piston

- (3) Ball

- (2) Spring

RY9212158HYS0054US0






4. Install the shaft and swash-plate in order.

- (1) Shaft (2) Swash-plate

RY9212158HYS0016US0

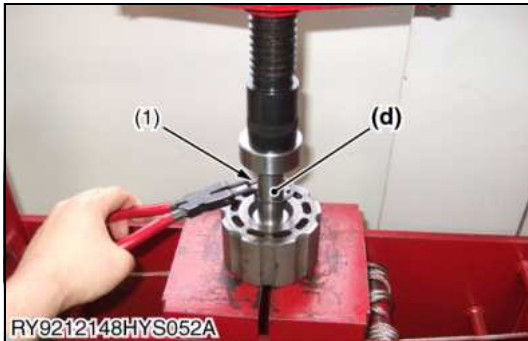

5. Install plate B, the spring, plate A and the circlip in order inside the cylinder block. Use a press to press on the inside of the cylinder block and install the circlip.

- Tool to use: snap ring pliers
- Tool to use: Tool for pressing cylinder block

- (1) Circlip (d) Tool for pressing cylinder block

RY9212158HYS0017US0



6. Install the three pins in the cylinder block and mount the retainer holder.

■ IMPORTANT

- Apply grease to the pins.
- Apply hydraulic oil to the retainer holder.

- (1) Pin (3) Retainer holder
(2) Cylinder block

RY9212158HYS0055US0



7. Install the piston ASSY into the retainer plate and then install it into the cylinder block.

■ IMPORTANT

- Apply hydraulic oil to the pistons.
- Make sure the pistons move smoothly.

- (1) Piston ASSY (2) Retainer plate

RY9212158HYS0018US0



8. Install the sub-assy of the cylinder block to the flange holder.

■ IMPORTANT

- Turn the assembly platform 1.6 rad (90°) to install them and then turn it back afterwards.

- (1) Cylinder block sub-assembly

RY9212158HYS0019US0



9. Install the disc and plate in order.


■ **IMPORTANT**

- Install the plates and discs alternately.

(1) Disc

(2) Plate

RY9212158HYS0020US0

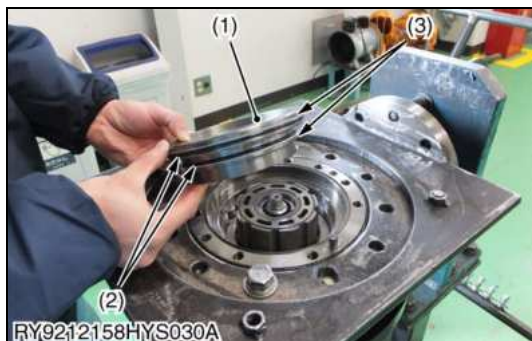

10. Install the brake piston.

■ **IMPORTANT**


- Apply grease to the O-ring and backup ring.
- Be careful of the installation position of O-ring and backup rings.

(1) Brake piston

(3) Backup ring

(2) O-ring

RY9212158HYS0056US0

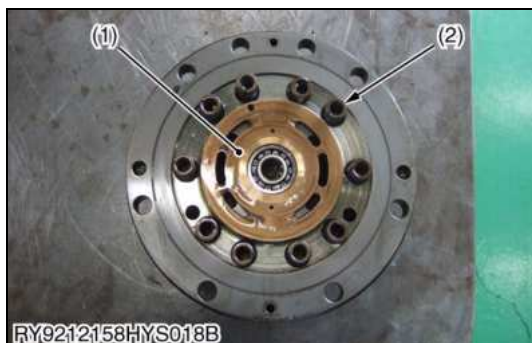

11. Install the valve plate and springs.

■ **IMPORTANT**

- Take care to face the valve plate correctly.
- Apply grease to the back of the valve plates and springs so they will not fall off.

(1) Valve plate

(2) Spring

RY9212158HYS0021US0



12. Install the O-rings.

■ **IMPORTANT**

- Apply grease to the O-ring.

(1) O-ring

RY9212158HYS0022US0



13. Install the base plate.

■ **IMPORTANT**

- Be careful so the base plate does not fall off.
- Tighten the hex socket bolts diagonal to each other.


Tightening torque	Hex socket bolt	129.4 ± 12.9 N·m 13.2 ± 1.2 kgf·m 95.4 ± 9.5 lbf·ft

- Tool to use: 10 mm hex socket

(1) Base plate

(2) Hex socket bolt

RY9212158HYS0023US0

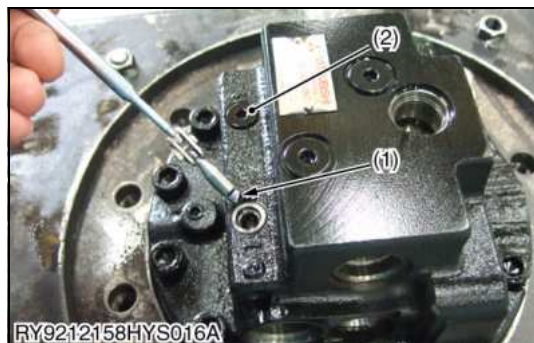

14. Install the ball and plug in order.

Tightening torque	Plug	19.6 ± 1.0 N·m 2.0 ± 0.1 kgf·m 14.4 ± 0.7 lbf·ft

- Tool to use: 5 mm hex socket

(1) Ball (2) Plug

RY9212158HYS0057US0



15. Install the spring, spool and plug in order.

■ IMPORTANT


- Apply hydraulic oil to the spool.

Tightening torque	Plug	78.5 ± 7.8 N·m 8.0 ± 0.8 kgf·m 57.9 ± 5.8 lbf·ft

- Tool to use: 8 mm hex socket

(1) Spring (2) Spool (3) Plug

RY9212158HYS0024US0

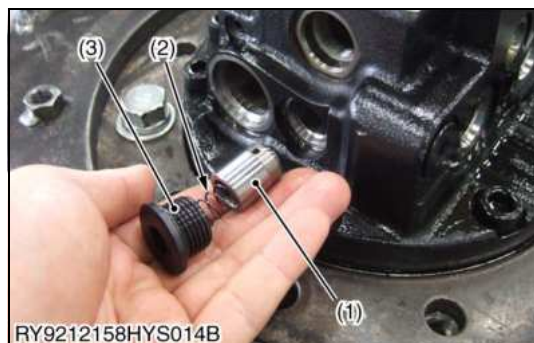

16. Install the poppet, spring and plug in order.

■ IMPORTANT


- Apply hydraulic fluid to the spool.

Tightening torque	Plug	65.7 ± 6.6 N·m 6.7 ± 0.7 kgf·m 48.2 ± 5.1 lbf·ft

- Tool to use: 10 mm hex socket

(1) Poppet (2) Spring (3) Plug

RY9212158HYS0058US0

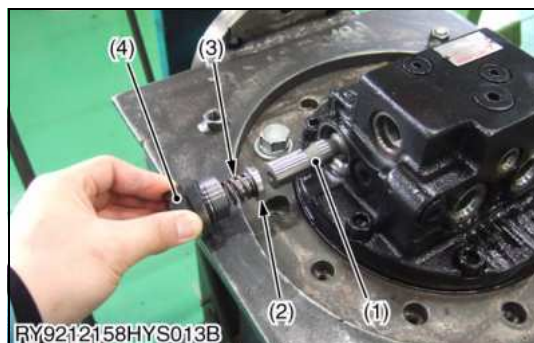

17. Install the spool spring seat, spring and plug in order.

■ IMPORTANT


- Apply hydraulic oil to the spool.
- The spool must slide smoothly.

Tightening torque	Plug	176.4 ± 17.6 N·m 18.0 ± 1.8 kgf·m 130.0 ± 13.0 lbf·ft

- Tool to use: 30 mm socket

(1) Spool (2) Spring seat (3) Spring (4) Plug

RY9212158HYS0025US0

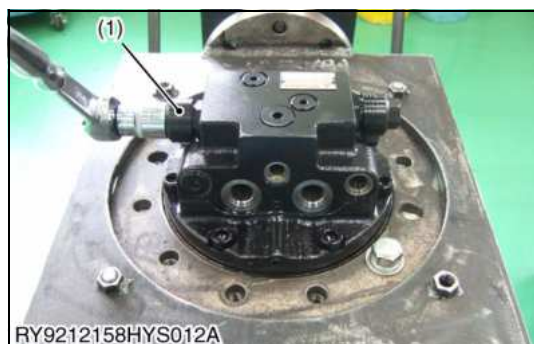



18. Install the shockless valve.

Tightening torque	Shockless valve	142.1 ± 14.2 N·m 14.5 ± 1.5 kgf·m 104.8 ± 10.5 lbf·ft

- Tool to use: 22 mm socket

(1) Shockless valve

RY9212158HYS0026US0

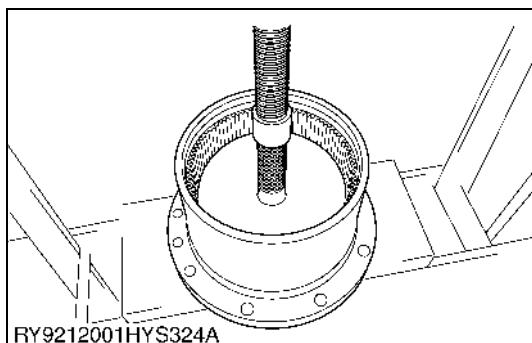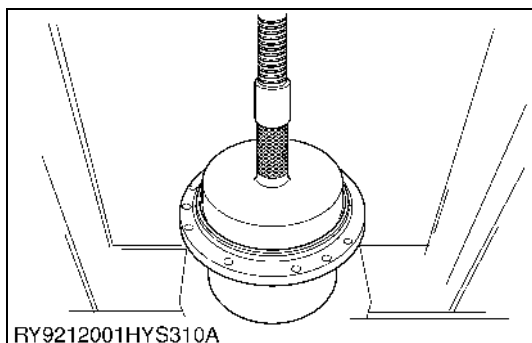[B] Gear Case

1. Set one of the angular bearings in the gear case and use a press to mount it.

Turn the gear case over and install the other angular bearing with the press.

RY9212158HYS0027US0



2. Grease the O-ring of the floating seal and set the floating seal on the flange holder with the floating seal installation tool.
 - Tool to use: floating seal installation tool

(f) Floating seal installation tool

RY9212158HYS0059US0



3. Apply a little gear oil on the sliding surface of the floating seal. [4 places, every 1.6 rad (90°)]

(1) Floating seal

(2) Flange holder

RY9212148HYS0031US0



4. Grease the O-ring of the floating seal and use the floating seal installation tool to set the floating seal on the gear case.
 - Tool to use: floating seal installation tool

(f) Floating seal installation tool

RY9212158HYS0060US0



5. Apply a little gear oil on the sliding surface of the floating seal.
[4 places, every 1.6 rad (90°)]

(1) Floating seal (2) Gear case

RY9212148HYS0032US0



6. Install the gear case on the flange holder.

(1) Gear case (2) Flange holder

RY9212148HYS0033US0



7. Install the ring nut.

- Tool to use: Ring nut socket

■ **IMPORTANT**

- If the gear case is sticking up, use a clamp to press the gear case down.
- Be careful that the ring nut socket doesn't come off during installation/removal.



After turning the gear case several revolutions, mount the bolts in the mounting holes in the sprocket and pull on the bolt with a push/pull gauge to measure the rotational torque on the motor.

Tightening torque	Factory specification	117.5 ± 17.5 N·m 12.0 ± 1.8 kgf·m 86.7 ± 12.9 lbf·ft

■ **IMPORTANT**

- If the torque is below the factory specification: tighten the ring nut and remeasure the torque.
- If the torque is higher than the factory specification: loosen the ring nut temporarily and then retighten the ring nut and recheck the torque.

(b) Ring nut socket

RY9212158HYS0061US0



8. Drill a hole midway between the ring nut and the flange holder and install a parallel pin.

- Tool to use: 6 mm drill bit

■ **IMPORTANT**

- Be sure to cover the screw holes with adhesive tape or the like prior to drilling the hole.
- Completely remove all the debris from drilling the hole.

[NOTE]

Hole diameter: ϕ 6.00 to 6.15mm (0.236 to 0.242 in.)

Depth: 7.5 to 8.0 mm (0.30 to 0.31 in.)

(1) Adhesive tape

(2) Vacuum pump

RY9212158HYS0062US0

9. Install the thrust washer and bolt.

■ **IMPORTANT**

- Apply a thread lock (ThreeBond 2403).
- Clean screw holes prior to installation.

Tightening torque	Bolt	$35.3 \pm 2.0 \text{ N}\cdot\text{m}$ $3.6 \pm 0.2 \text{ kgf}\cdot\text{m}$ $26.0 \pm 1.5 \text{ lbf}\cdot\text{ft}$

- Tool to use: Torx T40

(1) Thrust washer

(3) Bolt

(2) Washer

RY9212158HYS0063US0

10. Install the collar, needle bearing and planetary gear A in order.

(1) Collar

(3) Planetary gear A

(2) Needle bearing

RY9212158HYS0028US0

11. Install the sun gear and plate in order.

■ **IMPORTANT**

- Clean screw holes prior to installation.
- Apply a thread lock (ThreeBond 2403).

Tightening torque	Bolt	$35.3 \pm 2.0 \text{ N}\cdot\text{m}$ $3.6 \pm 0.2 \text{ kgf}\cdot\text{m}$ $26.0 \pm 1.5 \text{ lbf}\cdot\text{ft}$

- Tool to use: Torx T40

(1) Sun gear

(3) Bolt

(2) Plate


RY9212158HYS0064US0



12. Install the holder, needle bearing, planetary gear B and drive gear in order.

- (1) Holder (3) Planetary gear B
(2) Needle bearing (4) Drive gear

RY9212158HYS0065US0

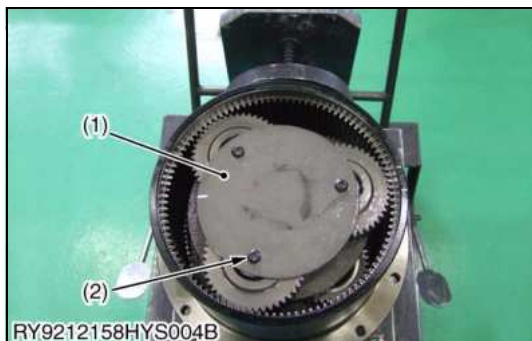

13. Install the plate.

■ **IMPORTANT**

- Clean screw holes prior to installation.
- Apply a thread lock (ThreeBond 2403).

Tightening torque	Bolt	35.3 ± 2.0 N·m 3.6 ± 0.2 kgf·m 26.0 ± 1.5 lbf·ft

- Tool to use: Torx T40

- (1) Plate (2) Bolt

RY9212158HYS0066US0



14. Install the cover.

■ **IMPORTANT**

- Apply grease to the O-ring.

- (1) Cover (2) O-ring

RY9212158HYS0029US0



15. Install the wire and plug.

Tightening torque	Plug	58.8 ± 9.8 N·m 6.0 ± 1.0 kgf·m 43.4 ± 7.2 lbf·ft

- Tool to use: 8 mm hex socket


■ **IMPORTANT**

- Be sure to fill with the specified amount of gear oil [1.35 L, (0.36 US gal.)] prior to mounting on the machine.
- After mounting the travel motor on the machine, double-check the gear oil level.

- (1) Wire (2) Plug

RY9212158HYS0030US0

(3) Special Tools

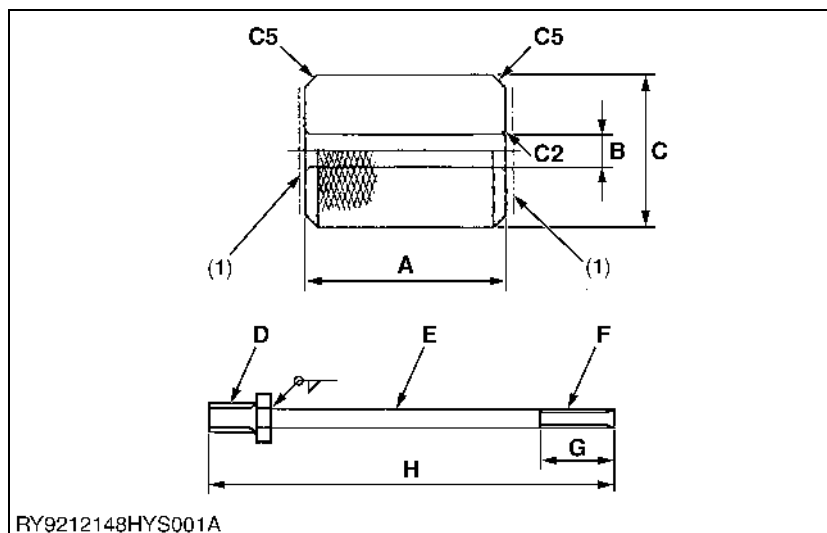


(a) Cover removal tool

A	80 mm (3.1 in.)
B	φ 13 mm (0.51 in.)
C	φ 60 mm (2.4 in.)
D	R3/8
E	φ 12.5 mm (0.492 in.)
F	M12 x P1.25
G	25 mm (0.98 in.)
H	315 mm (12.4 in.)
C2	2 mm (0.08 in. bevel)
C5	5 mm (0.2 in. bevel)

(1) Tempered


RY9212148HYS0021US0

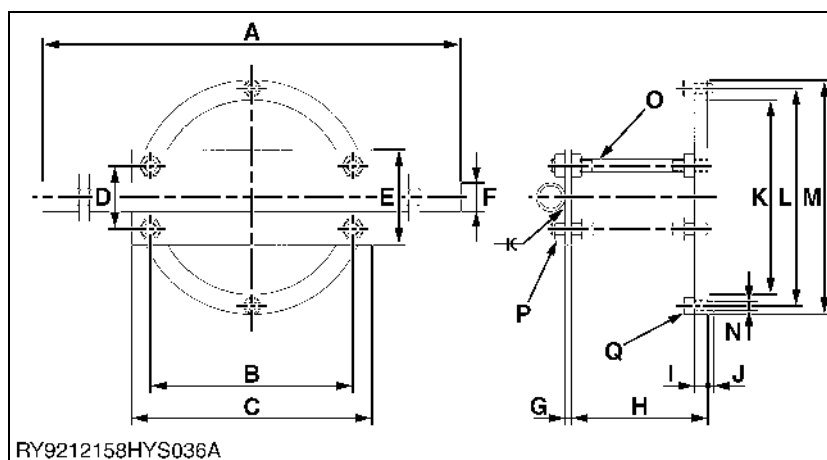

(b) Ring nut socket

A	800 mm (31.50 in.)
B	194 mm (7.64 in.)
C	230 mm (9.06 in.)
D	60 mm (2.36 in.)
E	100 mm (3.94 in.)
F	φ 20 mm (0.79 in.)
G	6 mm (0.24 in.)
H	130 mm (5.12 in.)
I	12 mm (0.47 in.)
J	5 mm (0.20 in.)
K	φ 184.5 mm (7.264 in.)
L	206 mm (8.11 in.)
M	φ 222 mm (8.74 in.)
N	φ 9 mm (0.35 in.)
O	Stud bolt 4 - M12 × 150 mm (5.91 in.)
P	Hex nut 12 - M12
Q	Hex socket bolt 2 - M10 × 18 mm (0.71 in.) Machine the tip to 6 mm (0.24 in.) from the tip at φ 9 mm (0.35 in.).


RY9212158HYS0067US0

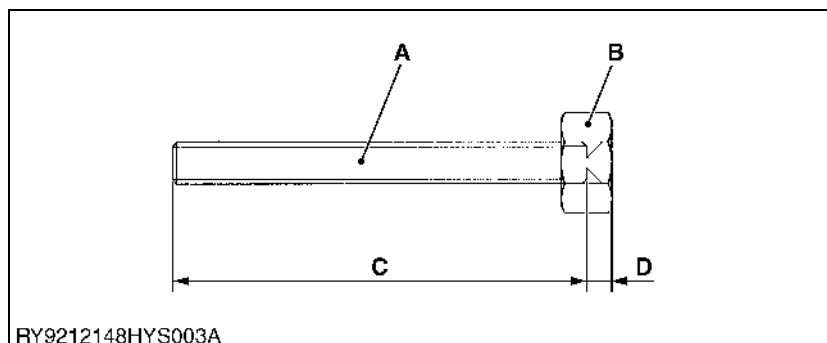

(c) Removal bolts (M14 × 2.0)

A	M14 x P2.0
B	M14 nut
C	250 mm (9.84 in.)
D	5 mm (0.5 in.)


RY9212148HYS0020US0

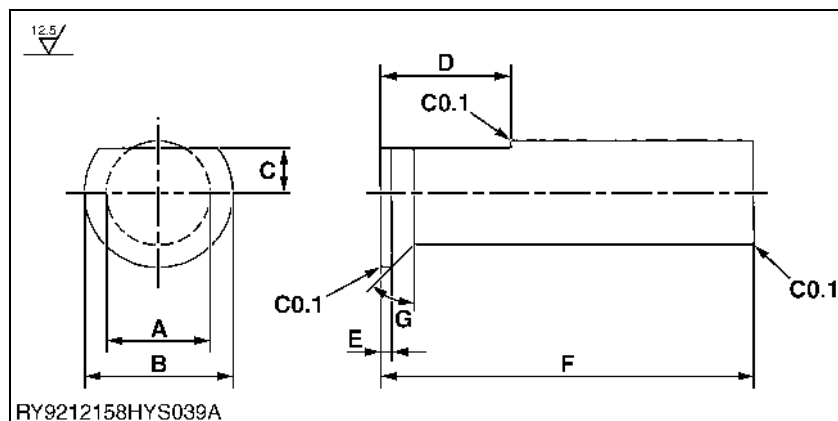**(d) Tool for pressing cylinder block**

A	27.8 to 28.2 mm (1.095 to 1.110 in.)
B	39.9 to 40.0 mm (1.571 to 1.574 in.)
C	11.9 to 12.0 mm (0.469 to 0.472 in.)
D	34.7 to 35.3 mm (1.366 to 1.390 in.)
E	2.9 to 3.1 mm (0.114 to 0.122 in.)
F	99.7 to 100.3 mm (3.926 to 3.949 in.)
G	0.79 rad (45°)
C0.1	0.1 mm (0.004 in.) bevel


- Unspecified corners to be R0.4 mm (0.016 in.)

RY9212158HYS0068US0

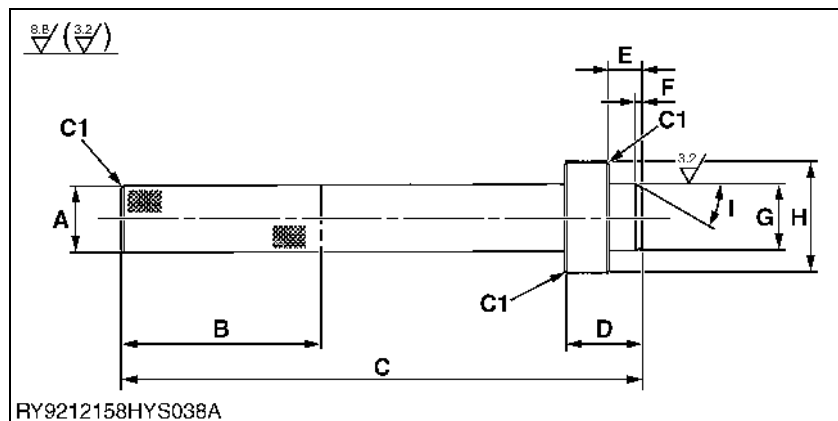**(a) Oil seal installation tool**

A	φ 30 mm (1.18 in.)
B	90 mm (3.54 in.)
C	235 mm (9.25 in.)
D	35 mm (1.38 in.)
E	15 mm (0.59 in.)
F	3 mm (0.12 in.)
G	φ 29.8 to 30.0 mm (1.17 to 1.18 in.)
H	φ 49.0 to 49.1 mm (1.92 to 1.93 in.)
I	0.52 rad (30°)
C1	1 mm (0.04 in.) bevel

RY9212158HYS0069US0

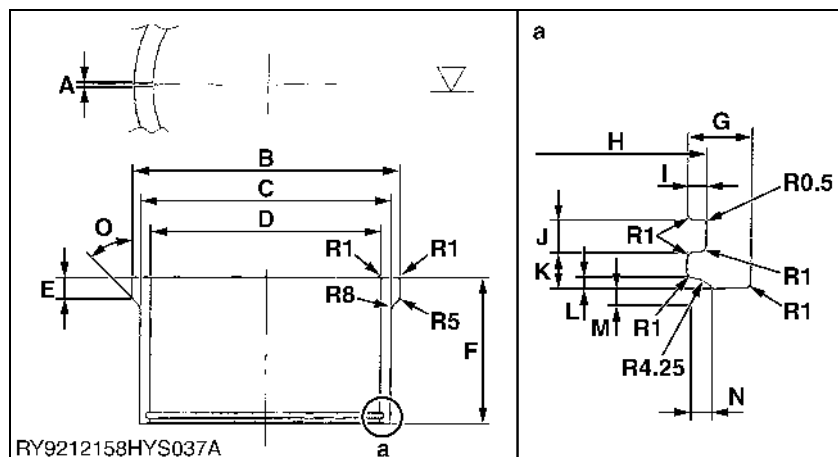**(f) Floating seal installation tool**

A	1 to 2 mm (0.039 to 0.079 in.) 1 notch in circumference
B	φ 255 mm (10.04 in.)
C	φ 239 mm (9.41 in.)
D	φ 219 mm (8.62 in.)
E	20 mm (0.79 in.)
F	140 mm (5.51 in.)
G	10 mm (0.39 in.)
H	φ 225 mm (8.86 in.)
I	3 mm (0.12 in.)
J	5.02 mm (0.198 in.)
K	5.71 mm (0.225 in.)
L	1.64 mm (0.065 in.)
M	2.6 mm (0.102 in.)
N	3.36 mm (0.132 in.)
O	0.79 rad (45°)
R0.5	Radius 0.5 mm (0.02 in.)
R1	Radius 1 mm (0.04 in.)
R4.25	Radius 4.25 mm (0.167 in.)
R5	Radius 5 mm (0.20 in.)
R8	Radius 8 mm (0.32 in.)

- Material: MC nylon

RY9212158HYS0070US0

6. CYLINDER

[1] TIGHTENING TORQUE


		KX080-4	Notes
Boom	Maker	KYB	
	Screw torque	56.9 ± 10.7 N·m 5.8 ± 1.1 kgf·m 42.0 ± 7.9 lbf·ft	
	Screw size	M12 × 1.75	Tap with punch in two places
	Piston torque	3070 N·m 313.1 kgf·m 2264 lbf·ft	
	Width across hex-head.	80	
	Head torque	950 N·m 96.9 kgf·m 701 lbf·ft	Apply ThreeBond #1901
Arm	Maker	KYB	
	Screw torque	31.5 ± 5.88 N·m 3.2 ± 0.6 kgf·m 23.2 ± 4.3 lbf·ft	
	Screw size	M10 × 1.5	Tap with punch in two places
	Piston torque	3040 N·m 310.1 kgf·m 2242 lbf·ft	
	Width across hex-head.	70	
	Head torque	950 N·m 96.9 kgf·m 701 lbf·ft	Apply ThreeBond #1901
Bucket	Maker	WIPRO	
	Screw size	M10 × 1.5	
	Piston torque	1509 N·m 153.9 kgf·m 1113 lbf·ft	
	Width across hex-head.	75	
	Head torque	410 ± 25 N·m 41.8 ± 2.6 kgf·m 302.4 ± 18.4 lbf·ft	
Blade	Maker	Koretsune Seiko	
	Piston torque	4000 ± 200 N·m 408.0 ± 20.4 kgf·m 2950.4 ± 147.5 lbf·ft	
	Head torque	1200 ± 120 N·m 122.4 ± 12.2 kgf·m 885.1 ± 88.5 lbf·ft	
Swing	Maker	Koretsune Seiko	
	Piston torque	2800 ± 140 N·m 285.6 ± 14.3 kgf·m 2065.3 ± 103.3 lbf·ft	
	Head torque	650 ± 70 N·m 66.3 ± 7.1 kgf·m 479.4 ± 51.6 lbf·ft	

		KX080-4	Notes
Angle	Maker	Koretsune Seiko	
	Piston torque	1500 ± 80 N·m 153.0 ± 8.2 kgf·m 1106.4 ± 59.0 lbf·ft	
	Head torque	550 ± 60 N·m 56.1 ± 6.1 kgf·m 405.7 ± 44.3 lbf·ft	

RY9212158HYS0033US0


7. PILOT VALVE

[1] CONTROL PILOT VALVES

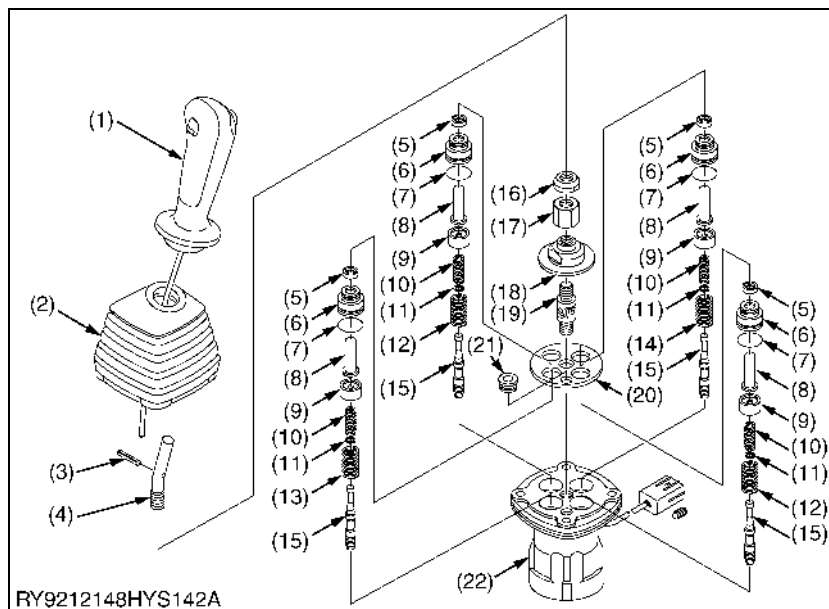

No.	Part Name	Qty
(1)	Handle	1
(2)	Bellows	1
(3)	Spring pin	1
(4)	Lever	1
(5)	Seal	4
(6)	Plug	4
(7)	O-ring	4
(8)	Pushrod	4
(9)	Spring seat	4
(10)	Secondary pressure spring	4
(11)	Shim	4
(12)	Return spring (Ports 1 and 3)	2
(13)	Return Spring (Port 2)	1
(14)	Return Spring (Port 4)	1
(15)	Spool	4
(16)	Lock nut	1
(17)	Adjusting nut	1
(18)	Round plate nut	1
(19)	U-joint	1
(20)	Plate	1
(21)	Bushing	1
(22)	Casing	1

RY9212148HYS0226US0

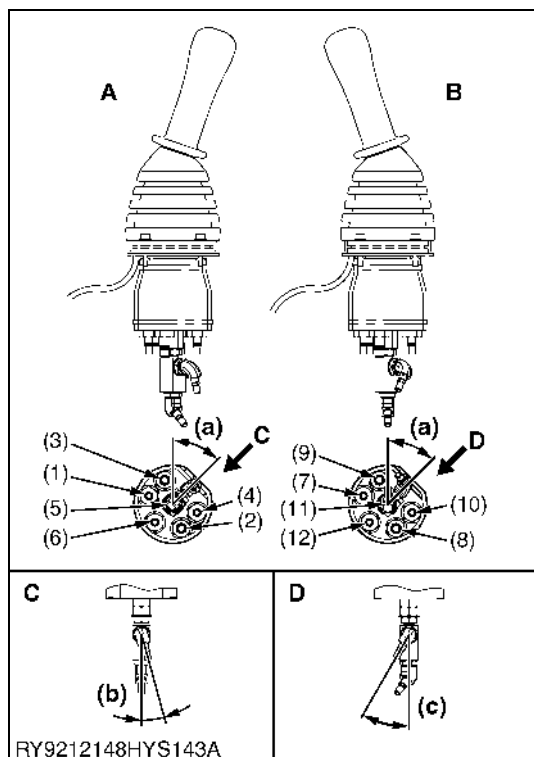

Adapter angles

A	Point used	Tape color
(1)	Swivel left	Gray
(2)	Arm dump	Pea green
(3)	Swivel right	Light blue
(4)	Arm crowd	Blue
(5)	P	White
(6)	T	None

B	Point used	Tape color
(7)	Bucket crowd	Orange
(8)	Boom down	Yellow
(9)	Bucket dump	Red
(10)	Boom up	Green
(11)	P	White
(12)	T	None

A : Left pilot valve
B : Right pilot valve

(a) 45 ° (0.79 rad)
(b) 15 ° (0.26 rad)
(c) 30 ° (0.52 rad)


RY9212148HYS0227US0

(1) Disassembly

⚠ CAUTION

- All of the parts are precision parts, so be very careful in handling them and take care not to drop or hit parts against each other.
- If you hit a part too hard while working on it, it may result in burrs or other damage, thus preventing installation as well as oil leaks and/or compromised performance, so be careful when handling parts.
- If parts are left disassembled or left partway disassembled, humidity or foreign matter may cause rust, so if interrupting the work is unavoidable, take precautions to protect the parts from rust and dust.

RY9212148HYS0150US0

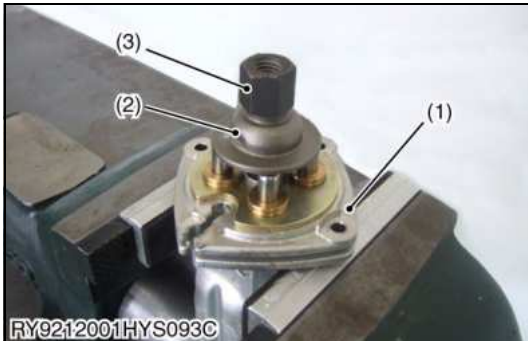

1. Clamp the pilot valve in a vise.

■ IMPORTANT

- When clamping it in a vise, use a sheet of copper to prevent scratching the pilot valve.

- (1) Casing (3) Adjusting Nut
(2) Round Plate Nut

RY9212148HYS0151US0



2. Use wrenches to remove the adjusting nut and round plate nut.

- Tools to use: 22 mm and 32 mm wrenches


- (1) Adjusting Nut

RY9212148HYS0152US0



3. Mark the relationship of holes to the casing.

RY9212001HYS0479US0

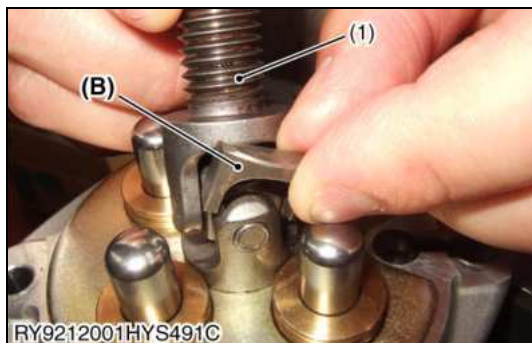


4. After mounting tool **(b)** on the U-joint, use tool **(a)** to turn the U-joint counterclockwise and loosen it.

- Tool **(a)**: U-joint clamping tool
- Tool **(b)**: Bushing (two)

CAUTION

- When removing the U-joint, take care that it does not pop off.

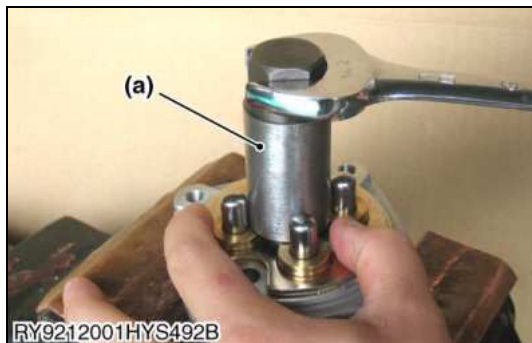


(1) U-Joint

(2) Plug

RY9212148HYS0153US0



5. Remove the plate.

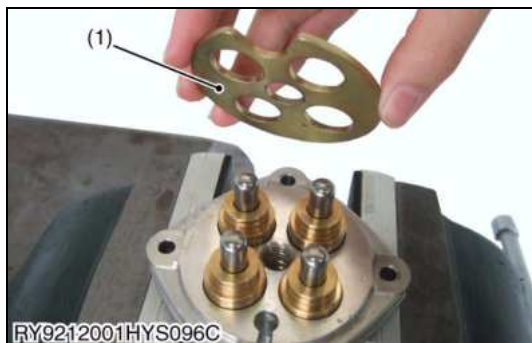

(1) Plate

RY9212148HYS0154US0




6. Slip a slotted screwdriver in the groove in the plug to remove the plug.

CAUTION

- Take care so the plug does not go flying.
- Take care not to damage it by exerting force unevenly.
- If a burr is formed, use a whetstone to remove it.

(1) Plug

RY9212148HYS0155US0

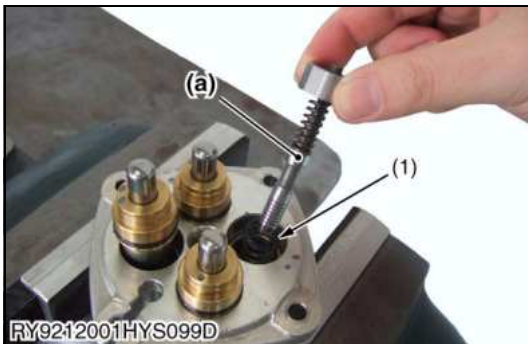

7. Remove the reducing valve ASSY and the return spring.

■ **IMPORTANT**

- Tag the return springs to positively ID which port they go to.

(1) Return Spring

(a) Reducing Valve ASSY

RY9212148HYS0156US0



8. To disassemble a reducing valve, press the spring seat in and while compressing the secondary pressure spring, shift the spring seat to the side and remove it from the spool via the larger hole.



■ **IMPORTANT**

- Be careful not to scratch the surface of the spool.
- Do not depress the spring seat more than 6mm (0.24 in.).
- Do not disassemble the reducing valve unless there is a problem with it.

Components of the reducing valve

(1) Spring Seat	(3) Washer
(2) Secondary Pressure Spring	(4) Spool


RY9212148HYS0157US0

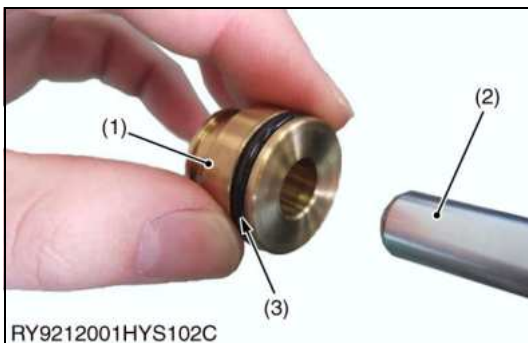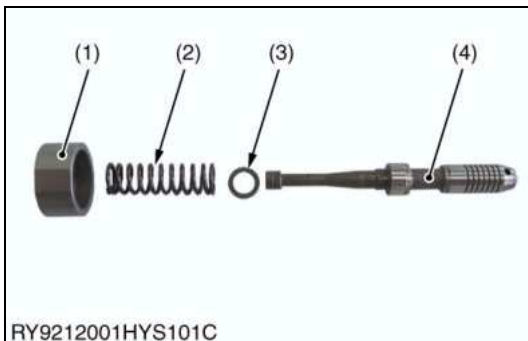

9. Remove the plug from the pushrod.

(1) Plug	(3) O-Ring
(2) Pushrod	


RY9212148HYS0158US0

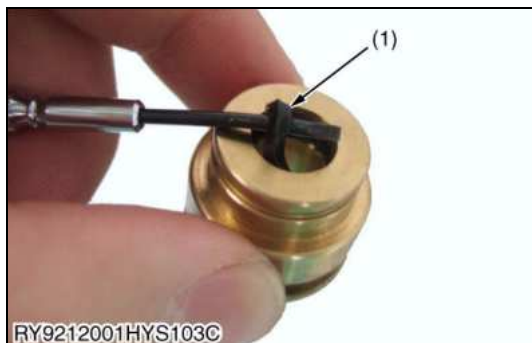

10. Remove the O-ring and seal from the plug.

■ **IMPORTANT**

- Use a mini slotted screwdriver.
- Be careful not to scratch the inside surface of the plug.

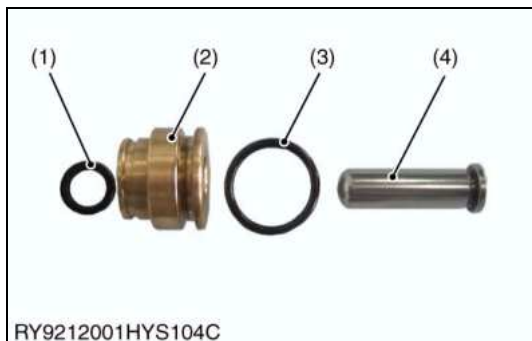

Components of the Plug

- (1) Seal
(2) Plug

- (3) O-Ring
(4) Pushrod

RY9212148HYS0159US0

(2) Assembly



CAUTION

- Prepare your workbench in the same way as for disassembly.
- Follow the same general precautions as in the disassembly.
- When assembling the parts, remove all bits of metal or foreign matter from all the parts and make sure there aren't any burrs or dings on the parts.
- Replace used O-rings with new ones.
- Take care not to damage the O-rings when installing them.

RY9212148HYS0160US0



1. Make sure there aren't any burrs or scratches inside the casing.

RY9212001HYS0487US0




2. Install the return spring in the casing.

■ **IMPORTANT**

- Install it in the same position as before disassembly.

- (1) Return Spring

RY9212148HYS0161US0

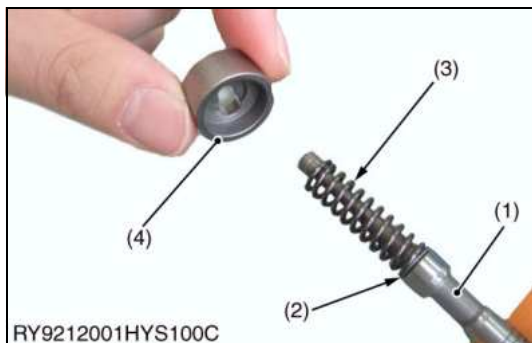

3. Install the washer, secondary pressure spring and spring seat on the spool in order.

■ **IMPORTANT**

- Do not depress the spring seat more than 6 mm (0.24 in.).
- Be careful not to scratch the spool.

(1) Spool
(2) Washer

(3) Secondary Pressure Spring
(4) Spring Seat

RY9212148HYS0162US0




4. Install the reducing valve ASSY.
After installing it, make sure the spool moves smoothly.

■ **IMPORTANT**

- Install it in the same position as before disassembly.

RY9212001HYS0490US0

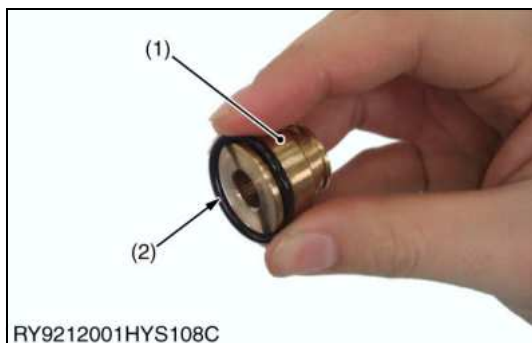


5. Install the O-ring on the plug.

(1) Plug

(2) O-Ring

RY9212148HYS0163US0

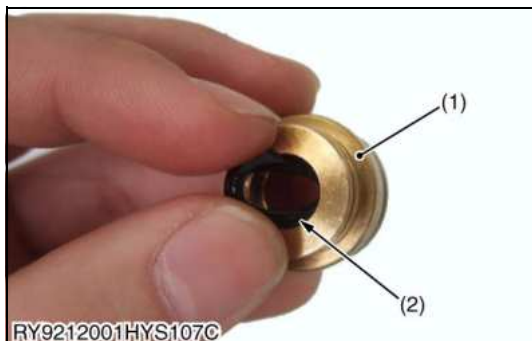

6. Install the seal on the plug.


■ **IMPORTANT**


- Be careful that the seal faces the right direction.
- Apply hydraulic oil on the circumference and lip of the seal.

(1) Plug
(2) Seal

(3) Pushrod
(4) O-Ring

RY9212148HYS0164US0

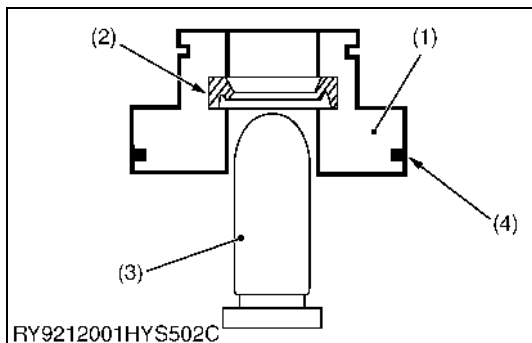

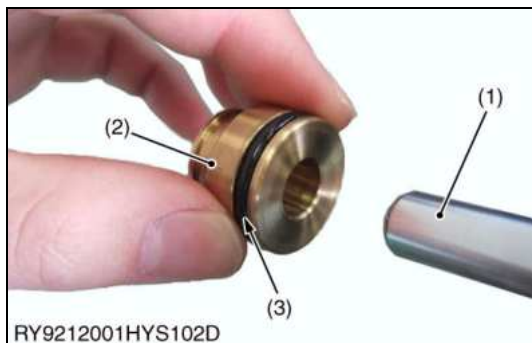

7. Install the plug on the pushrod.

■ **IMPORTANT**

- Apply hydraulic oil to the pushrod.

(1) Pushrod
(2) Plug

(3) O-Ring

RY9212148HYS0165US0




8. Install the plug ASSY into the case.

If the return spring is too stiff, use the plate to install the ASSY.

■ **IMPORTANT**

- Be careful not to scratch the hole of the casing by prying on the spool.
- Take care so the plug ASSY does not go flying.

RY9212001HYS0494US0

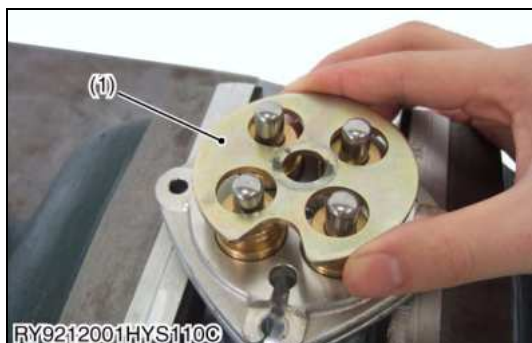

9. Install the plate.

(1) Plate

RY9212148HYS0166US0



10. Install the U-joint.

Tightening torque	U-joint	$47.0 \pm 3.0 \text{ N}\cdot\text{m}$ $4.8 \pm 0.3 \text{ kgf}\cdot\text{m}$ $35.0 \pm 2.0 \text{ lbf}\cdot\text{ft}$

- Tool (a): U-joint clamping tool

RY9212148HYS0167US0



11. Install the round plate nut on the U-joint.

Tighten it until it touches all four pushrods equally.



CAUTION

- If you tighten it too far, the mechanism will not function properly when the lever is in neutral, so be careful to adjust the round plate nut to the correct position.

■ **IMPORTANT**

- Apply Loctite 262 to the top threads of the U-joint.

(1) Round Plate Nut

RY9212148HYS0168US0



12. Install the adjusting nut.

Hold a wrench on the head of the round plate nut while tightening the nut.

- Tools to use: 22 mm and 32 mm wrenches

Tightening torque	Adjusting nut	70.0 ± 5.0 N·m 7.0 ± 0.5 kgf·m 51.6 ± 4.0 lbf·ft



RY9212148HYS0169US0




13. Apply grease to the rotating parts of the universal joint and to the ends of the pushrods.

RY9212001HYS0499US0

(3) Special Tools

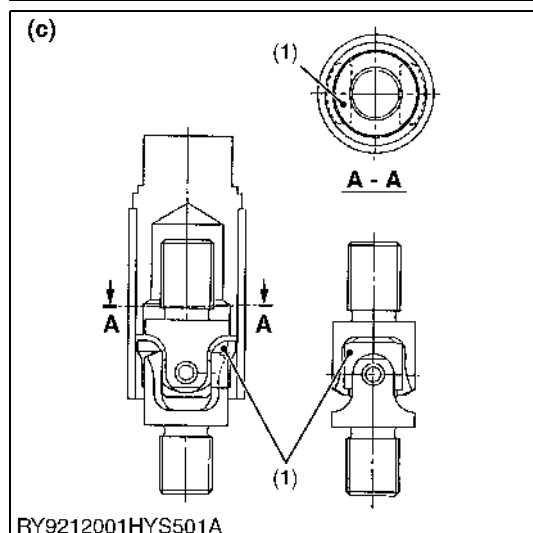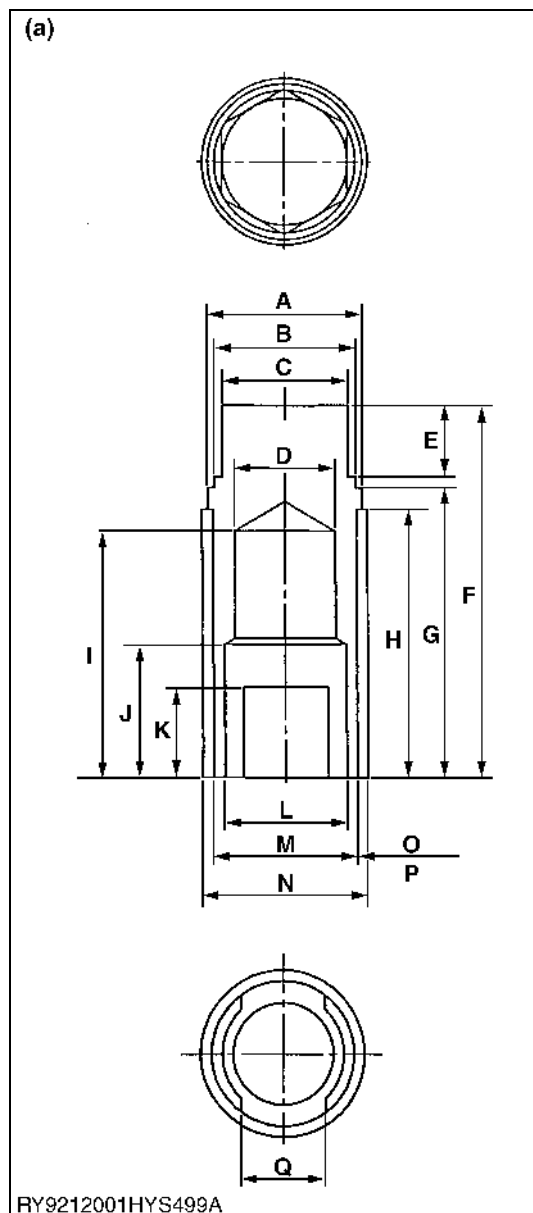

A	φ29 mm (φ1.142 in.)
B	φ26.5 mm (φ1.043 in.)
C	23.5 mm (0.925 in.) (nut width)
D	φ19 mm (φ0.748 in.)
E	13 mm (0.512 in.)
F	69 mm (2.717 in.)
G	54 mm (2.126 in.)
H	50 mm (1.968 in.)
I	46 mm (1.811 in.)
J	25 mm (0.984 in.)
K	17 mm (0.669 in.)
L	φ23 mm (φ0.906 in.)
M	φ27 mm (φ1.063 in.)
N	φ31 mm (φ1.220 in.)
O	Hole H 6
P	Axle n 6
Q	16 mm (0.6299 in.)
R	15.5 mm (0.6102 in.)
S	0.5 mm × 15 mm (0.0197 in. × 0.591 in.)
T	12.5 mm (0.492 in.)
U	9.5 mm (0.374 in.)
V	11.6 mm (0.457 in.)
W	6.5 mm (0.256 in.)
C1	0.5 mm (0.0197 in.) bevel
R1	R 13 mm (0.512 in.)
R2	R 5.8 mm (0.228 in.)
R3	R 4.5 mm (0.177 in.)

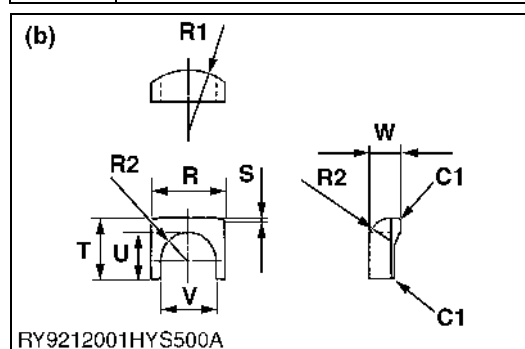

(1) Bushing


(a) U-Joint Tightening Tool, Detailed Schematic

(b) Bushing, Detailed Schematic

(c) Assembled U-Joint


RY9212001HYS0500US0

[2] TRAVEL PILOT VALVE

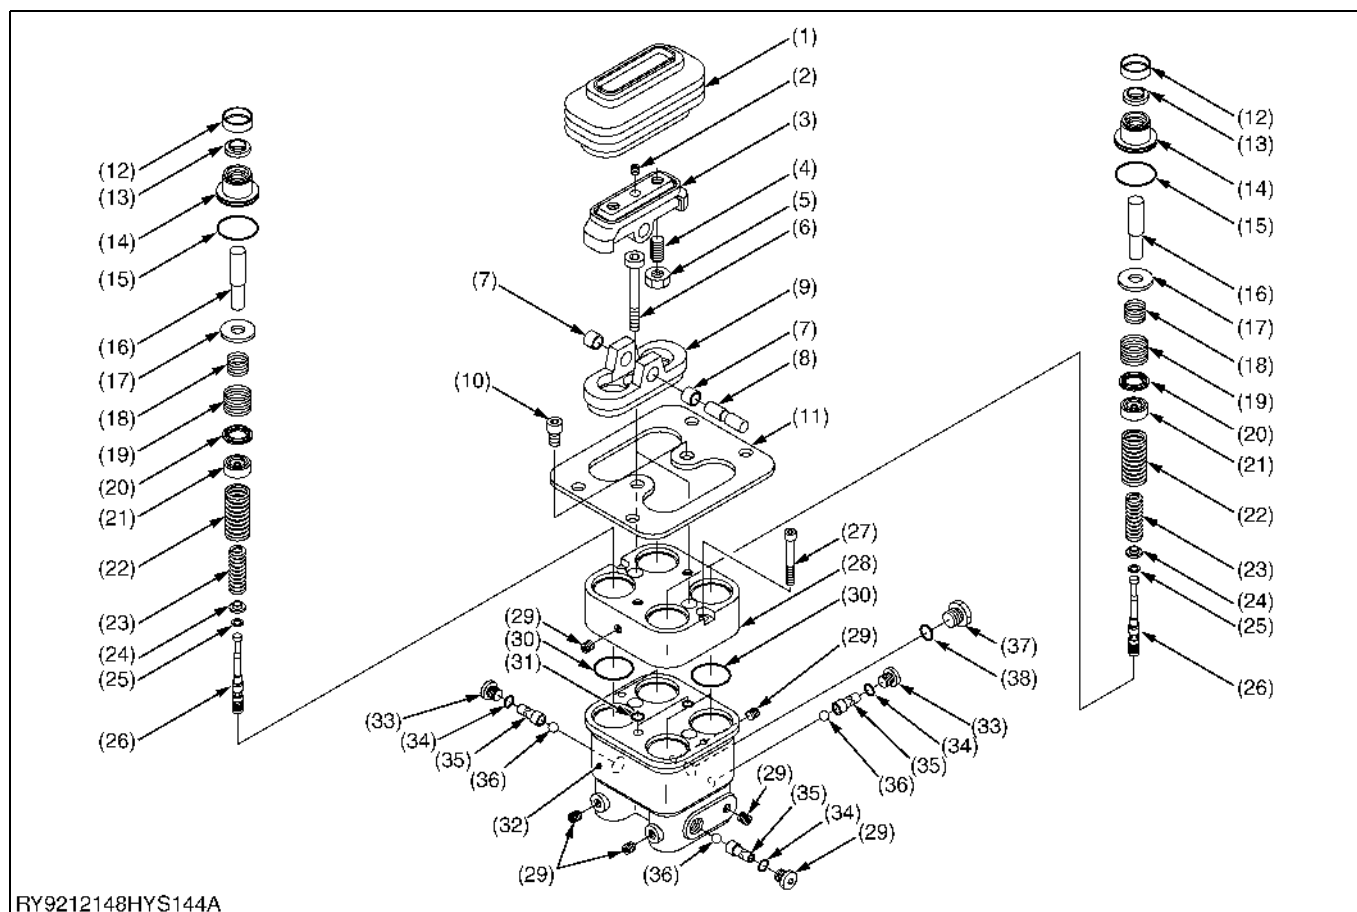

No.	Part Name	Qty	No.	Part Name	Qty	No.	Part Name	Qty
(1)	Bellows	2	(14)	Plug	4	(27)	Hex socket bolt	2
(2)	Set screw	2	(15)	O-ring	4	(28)	Damper casing	1
(3)	Cam	2	(16)	Pushrod	4	(29)	Plug	5
(4)	Set screw	4	(17)	Seat	4	(30)	O-ring	4
(5)	Lock nut	4	(18)	Damping spring, small	4	(31)	O-ring	2
(6)	Hex socket bolt	2	(19)	Damping spring, large	4	(32)	Casing	1
(7)	Bushing	4	(20)	Spring seat	4	(33)	Plug	3
(8)	Camshaft	2	(21)	Spring seat	4	(34)	O-ring	3
(9)	Cover	2	(22)	Return spring	4	(35)	Seat	3
(10)	Hex socket bolt	2	(23)	Secondary pressure spring	4	(36)	Steel ball	3
(11)	Cover	1	(24)	Washer	4	(37)	Plug	1
(12)	Grease cap	4	(25)	Secondary pressure adjustment shim	4	(38)	O-ring	1
(13)	Gasket	4	(26)	Spool	4			

RY9212148HYS0228US0

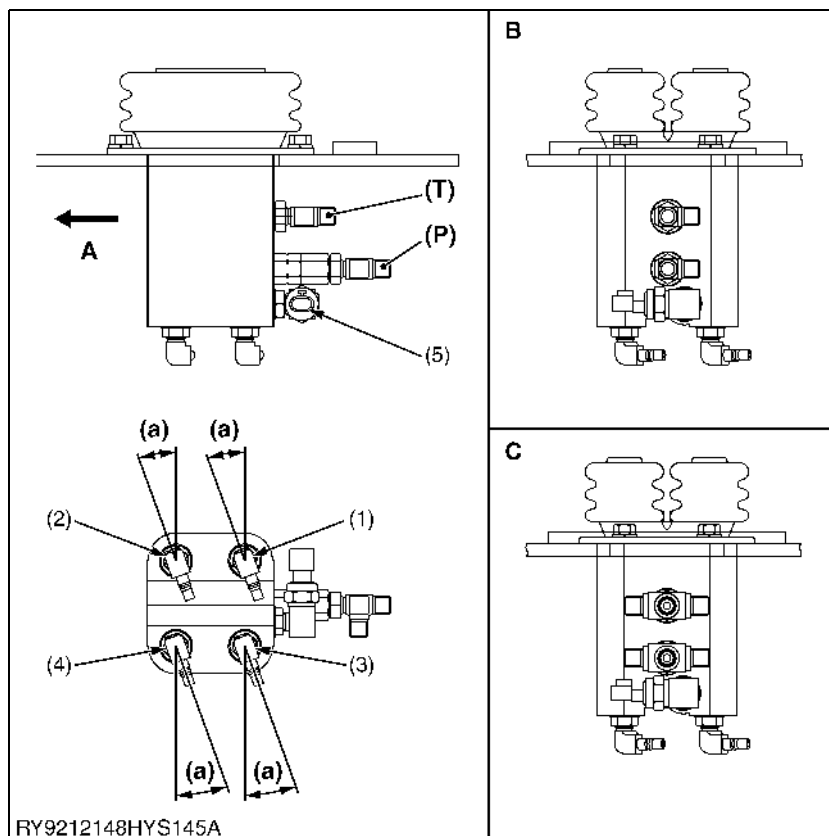**Travel pilot valve adapter angles**

	Point used	Tape color
(1)	Left backward	Blue
(2)	Left forward	Red
(3)	Right backward	Green
(4)	Right forward	Yellow
(5)	Pressure sensor	None
(P)	Port P	White
(T)	Port T	None

(a) 20 ° (0.35 rad)


A : Front side**B : Standard Spec****C : Angle Specification**

RY9212158HYS0034US0

(1) Disassembly

- To ensure parts that are reused are installed in the same place as before disassembly, mark the parts as needed during disassembly.

RY9212148HYS0230US0

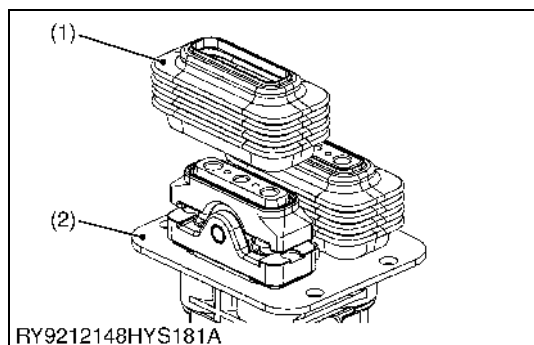

RY9212148HYS181A

- Clamp the pilot valve in a vise.
- Remove the bellows from the cover.


■ IMPORTANT

- Use a copper plate when clamping the pilot valve.

(1) Bellows

(2) Cover

RY9212148HYS0231US0

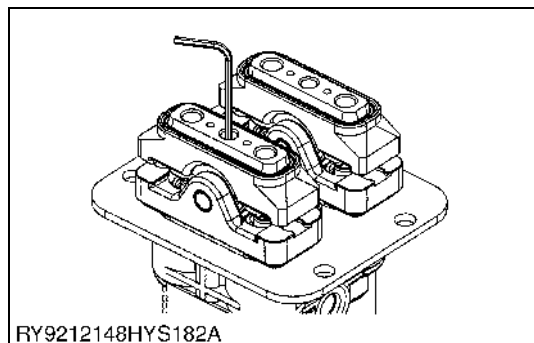

RY9212148HYS182A


- Loosen the hex socket set screws.

- Tool to use: 7 mm hex socket

■ IMPORTANT

- The set screw is held with a thread lock, so be careful when removing it.

RY9212148HYS0232US0

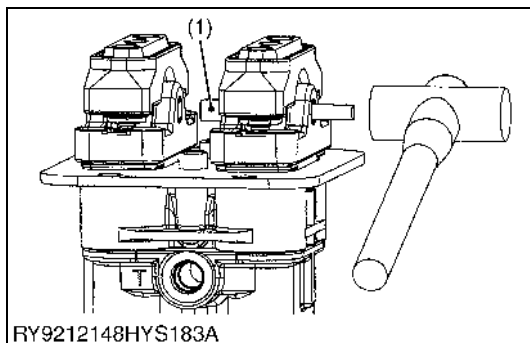


4. Put a rod against the camshaft and tap it out gently with a hammer.

- Tools to use: rod (8mm (ϕ0.31 in.) or less) and hammer

(1) Camshaft

RY9212148HYS0233US0

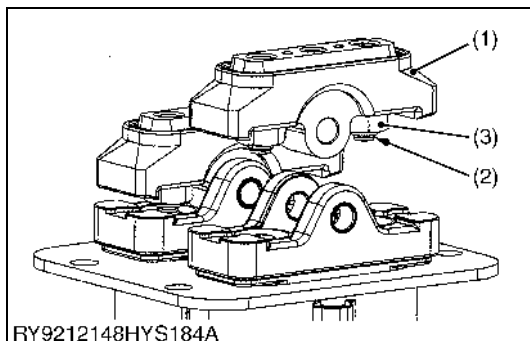

5. Remove the cam with the set screw and lock nut in place.

■ **IMPORTANT**


- Be careful as a pushrod may pop out.

(1) Cam

(3) Lock nut

(2) Set screw

RY9212148HYS0234US0

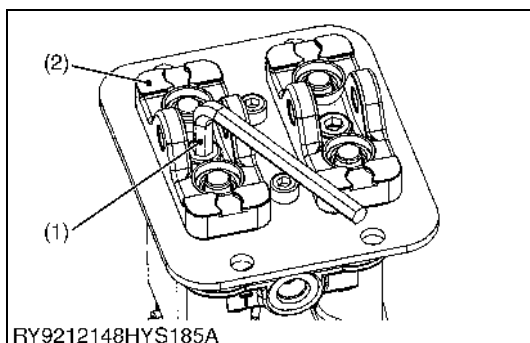


6. Remove the hex bolts.

- Tool to use: 7 mm hex socket

(1) Hex socket bolt

(2) Cover

RY9212148HYS0235US0

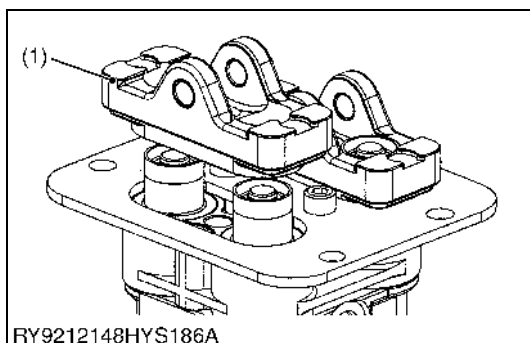


7. Remove the cover.

■ **IMPORTANT**

- Be careful as the pushrod and/or the plug may pop out due to the force of the spring.

(1) Cover

RY9212148HYS0236US0

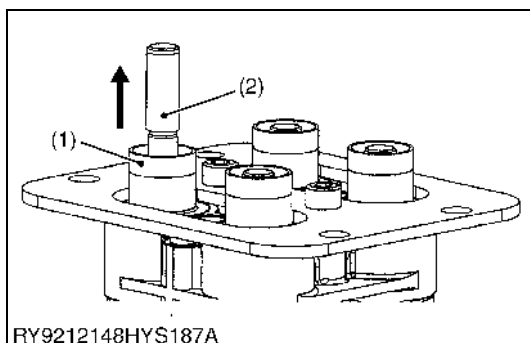

8. Take the pushrod off the plug.


■ **IMPORTANT**

- Be careful not to scratch the pushrod.
- Be careful as the plug may pop out due to the force of the spring.

(1) Plug

(2) Pushrod

RY9212148HYS0237US0

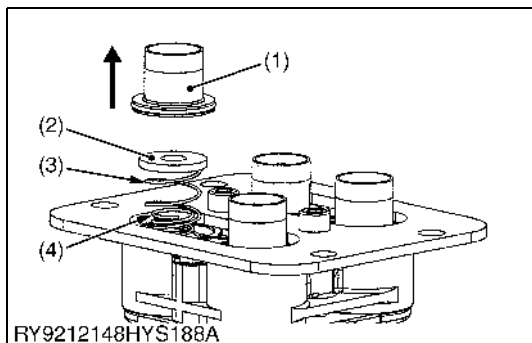


9. Remove the plug with its grease cap and gasket intact.
10. Take out the seat and damping spring.

■ **IMPORTANT**

- Be careful as the piston may pop out due to the force of the spring.

(1) Plug	(3) Damping spring, large
(2) Seat	(4) Damping spring, small


RY9212148HYS0238US0

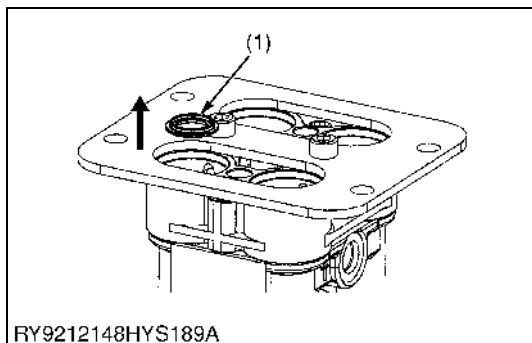

11. Remove the spring seat from the casing.

- (1) Spring seat

RY9212148HYS0239US0

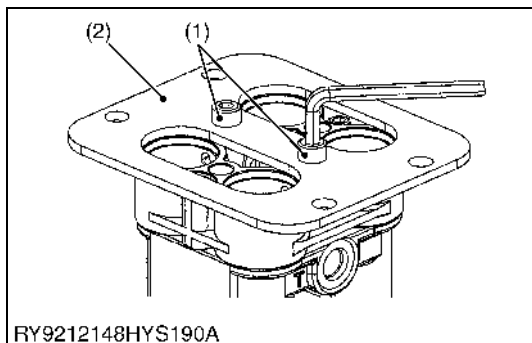


12. Remove the hex socket bolts and then the cover.

- Tool to use: 7 mm hex socket

(1) Hex socket bolt	(2) Cover

RY9212148HYS0240US0

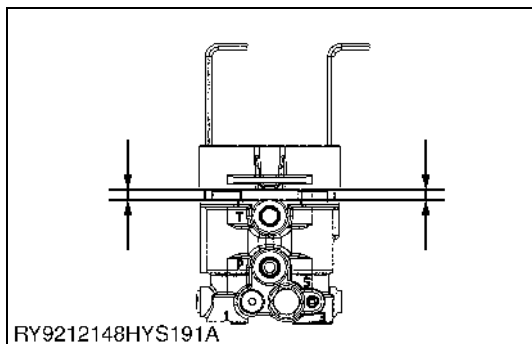


13. Remove the hex bolts.

- Tool to use: 7 mm hex socket

■ **IMPORTANT**

- Loosen the 2 hex socket bolts evenly to keep the damper casing level.

RY9212148HYS0241US0

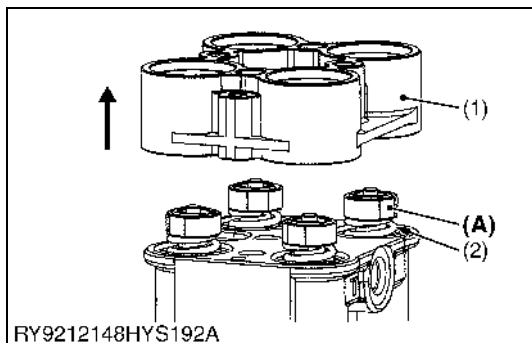


14. Remove the damper casing, reducing valve ASSY and the return spring.

■ **IMPORTANT**

- Be careful as the reducing valve ASSY may pop out due to the force of the spring.

(1) Damper casing	(A) Reducing valve ASSY
(2) Return spring	

RY9212148HYS0242US0

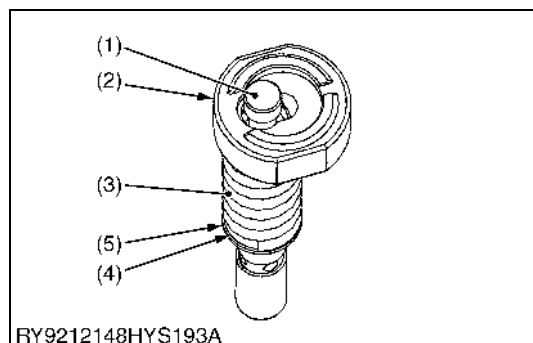

15. To disassemble the reducing valve, rest the bottom of the spool on a flat work surface, press the spring seat in and while compressing the secondary pressure spring, shift the spring seat to the side and remove it via the larger hole.


■ **IMPORTANT**

- Be careful not to scratch the surface of the spool.
- Do not disassemble the reducing valve unless there is a problem with it.
- Do not depress the spring seat more than 4 mm (0.16 in.).

Reducing valve ASSY

(1) Spool	(4) Washer
(2) Spring seat	(5) Secondary pressure adjustment shim
(3) Secondary pressure spring	

RY9212148HYS0243US0

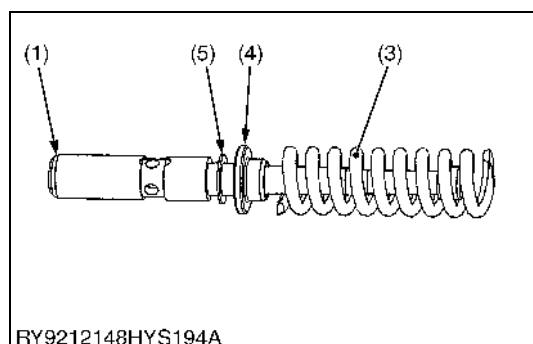


16. Disassemble the spool, secondary pressure spring, washer, and secondary pressure adjusting shim.

■ **IMPORTANT**

- The thickness of the secondary pressure adjusting shim varies for each spool due to the preset adjustment of the secondary pressure spring.

(1) Spool	(4) Washer
(3) Secondary pressure spring	(5) Secondary pressure adjustment shim


RY9212148HYS0303US0

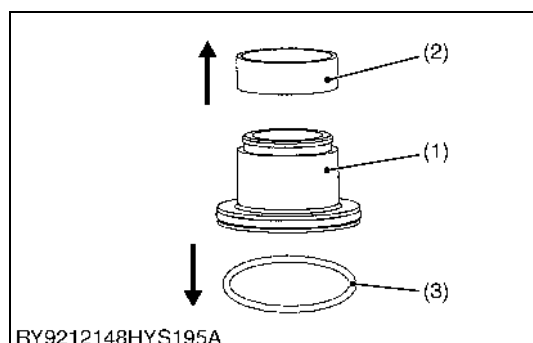

17. Remove the grease cap and O-ring from the plug.

(1) Plug	(3) O-ring
(2) Grease cap	

RY9212148HYS0244US0

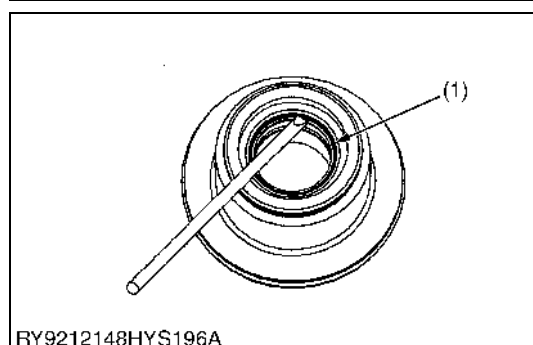

18. Remove the gasket from the plug.


- Tool to use: plastic spatula

■ **IMPORTANT**

- Be careful not to scratch the inside surface of the plug.

- | |
|------------|
| (1) Gasket |
|------------|


RY9212148HYS0245US0

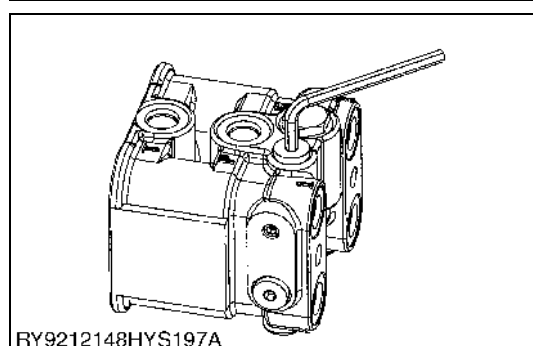

19. Put the casing in a vise and remove the plug.

- Tool to use: 7 mm hex socket

RY9212148HYS0246US0

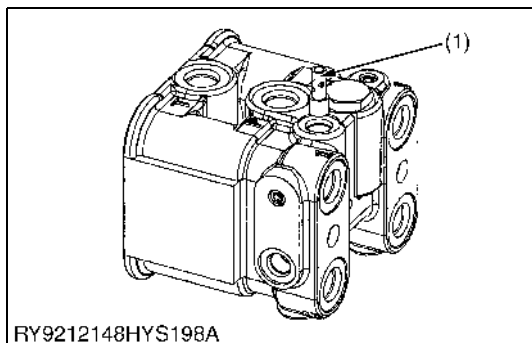


20. Remove the seat from the casing.

- Tool to use: magnet or L-shaped piece of wire

(1) Seat

RY9212148HYS0247US0

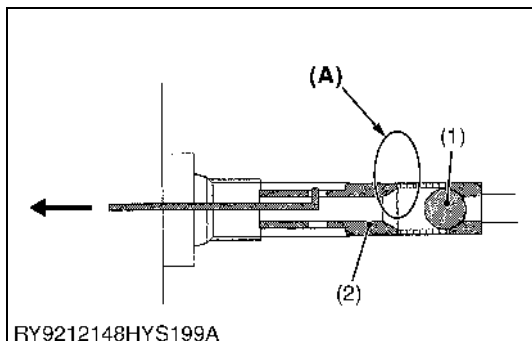

■ IMPORTANT


- Take care not to scratch steel balls or the surfaces they touch.

(1) Steel ball

(A) Steel ball contact surface

(2) Seat

RY9212148HYS0248US0

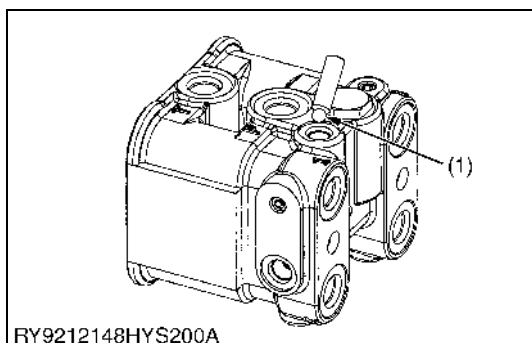


21. Remove the steel ball from the casing.

- Tool to use: Magnet

(1) Steel ball

RY9212148HYS0249US0

(2) Assembly

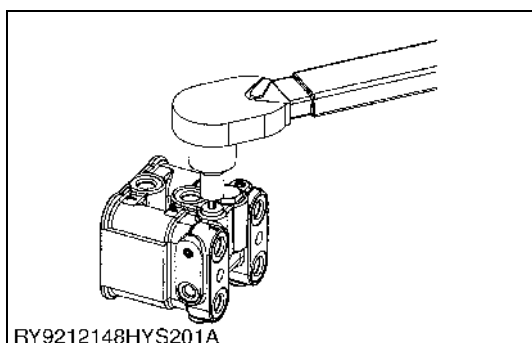


1. Install the steel ball and the seat in that order in the casing and mount and tighten the plug.

- Tools to use: Magnet, torque wrench

Tightening torque	Hex socket bolt	$11.8 \pm 1.0 \text{ N}\cdot\text{m}$ $1.2 \pm 0.1 \text{ kgf}\cdot\text{m}$ $8.7 \pm 0.7 \text{ lbf}\cdot\text{ft}$

RY9212148HYS0251US0

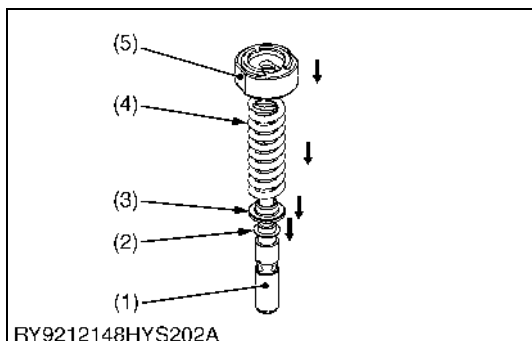

2. Install the secondary pressure adjusting shim, washer, secondary pressure spring and spring seat on the spool in order.

(1) Spool


(4) Secondary pressure spring

(2) Secondary pressure adjustment shim

(5) Spring seat

(3) Washer

RY9212148HYS0252US0

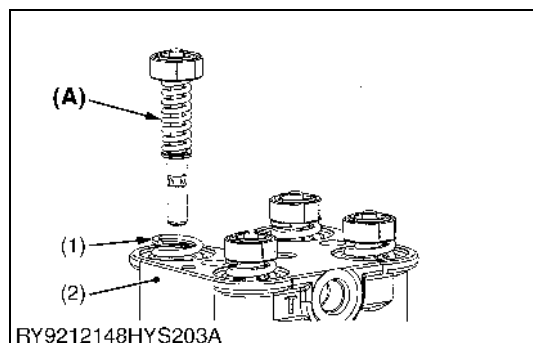

3. Install the return spring and reducing valve ASSY into the casing.

■ **IMPORTANT**

- Install them in the same position as before disassembly.



■ **NOTE**

- When installing the reducing valve ASSY, do not hit the bottom of the spool on the corners of the casing with any force.

- (1) Return spring
(2) Casing

- (A) Reducing valve ASSY
(B) Corner of casing

RY9212148HYS0253US0

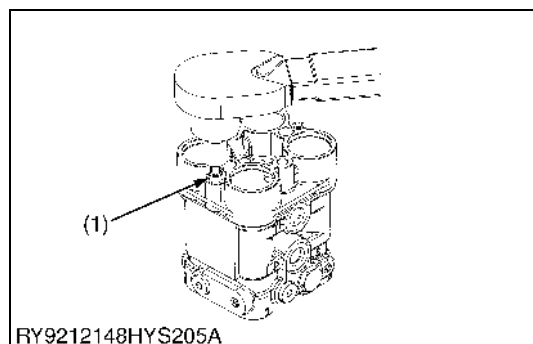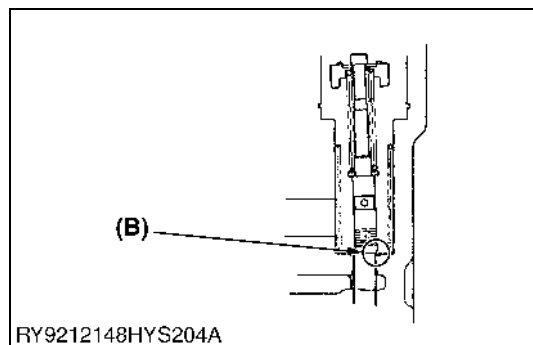

4. Install the O-ring in the casing and mount the damper casing to the casing with hex socket bolts.
- Tool to use: torque wrench


■ **IMPORTANT**

- Apply hydraulic oil to the O-ring.
- Tighten the hex socket bolts alternately so the casing stays level during assembly.

Tightening torque	Hex socket bolt	$8.8 \pm 1.0 \text{ N}\cdot\text{m}$ $0.9 \pm 0.1 \text{ kgf}\cdot\text{m}$ $6.5 \pm 1.0 \text{ lbf}\cdot\text{ft}$

- (1) Hex socket bolt

RY9212148HYS0254US0

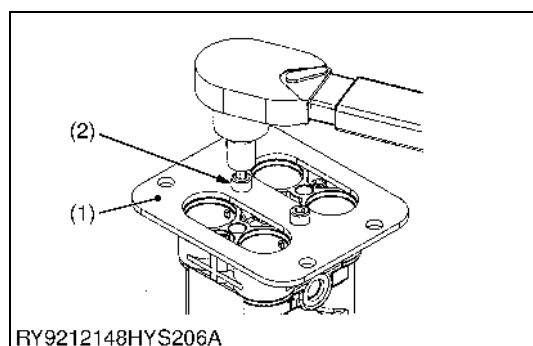


5. Mount the cover to the damper casing with hex socket bolts.
- Tool to use: torque wrench

Tightening torque	Hex socket bolt	$20.6 \pm 1.5 \text{ N}\cdot\text{m}$ $2.1 \pm 0.2 \text{ kgf}\cdot\text{m}$ $15.2 \pm 1.0 \text{ lbf}\cdot\text{ft}$

- (1) Cover

- (2) Hex socket bolt

RY9212148HYS0255US0

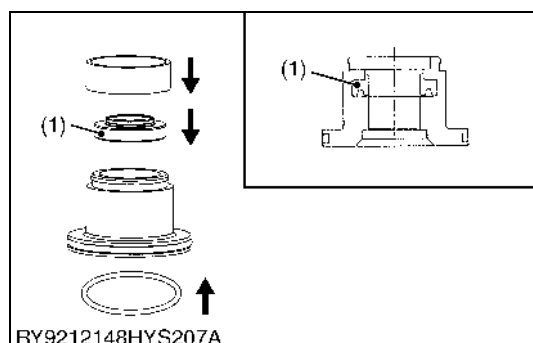


6. Install the gasket, grease cap and O-ring on the plug.

■ **IMPORTANT**

- Make sure to face the gasket the correct way.
- Apply grease to the gasket prior to assembly.

- (1) Gasket

RY9212148HYS0256US0

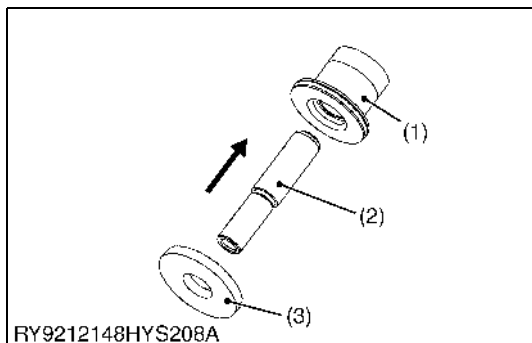


7. Install the pushrod into the plug.
8. Install the seat on the pushrod.

■ **IMPORTANT**

- Apply hydraulic oil to the pushrod prior to assembly.
- Install it in the same position as before disassembly.

- (1) Plug (3) Seat
(2) Pushrod

RY9212148HYS0257US0

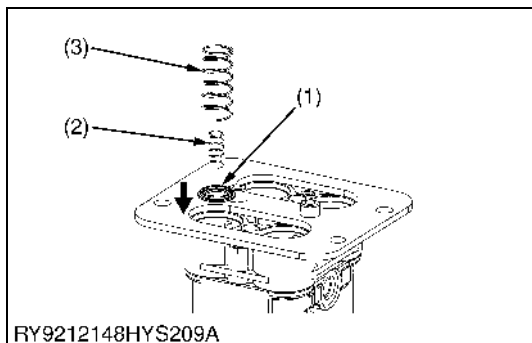


9. Install the spring seat and damping springs into the casing.

■ **IMPORTANT**

- Install them in the same position as before disassembly.
- Make sure the springs don't get tangled with each other.

- (1) Spring seat (3) Damping spring, large
(2) Damping spring, small


RY9212148HYS0258US0

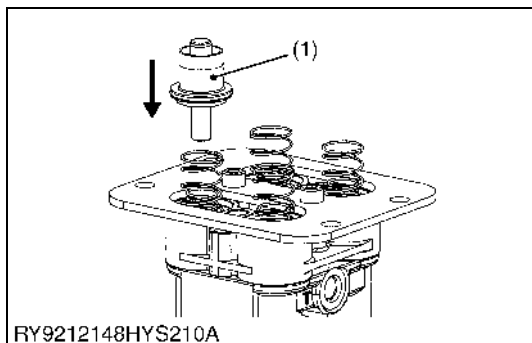

10. Install the pushrod ASSY into the casing.

- (1) Pushrod ASSY

RY9212148HYS0259US0

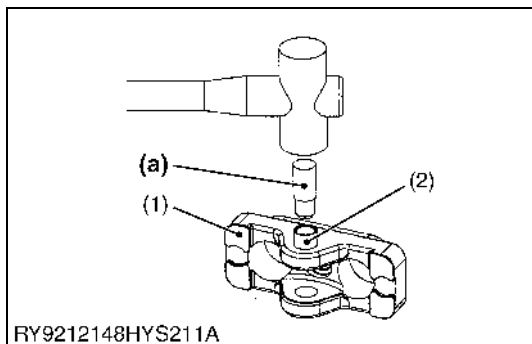

11. Use special tool (a) to insert the bushing into the cover.


- Tool to use: hammer

■ **IMPORTANT**

- Take care so the bushing doesn't protrude inside the cover.

- (1) Cover (a) Special tool
(2) Bushing

RY9212148HYS0260US0

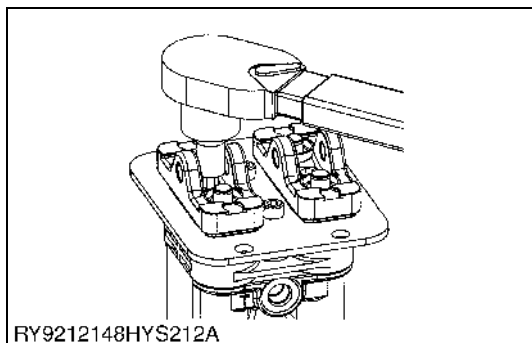

12. Mount the cover with hex socket bolts.


- Tool to use: torque wrench

■ **IMPORTANT**

- Tighten the hex socket bolts alternately so the cover stays level during assembly.

Tightening torque	Hex socket bolt	39.8 ± 4.0 N·m 4.1 ± 0.4 kgf·m 29.4 ± 3.0 lbf·ft

RY9212148HYS0261US0

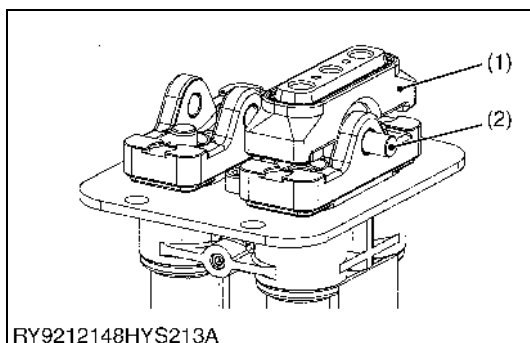


13. While holding the cam down, insert the camshaft from the outside.

(1) Cam

(2) Camshaft

RY9212148HYS0262US0

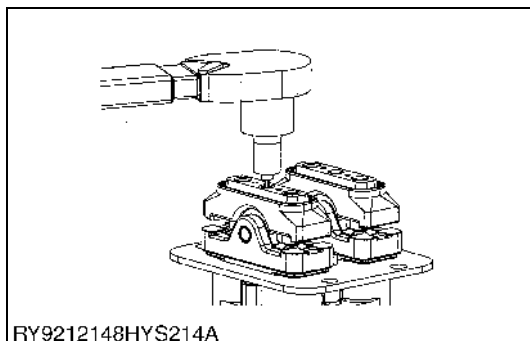

14. Install the set screw.


- Tool to use: torque wrench

■ **NOTE**

- Wipe clean any excess thread lock compound from the set screws.
- Apply a thread lock (Loctite 241) to the set screws.

Tightening torque	Set screw	$6.9 \pm 1.0 \text{ N}\cdot\text{m}$ $0.7 \pm 0.1 \text{ kgf}\cdot\text{m}$ $5.1 \pm 0.7 \text{ lbf}\cdot\text{ft}$

RY9212148HYS0263US0

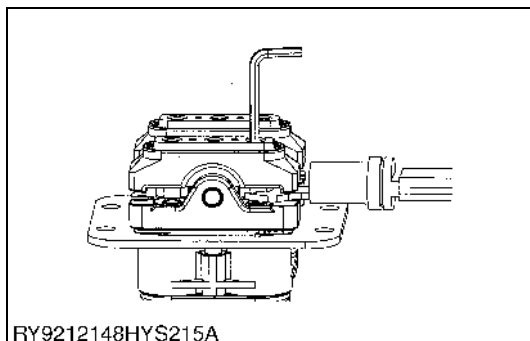

15. Adjust the height of the set screws so the top of the cam and the bottom of the cam are level.

Make sure there isn't any play in the middle and tighten the lock nuts.


- Tool to use: 7 mm hex socket, torque wrench

■ **IMPORTANT**

- Be careful because overtightening the set screws can also result in play in the middle and when the engine starts up, it may cause it to move suddenly.

Tightening torque	Lock nut	$33.3 \pm 3.4 \text{ N}\cdot\text{m}$ $3.4 \pm 0.3 \text{ kgf}\cdot\text{m}$ $24.6 \pm 2.5 \text{ lbf}\cdot\text{ft}$

RY9212148HYS0264US0

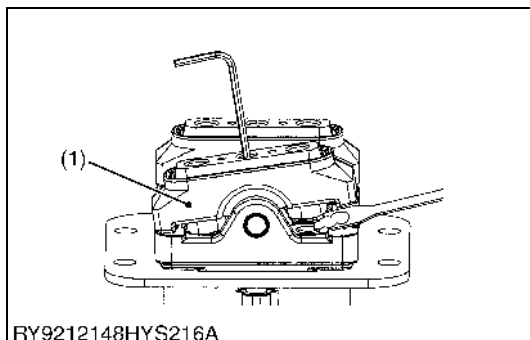

16. Tilt the cam and grease the head of the pushrods and inside the grease cap.


- Tool to use: 7 mm hex socket, spatula

■ **IMPORTANT**

- Apply grease with a spatula shaped tool made of a soft material so you don't scratch the pushrods or the plug.

(1) Cam

RY9212148HYS0265US0

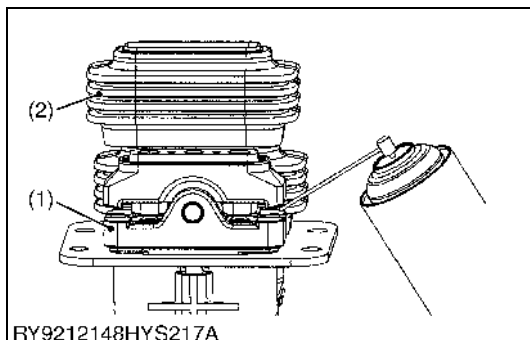

17. Apply an anti-rust oil to the parts inside the cover.


Install the bellows on top of the cover.

(1) Cover

(2) Bellows

RY9212148HYS0266US0

(3) Special Tools

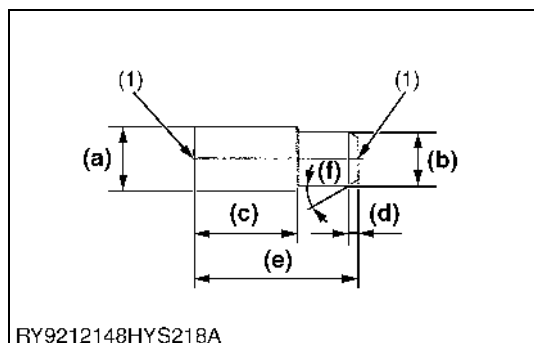


(a)Special tool

- (1) Center hole OK [ϕ 2mm (0.08 in.) or less]
- (c) 20 mm (0.79 in.)
 (d) 2 mm (0.08 in.)
 (e) 32 mm (1.26 in.)
 (f) 0.52 rad (30 °)
- (a) ϕ 12 (-0.25, -0.40) mm (0.42 in.)
 (b) ϕ 10 (-0.20, -0.25) mm (0.39 in.)


RY9212148HYS0267US0

[3] SWING PILOT VALVE

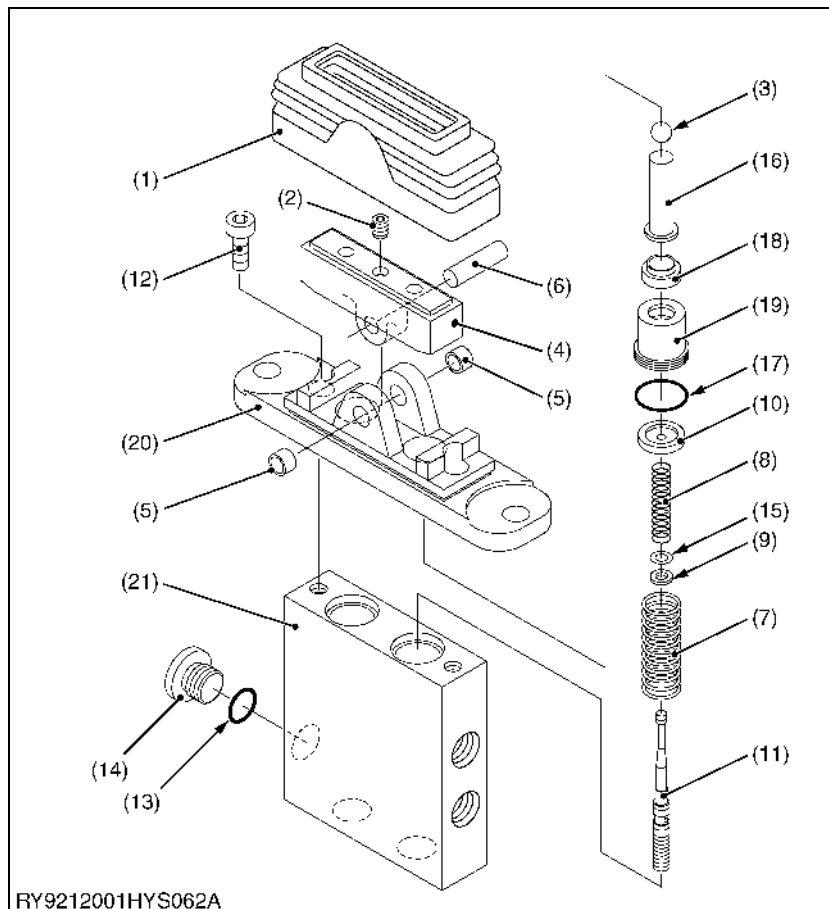

No.	Part Name	Qty
(1)	Bellows	1
(2)	Set screw	1
(3)	Ball	2
(4)	Cam	1
(5)	Bushing	2
(6)	Cam shaft	1
(7)	Return spring	2
(8)	Secondary pressure spring	2
(9)	Metal washer	2
(10)	Spring seat	2
(11)	Spool	2
(12)	Hex socket bolt	2
(13)	O-ring	1
(14)	Plug	1
(15)	Shim	2
(16)	Pushrod	2
(17)	O-ring	2
(18)	Gasket	2
(19)	Plug	2
(20)	Cover	1
(21)	Casing	1

RY9212148HYS0170US0

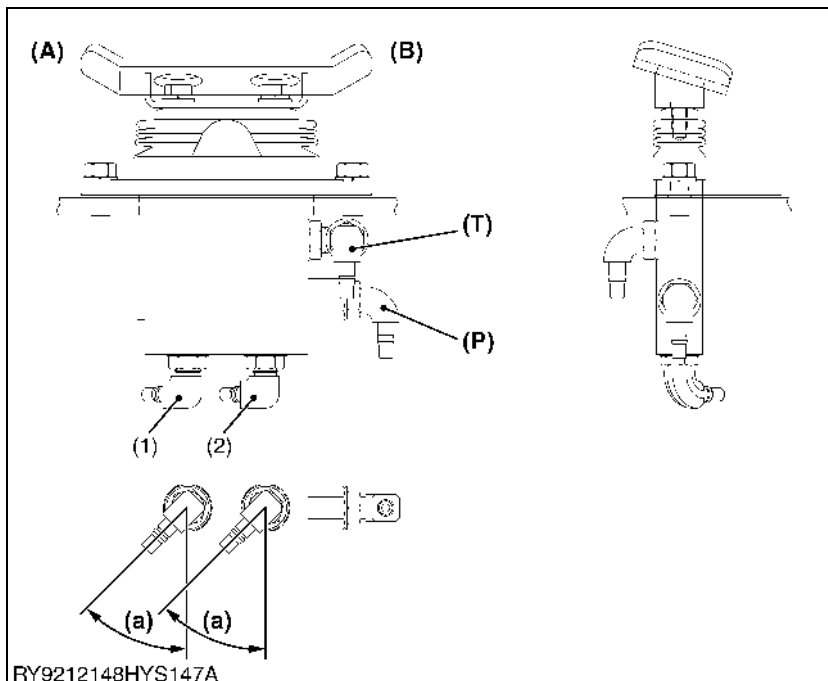

Swing pilot valve adapter angles

	Point used	Tape color
(1)	Left	Pea green
(2)	Right	Orange
(P)	Port P	White
(T)	Port T	None


(A) Right swing

(B) Left swing

(a) 45 ° (0.79 rad)

RY9212148HYS0269US0

(1) Disassembly

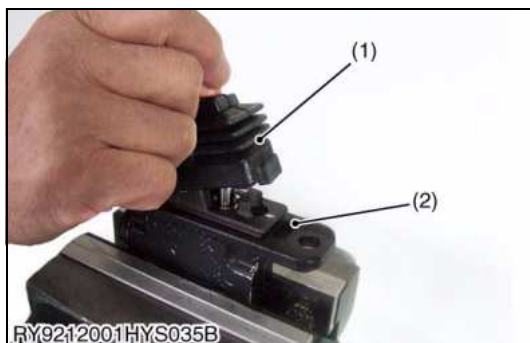

1. Clamp the pilot valve in a vise.
2. Remove the bellows from the cover.

■ IMPORTANT

- Use a copper plate when clamping the part.

(1) Bellows

(2) Cover

RY9212148HYS0171US0



3. Remove the set screw.

■ IMPORTANT

- The set screw is held with a thread lock, so be careful when removing it.

- Tool to use: 3 mm hex socket

RY9212148HYS0172US0



4. Put a pin punch against the edge of the cam shaft and tap it lightly with a hammer to remove it.

- Tool to use: Hammer and pin punch ($\phi 7$ mm, $\phi 0.3$ in. $\geq$)

(1) Cam Shaft

RY9212148HYS0173US0



5. Remove the cam.


■ **IMPORTANT**

- Handle the cam and the ball as an assembly.
(Cannot be disassembled)
- Mark the relationship between the cam and the cover.

(1) Cam

(2) Ball

RY9212148HYS0174US0

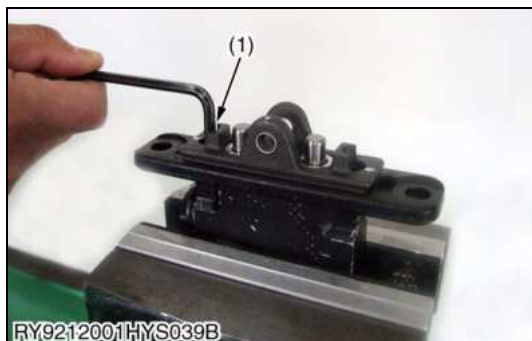


6. Remove the hex socket bolt.

- Tool to use: hex socket 5 mm

(1) Hex Socket Bolt

RY9212148HYS0175US0

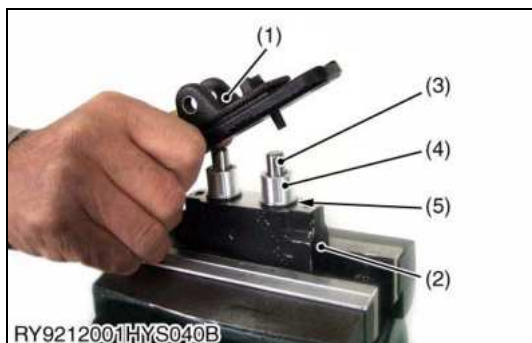

7. Remove the cover.



CAUTION

- Mark the relationship between the cover and the casing.
- Be careful so the pushrod and the plug don't pop out.

(1) Cover

(2) Casing


(3) Pushrod

(4) Plug

(5) O-ring

(6) Return Spring

RY9212148HYS0176US0

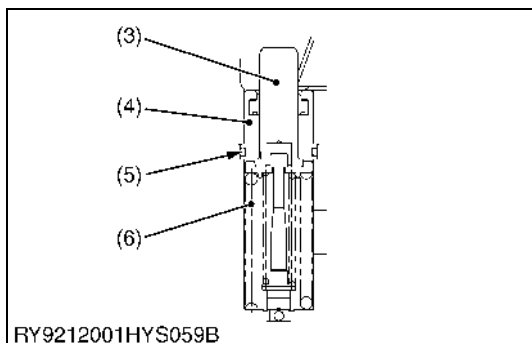

8. Take the plug out with the pushrod still in place.

■ **IMPORTANT**


- Mark the relationship between the plug and the casing.


(1) Plug

(2) Pushrod

(3) O-ring

RY9212148HYS0177US0

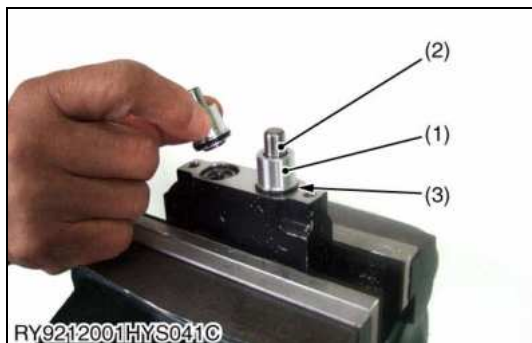

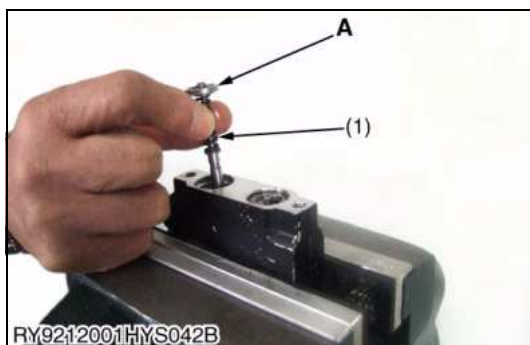

9. Remove the reducing valve ASSY, secondary pressure spring and return spring from the casing.



■ **IMPORTANT**

- Mark the relationship of the casing holes.

- (1) Secondary Pressure Spring
(2) Return Spring

A : Reducing Valve ASSY

RY9212148HYS0178US0

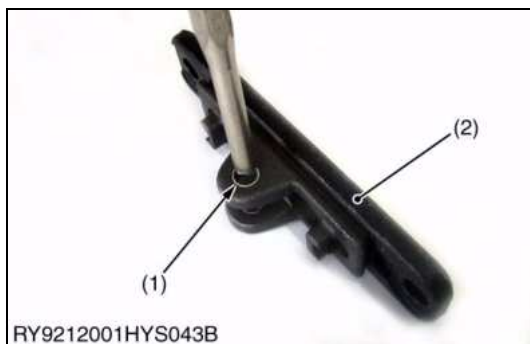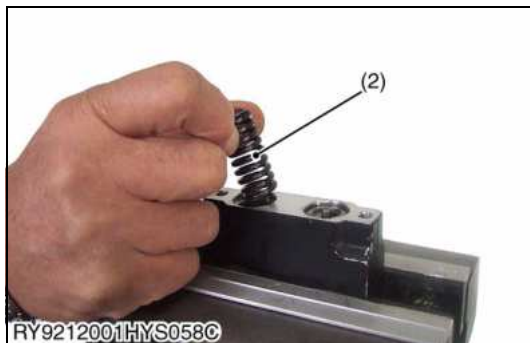

10. Put the cover on its side, put a pin punch against the bushing and lightly tap it with a hammer to remove it.

- Tools to use : Hammer and pin punch ($\phi 10$ mm, $\phi 0.39$ in. $\geq$)

- (1) Bushing (2) Cover

RY9212148HYS0179US0




11. To disassemble the reducing valve, compress the secondary pressure spring, shift the spring seat to the side and remove the spool via the large hole.

■ **IMPORTANT**

- Be careful not to scratch the spool.
- Do not depress the spring seat more than 4 mm (0.16 in.).
- Do not disassemble the reducing valve unless there is a problem with it.

- (1) Spring Seat

RY9212148HYS0180US0

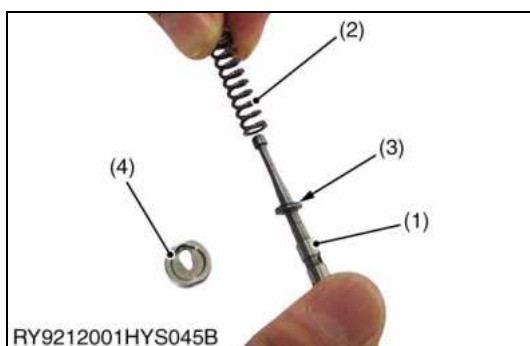


12. Remove the spool, secondary pressure spring shim(s) and washer.

■ **IMPORTANT**

- Treat as an assembly until reassembly.
- The thickness of the metal washers is different for each spool ASSY due to the preset adjustment of the secondary pressure spring.
- A metal washer is not used in the figure.

- (1) Spool (3) Shim
(2) Secondary Pressure Spring (4) Spring Seat

RY9212148HYS0181US0

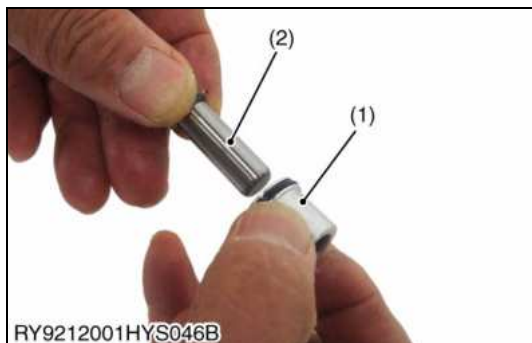


13. Remove the plug from the pushrod.

(1) Plug

(2) Pushrod

RY9212148HYS0182US0

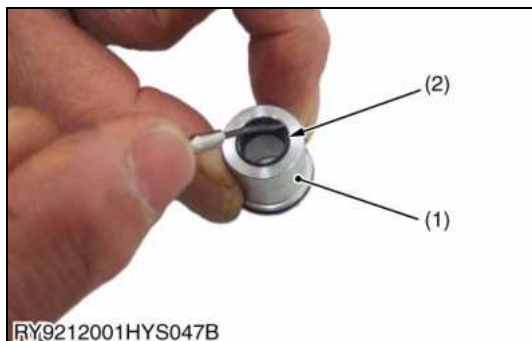

14. Remove the gasket from the plug.



CAUTION


- Use a mini slotted screwdriver to remove it.
- Be careful not to scratch the inside surface of the plug.

- Tool to use: Slotted screwdriver

(1) Plug

(2) Gasket

RY9212148HYS0183US0

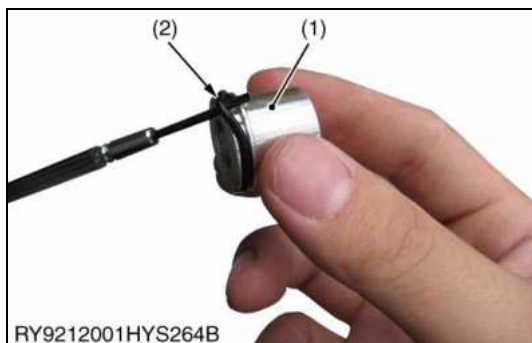


15. Remove the O-ring from the plug.

(1) Plug

(2) O-Ring

RY9212148HYS0184US0

(2) Assembly

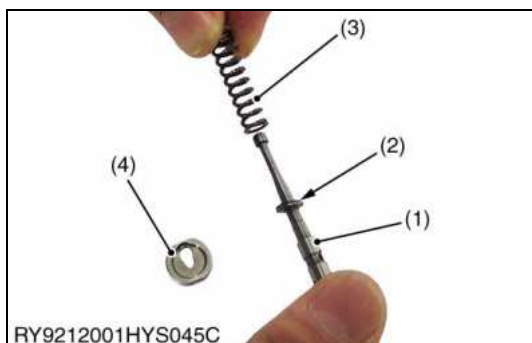

1. Install the metal washer, shim, secondary pressure spring and spring seat in order on the spool.

■ IMPORTANT

- The thickness of the metal washers is different for each spool ASSY due to the preset adjustment of the secondary pressure spring.

(1) Spool

(3) Secondary Pressure Spring

(2) Shim

(4) Spring Seat

RY9212148HYS0185US0




2. Pass the end of the spool through the larger part of the hole in the spring seat (10), compressing the spring and shifting the spring seat to the side to install it.

■ IMPORTANT

- Be careful not to scratch the spool.
- Do not depress the spring seat 4 mm (0.16 in.) ≤

(1) Spring seat

RY9212148HYS0186US0

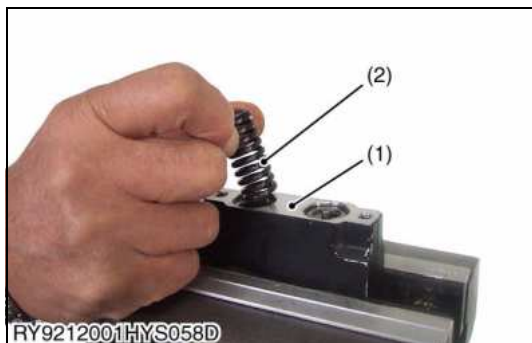

3. Clamp the casing in a vise.
Install the return spring in the casing.


■ **IMPORTANT**

- Install it in the same position as before disassembly.

(1) Casing

(2) Return spring

RY9212148HYS0187US0

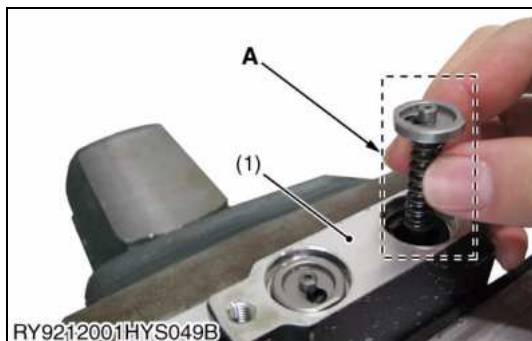

4. Install the reducing valve ASSY **A** to the casing.

■ **IMPORTANT**



- Install it in the same position as before disassembly.
- When installing the reducing valve ASSY, take care not to hit the bottom edge of the spool hard against the corner **B** or the casing.

(1) Casing

A : Reducing Valve ASSY

B : Corner of Casing

RY9212148HYS0188US0

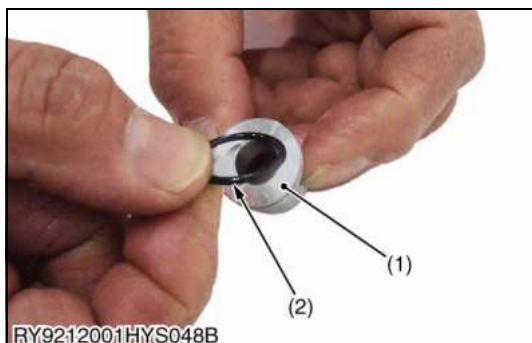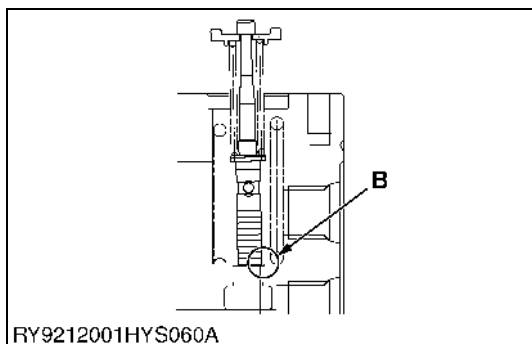

5. Install the O-ring on the plug.


■ **IMPORTANT**

- Apply hydraulic oil to the O-ring.

(1) Plug

(2) O-Ring

RY9212148HYS0189US0

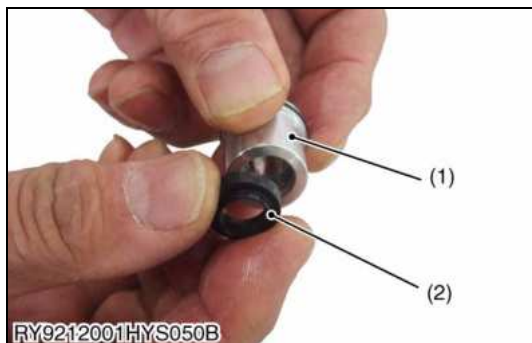

6. Install the gasket on the plug.



■ **IMPORTANT**

- Be careful that the gasket faces the right direction. (The gasket has an uneven shape ; put the end with a larger diameter in first.)
- Apply hydraulic oil on the circumference and lip of the gasket.

(2) Gasket

(1) Plug

RY9212148HYS0190US0

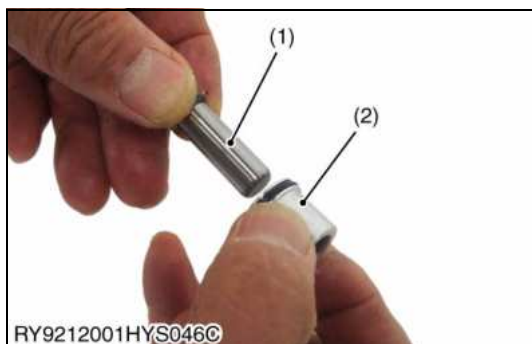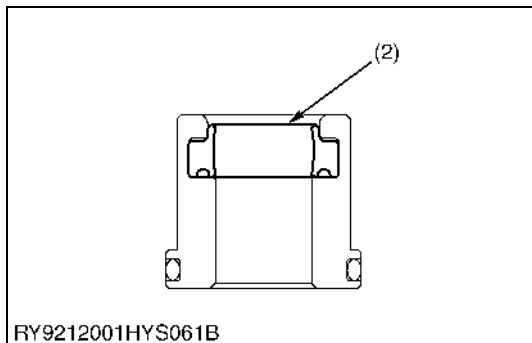

7. Install the pushrod into the plug.


■ **IMPORTANT**

- Apply hydraulic oil to the pushrod.
- Do not force the gasket in as it may damage its lip.

(1) Pushrod

(2) Plug

RY9212148HYS0191US0

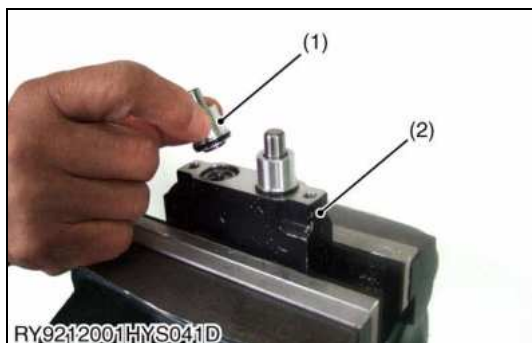


8. Install the pushrod and plug ASSY in the casing.

(1) Plug

(2) Casing

RY9212148HYS0192US0

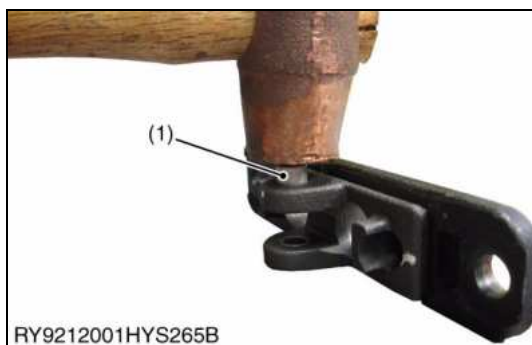


9. Turn the cover on its side and tap lightly on the bushing with a hammer to install it.

■ **IMPORTANT**

- Take care not to knock the bushing so it sticks out from the inside of the cover.
- Tool to use: hammer

(1) Bushing

RY9212148HYS0193US0

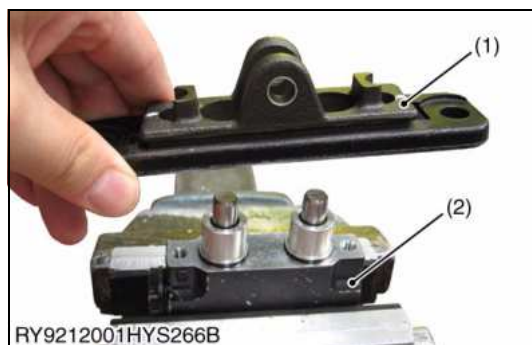

10. Install the cover on the casing.

■ **IMPORTANT**

- Install it in the same position as before disassembly.
- Note that the cover will ride up due to the springs.

(1) Cover

(2) Casing

RY9212148HYS0194US0



11. Install the hex socket bolts.

■ **IMPORTANT**


- Install them so the cover sits flat.

Tightening torque	Cover	$8.8 \pm 0.8 \text{ N}\cdot\text{m}$ $0.90 \pm 0.08 \text{ kgf}\cdot\text{m}$ $6.5 \pm 0.6 \text{ lbf}\cdot\text{ft}$

- Tool to use: hex socket 5 mm

(1) Hex Socket Bolt

RY9212148HYS0195US0

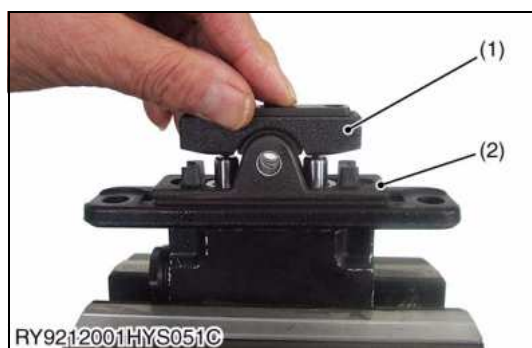

12. Install the cam on the cover.

■ **IMPORTANT**

- Install it in the same position as before disassembly.

(1) Cam

(2) Cover

RY9212148HYS0196US0



13. Install the camshaft.

■ **IMPORTANT**

- Grease the sliding part that holds the camshaft.
- Install the indentation in the cam faces up.

(1) Cam Shaft

(2) Cam

RY9212148HYS0197US0



14. Apply Loctite to the threads of the hex socket bolt.

- Loctite #241

RY9212148HYS0302US0




15. Install the hex socket bolt.

Tightening torque	Hex socket bolt	$6.9 \pm 1.0 \text{ N}\cdot\text{m}$ $0.7 \pm 0.1 \text{ kgf}\cdot\text{m}$ $5.1 \pm 0.7 \text{ lbf}\cdot\text{ft}$

- Tool to use: hex socket 3 mm

RY9212148HYS0199US0

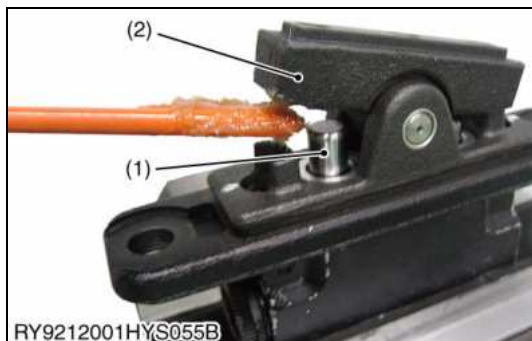

16. Apply grease to the ends of the pushrods.


■ **IMPORTANT**

- Use a soft spatula to apply the grease so you don't scratch the surfaces of the pushrods or the plugs.

(1) Pushrod

(2) Cam

RY9212148HYS0200US0

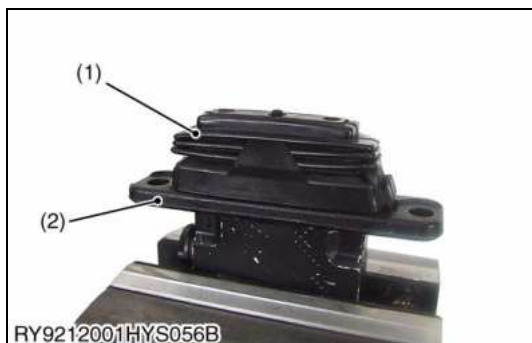

17. After fitting the top of the bellows onto the cam, fit the bottom edge into the groove in the cover.

■ **IMPORTANT**

- Before fitting the bottom edge of the bellows into the groove of the cover, apply an anti-rust oil to the parts inside the bellows.


(1) Bellows

(2) Cover

RY9212148HYS0201US0



[4] BLADE PILOT VALVES

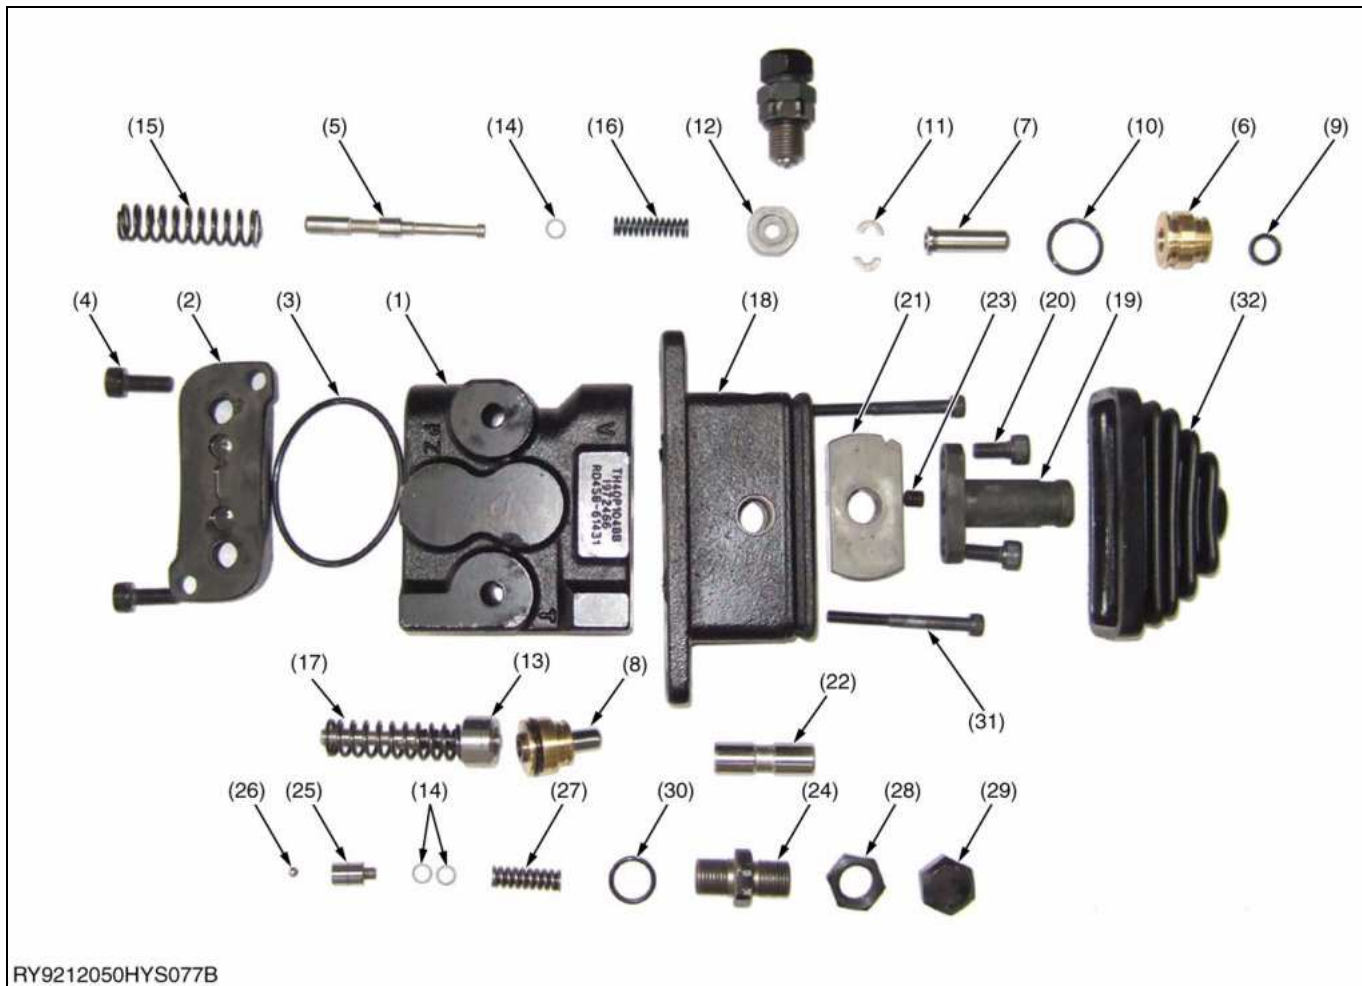


No.	Part Name	Qty	No.	Part Name	Qty	No.	Part Name	Qty
(1)	Casing	1	(12)	Spring seat 1	1	(23)	Set screw	1
(2)	Port plate	1	(13)	Spring seat 2	1	(24)	Detent plug	2
(3)	O-ring	1	(14)	Washer 2	Select thick-ness	(25)	Holder	2
(4)	Hex socket bolt	2	(15)	Return spring	2	(26)	Steel ball	2
(5)	Spool	2	(16)	Secondary pressure spring 1	1	(27)	Spring	2
(6)	Plug	2	(17)	Secondary pressure spring 2	1	(28)	Lock nut	2
(7)	Pushod 1	1	(18)	Cover	1	(29)	Adjusting nut	2
(8)	Pushod 2	1	(19)	Lever	1	(30)	O-ring	2
(9)	Seal	2	(20)	Hex socket bolt	2	(31)	Hex socket bolt	2
(10)	O-ring	2	(21)	Disc	1	(32)	Bellows	1
(11)	Washer 1	4	(22)	Camshaft	1			

- Thickness of washer 2 as per table below

Point used	Thickness
Detent	0 to 2 mm (0 to 0.08 in.) or less
Reducing valve	0.4 mm (0.02 in.) One washer

RY9212158HYS0071US0

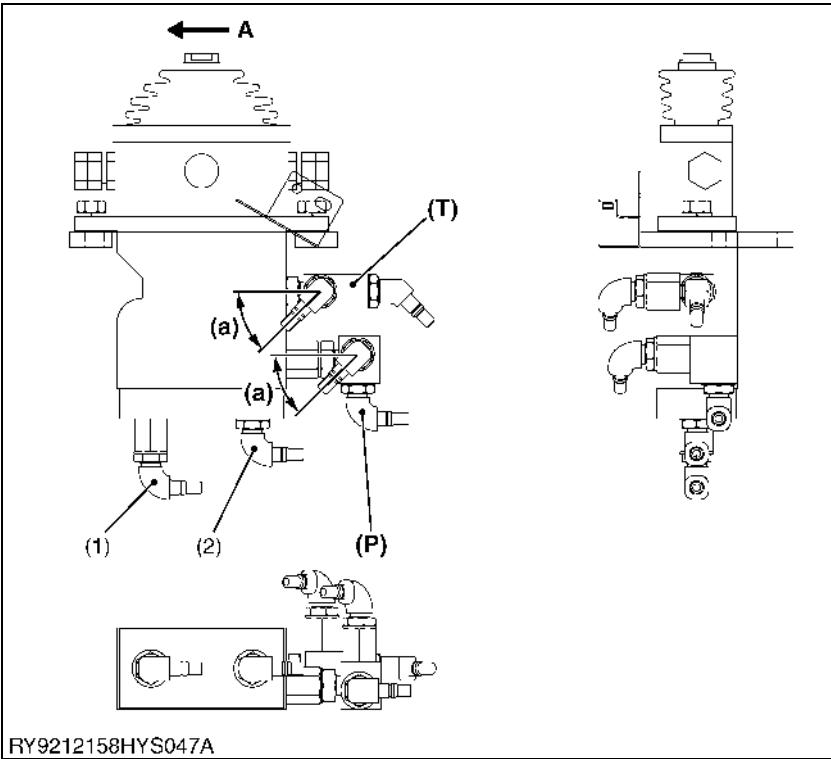

Adapter angles

	Point used	Tape color
(1)	Down	Brown
(2)	Up	Pink
(P)	Port P	White
(T)	Port T	None

(A) Front side


(a) 45 ° (0.79 rad)

RY9212158HYS0072US0

(1) Disassembly

- To ensure parts that are reused are installed in the same place as before disassembly, mark the parts as needed during disassembly.

RY9212158HYS0073US0

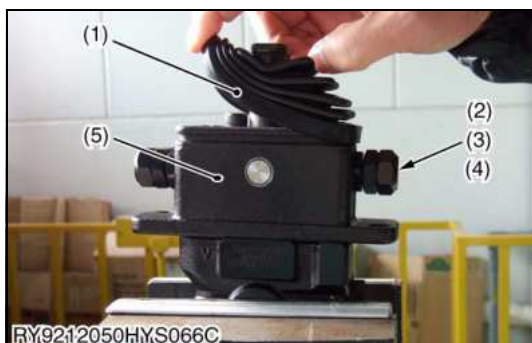

- Clamp the pilot valve in a vise.
- Remove the bellows from the cover.
- Remove the detent parts from the outwards in and remove the ball, holder, washer 2 and the spring that are inside it.
 - Tool to use: 22 mm socket

■ IMPORTANT

- Use a copper plate when clamping the pilot valve.

(1) Bellows	(4) Adjusting Nut
(2) Detent Plug	(5) Cover
(3) Lock Nut	


RY9212158HYS0074US0



- Remove the hex socket bolts and then the lever.
 - Tool to use: 6 mm hex socket

(1) Hex Socket Bolt	(2) Lever

RY9212158HYS0075US0

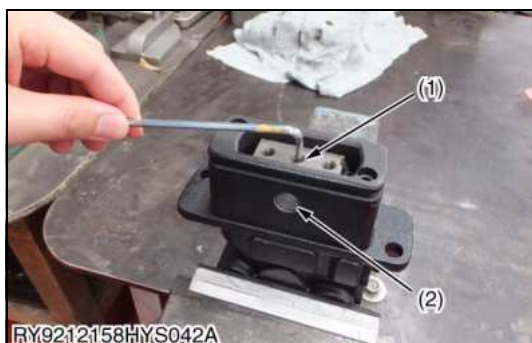


- Remove the set screw and camshaft.
 - Tool to use: 4 mm hex socket

■ IMPORTANT

- The set screw is held with a thread lock, so be careful when removing it.

(1) Set Screw	(2) CamShaft

RY9212158HYS0076US0

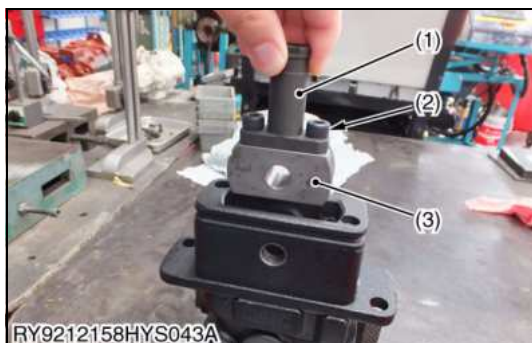

- Use the lever and the hex bolts to take the disc out.

(1) Lever	(3) Disc
(2) Hex Socket Bolt	

RY9212158HYS0077US0



- Remove the hex socket bolts and then the cover.
 - Tool to use: 5 mm hex socket

■ IMPORTANT

- If the return spring is strong, when you loosen a hex socket bolt, the cover, plug and pushrod will lift up at the same time, so loosen the bolts alternately so the cover stays level.

(1) Hex Socket Bolt	(2) Cover

RY9212158HYS0078US0



8. If the plug stays in the casing, use a slotted screwdriver to get the plug out.


- Tool to use: Slotted screwdriver

■ **IMPORTANT**

- Take care not to use too much force with the screwdriver when removing the plug so you don't damage it.
- Also note that the plug may pop out due to the force of the spring.

(1) Plug

RY9212158HYS0079US0

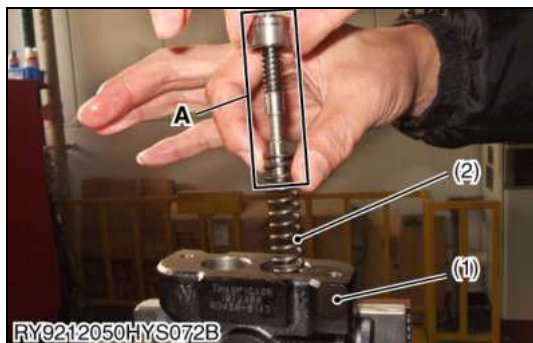

9. Remove the reducing valve and the return spring.

■ **IMPORTANT**


- Be careful not to scratch the spool.
- Do not disassemble the reducing valve unless there is a problem with it.

(1) Casing

(2) Return Spring

A : Reducing Valve

RY9212158HYS0080US0

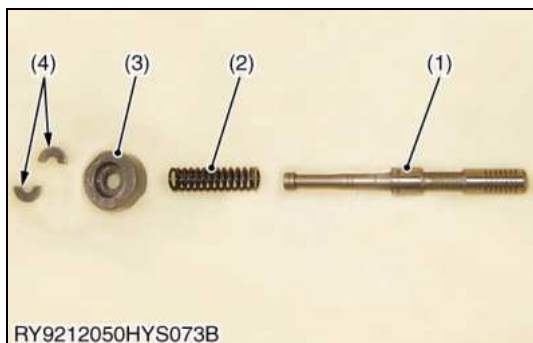

Reducing valve

■ **IMPORTANT**

- Do not depress the spring seat more than 4 mm (0.16 in.).
- The metal washer 2 is not used in the photo at left.
- The thickness of washer 2 varies for each spool due to the preset adjustment of the secondary pressure spring.


(1) Spool

(2) Secondary Pressure Spring

(3) Spring Seat

(4) Washer 1

RY9212158HYS0081US0

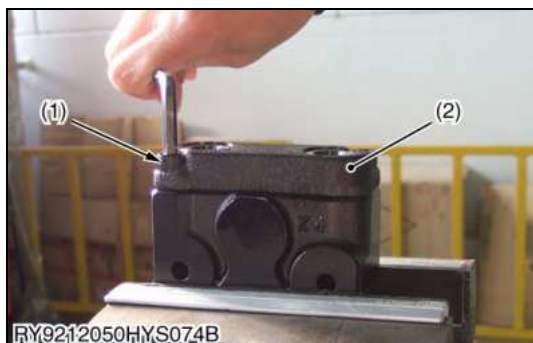


10. Flip the casing over in the vise and remove the hex socket bolts and the port plate.

- Tool to use: 6 mm hex socket

(1) Hex Socket Bolt

(2) Port Plate

RY9212158HYS0082US0

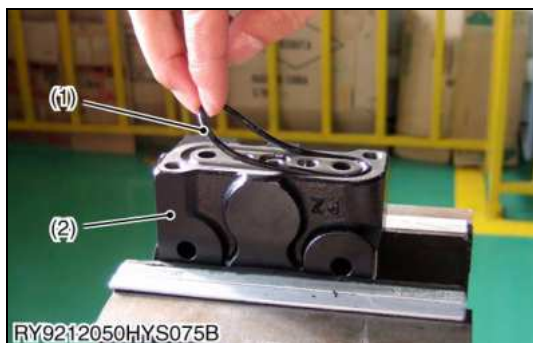


11. Remove the O-ring from the casing.

(1) O-ring

(2) Casing

RY9212158HYS0083US0

(2) Assembly

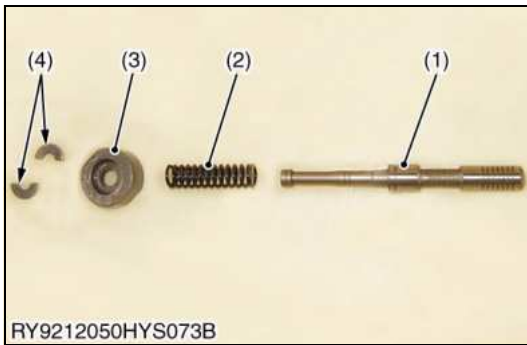

1. Assemble the reducing valve.
Install the secondary pressure setting spring and the spring seat in that order on the spool, then press the spring seat down and install the two half-circle shaped pieces of washer 1 on the spring seat so they don't overlap.

■ **NOTE**

- Face washers 1 edge side up so they catch the head of the spool.
- Do not depress the spring seat more than 4 mm (0.16 in.).
- The metal washer 2 is not used in the photo at left.
- The thickness of washer 2 varies for each spool due to the preset adjustment of the secondary pressure spring.

- (1) Spool (3) Spring Seat
(2) Secondary Pressure Spring (4) Washer 1

RY9212158HYS0084US0



2. Install the O-ring on the casing.

■ **IMPORTANT**

- **Apply hydraulic oil to the O-ring.**

- (1) O-ring (2) Casing

RY9212158HYS0085US0

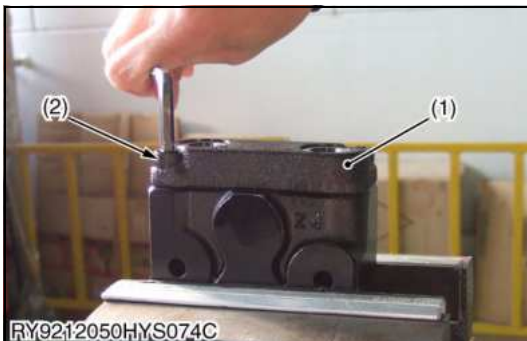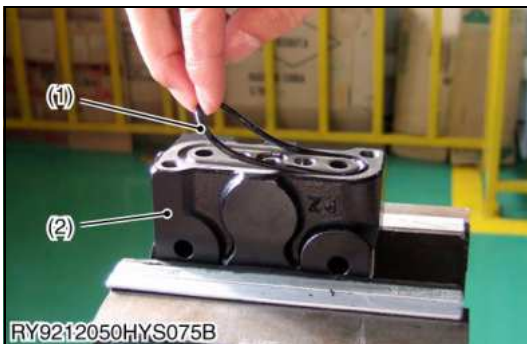



3. Install the port plate on the casing and tighten it with the hex socket bolts.

- Tool to use: 6 mm hex socket

Tightening torque	Hex socket bolt	29.4 ± 2.0 N·m 3.0 ± 0.2 kgf·m 21.7 ± 1.5 lbf·ft

- (1) Port Plate (2) Hex Socket Bolt

RY9212158HYS0086US0

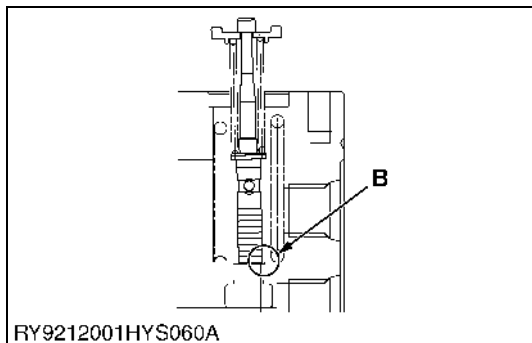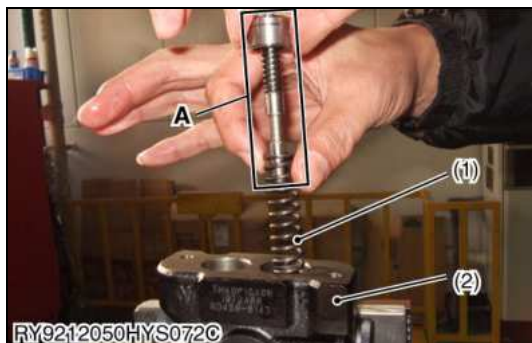

4. Install the return spring and reducing valve into the casing.

■ **NOTE**

- When installing the reducing valve, do not hit the bottom of the spool on the corners of the casing with any force.

- (1) Return Spring
(2) Casing

A : Reducing Valve
B : Corner of Casing

RY9212158HYS0087US0

5. Apply grease to the ends of the pushrods and install them in the casing.

■ **NOTE**

- If the force of the return springs is weak, the plug may be stuck to the casing by the O-ring's resistance to sliding.
- If the force of the return springs is strong, put the top cover on and tighten the hex socket bolts alternately so the top cover is installed evenly.
- Apply hydraulic oil to the O-ring.

- (1) Pushrod (2) Casing

RY9212158HYS0088US0

6. Install the cover on the casing and tighten it with the hex socket bolts.

- Tool to use: 5 mm hex socket

Tightening torque	Hex socket bolt	11.8 ± 1.0 N·m 1.2 ± 0.1 kgf·m 8.7 ± 0.7 lbf·ft

- (1) Cover (2) Hex Socket Bolt

RY9212158HYS0089US0

7. Wipe off any thread lock compound remaining on the screw holes on the top of the disc.

■ **IMPORTANT**

- Apply grease to the surface of the disc where the steel ball rides.

- (1) Disc

RY9212158HYS0090US0



8. After inserting the disc and the camshaft, tighten the set screws.

- Tool to use: 4 mm hex socket

■ **NOTE**

- Wipe clean any excess thread lock compound from the set screws.
- Apply a thread lock (Loctite 241) to the set screws.

Tightening torque	Set screw	16.7 ± 1.0 N·m 1.7 ± 0.1 kgf·m 12.3 ± 0.7 lbf·ft

(1) Camshaft

(2) Set Screw

RY9212158HYS0091US0



9. Mount the lever on top of the disc and tighten the hex socket bolts.

- Tool to use: 6 mm hex socket

Tightening torque	Hex socket bolt	29.4 ± 2.0 N·m 3.0 ± 0.2 kgf·m 21.7 ± 1.5 lbf·ft

(1) Lever

(2) Hex Socket Bolt

RY9212158HYS0092US0



10. Assemble the steel ball, the holder, washer 2 and the spring inside the detent plug and test fit the lock nut and the adjusting nut.

■ **IMPORTANT**

- Apply plenty of grease to the area around the steel ball.

(1) Detent plug

RY9212158HYS0093US0



11. Install the detent plug in the cover and tighten.

12. Turn the adjusting plug to adjust the force required to release the detent and tighten the lock nut.

- Tool to use: 22 mm socket

Tightening torque	Detent plug lock nut	41.2 ± 2.9 N·m 4.2 ± 0.3 kgf·m 30.4 ± 2.1 lbf·ft

(1) Cover


(a) 1.0 to 3.0 mm (0.04 to 0.12 in.)


(2) Detent plug

(3) Lock Nut

(4) Adjusting Nut

RY9212158HYS0094US0

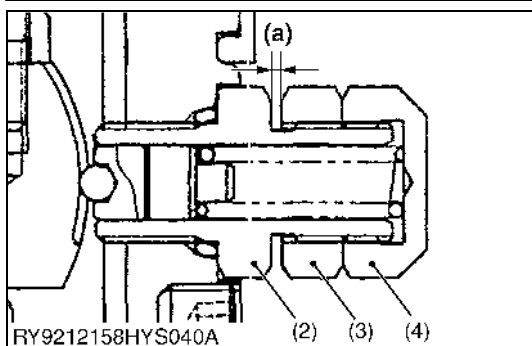

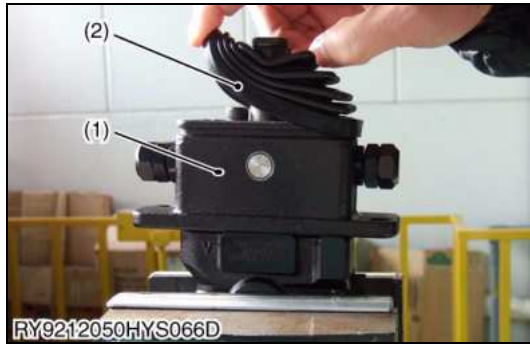

13. Apply an anti-rust oil to the parts inside the cover.


14. Install the bellows on top of the cover.

(1) Cover

(2) Bellows

RY9212158HYS0095US0

8. SHOCKLESS VALVES

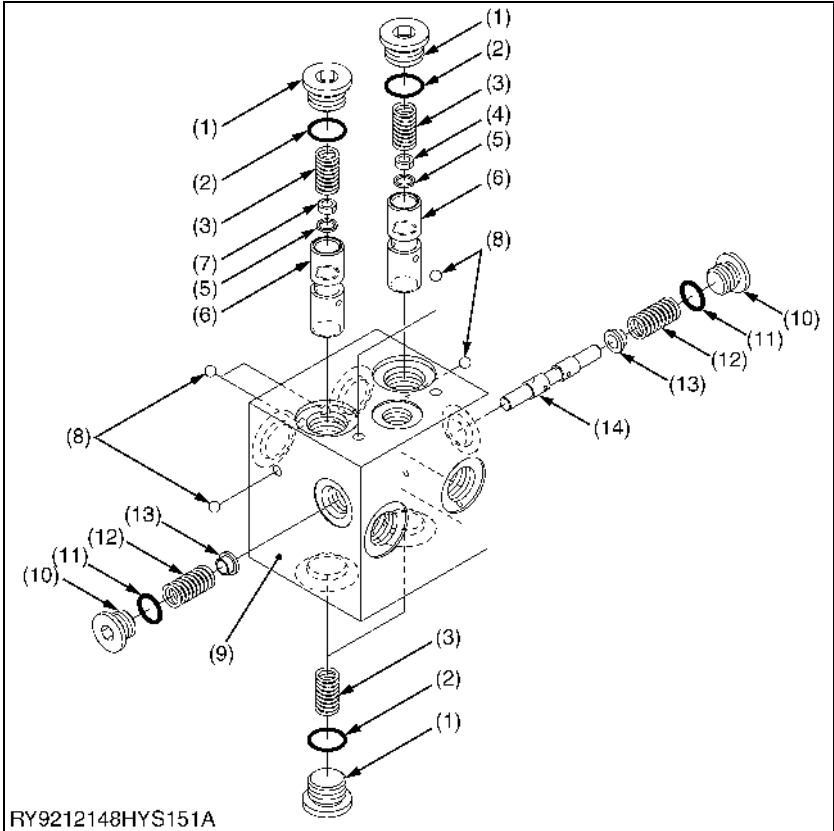


Components

No.	Name of part	Qty	Torque
(1)	Plug	4	44.2 to 54.0 N·m 4.5 to 5.5 kgf·m 32.6 to 39.8 lbf·ft
(2)	O-ring	4	
(3)	Spring	4	
(4)	Orifice	1	
(5)	Ring	2	
(6)	Spool	2	
(7)	Orifice	1	
(8)	Ball	6	
(9)	Body	1	
(10)	Plug	2	23.8 to 29.2 N·m 2.4 to 3.0 kgf·m 17.6 to 21.5 lbf·ft
(11)	O-ring	2	
(12)	Spring	2	
(13)	Spring seat	2	
(14)	Spool	1	

- Prior to assembly, clean all of the parts and make sure they are not damaged and there is no dirt or other debris on them.
- Always replace all of the O-rings with new ones.
- During assembly, apply hydraulic oil to the spool.

RY9212148HYS0273US0

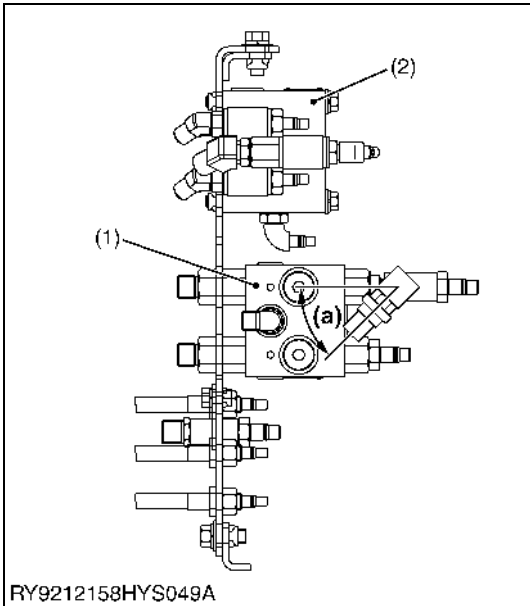


Adapter angles

- (1) Shockless Valves
- (2) Swivel shuttle valve

(a) 45 ° (0.79 rad)

RY9212158HYS0036US0

9. SWIVEL SHUTTLE VALVE

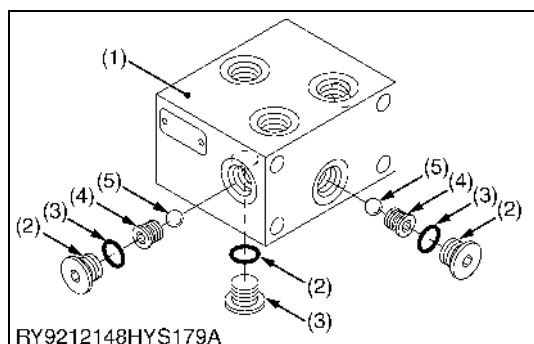


Components

No.	Name of part	Q'ty	Torque
(1)	Body	1	
(2)	Plug	3	23.8 to 29.2 N·m 2.4 to 3.0 kgf·m 17.6 to 21.5 lbf·ft
(3)	O-ring	3	
(4)	Seat	2	13.2 to 16.2 N·m 1.4 to 1.7 kgf·m 9.74 to 11.90 lbf·ft Apply thread lock (Loctite 262 or equivalent)
(5)	Ball	2	

- During disassembly, always use a tap to clean the threads of any thread lock on them.
- Prior to assembly, clean all of the parts and make sure they are not damaged and there is no dirt or other debris on them.
- Always replace all of the O-rings with new ones.

RY9212148HYS0275US0

Adapter angles

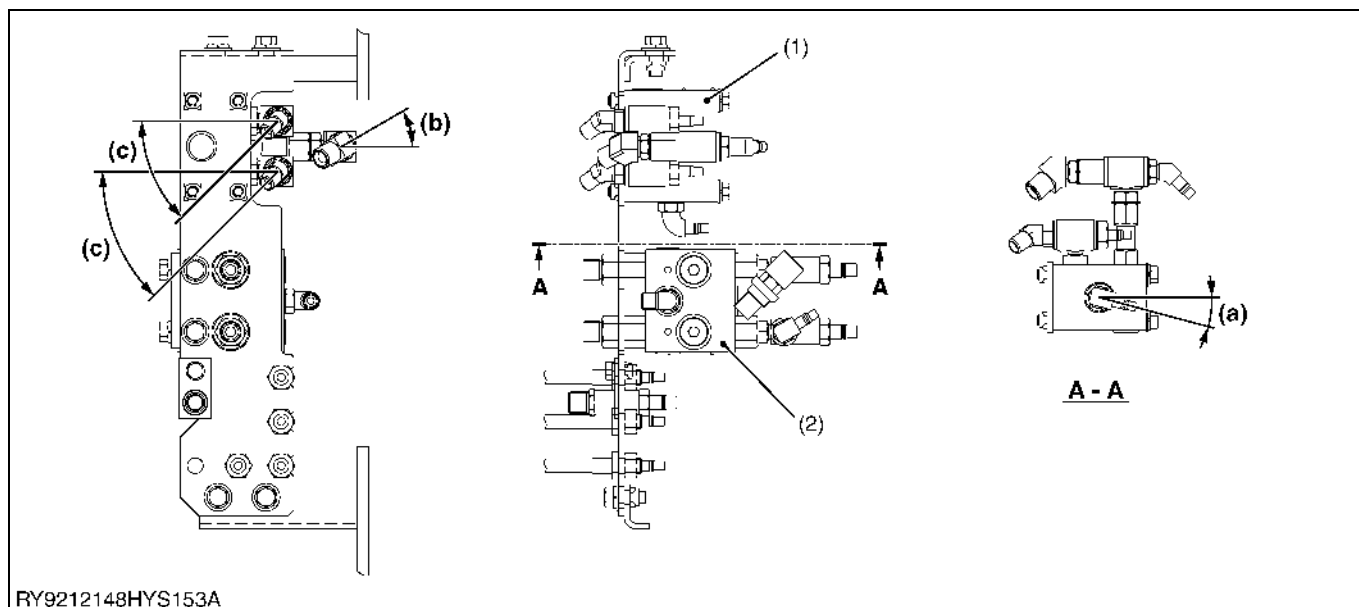

- (1) Swivel Shuttle Valve
(2) Shockless Valve

(a) 15 ° (0.26 rad)


(b) 30 ° (0.52 rad)

(c) 45 ° (0.79 rad)

RY9212148HYS0276US0

10. SOLENOID VALVE


[1] UNLOAD VALVE

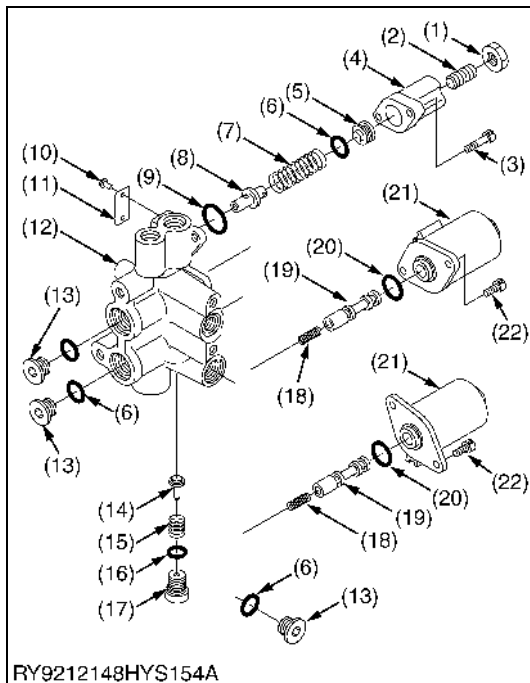

Components

No.	Name of part	Qty	Torque
(1)	Hex nut	1	15.7 ± 1.6 N·m 1.6 ± 0.2 kgf·m 11.6 ± 1.2 lbf·ft
(2)	Adjuster screw	1	
(3)	Hex socket bolt	2	3.9 N·m 0.4 kgf·m 2.9 lbf·ft
(4)	Cover	1	
(5)	Plug	1	
(6)	O-ring	4	
(7)	Spring	1	
(8)	Plunger	1	
(9)	O-ring	1	
(10)	Rivet screw	2	
(11)	Nameplate	1	
(12)	Body	1	
(13)	Plug	3	26.5 ± 2.7 N·m 2.7 ± 0.3 kgf·m 19.5 ± 2.0 lbf·ft
(14)	Plunger	1	
(15)	Spring	1	
(16)	O-ring	1	
(17)	Plug	1	21.0 ± 2.1 N·m 2.1 ± 0.2 kgf·m 15.5 ± 1.5 lbf·ft
(18)	Spring	2	
(19)	Spool	2	
(20)	O-ring	2	
(21)	Solenoid	2	
(22)	Hex socket bolt	4	3.9 N·m 0.4 kgf·m 2.9 lbf·ft

RY9212148HYS0277US0

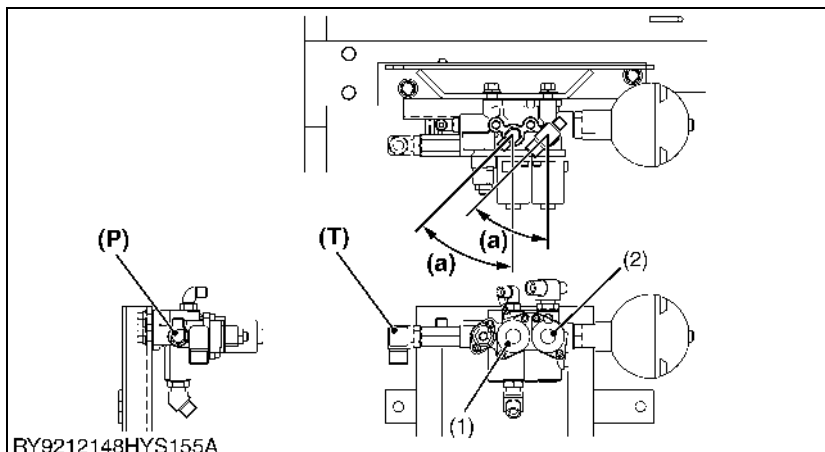

Adapter angles


- (1) Travel 2-speed solenoid
- (2) Pilot solenoid

(P) Port P
(T) Port T

(a) 45 ° (0.79 rad)

RY9212148HYS0278US0


[2] AUX PROPORTIONAL CONTROL SOLENOID VALVE

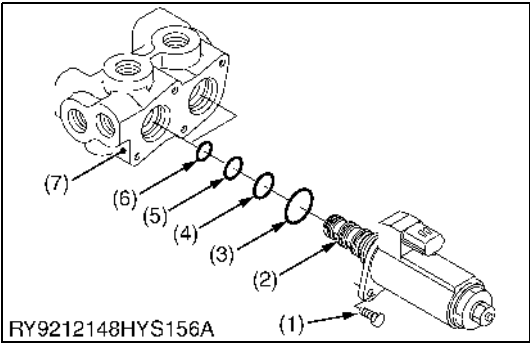

Components

No.	Name of part	Qty	Torque
(1)	Bolt	4	7.0 ± 1.0 N·m 0.7 ± 0.1 kgf·m 5.2 ± 0.7 lbf·ft
(2)	Solenoid	2	
(3)	O-ring	2	
(4)	O-ring	2	
(5)	O-ring	2	
(6)	O-ring	2	
(7)	Body	1	

RY9212148HYS0279US0

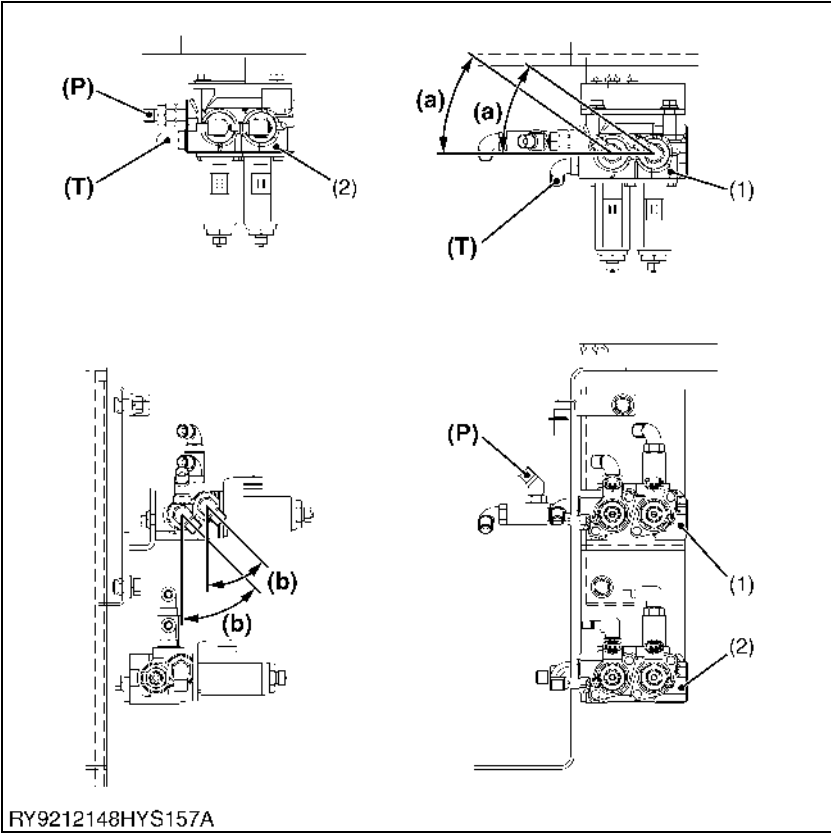

Adapter angles


- (1) AUX1 solenoid valve
- (2) AUX2 solenoid valve

- (P) Port P
- (T) Port T

- (a) 35 ° (0.61 rad)
- (b) 45 ° (0.79 rad)

RY9212148HYS0280US0


[3] ANGLE SOLENOID VALVE

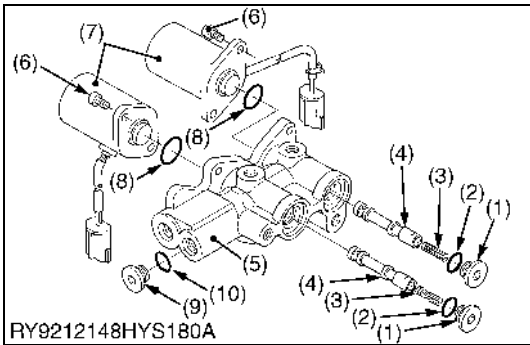

Components

No.	Name of part	Qty	Torque
(1)	Plug	2	26.5 ± 2.7 N·m 2.7 ± 0.3 kgf·m 19.5 ± 2.0 lbf·ft
(2)	O-ring	2	
(3)	Spring	2	
(4)	Spool	2	
(5)	Body	1	
(6)	Hex socket bolt	4	3.9 N·m 0.4 kgf·m 2.9 lbf·ft
(7)	Solenoid	2	
(8)	O-ring	2	
(9)	Plug	1	26.5 ± 2.7 N·m 2.7 ± 0.3 kgf·m 19.5 ± 2.0 lbf·ft
(10)	O-ring	1	

RY9212148HYS0281US0

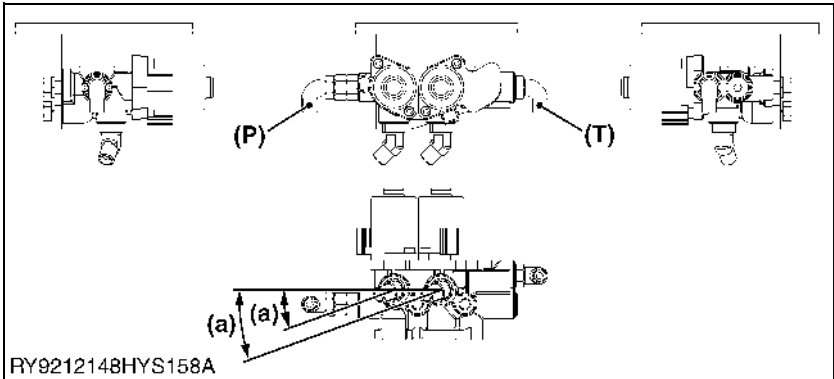


Adapter angles

- (P) Port P
- (T) Port T
- (a) 20 ° (0.35 rad)

RY9212148HYS0282US0


[4] EP MODE SOLENOID VALVE

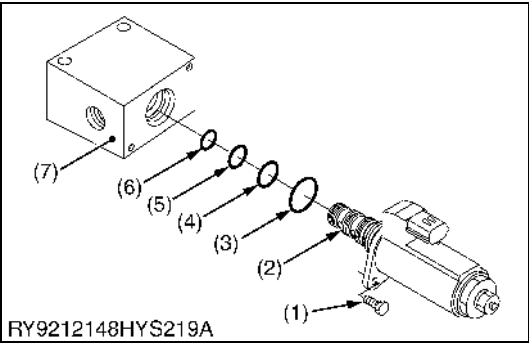

Components

No.	Name of part	Qty	Torque
(1)	Bolt	2	7.0 ± 1.0 N·m 0.7 ± 0.1 kgf·m 5.2 ± 0.7 lbf·ft
(2)	Solenoid	1	
(3)	O-ring	1	
(4)	O-ring	1	
(5)	O-ring	1	
(6)	O-ring	1	
(7)	Body	1	

RY9212148HYS0283US0

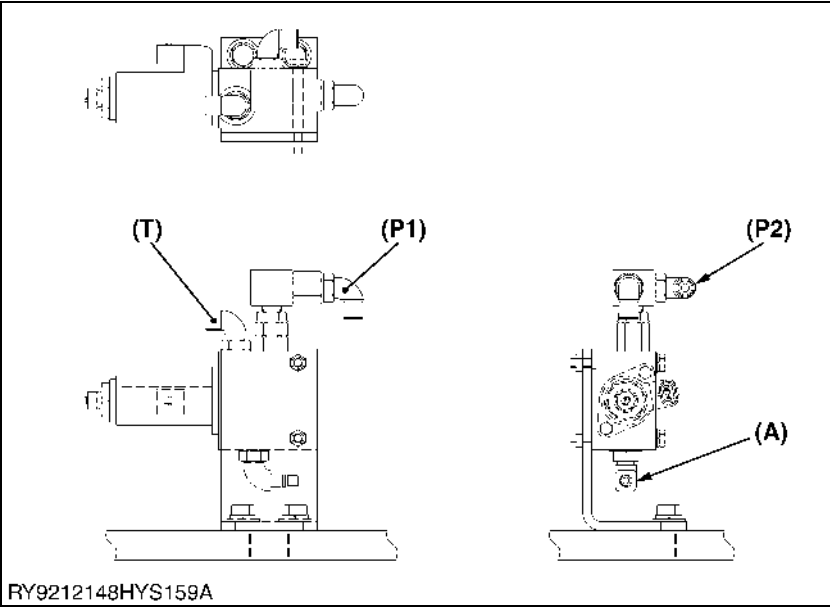


Adapter angles

- (A) Port A (to tank)
- (P1) Port P1 (to pilot valve)
- (P2) Port P2 (from pilot filter)
- (T) Port T

RY9212148HYS0284US0


11. ROUTING OF HYDRAULIC HOSES

[1] HYDRAULIC HOSE SPECIFICATIONS

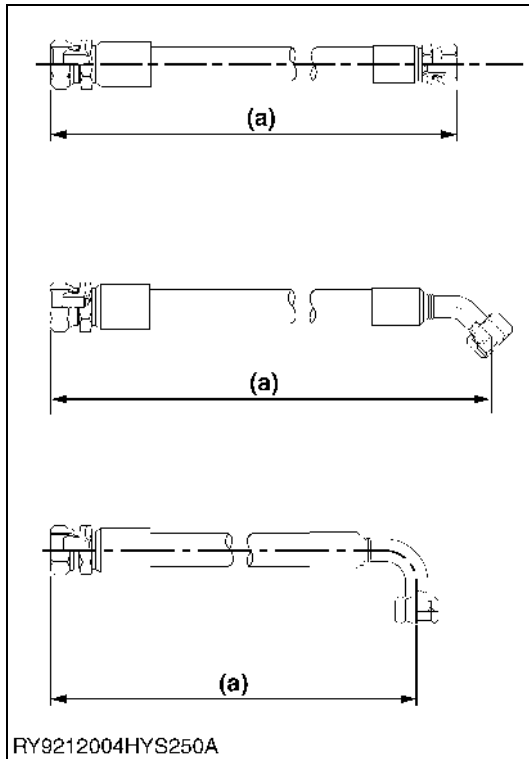

(a) Total Length

RY9212004HYS0147US0

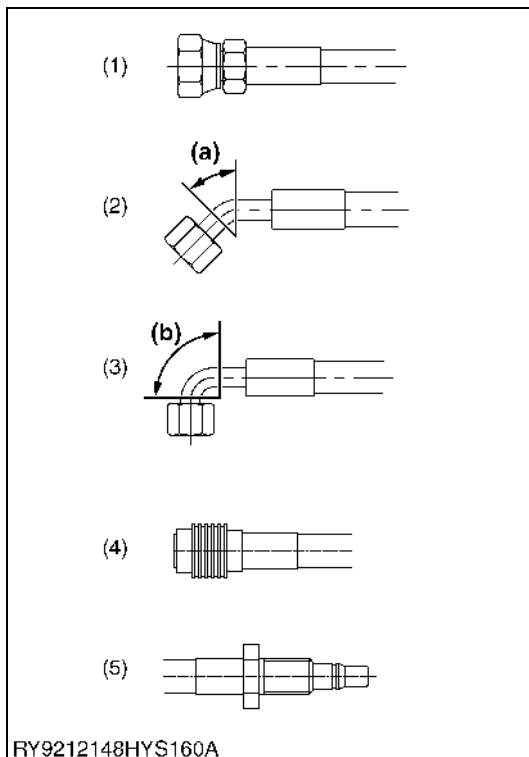

- (1) C Type (Straight)
- (2) CR4 Type (45°)
- (3) CR9 Type (90°)
- (4) QM Type (Quick)
- (5) Q Type (Quick)


(a) 45 °

(b) 90 °

RY9212148HYS0202US0

[2] HIGH-PRESSURE HOSES

(1) Deliver Hose Routing

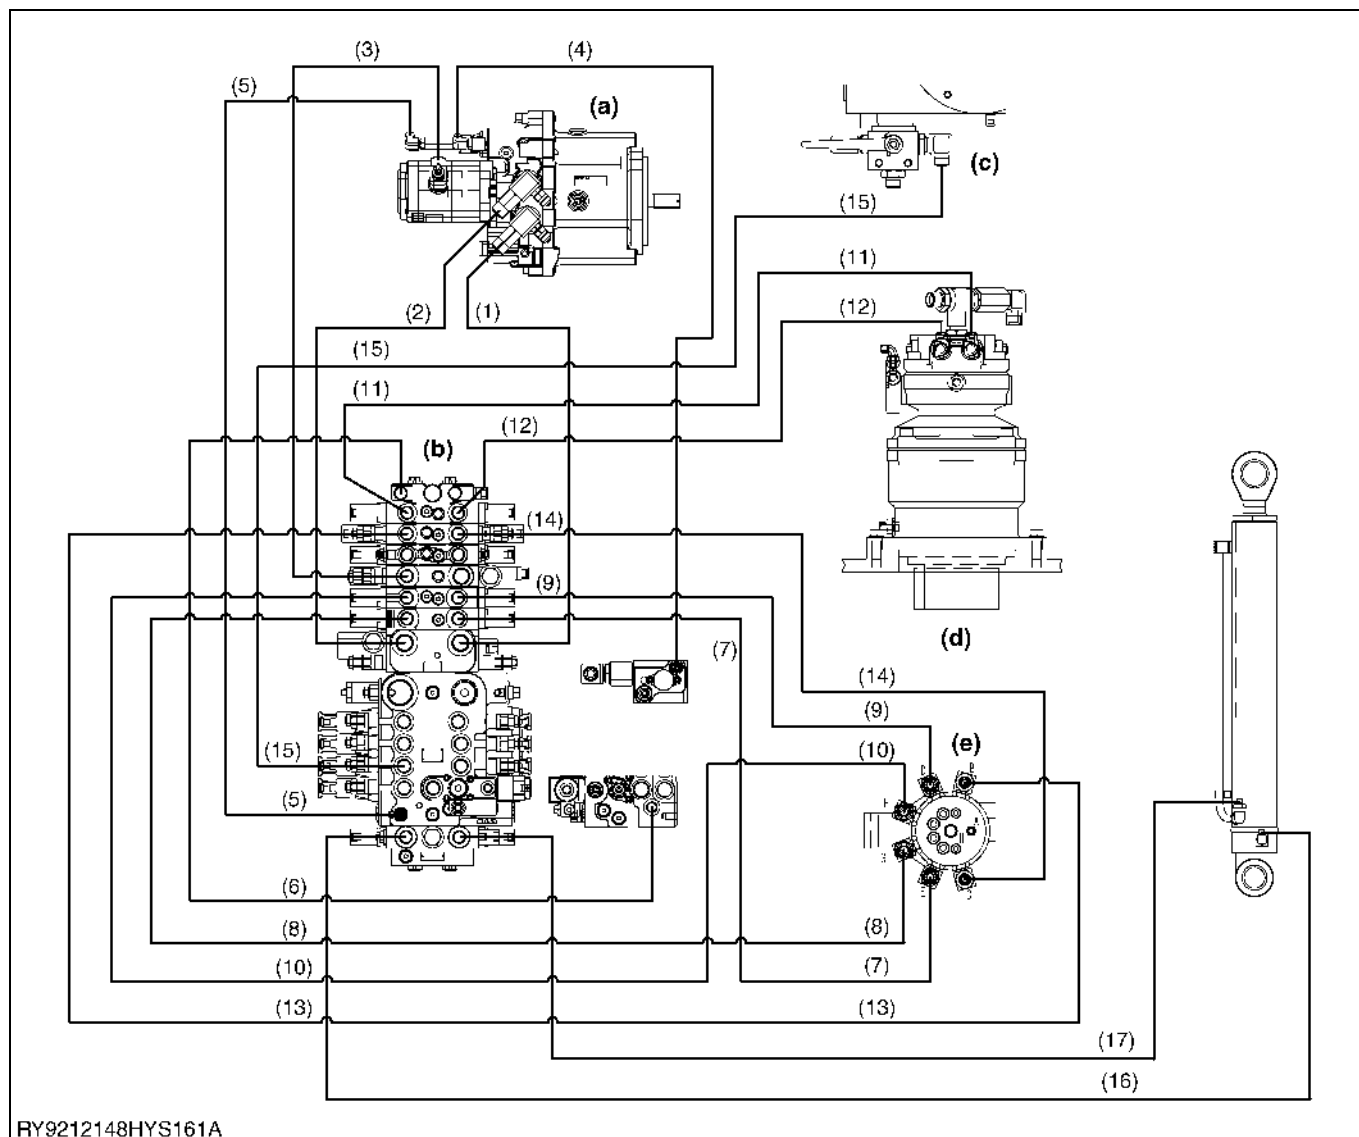

RY9212148HYS161A

(a) Pump

(b) Control valve

(c) 3-way valve

(d) Swivel motor


(e) Swivel joint

(To be continued)

(Continued)

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	P1	2890 mm 113.8 in.	White Red	PA2810	CR9-C	1-14UNS	Pump (P1) to C/V (P1)
(2)	P2	2950 mm 116.1 in.	White Red	PA2810	CR9-C	1-14UNS	Pump (P2) to C/V (P2)
(3)	P3	2520 mm 99.2 in.	White Red	PA2810	CR4-C	1-14UNS	Pump (P3) to C/V (P3)
(4)	PPS	2310 mm 90.9 in.	White Red	PFH04	C-C	9/16UNF	Pump (PPS) to C/V (PPS)
(5)	PLS	2880 mm 113.4 in.	White Red	PFH04	C-C	9/16UNF	Pump (PLS) to C/V (PLS)
(6)	Boom union	910 mm 35.8 in.	Black	PFH06	C-C	11/16UN	C/V (PB1) to C/V (PB2) (Boom union)
(7)	Travel right forward	920 mm 36.2 in.	Yellow x 2	PA2808 equiv.	C-CR4	1-14UNS	C/V (Travel R-FWD) to R/J (E)
(8)	Travel right rear	1025 mm 40.4 in.	Green x 2	PA2808 equiv.	C-CR4	1-14UNS	C/V (Travel R-BWD) to R/J (G)
(9)	Travel left forward	950 mm 37.4 in.	Red x 2	PA2808 equiv.	C-CR4	1-14UNS	C/V - (Travel L-FWD) to R/J (D)
(10)	Travel left rear	1065 mm 41.9 in.	Blue x 2	PA2808 equiv.	C-CR4	1-14UNS	C/V (Travel L-BWD) to R/J (F)
(11)	Swivel left	810 mm 31.9 in.	Gray	PA2808 equiv.	C-CR4	13/16UN	C/V (Swivel left) to swivel motor (L)
(12)	Swivel right	670 mm 26.4 in.	Light blue	PA2808 equiv.	C-CR4	13/16UN	C/V (Swivel right) to swivel motor (R)
(13)	Blade down	1175 mm 46.3 in.	Brown	PA2808 equiv.	C-CR4	13/16UN	C/V (Blade down) to R/J (B)
(14)	Blade up	1065 mm 41.9 in.	Pink	PA2808 equiv.	C-CR4	13/16UN	C/V (Blade up) to R/J (C)
(15)	AUX1 (low-pressure)	465 mm 18.3 in.	Brown	PA2808 equiv.	C-CR9	1-14UNS	3-way valve to C/V (AUX1 low pressure)
(16)	Swing left	2170 mm 85.4 in.	Orange	PFH06	C-C	11/16UN	C/V (L) to swing cylinder (bottom)
(17)	Swing right	1940 mm 76.4 in.	Pea green	PFH06	C-C	11/16UN	C/V (R) to swing cylinder (rod)

RY9212148HYS0285US0

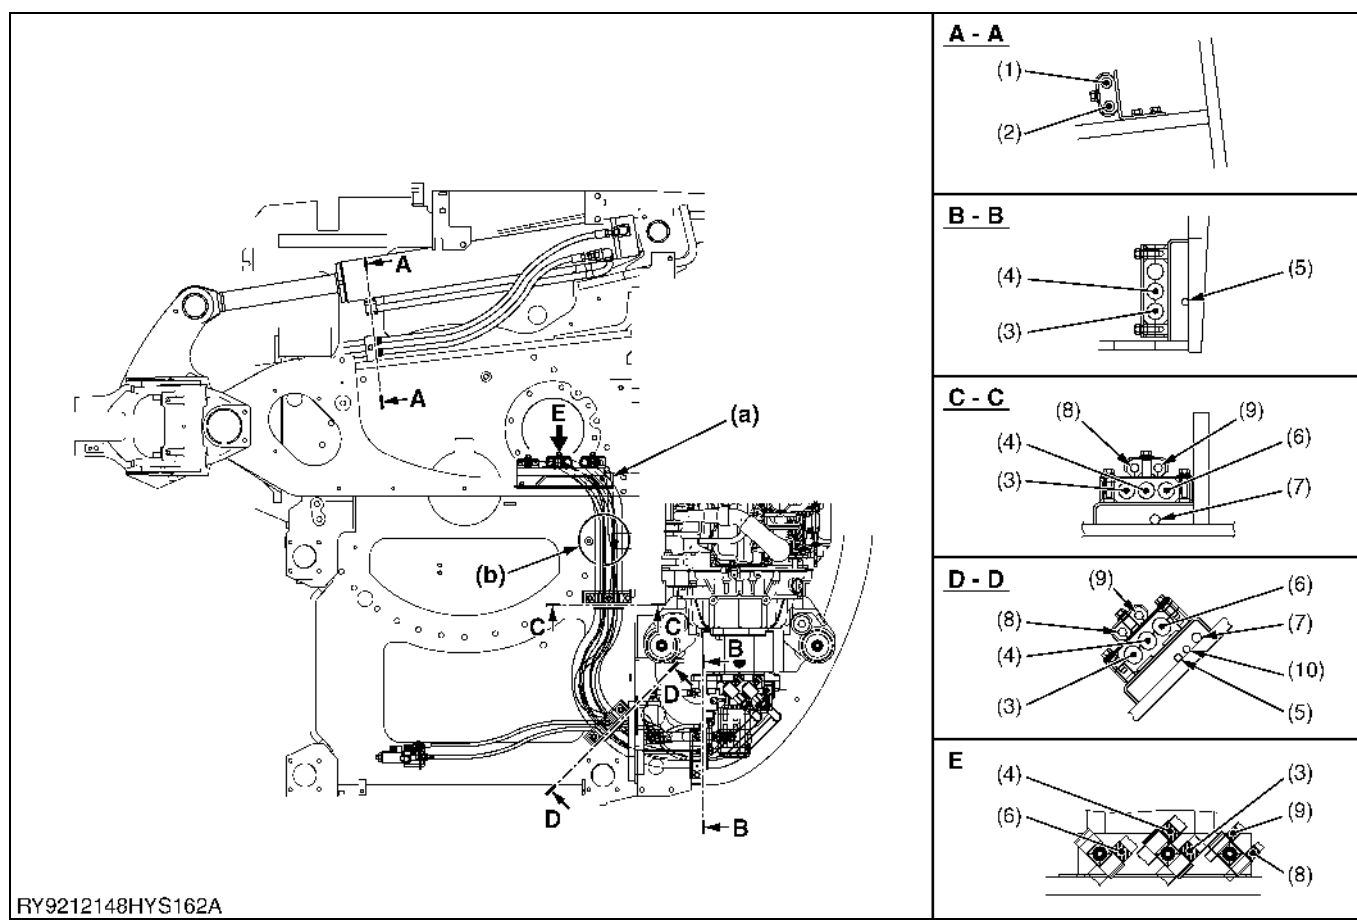Delivery Hose Clamp Positions


(1) Swing cylinder bottom side	(4) P2	(6) P3	(9) PPS
(2) Swing cylinder rod side	(5) EP mode solenoid valve port A	(7) P4	(10) EP mode solenoid valve port P
(3) P1	(8) PLS		

NOTE

- (a): So hoses to P1, P2 and P3 don't rub against each other.
- (b): Pass all hoses inside the rod.

RY9212148HYS0286US0

(2) PLS Hose Routing

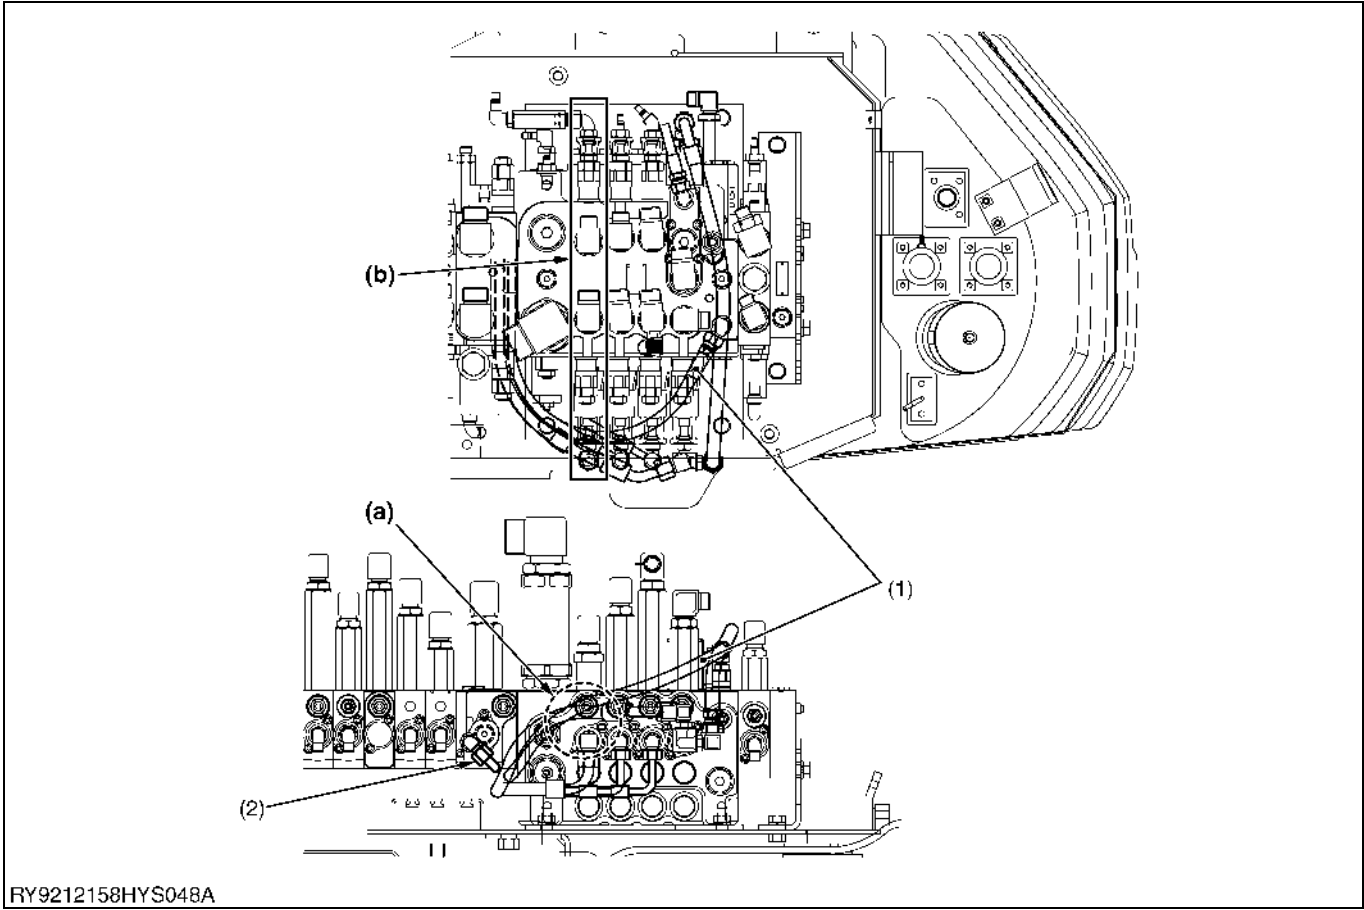



No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	PLS	2880 mm 113.4 in.	White Red	PFH04	C-C	9/16UNF	Pump (PLS) to C/V (PLS)
(2)	Travel	750 mm 29.5 in.		PLT04	CR9-Q	1/4-Q	P4 distribution block (tank side) to C/V (PP4)

■ NOTE

- (a): Install so the hoses and joint of the arm crowd point do not hit each other hard.
- (b): Arm section

RY9212158HYS0037US0

(3) Front Hose Routing

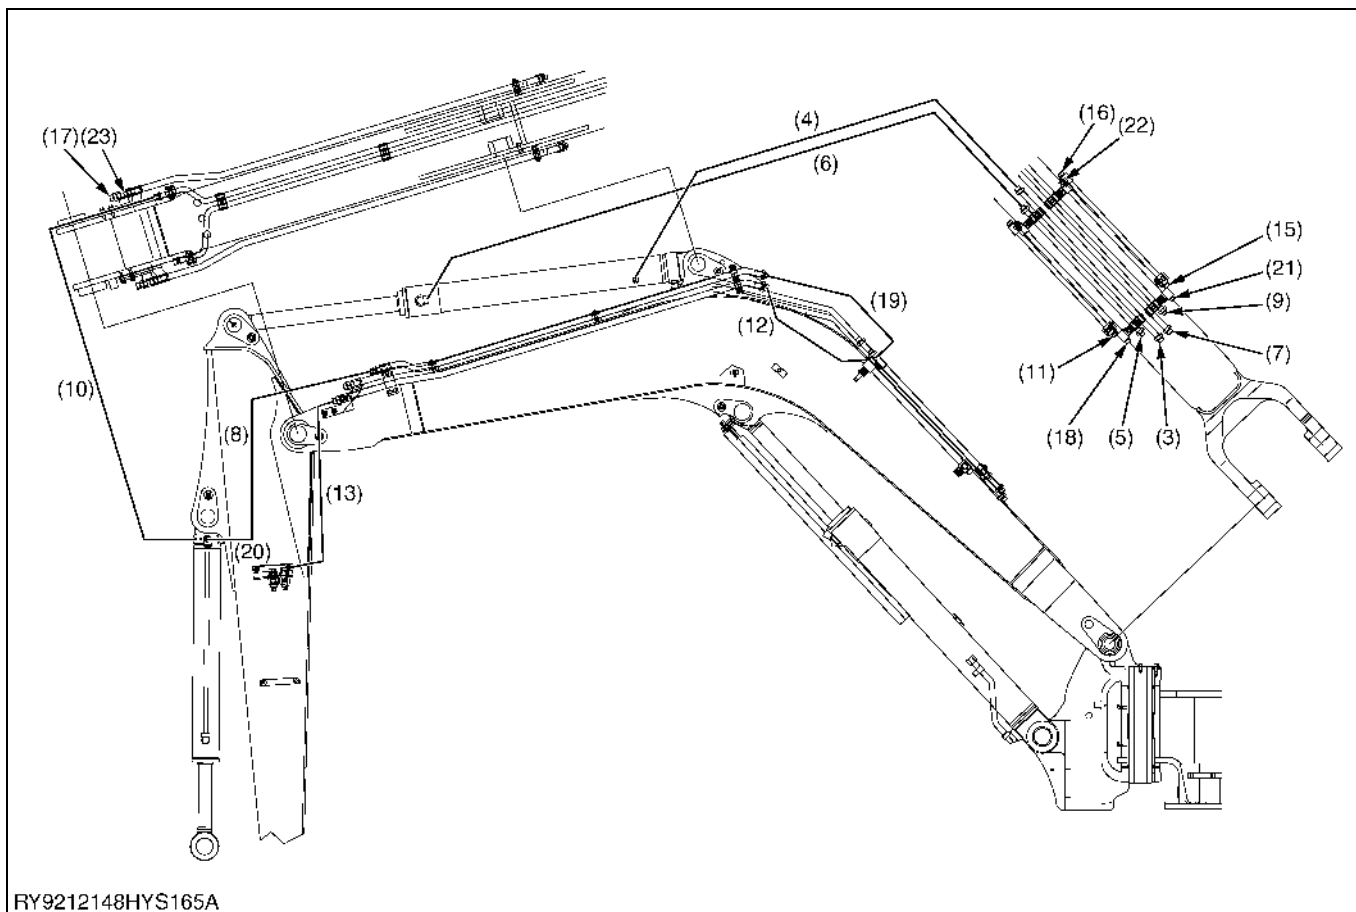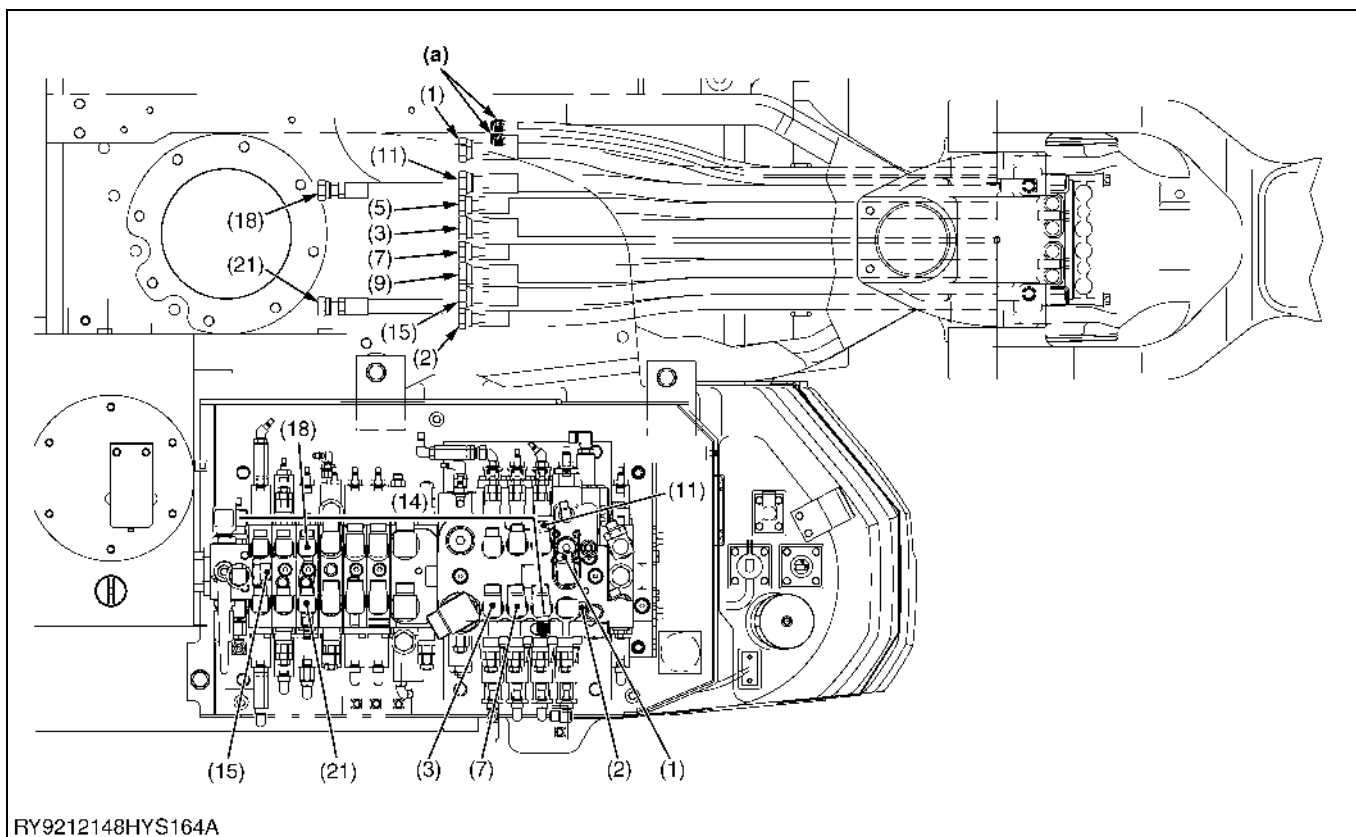


(a) Boom holding valve hose (Eur. only)

(To be continued)

(Continued)

No.	Function	Hose			Fitting		Guard	Point used
		Total length	Tape color	Hose class	Type	Size		
(1)	Boom up	2600 mm 102.4 in.	Green White	PA2810	C·C	1-14UNS	Colgate tube	C/V (Boom up) to boom cylinder (bottom)
(2)	Boom down	3470 mm 136.6 in.	Yellow	PFH08	CR9·C	13/16UN		C/V (Boom down) to boom cylinder (rod)
(3)	Arm crowd	3280 mm 129.1 in.	Blue	PA2810	C·C	1-14UNS		C/V (arm crowd) to boom back (pipe)
(4)		720 mm 28.3 in.	Blue	PA2810 equiv.	C·C	1-14UNS		Boom back (pipe) (arm crowd) to arm cylinder (bottom)
(5)	Arm dump	3220 mm 126.8 in.	Pea green	PFH08	C·C	13/16UN	Colgate tube	C/V (arm dump) to boom back (pipe)
(6)		1955 mm 77.0 in.	Pea green	PA2808 equiv.	C·C	13/16UN		Boom back (pipe) (arm dump) to arm cylinder (rod)
(7)	Bucket crowd	3340 mm 131.5 in.	Orange	PA2810	C·C	1-14UNS	Colgate tube	C/V (bucket crowd) to boom back (pipe)
(8)	Bucket crowd long arm	1150 mm 45.3 in.		PA2810	C·C	1-14UNS	Total spring length	Boom back (pipe) to bucket cylinder
	Bucket crowd short arm	1350 mm 53.1 in.						
(9)	Bucket dump	3280 mm 129.1 in.	Red	PFH08	C·C	13/16UN	Colgate tube	C/V (bucket dump) to boom back (pipe)
(10)	Bucket dump (long arm)	1150 mm 45.3 in.		PA2810	C·C	1-14UNS	Total spring length	Boom back (pipe) to bucket cylinder
	Bucket dump (short arm)	1350 mm 53.1 in.						
(11)	AUX1 High pressure	3280 mm 129.1 in.	Pink	PA2810	C·C	1-14UNS	Colgate tube	C/V (AUX1 Hi-press.) to boom back (pipe)
(12)		540 mm 21.3 in.		PA2810 equiv.	C·C	1-14UNS		AUX middle (AUX1)
(13)		980 mm 38.6 in.		PA2810 equiv.	C·C	1-14UNS	Total spring length	AUX end (AUX1)
(14)	AUX1 Low pressure	465 mm 18.3 in.	Brown	PA2810	CR9·C	1-14UNS		C/V (AUX1 low pressure) to 3-way valve
(15)		3700 mm 145.7 in.	Brown	PA2810	C·C	1-14UNS	Colgate tube	3-way valve (AUX1 lo-press) to boom back (pipe)
(16)		540 mm 21.3 in.		PA2810 equiv.	C·C	1-14UNS		AUX middle (AUX1)
(17)		980 mm 38.6 in.		PA2810 equiv.	C·C	1-14UNS	Total spring length	AUX end (AUX1)
(18)	AUX2 High pressure	3390 mm 133.5 in.	Pink	PA2808	C·C	13/16UN	Colgate tube	C/V (AUX2 Hi-press.) to boom back (pipe)
(19)		605 mm 23.8 in.		PA2808	C·C	13/16UN		AUX middle (AUX2)
(20)		1110 mm 43.7 in.		PA2810 equiv.	C·C	1-14UNS	Total spring length	AUX end (AUX2)
(21)	AUX2 Low pressure	3590 mm 141.3 in.	Brown	PA2808	C·C	13/16UN	Colgate tube	C/V (AUX2 Lo-press.) to boom back (pipe)
(22)		605 mm 23.8 in.		PA2808	C·C	13/16UN		AUX middle (AUX2)
(23)		1110 mm 43.7 in.		PA2810 equiv.	C·C	1-14UNS	Total spring length	AUX end (AUX2)

RY9212158HYS0038US0

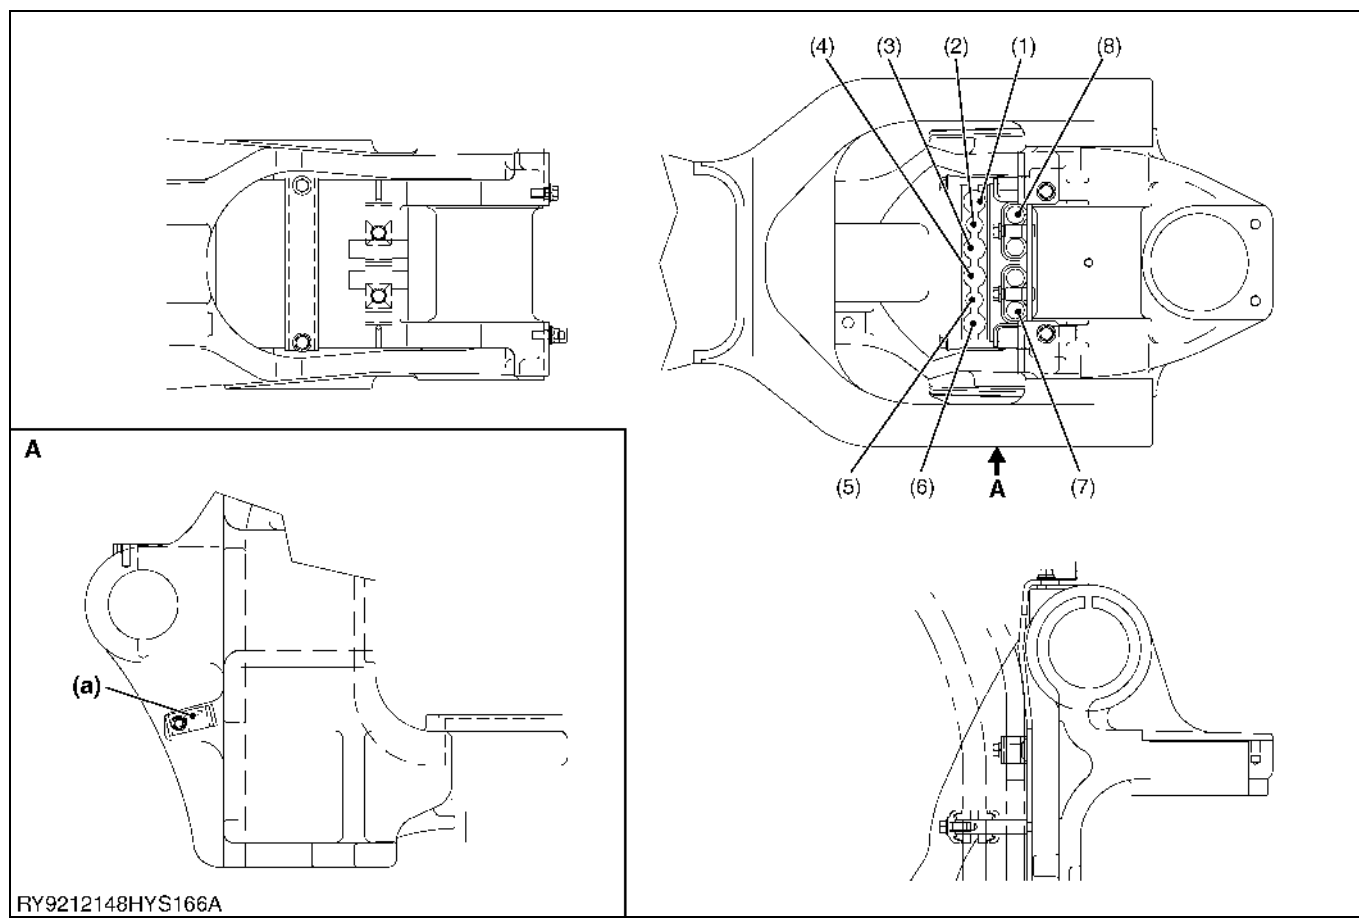Front Hose Clamp Positions

(1) Brown (AUX1 Lo)
 (2) Red (Bucket dump)

(3) Orange (Bucket crowd)
 (4) Blue (Arm crowd)

(5) Yellow (Arm dump)
 (6) Pink (AUX1 Hi)


(7) Pink (AUX2 Hi)
 (8) Brown (P1 Lo)

■ **NOTE**

- (a): Use a cushion when clamping on the boom rod side (opposite that in the illustration).

RY9212148HYS0289US0

(4) Boom Hose Routing

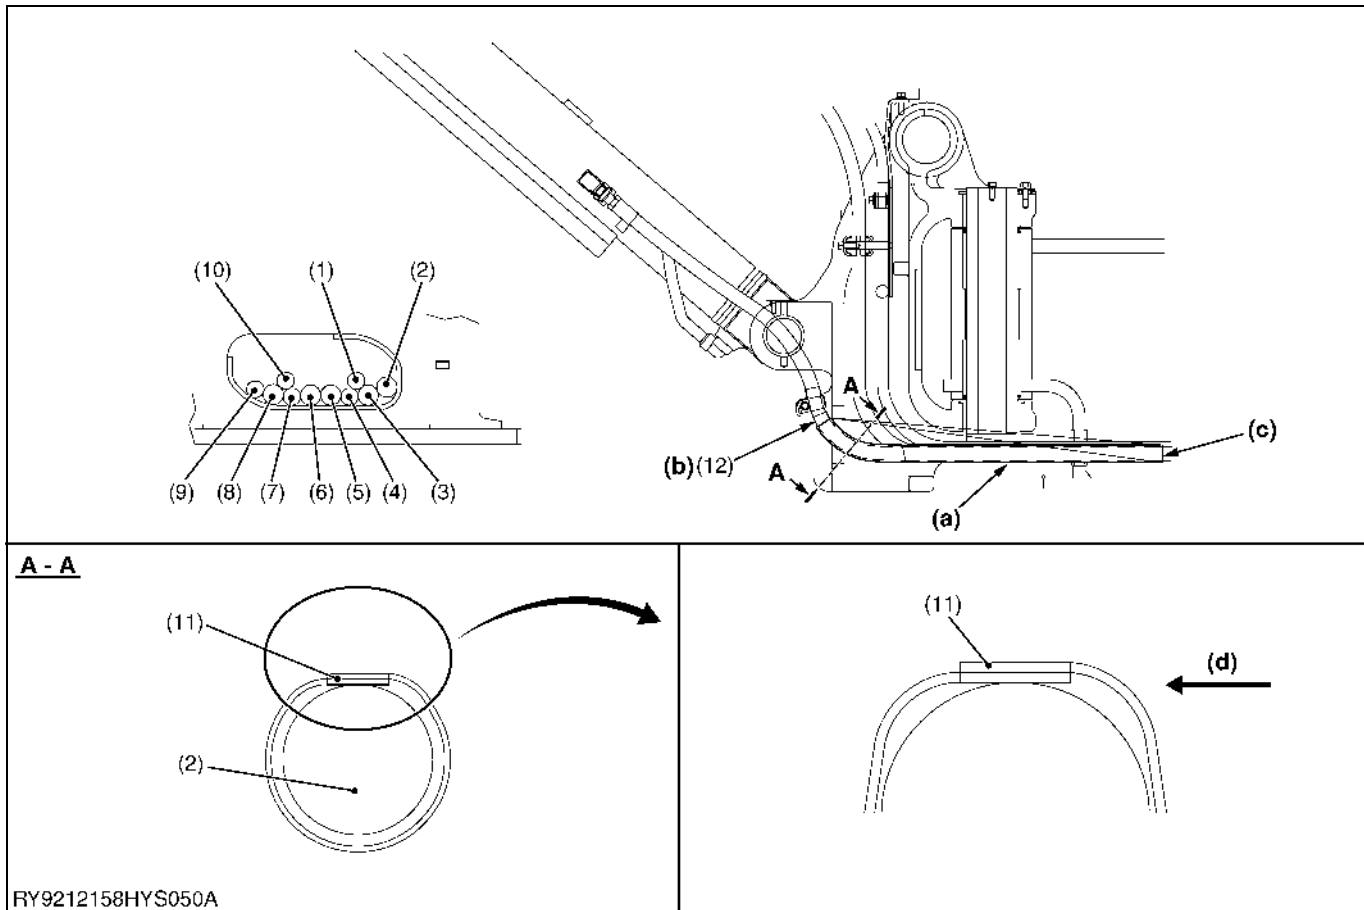

RY9212158HYS050A


(1) AUX2 (High)	(4) Arm dump	(7) Bucket crowd	(10) AUX2 (Low)
(2) Boom up	(5) Arm crowd	(8) AUX1 (Low)	(11) Velcro tape
(3) AUX1 (High)	(6) Bucket dump	(9) Boom down	(12) White tape

■ NOTE

- (a): Install the cover with the urethane coated side (slippery side) on the inside (hose side).
- (b): Put the white tape in place and install the cover from the end of the tape.
- (c): Insert the end of the cover securely inside the swivel frame.
- (d): Install so you cannot see the joint in the velcro as viewed from the arrow.

RY9212158HYS0039US0

(5) Undercarriage Hose Routing

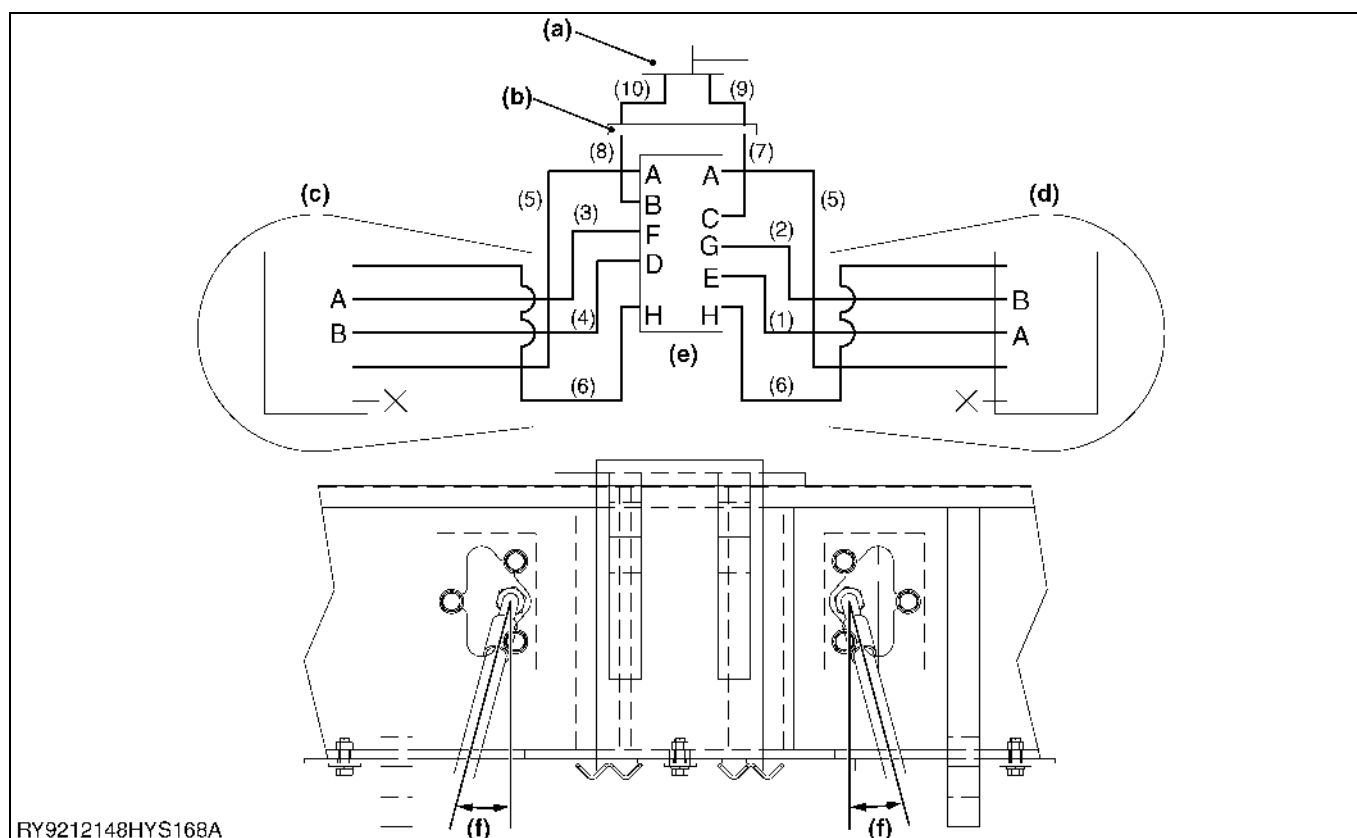

(a) Blade Cylinder

(b) Blade Bulkhead Fitting

(c) Travel Motor L

(d) Travel Motor R


(e) Swivel Joint

(f) 15° (0.3 rad)

No.	Function	Hose			Fitting		Guard	Point used
		Total length	Tape color	Hose class	Type	Size		
(1)	Travel right forward	1415 mm 55.7 in.	Yellow x 2	NWP280 15 equivalent	CR4-C	1-14UNS	Spiral tube	S/J (E) to motor right down (A)
(2)	Travel right rear	1355 mm 53.3 in.	Green x 2	NWP280 15 equivalent	CR4-C	1-14UNS		S/J (G) to motor right up (B)
(3)	Travel left forward	1355 mm 53.3 in.	Blue x 2	NWP280 15 equivalent	CR4-C	1-14UNS		S/J (E) to motor left up (A)
(4)	Travel left rear	1415 mm 55.7 in.	Red x 2	NWP280 15 equivalent	CR4-C	1-14UNS		S/J (G) to motor left down (B)
(5)	Travel 2-speed	1385 mm 54.5 in.		NWP105 6 equivalent	C-C	1/4		S/J (A) to motor L/R 2-speed
(6)	Drain	1310 mm 51.6 in.		NWP35 9 equivalent	CR4-C	3/8		S/J (H) to motor L/R drain
(7)	Blade up	430 mm 16.9 in.	Pink	NWP210 12 equivalent	CR9-C	13/16UN		S/J (C) to blade joint
(8)	Blade down	430 mm 16.9 in.	Brown	NWP210 12 equivalent	CR9-C	13/16UN		S/J (B) to blade joint
(9)	Blade up	795 mm 31.3 in.		NWP210 12 equivalent	CR4-C	13/16UN	Total spring length	Blade joint to blade cylinder (rod)
(10)	Blade down	795 mm 31.3 in.		NWP210 12 equivalent	CR4-C	13/16UN		Blade joint to blade cylinder (bottom)

RY9212148HYS0291US0

(6) Angle Blade Hose Routing

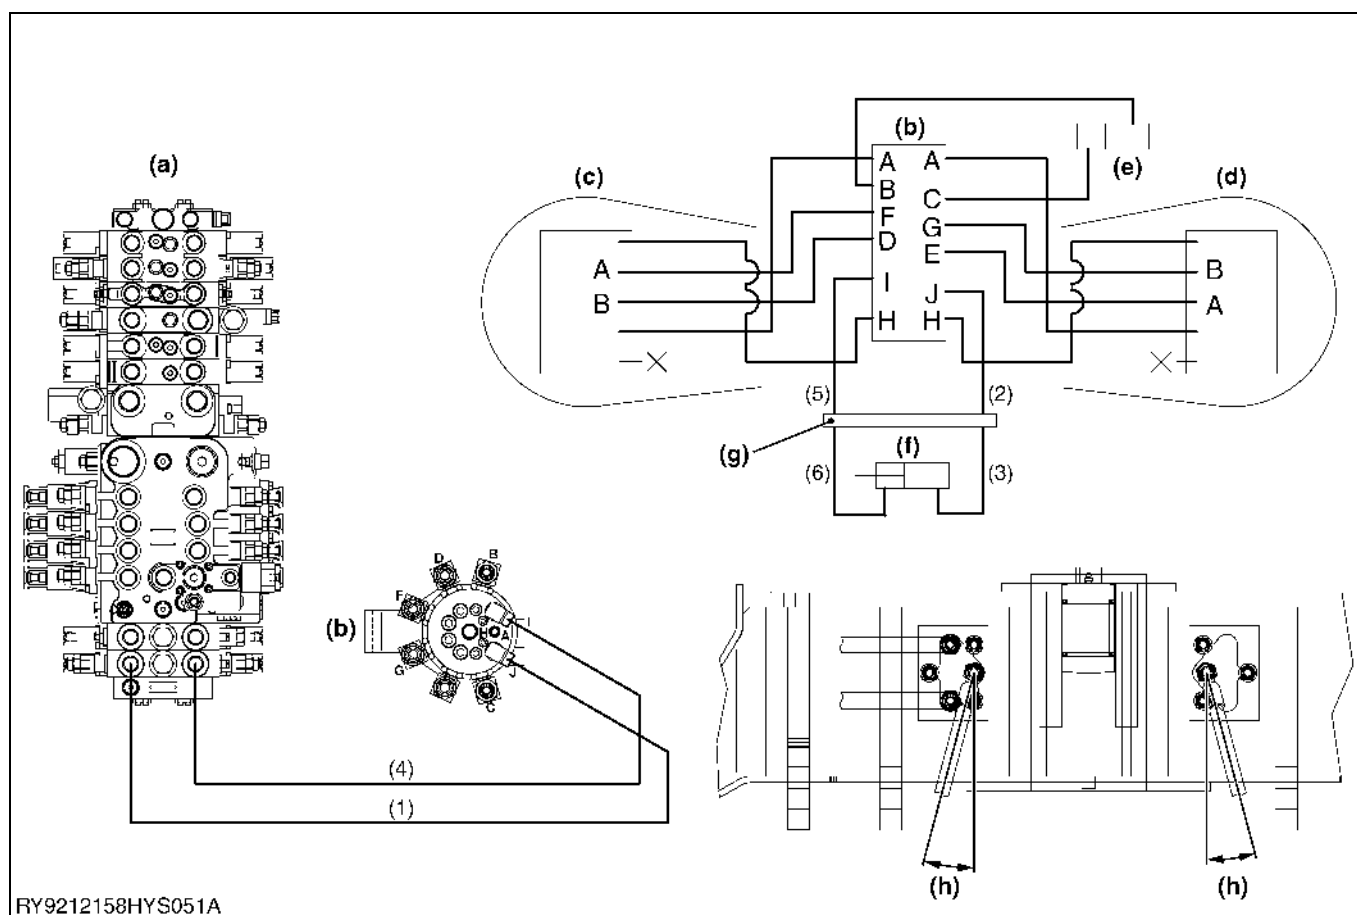

RY9212158HYS051A

(a) Control Valve
(b) Swivel Joint

(c) Travel Motor L
(d) Travel Motor R

(e) Blade Cylinder
(f) Angle Cylinder


(g) Blade Bulkhead Fitting
(h) 15° (0.3 rad)

No.	Function	Hose			Fitting		Guard	Point used
		Total length	Tape color	Hose class	Type	Size		
(1)	Angle Left	1170 mm 46.1 in.	White Orange	PA2808 equiv.	C·CR9	13/16UN		C/V (Angle left) to L/J (J)
(2)		440 mm 17.3 in.	White Orange	PFW08	C·CR9	13/16UN		R/J (J) to blade joint
(3)		800 mm 31.5 in.		NWP280 12 equivalent	C·C	13/16UN	Total spring length	Blade joint to angle cylinder (bottom)
(4)	Angle Right	1170 mm 46.1 in.	Black Orange	PA2808 equiv.	C·CR9	13/16UN		C/V (Angle right) to R/J (I)
(5)		610 mm 24.0 in.	Black Orange	PFW08	C·CR9	13/16UN		R/J (I) to blade joint
(6)		1290 mm 50.8 in.		NWP280 12 equivalent	C·C	13/16UN	Total spring length	Blade joint to angle cylinder (rod)

RY9212158HYS0040US0

[3] LOW-PRESSURE HOSES

(1) Suction Pipe and Hose Routing

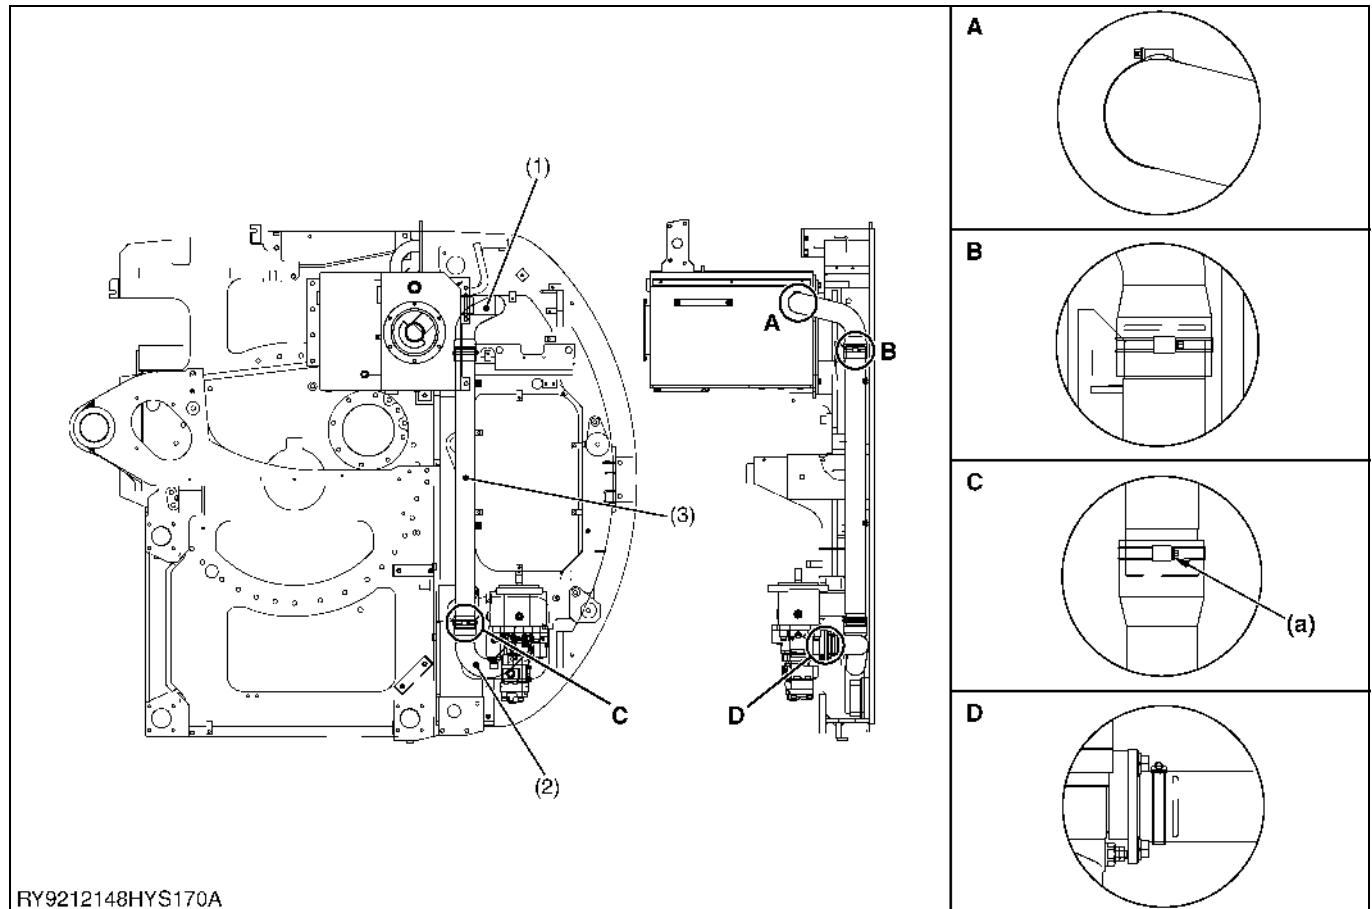

(1) Suction hose 1

(2) Suction hose 2

(3) Suction pipe


■ NOTE

- (a): Tighten bands from the base plate side (bottom).

No.	Function	Point used
(1)	Suction	Oil tank to suction pipe
(2)		Pump to suction pipe

RY9212148HYS0293US0

(2) Drain Hose Routing

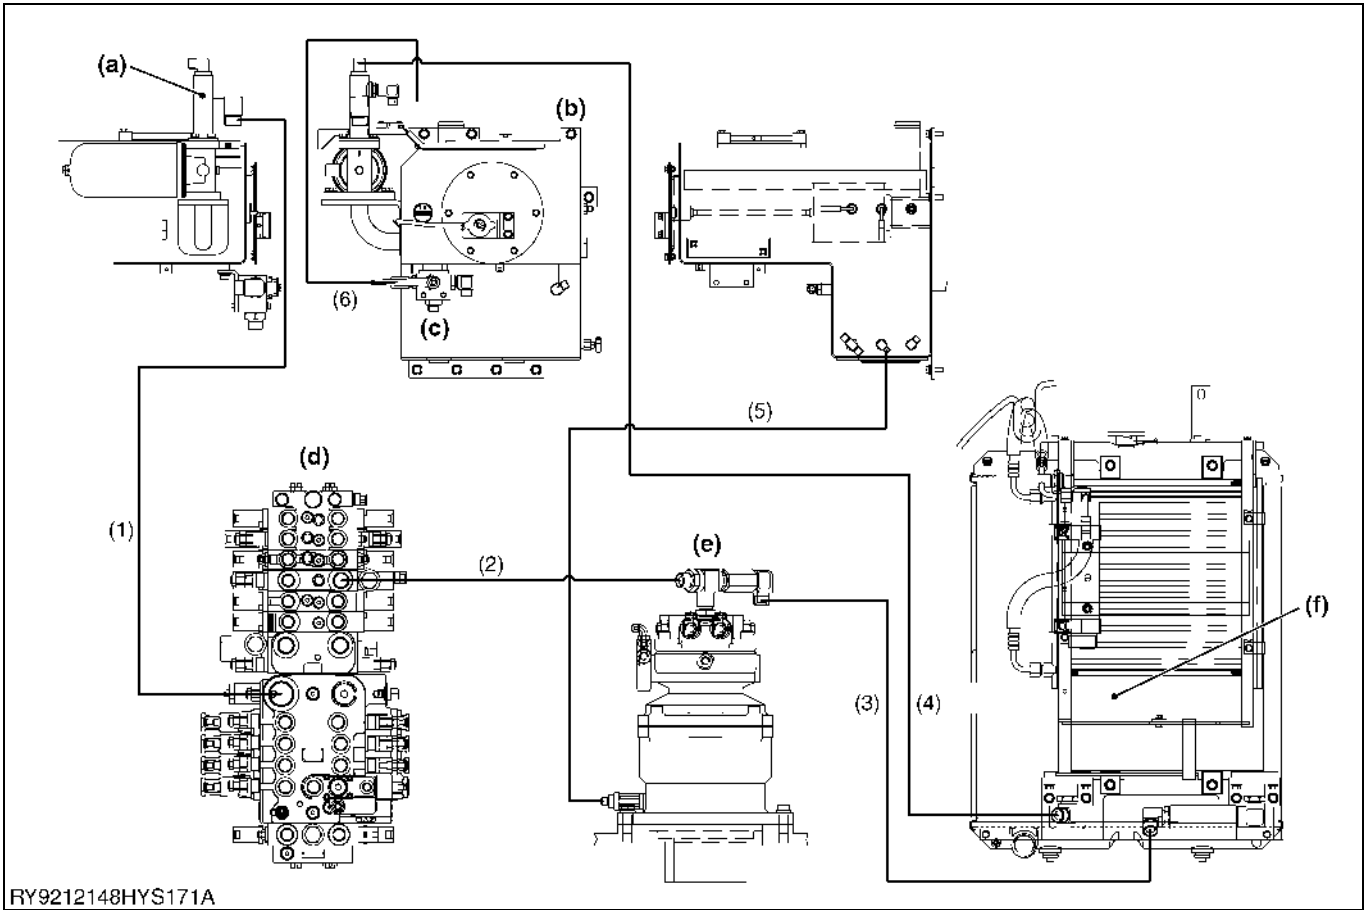


- (a) Return Pipe
- (b) Hydraulic Oil Tank
- (c) 3-Way Valve
- (d) Control Valve
- (e) Swivel Motor
- (f) Oil Cooler

No.	Function	Hose			Fitting		Guard	Point used
		Total length	Tape color	Hose class	Type	Size		
(1)	Return (T1)	805 mm 31.7 in.		PA0320	C·C	1·1/4		C/V (T1) to return pipe
(2)	Swivel makeup	560 mm 22.0 in.	Black	PA0310	C·CR4	3/4		C/V (T2) to swivel motor (M)
(3)	Return (T2)	1180 mm 46.5 in.		PA0310	C·C	3/4	PVC tube	Swivel motor (M) to oil cooler
(4)		800 mm 31.5 in.	Black	PA0310	C·C	3/4		Oil cooler to return pipe
(5)	Swivel drain	360 mm 14.2 in.		PLT04	CR4·C	1/4		Swivel motor (Dr) to oil tank
(6)	AUX1 return	630 mm 24.8 in.	Center Pink x 2	PA0310	C·C	3/4		3-way valve to return pipe

RY9212148HYS0294US0

[4] PILOT HOSES

(1) Deliver Hose Routing

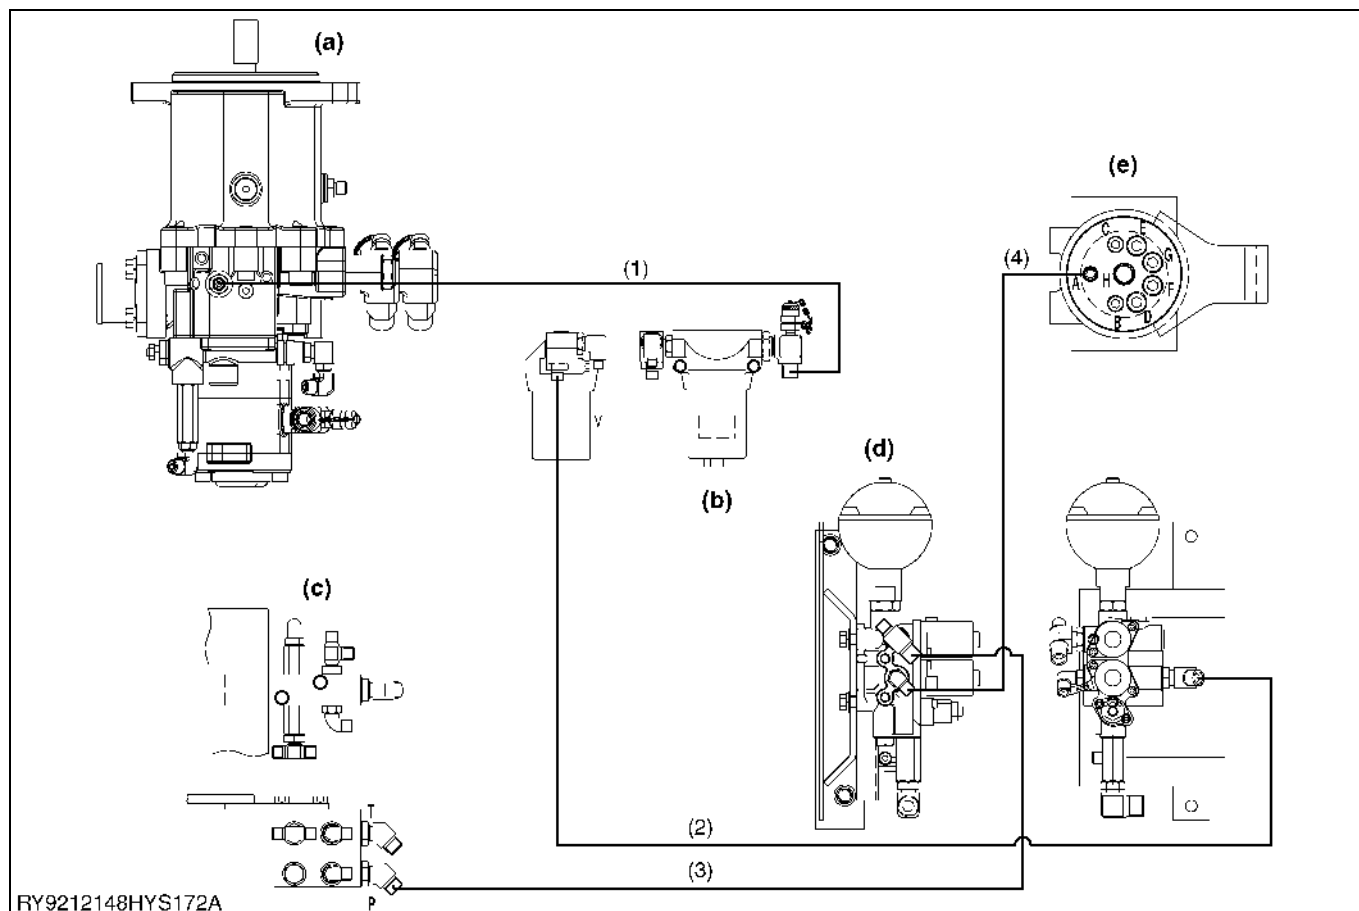

(a) Pump

(b) Line Filter

(c) Collector Block


(d) Unload Valve

(e) Swivel Joint

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	P4	360 mm 14.2 in.		PF1406	C·C	3/8	Pump to line filter
(2)		2080 mm 81.9 in.	Red	PF1406	C·C	3/8	Line filter to unload valve
(3)		2010 mm 79.1 in.	Red	PLT06	C·C	3/8	Unload valve (B) to collector block (P)
(4)	Travel 2-speed	1350 mm 53.1 in.	Pea green	PLT04	C·C	1/4	Unload valve (A) to R/J travel 2-speed boost

RY9212148HYS0295US0

(2) Port P Hose Routing

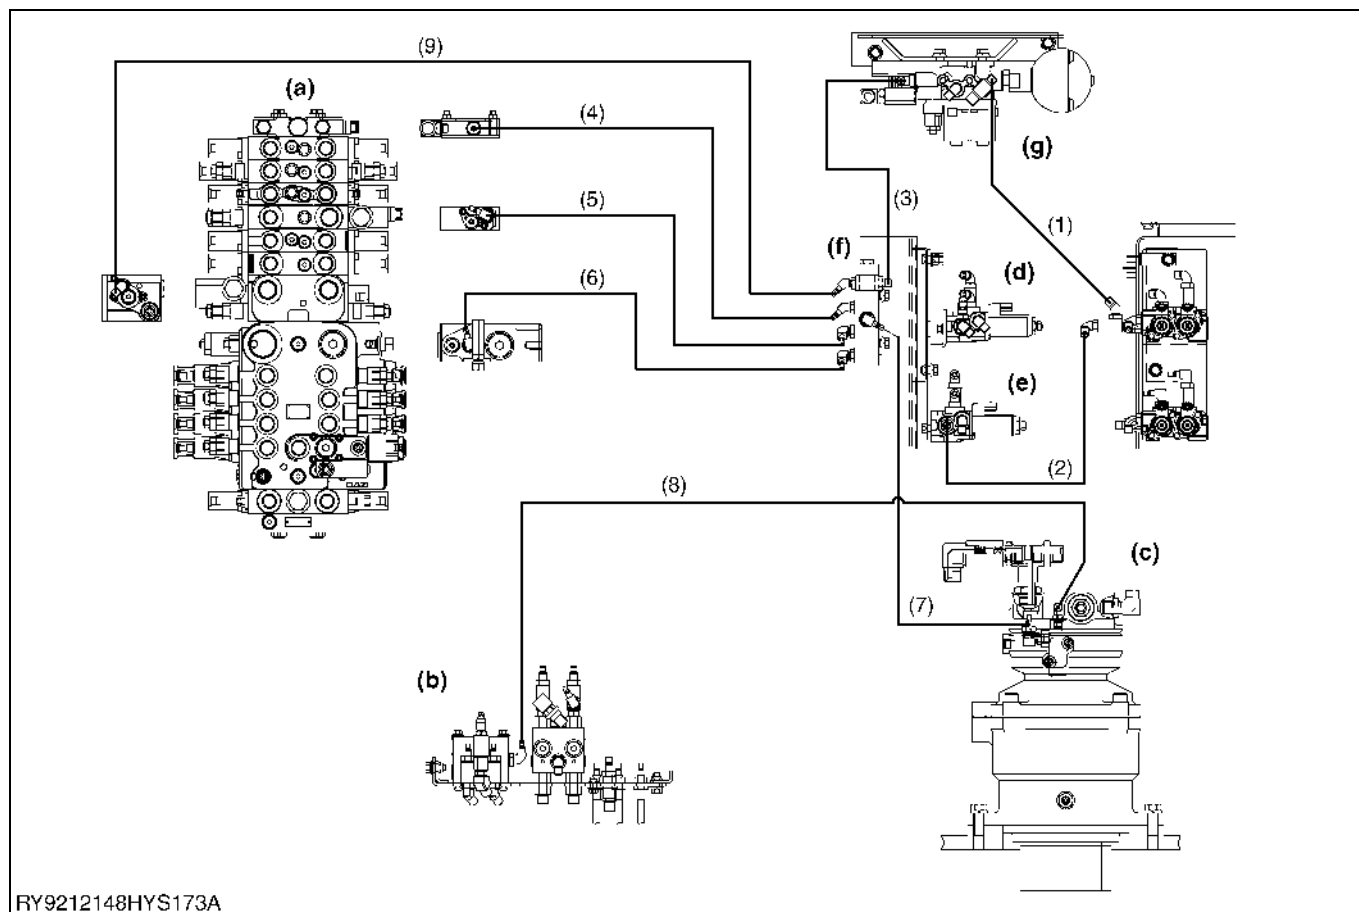

(a) Control Valve

(c) Swivel Motor

(e) AUX2 Solenoid Valve

(g) Unload Valve

(b) Swivel Shuttle Valve


(d) AUX1 Solenoid Valve

(f) P4 Distribution Block

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	AUX1 P	350 mm 13.8 in.	Blue	PLT04	CR9-C	1/4	Unload valve (B) to AUX1 solenoid valve (P)
(2)	AUX2 P	260 mm 10.2 in.		PLT04	C-CR9	1/4	AUX1 solenoid valve (P) to AUX2 solenoid valve (P)
(3)	Distribution block P	380 mm 15.0 in.		PLT04	CR9-C	1/4	Unload valve (P) to P4 distribution block (tank side)
(4)	AI	220 mm 8.7 in.	Blue	PLT04	Q-Q	Q	P4 distribution block (tank side) to C/V (PP1)
(5)	P3 union	240 mm 9.4 in.	Yellow	PLT04	Q-Q	Q	P4 distribution block (tank side) to C/V (PP2)
(6)		400 mm 15.7 in.	Green	PLT04	Q-Q	Q	P4 distribution block (tank side) to C/V (PP3)
(7)	Swivel brake P	480 mm 18.9 in.	Light blue	PLT04	Q-Q	Q	P4 distribution block (tank side) to swivel motor brake (PG)
(8)	Swivel brake signal	1095 mm 43.1 in.	Light blue Gray	PLT04	Q-CR9	Q-1/4	Shuttle valve to swivel motor brake (SH)
(9)	Travel	750 mm 9.5 in.		PLT04	CR9-Q	1/4-Q	P4 distribution block (tank side) to C/V (PP4)

RY9212148HYS0296US0


(3) Port T Hose Routing

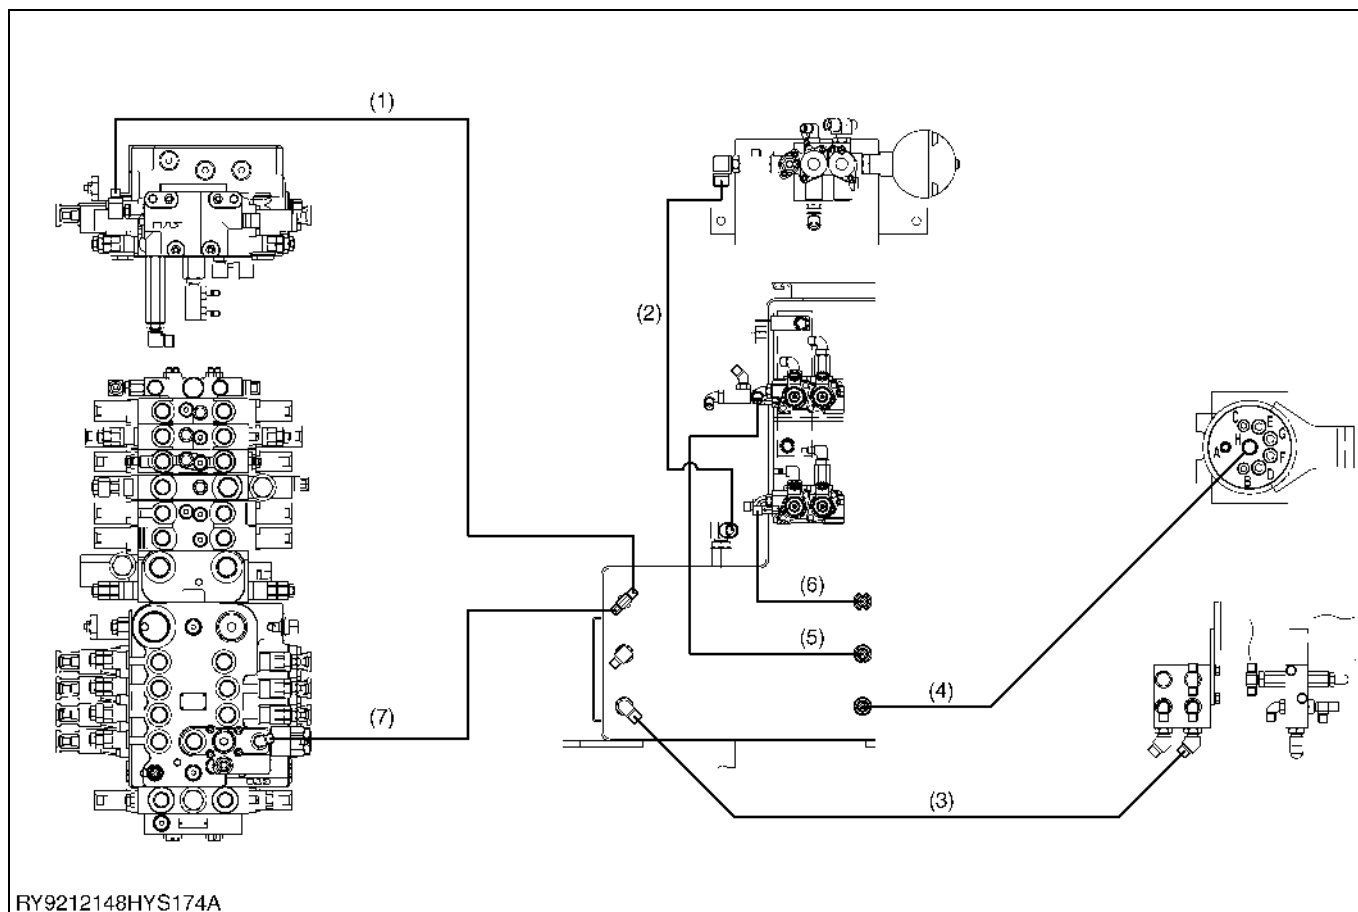

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	Drain	610 mm 24.0 in.	Light blue	PLT04	C·CR9	1/4	C/V (Dr2) to tank
(2)		510 mm 20.1 in.	Center green	PA0308	C·C	1/2	Unload valve (T) to tank
(3)		1640 mm 64.6 in.	Center gray	PLT06	C·C	3/8	Collector block (T) to tank
(4)		990 mm 39.0 in.	Orange	PLT06	C·CR9	3/8	S/J (T) to tank
(5)		410 mm 16.1 in.	Brown Pink	PLT04	C·CR9	1/4	AUX1 solenoid (T) to tank
(6)		330 mm 13.0 in.		PLT04	C·CR9	1/4	AUX2 solenoid (T) to tank
(7)		740 mm 29.1 in.		PLT04	C·C	1/4	Anti-drift (T) to tank

RY9212148HYS0297US0

(4) Ports P and T Pilot Valve Hose Routing

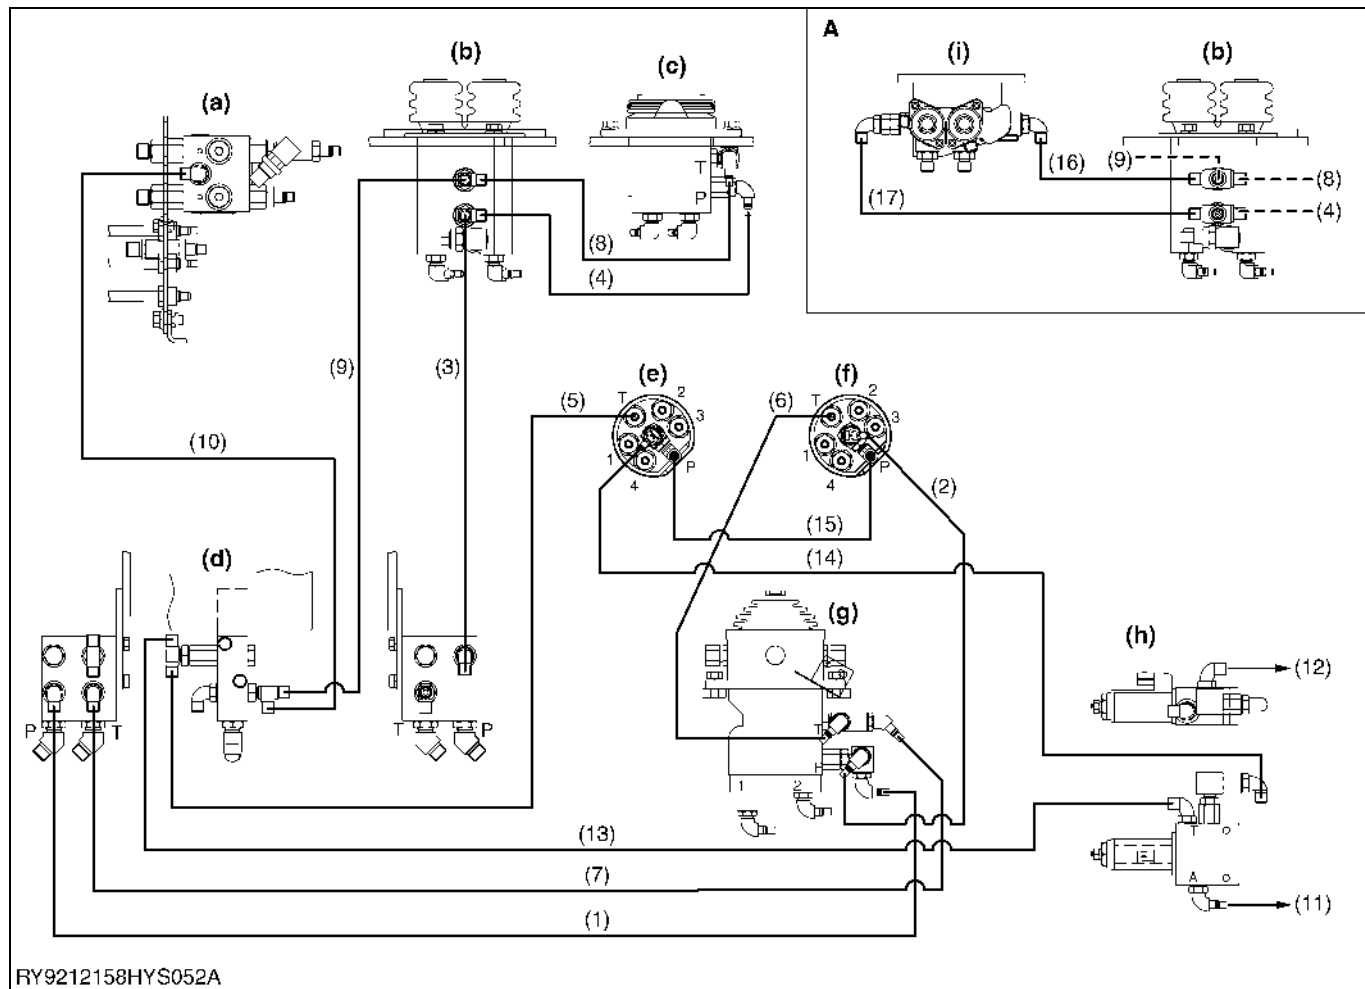

(a) Boom Shockless Valve

(b) Travel P/V

(c) Swing P/V

(d) Collector Block

(e) Control P/V Left

(f) Control P/V Right

(g) Blade P/V

(h) EP Mode Solenoid Valve

(i) Angle Solenoid Valve

(A) Angle Specification


(To be continued)

(Continued)

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	Blade P	1495 mm 58.9 in.	White	PLT04	C·Q	1/4·Q	Collector block (P) to blade P/V (P)
(2)	P/V right P	235 mm 9.3 in.	White	PLT04	Q·Q	Q	P/V (R) (P) to blade P/V (P)
(3)	Travel P/V P	350 mm 13.8 in.	White	PLT04	C·C	1/4	Collector block (P) to travel P/V (P)
(4)	Swing P/V P	280 mm 11.0 in.	White	PLT04	C·Q	1/4·Q	Travel P/V (P) to Swing P/V (P)
(5)	Drain	1380 mm 54.3 in.		PLT04	Q·C	Q·1/4	P/V (L) (T) to collector block (T)
(6)		330 mm 13.0 in.		PLT04	Q·Q	Q	P/V (R) (T) to blade P/V (T)
(7)		1430 mm 56.3 in.		PLT04	Q·C	Q·1/4	Blade P/V (T) to collector block (T)
(8)		330 mm 13.0 in.	White	PLT04	Q·C	Q·1/4	Swing P/V (T) to Travel P/V (T)
(9)		240 mm 9.4 in.		PLT04	C·C	1/4	Travel P/V (T) to collector block (T)
(10)		335 mm 13.2 in.		PLT04	C·C	1/4	Collector block (T) to shockless valve (T)
(11)	Flow control	1300 mm 51.2 in.		PLT04	Q·C	Q·1/4	E/P, solenoid to Pump (E/P)
(12)	E/P, SOL P	1300 mm 51.2 in.	White	PLT04	C·C	1/4	Line filter to E/P, solenoid (P)
(13)	Drain	285 mm 11.2 in.		PLT04	C·CR9	1/4	E/P, solenoid (T) to collector block (T)
(14)	P/V Left P	1280 mm 50.4 in.	White	PLT04	C·Q	1/4·Q	E/P, solenoid (P) to P/V (L) (P)
(15)	P/V right P	2135 mm 84.1 in.	White	PLT04	Q·Q	Q	P/V (right) (P) to P/V (left) (P)
(16)	Angle solenoid P	280 mm 11.0 in.	White	PLT04	C·CR9	1/4	Angle solenoid (P) to travel P/V (P)
(17)	Drain	360 mm 14.2 in.		PLT04	CR9·C	1/4	Angle solenoid (T) to travel P/V (T)

RY9212158HYS0041US0

(5) Pilot Valve Hose Routing

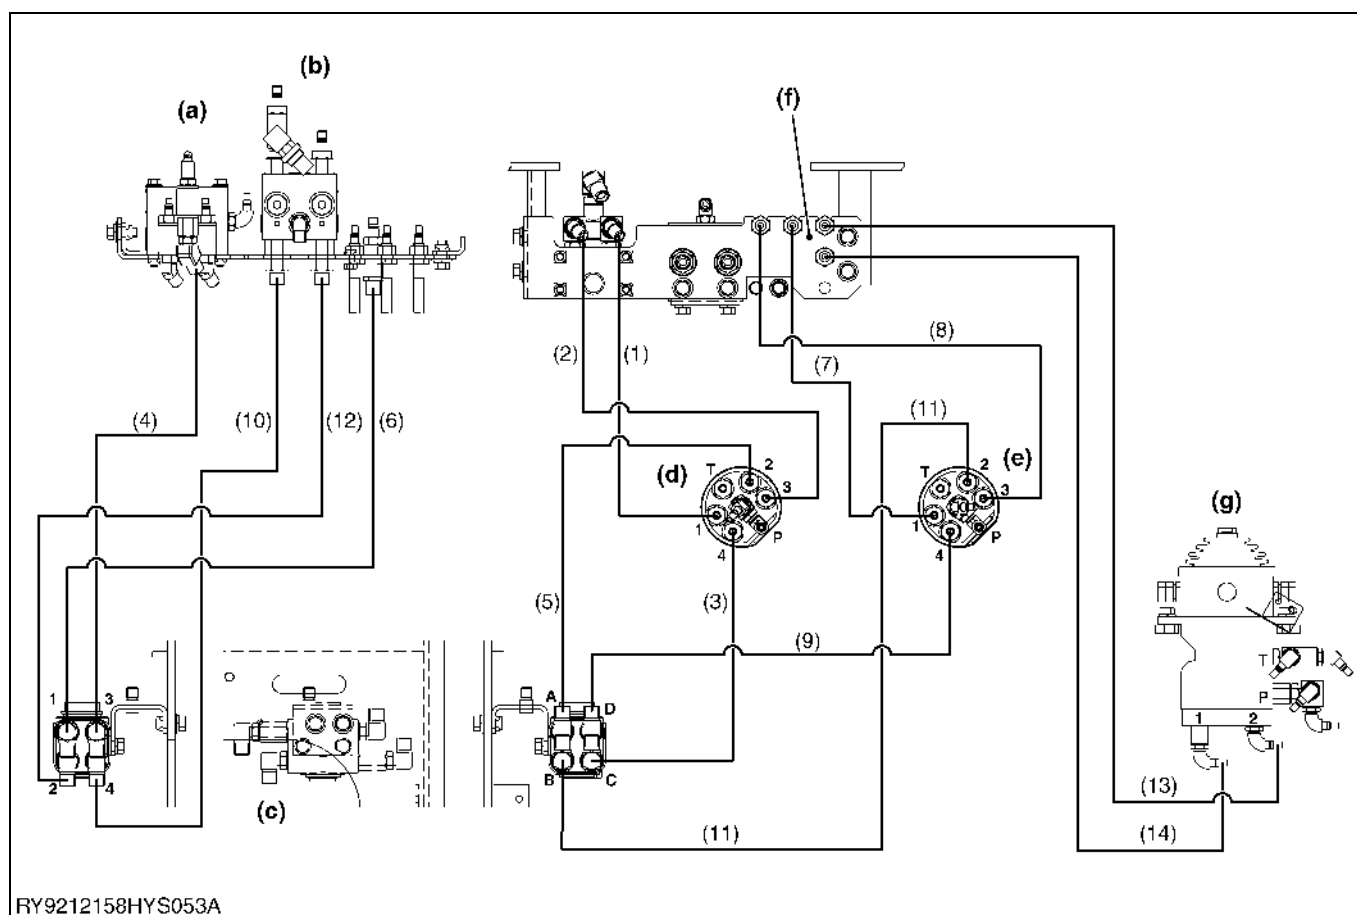

(a) Swivel Shuttle Valve
(b) Boom Shockless Valve

(c) TPSS Valve
(d) Control Left P/V


(e) Control Right P/V
(f) Bulkhead Fitting

(g) Blade P/V

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	Swivel left	1410 mm 55.5 in.	Gray	PLT04	Q·C	Q·1/4	P/V (swivel left) to shuttle valve
(2)	Swivel right	1415 mm 55.7 in.	Light blue	PLT04	Q·C	Q·1/4	P/V (swivel right) to shuttle valve
(3)	Arm crowd	1240 mm 48.8 in.	Blue	PLT06	Q·C	Q·3/8	P/V (arm crowd) to TPSS
(4)		530 mm 20.9 in.	Blue	PLT06	C·C	3/8	TPSS to shuttle valve (arm crowd)
(5)	Arm dump	1210 mm 47.6 in.	Pea green	PLT06	Q·C	Q·3/8	P/V (arm dump) to TPSS
(6)		505 mm 19.9 in.	Pea green	PLT06	C·C	3/8	TPSS to bulkhead fitting (arm dump)
(7)	Bucket crowd	1655 mm 65.2 in.	Orange	PLT04	Q·QM	Q	P/V (bucket crowd) to bulkhead fitting
(8)	Bucket dump	1650 mm 65.0 in.	Red	PLT04	Q·QM	Q	P/V (bucket dump) to bulkhead fitting
(9)	Boom up	1815 mm 71.5 in.	Green	PLT06	Q·C	Q·3/8	P/V (Boom up) to TPSS
(10)		505 mm 19.9 in.	Green	PLT06	C·C	3/8	TPSS to shockless valve (Boom up)
(11)	Boom down	1940 mm 76.4 in.	Yellow	PLT06	Q·C	Q·3/8	P/V (Boom down) to TPSS
(12)		485 mm 19.1 in.	Yellow	PLT06	C·C	3/8	TPSS to shockless valve (Boom down)

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(13)	Blade up	1400 mm 55.1 in.	Pink	PLT04	Q-QM	Q	Blade P/V (up) to bulkhead fitting
(14)	Blade down	1400 mm 55.1 in.	Brown	PLT04	Q-QM	Q	Blade P/V (down) to bulkhead fitting

RY9212158HYS0042US0

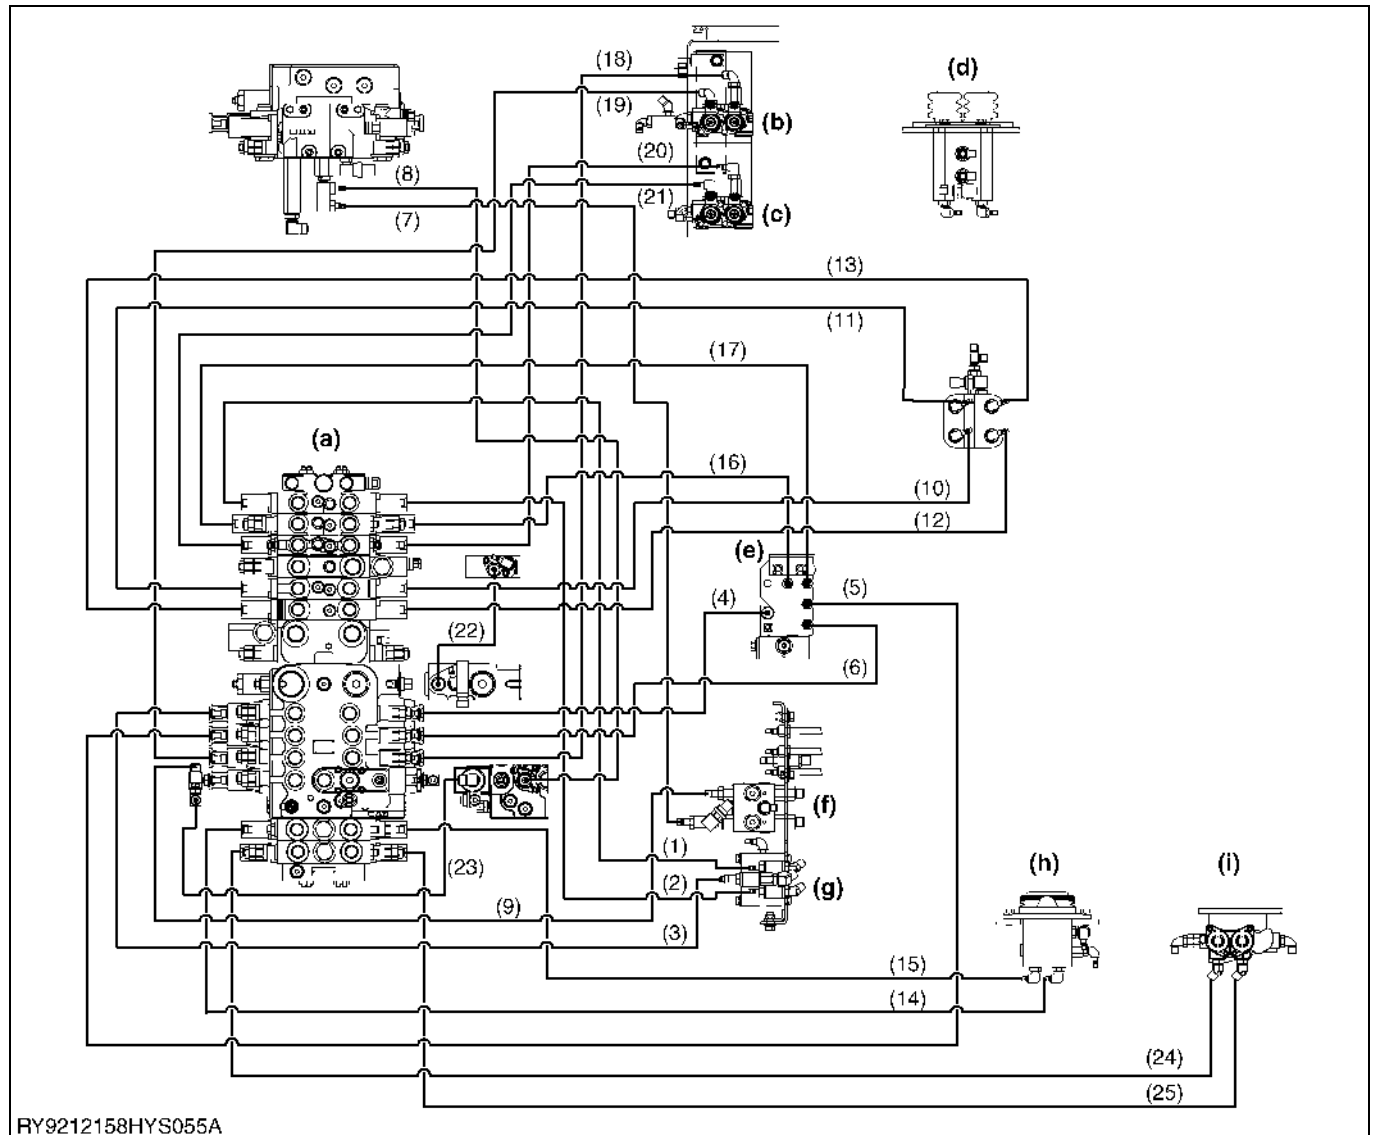

(a) Control Valve
 (b) AUX1 Solenoid Valve
 (c) AUX2 Solenoid Valve

(d) Travel P/V
 (e) Bulkhead Fitting

(f) Boom Shockless Valve
 (g) Swivel Shuttle Valve

(h) Blade P/V
 (i) Angle Solenoid Valve

(To be continued)

(Continued)

No.	Function	Hose			Fitting		Point used
		Total length	Tape color	Hose class	Type	Size	
(1)	Swivel left	1845 mm 72.6 in.	Gray	PLT04	Q·CR9	Q·1/4	Shuttle valve to C/V (swivel left)
(2)	Swivel right	1405 mm 55.3 in.	Light blue	PLT04	Q·Q	Q	Shuttle valve to C/V (swivel right)
(3)	Arm crowd	1665 mm 65.6 in.	Blue	PLT06	Q·CR9	Q·3/8	Shuttle valve to C/V (arm crowd)
(4)	Arm dump	1445 mm 56.9 in.	Pea green	PLT06	Q·Q	Q	Bulkhead fitting to C/V (arm dump)
(5)	Bucket crowd	1885 mm 74.2 in.	Orange	PLT04	Q·CR9	Q·1/4	Bulkhead fitting to C/V (bucket crowd)
(6)	Bucket dump	1355 mm 53.3 in.	Red	PLT04	Q·Q	Q	Bulkhead fitting to C/V (bucket dump)
(7)	Boom union	1665 mm 65.6 in.	Green	PLT06	Q·Q	Q	Shockless valve to C/V (boom union Pbu)
(8)	Boom up	860 mm 33.9 in.	Green	PLT06	Q·Q	Q	C/V (boom union Pbu) to C/V (boom up)
(9)	Boom down	1785 mm 70.3 in.	Yellow	PLT06	Q·CR4	Q·3/8	Shockless valve to C/V (boom down)
(10)	Travel left forward	1660 mm 65.4 in.	Red x 2	PLT04	Q·Q	Q·Q	Travel P/V (L-Fwd) to C/V (L-Fwd)
(11)	Travel left rear	1950 mm 76.8 in.	Blue x 2	PLT04	Q·CR9	Q·1/4	Travel P/V (L-Bwd) to C/V (L-Bwd)
(12)	Travel right forward	1550 mm 61.0 in.	Yellow x 2	PLT04	Q·Q	Q	Travel P/V (R-Fwd) to C/V (R-Fwd)
(13)	Travel right rear	1840 mm 72.4 in.	Green x 2	PLT04	Q·CR9	Q·1/4	Travel P/V (R-Bwd) to C/V (R-Bwd)
(14)	Swing left	1850 mm 72.8 in.	Orange x 2	PLT04	Q·CR9	Q·1/4	Swing P/V (left) to C/V (left)
(15)	Swing right	1450 mm 57.1 in.	Yellow x 2	PLT04	Q·Q	Q	Swing P/V (right) to C/V (right)
(16)	Blade up	1545 mm 60.8 in.	Pink	PLT04	Q·Q	Q	Bulkhead fitting to C/V (blade up)
(17)	Blade down	1795 mm 70.7 in.	Brown	PLT04	Q·CR9	Q·1/4	Bulkhead fitting to C/V (blade down)
(18)	AUX1 High pressure	860 mm 33.9 in.	Pink	PLT04	C·Q	1/4·Q	AUX1 solenoid (Hi) to C/V (AUX1 Hi)
(19)	AUX1 Low pressure	1050 mm 41.3 in.	Brown	PLT04	C·CR9	1/4	AUX1 solenoid (Low) to C/V (AUX1 Low)
(20)	AUX2 High pressure	420 mm 16.5 in.	Pink	PLT04	Q·Q	Q	AUX2 solenoid (Hi) to C/V (AUX2 Hi)
(21)	AUX2 Low pressure	760 mm 29.9 in.	Brown	PLT04	Q·CR9	Q·1/4	AUX2 solenoid (Low) to C/V (AUX2 Low)
(22)	P3 union	345 mm 13.6 in.	Red Blue	PLT04	Q·Q	Q	C/V (PF1) to C/V (PF2)
(23)	Anti-drift	495 mm 19.5 in.		PLT06	C·CR9	3/8	Boom rod P/V to anti-drift
(24)	Angle Left	2070 mm 81.5 in.	White Orange	PLT04	C·CR9	1/4	Angle solenoid (A) to C/V (angle left)
(25)	Angle Right	1915 mm 75.4 in.	Black Orange	PLT04	C·Q	1/4·Q	Angle solenoid (B) to C/V (angle right)

RY9212158HYS0043US0

12. MEASURING HYDRAULIC DEVICE PERFORMANCE

[1] PISTON PUMP AIR BLEEDING PROCEDURE

Purpose

- When disassembling or replacing hydraulic equipment and/or hoses, etc., after changing the hydraulic fluid and using the vacuum pump, and before operating the machine, always air bleed the pump to prevent pump scorching or cavitation.

RY9212148HYS0310US0

Work Tip

To prevent cavitation, never relieve pressure during air bleeding.




- With the engine stopped, remove the hose at the top of the pump from its clamp.
- Press the hexagonal plug and the black plastic lock section as well. Then hold the black plastic lock section and pull out the hexagonal plug.
- Drape the hose on the front of the weight, and leave for 30 seconds.
- Fit a hexagonal plug to the hose, start and idle the engine, and check whether there is any cavitation noise from the pump.
- Repeat operations 2, 3 and 4 until pump cavitation noise subsides.
- When cavitation noise subsides, raise the engine speed to 1500 rpm, slowly operate the arm and check whether any cavitation noise is produced.
- If there is no cavitation noise, raise the engine speed to 2000 rpm, slowly operate the arm, and check again for cavitation noise. If cavitation noise is produced, stop the engine and carry out steps 2, 3 and 4.
- Take the engine to max RPM, slowly operate the arm and check for cavitation noise. If cavitation noise is produced, stop the engine and carry out steps 2, 3 and 4.
- Clamp the air bleed hose in its original position.

- (1) Air Bleed Hose
(2) Hexagonal Plug

- (3) Lock Section
(4) Clamp

RY9212148HYS0304US0

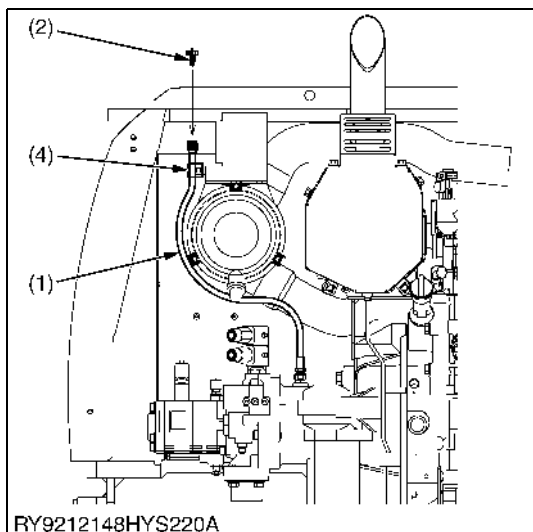


[2] RELEASE OF PRESSURE IN THE HYDRAULIC SYSTEM

Purpose

- It is necessary to release the pressure in the hydraulic system when removing/mounting hydraulic devices and as preparation for taking measurements. Always release the pressure in such cases.


RY9212148HYS0311US0

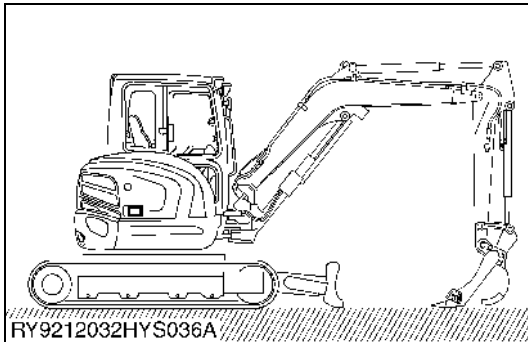

Hydraulic System Pressure Release Procedure

- Place the machine on firm, level ground, lower the bucket and blade to ground level, and stop the engine.

RY9212032HYS0060US0

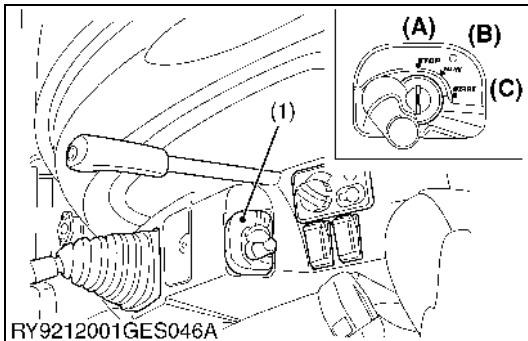


- Without starting the engine, place the engine starter switch in the "RUN" (B) position.

(1) Starter Switch

(A) STOP
(B) RUN
(C) START

RY9212001HYS0648US0


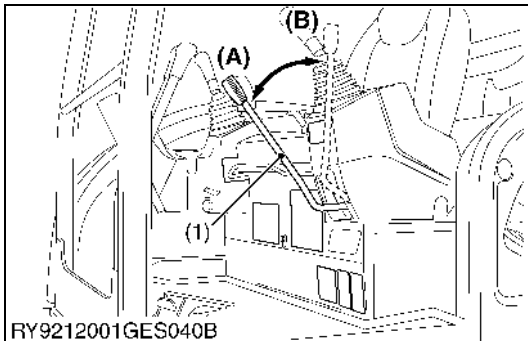


- Place the machine lock lever in the release position.

(1) Machine Lock Lever

(A) Release
(B) Lock

RY9212001HYS0649US0

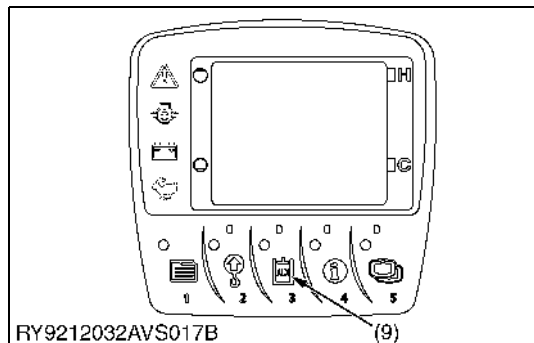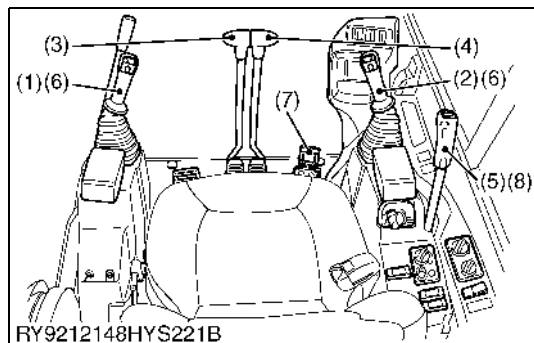

4. Operate each control lever for the boom, arm, bucket and swivel to full stroke.
5. Operate each of the travel levers, blade levers, swing pedals and angle blade switches to full stroke.
6. Use the AUX enable switch to turn the AUX ports ON and then operate each of the AUX port knob switches full stroke.
7. Place the machine's lock lever in the "Lock" position, and the engine starter switch to the "STOP" position.
8. Loosen the filler port on top of the hydraulic oil tank one half to a full turn to relieve pressure.

(1) Left machine control lever	(6) AUX port knob switch
(2) Right machine's lock lever	(7) Swing pedal
(3) Travel lever left	(8) Angle blade switch (angle spec. only)
(4) Travel lever right	(9) AUX enable switch
(5) Blade control lever	


RY9212158HYS0096US0

[3] MANUAL BOOM LOWERING PROCEDURE

Purpose

- This procedure is used in cases where the accumulator stops working and you have an urgent need to lower the boom.

RY9212148HYS0350US0

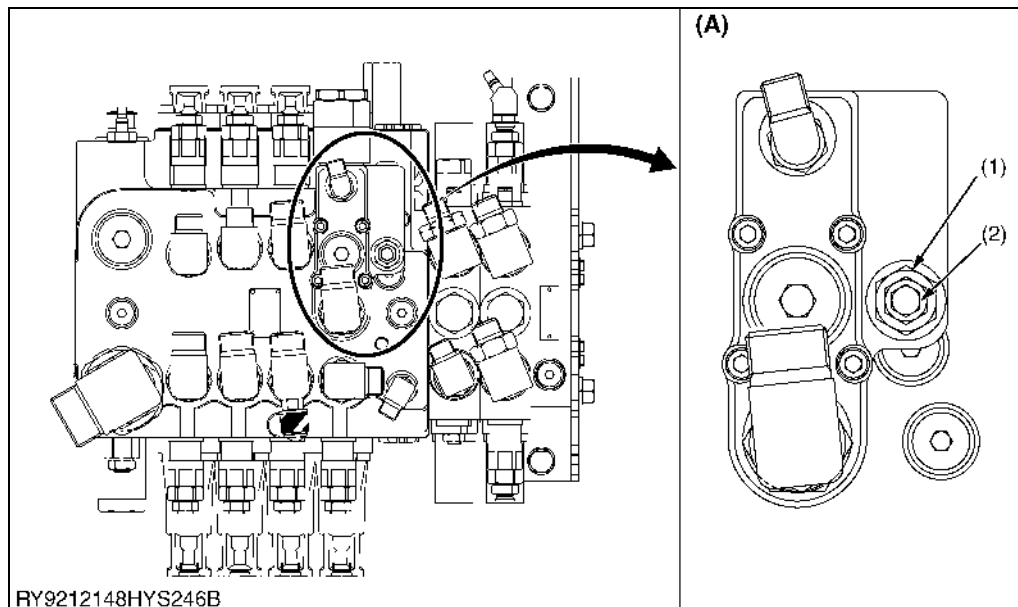

- (1) Nut
(2) Screw
- (A) Boom lock valve

Work Procedure

1. With the engine stopped, loosen the shut-off valve nut on the boom lock valve.
2. Loosen the boom lock valve screw 45 degrees (0.79 rad).



CAUTION

- Never get under the boom.
- After lowering the boom, be sure to retighten the screw and nut to their original positions.
- If you overloosen the screw and it comes off, oil will leak out and the boom will drop quickly.

RY9212158HYS0105US0


[4] MEASURING THE FLOW RATE

(1) Measuring Main Pump Flow

Purpose

- Measuring the amount of oil discharged from the main pump allows an assessment of its performance.
- If the discharge volume is lower than the factory specification, something may be wrong with the main pump or the engine.

RY9212148HYS0312US0

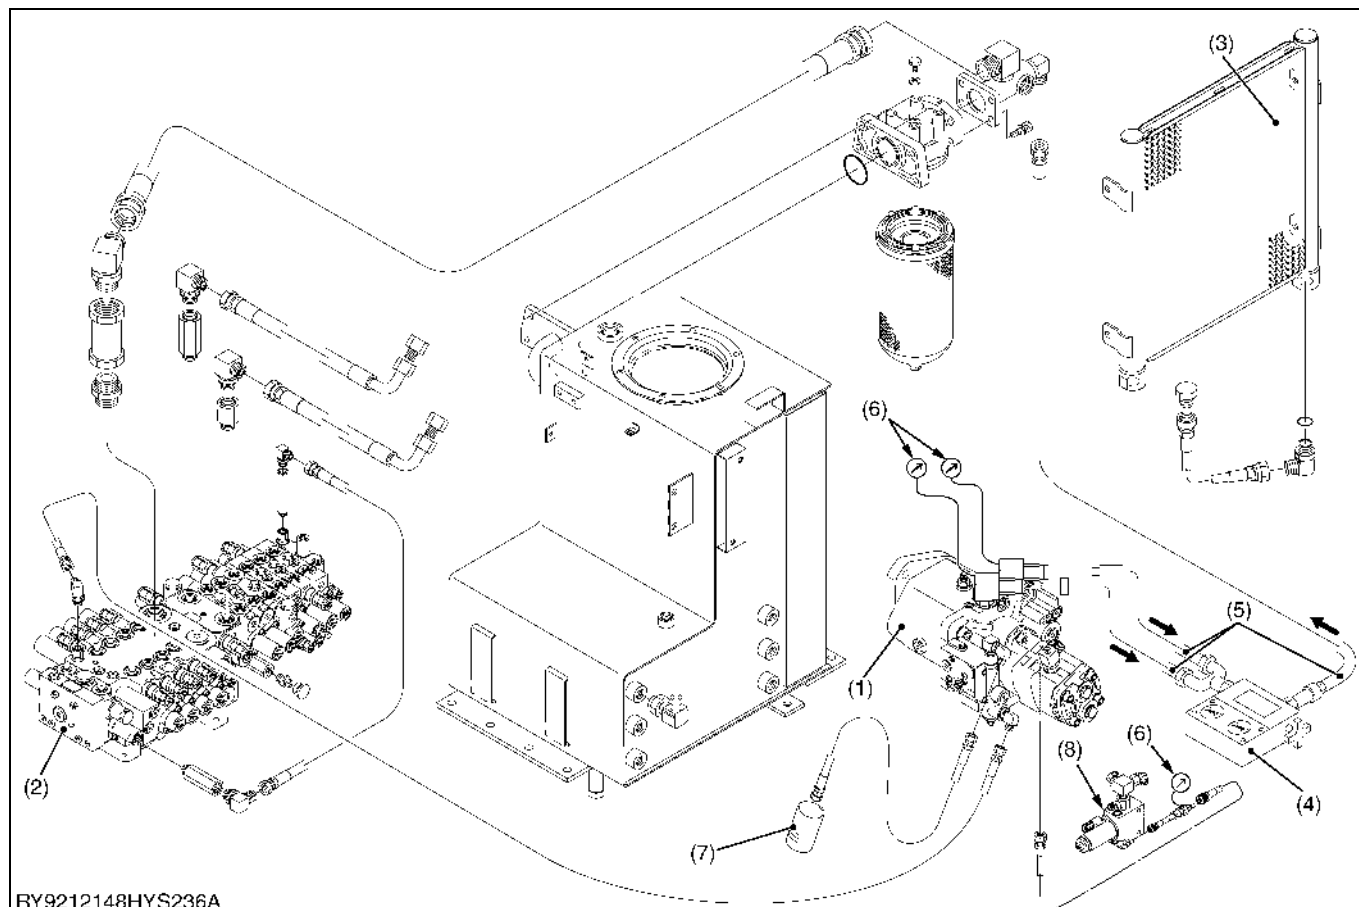

RY9212148HYS236A

(1) Pump	(3) Oil Cooler	(5) Test Hose	(7) Oil Receptacle
(2) Control Valve	(4) Flow Meter	(6) Pressure Gauge	(8) EP Solenoid Valve

RY9212148HYS0314US0

[Measurement preparations]

■ If measuring the flow rates for P1 and/or P2 (piston pump)

1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
3. Use the vacuum pump and attach a pressure gauge to the pressure test port and the Pi port.
4. Disconnect the P1 and P2 delivery hoses on the pump side and plug the disconnected hoses.
5. Connect a test hose to the P1, P2 discharge ports and connect the flow meter on the IN side. (Use an adapter to combine the flows.)
6. Disconnect the return hose from the oil cooler OUT side on the return pipe side and plug the disconnected hose.
7. Use a test hose to connect the return pipe and the OUT side of the flow meter.
8. Disconnect the PPS hose on the control valve side and plug port PPS of the control valve.
9. Set the PPS hose in the oil receptacle to collect oil.
10. Remove the vacuum pump and bleed air from the pump and make sure there are not any oil leaks in any of the lines.

RY9212148HYS0315US0

■ If measuring the flow of P3 (gear pump)

1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
3. Use the vacuum pump and attach a pressure gauge to the pressure test port.
4. Disconnect the P3 delivery hose on the pump side and plug the disconnected hose.
5. Connect a test hose to the P3 discharge port and connect to the flow meter on the IN side.
6. Disconnect the return hose from the oil cooler OUT side on the return pipe side and plug the disconnected hose.
7. Use a test hose to connect the return pipe and the OUT side of the flow meter.
8. Remove the vacuum pump and bleed air from the pump and make sure there are not any oil leaks in any of the lines.

RY9212148HYS0316US0

[Measurement]

1. Open the loading valve of the flow meter all the way and start the engine.
2. Bring the hydraulic oil temperature to 50 ± 5 °C (122 ± 9 °F).
3. Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

4. Gradually close the flow meter's loading valve until it reaches the main LS relief pressure, then measure the oil flow and engine RPM at each pressure.
5. Take three measurements of the oil flow, determine the average and take that as the measured value.
6. Convert the measured value to what it would be with the engine at its rated RPM.


RY9212148HYS0317US0

(2) Measuring the AUX Proportional Settings

Purpose

- Measuring the maximum amount of oil flow at each step allows an assessment of solenoid valve performance.
- Prior to performing this test, make sure that each attachment is operating at the factory spec. speed and check the amperage of each solenoid valve.

RY9212148HYS0318US0

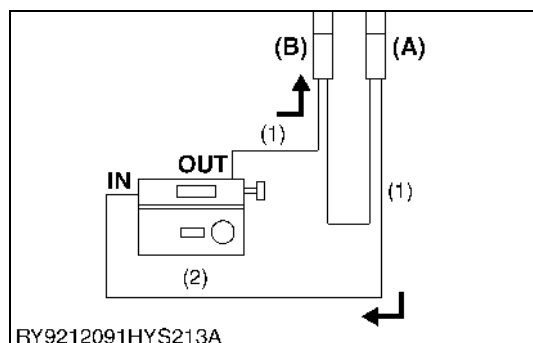

[Measurement preparations]

- Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
- Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
- Connect a vacuum pump.
- Connect the AUX discharge (high-pressure side) and the IN side of the flow meter with a test hose.
- Connect the OUT side of the flow meter and the AUX discharge (low-pressure side) with a test hose.
- Remove the vacuum pump.

[Measurement]

- Open the loading valve of the flow meter all the way and start the engine.
- Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).
- Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

- Operate the meter panel and measure the flow when at each AUX flow setting step by step.
- Take three measurements of the oil flow, determine the average and take that as the measured value.

■ IMPORTANT

- Do not make a mistake in the oil flow direction or the direction oil flows into the flow meter.**
- Refer to the Operator's Manual for how to set the flow limit values.**

- (1) Test Hose
(2) Flow Meter

- (A) AUX High-Pressure Side
(B) AUX Low-Pressure Side


RY9212148HYS0307US0

(3) Measuring AUX Discharge Flow

Purpose

- Measuring the flow at the AUX discharge port allows you to confirm AUX port discharge while under load.

RY9212148HYS0349US0

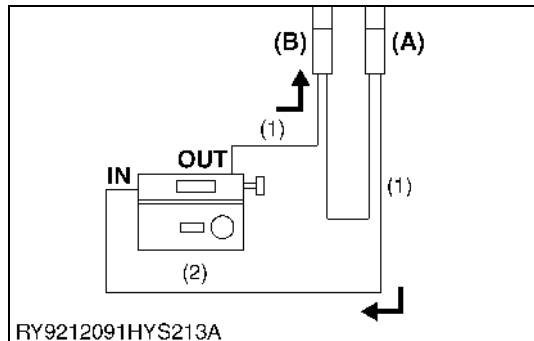

[Measurement preparations]

- Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
- Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
- Connect a vacuum pump.
- Connect the AUX discharge (high-pressure side) and the IN side of the flow meter with a test hose.
- Connect the OUT side of the flow meter and the AUX discharge (low-pressure side) with a test hose.
- Remove the vacuum pump.

[Measurement]

- Open the loading valve of the flow meter all the way and start the engine.
- Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).
- Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF
Max RPM	E mode	OFF	OFF

- Gradually close the flow meter's loading valve until it reaches the relief pressure, then measure the oil flow at each pressure.
- Take three measurements of the oil flow, determine the average and take that as the measured value.

■ IMPORTANT

- Do not make a mistake in the oil flow direction or the direction oil flows into the flow meter.**

- (1) Test Hose
(2) Flow Meter

- (A) AUX High-Pressure Side
(B) AUX Low-Pressure Side

RY9212148HYS0308US0





[5] MEASURING PRESSURE

(1) Main Relief Valve Measuring Procedure

Purpose

- Verification of correct pressure setting.
- If the measured value is low, there may be a problem with the relief valve and/or leaks in other hydraulic devices.

RY9212148HYS0321US0

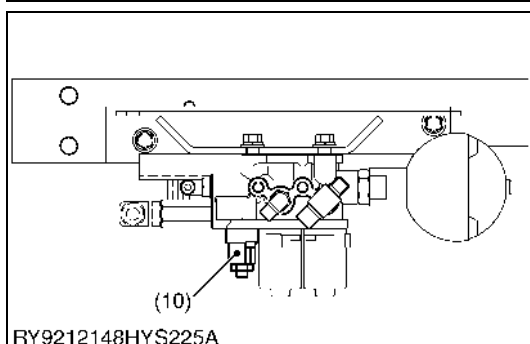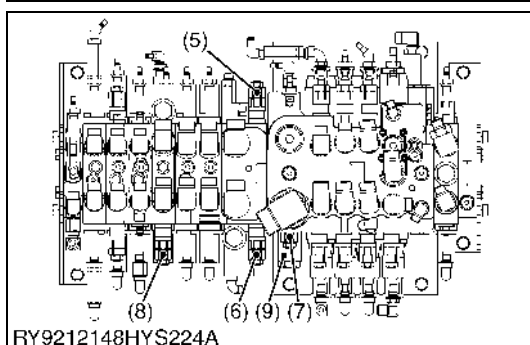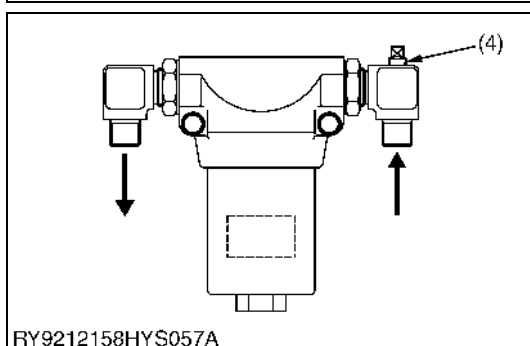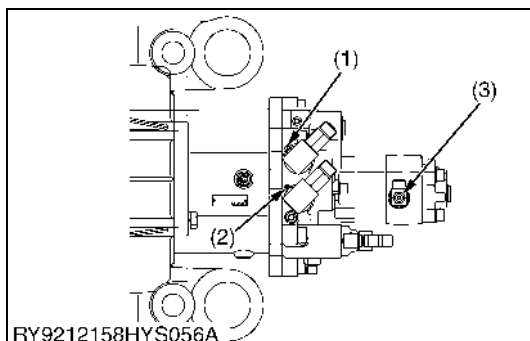

[Measurement preparations]

1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
3. Use the vacuum pump and attach a pressure gauge to the pressure test port to be measured.
4. Remove the vacuum pump.
5. Start and idle the engine, and check that there is no oil leakage.
6. Hydraulic oil temperature of $50 \pm 5^\circ\text{C}$ ($122 \pm 9^\circ\text{F}$).

[Measurement]

1. Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF


2. Slowly operate the control lever of the front equipment to be measured, operating it until the cylinder reaches the end of its stroke, then relieve.
3. When measuring the travel main relief pressure, lock the travel section, gradually operate the travel lever, then relieve.
4. When testing the unload LS pressure, check the discharge pressure of P1 or P2 without operating any of the control levers.
5. When testing the Pilot Primary Pressure, check the discharge pressure of P4 without operating any of the control levers.
6. Measure the pressure three times, determine the average and take that as the measured value.

(1) P1 Pressure Test Port	(7) Main LS Valve (aLS)
(2) P2 Pressure Test Port	(8) Main P3 Relief Valve (aP3)
(3) P3 Pressure Test Port	(9) Unload LS Valve (aUN)
(4) P4 Pressure Test Port	(10) Pilot Primary Pressure Relief Valve (aPP)
(5) Travel Right Main Relief Valve (aTR)	
(6) Travel Left Main Relief Valve (aTL)	

RY9212158HYS0097US0

Adjusting the Main Relief Valve**CAUTION**

- Only adjust the valve if the pressure setting of the main relief valve is lower than specification.
- If the pressure is raised above the setting value, it may cause damage to equipment, so never raise the pressure above the setting value.

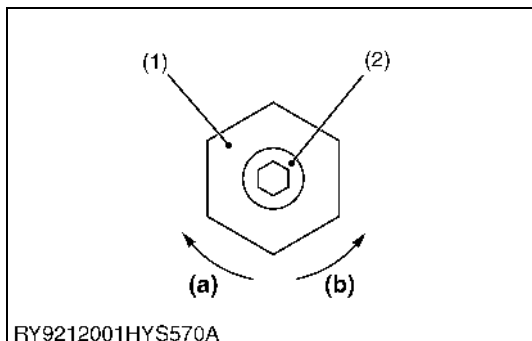

RY9212001HYS570A

1. Loosen the relief valve lock nut.
2. Use a hexagonal wrench to turn the adjuster screw, and tighten the lock nut.
3. After setting the pressure, always check the setting according to the section Measuring the Main Relief Valve Pressure.

(1) Lock Nut

(2) Adjuster Screw

(a) **Pressure Increase**(b) **Pressure Decrease**

RY9212148HYS0319US0

Pressure Change/Turn for Main Relief Valve (Reference Values)

Amount adjuster screw turned	1/4	1/2	3/4	1
• Travel right main relief valve • Travel left main relief valve • Main LS valve • Main P3 relief valve	4.4 MPa 45.1 kgf/cm ² 642 psi	8.9 MPa 90.8 kgf/cm ² 1291 psi	13.3 MPa 135.4 kgf/cm ² 1925 psi	17.7 MPa 180.5 kgf/cm ² 2567 psi
• Pilot primary pressure relief valve	0.2 MPa 2.0 kgf/cm ² 29 psi	0.4 MPa 4.1 kgf/cm ² 58 psi	0.6 MPa 6.1 kgf/cm ² 87 psi	0.8 MPa 8.2 kgf/cm ² 116 psi


RY9212148HYS0320US0

(2) Measuring Pilot Secondary Pressure

Purpose

- Measure the pressure between the control valves and the oil from each pilot valve and solenoid and make sure they are at specified values.
- If the pressure is lower than the factory specification, in general it indicates something may be wrong with the pilot valve or solenoid valve.

RY9212148HYS0323US0

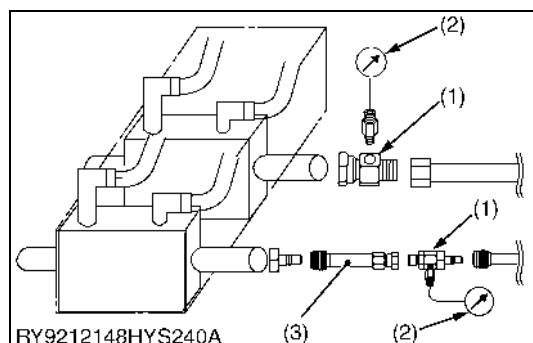

[Measurement preparations]

1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
3. Use the vacuum pump and then fit an adapter and test hose to the pilot port on the control valve side to be measured and attach a pressure gauge.
4. Remove the vacuum pump.
5. Start and idle the engine, and check that there is no oil leakage.
6. Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).

[Measurement]

1. Position each of the switches as follows.


Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

2. Operate the lever to be tested and measure the secondary pilot pressure at full stroke.
 - When measuring cylinder secondary pressure, take the measurement when at the cylinder end.
 - When measuring motor secondary pressure, take the measurement with it locked.
3. Measure the pressure three times, determine the average and take that as the measured value.

- (1) Adapter (3) Test Hose
(2) Pressure Gauge

RY9212148HYS0324US0

Angle Specification

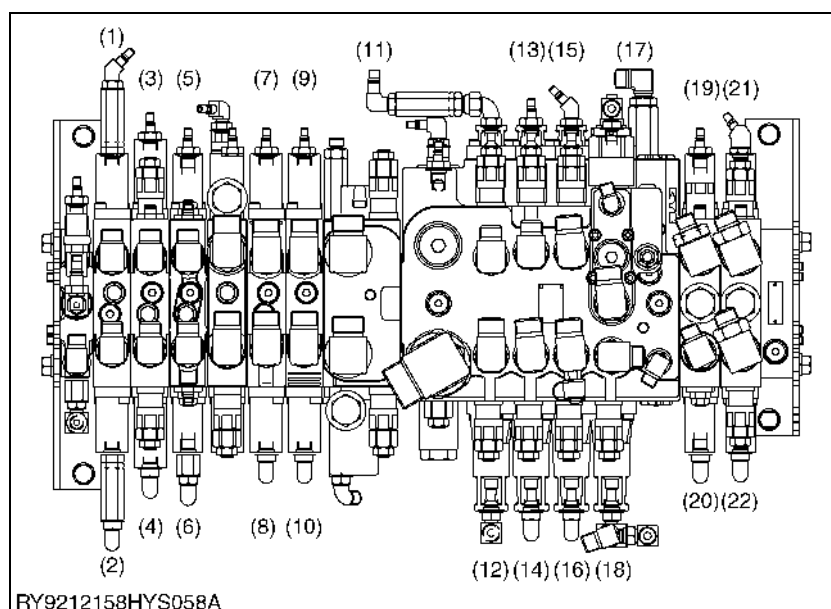

- (1) Swivel right
(2) Swivel left
(3) Blade up
(4) Blade down
(5) AUX2, High
(6) AUX2, Low
(7) Travel left forward
(8) Travel left rear
(9) Travel right forward
(10) Travel right rear
(11) Arm dump
(12) Arm crowd
(13) Bucket dump
(14) Bucket crowd
(15) AUX1, High
(16) AUX1, Low
(17) Boom up
(18) Boom down
(19) Swing right
(20) Swing left
(21) Angle Right
(22) Angle Left


RY9212158HYS0099US0

(3) Measuring EP Proportional Solenoid Pressure

Purpose

- Measuring the pressure from the EP proportional solenoid valve to the pump allows assessment of the performance of the EP solenoid valve.

RY9212148HYS0326US0

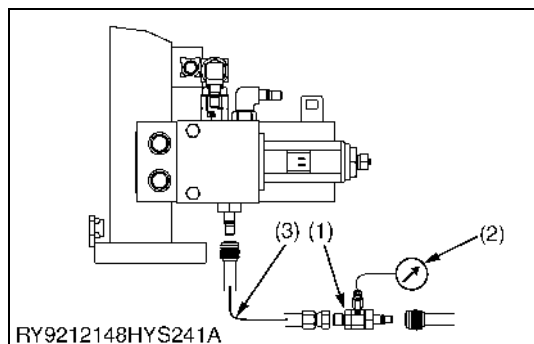

[Measurement preparations]

- Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
- Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
- Connect a vacuum pump.
- Disconnect the hose from the EP proportional solenoid valve to the pump from the EP proportional solenoid valve side and attach an adapter and test hose and then attach a pressure gauge.
- Remove the vacuum pump.
- Start and idle the engine, and check that there is no oil leakage.
- Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).

[Measurement]

- Position each of the switches as follows and measure the pressure.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF
Max RPM	P mode	OFF	ON
Max RPM	E mode	OFF	OFF

- Position each of the switches as follows, and measure the pressure when traveling or at boom up full stroke.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	E mode	OFF	OFF

- Measure the pressure three times, determine the average and take that as the measured value.

- (1) Adapter
(2) Pressure Gauge


- (3) Test Hose

RY9212148HYS0327US0

(4) Measuring the Overload Relief Valve Pressure

■ IMPORTANT

- If it is necessary to check the overload relief pressure on this machine, measure the main relief pressure of each circuit (boom, arm, bucket, blade, AUX and angle) and if the main relief pressures are within factory specifications, the overload relief valve is judged to be normal.
- If there is a problem, we recommend replacing the overload relief valve as an assembly.
- If a measurement has to be made for some reason, the procedures is as follows.

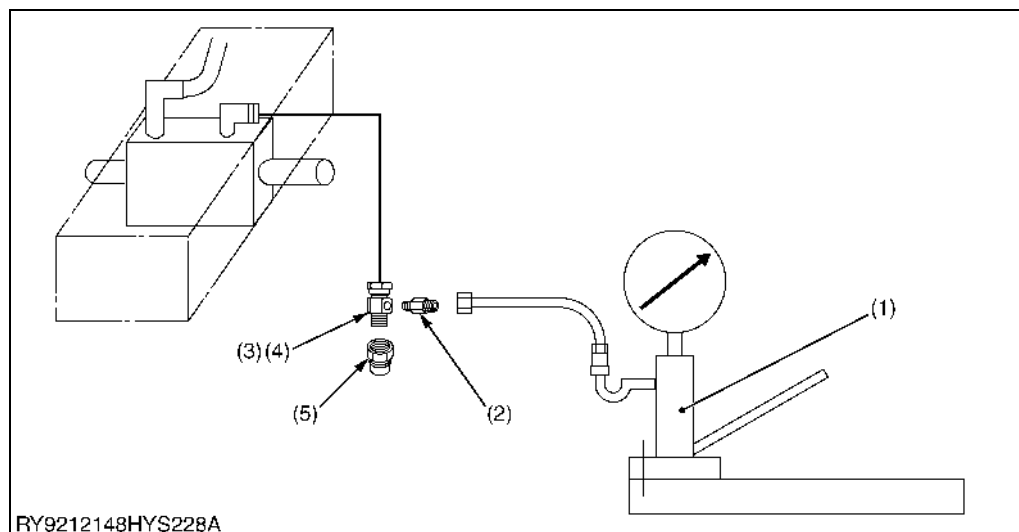

- (1) Pressure measuring kit
- (2) Pipe joint (R1/8-G1/4)
- (3) Straight pipe joint (13/16U)
- (4) Straight pipe joint (1/14U)
- (5) Plug

RY9212158HYS0100US0

RY9212148HYS228A

[Measurement preparations]

1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
3. Use the vacuum pump and disconnect the high pressure hose from the port where the overload relief valve to be measured is mounted and plug the hose.
4. Attach the pressure measuring kit to the disconnected port.
5. Remove the vacuum pump.

[Measurement]


1. Increase pressure until the overload relief valve opens.
2. Measure the pressure three times, determine the average and take that as the measured value.



CAUTION

- When disconnecting the pressure measuring kit, take appropriate care in removing it as the line is pressurized.

RY9212148HYS0329US0

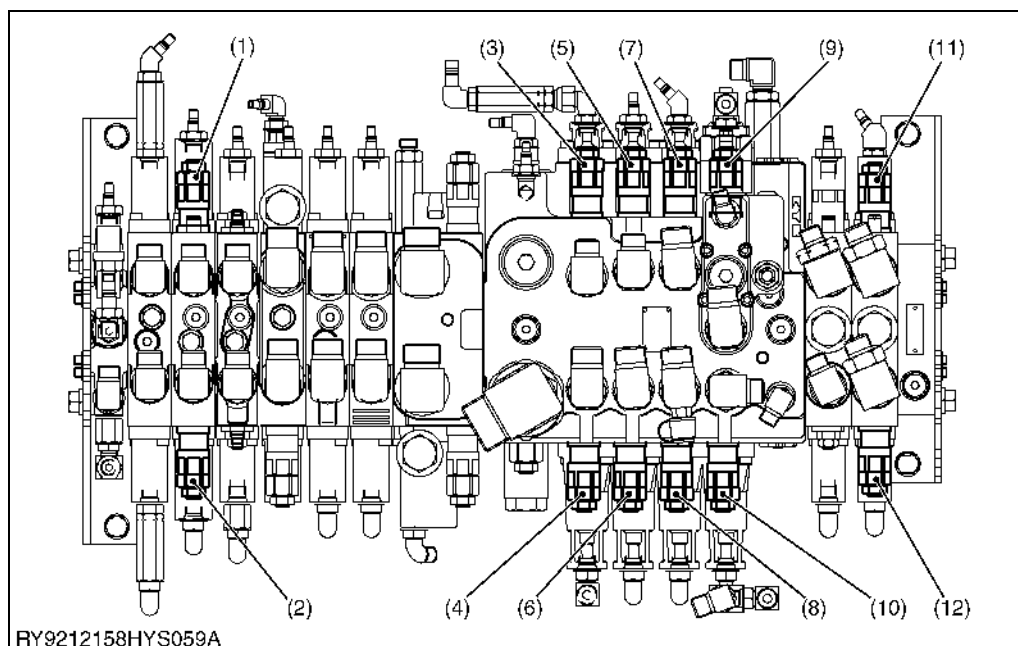
Angle Specification

- (1) Blade rod
- (2) Blade bottom
- (3) Arm rod
- (4) Arm bottom
- (5) Bucket rod
- (6) Bucket bottom
- (7) AUX1. High
- (8) AUX1. Low
- (9) Boom bottom
- (10) Boom rod
- (11) Angle rod
- (12) Angle bottom

RY9212158HYS0101US0

Adjusting the overload relief valve**CAUTION**

- Only adjust the valve if the pressure setting of the overload relief valve is low.
- If the pressure is raised above the setting value, it may cause damage to equipment, so never raise the pressure above the setting value.

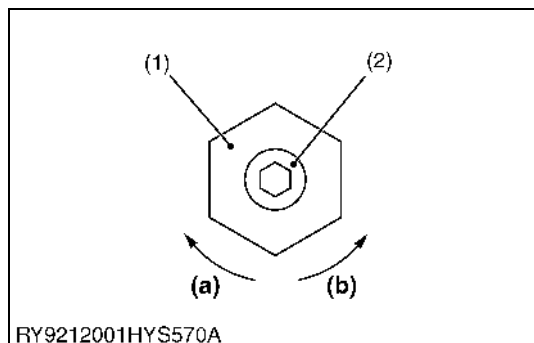

1. Loosen the relief valve lock nut.
2. Use a hexagonal wrench to turn the adjuster screw and then tighten the lock nut.
3. After setting the pressure, always check the setting according to the section Measuring the Main Overload Valve Pressure.

- (1) Lock Nut
- (2) Adjuster Screw

- (a) Pressure Increase
- (b) Pressure Decrease


RY9212148HYS0331US0

Pressure Change/Turn for Overload Relief Valves (Reference Values)

Amount adjuster screw turned	1/4	1/2	3/4	1
• Blade rod (b4R) • Angle bottom (b8L)	4.5 MPa 45.4 kgf/cm ² 645 psi	8.9 MPa 90.8 kgf/cm ² 1291 psi	13.4 MPa 136.2 kgf/cm ² 1936 psi	17.8 MPa 181.6 kgf/cm ² 2582 psi
• Other	7.1 MPa 72.4 kgf/cm ² 1030 psi	14.2 MPa 144.8 kgf/cm ² 2060 psi	21.3 MPa 217.3 kgf/cm ² 3089 psi	28.4 MPa 289.7 kgf/cm ² 4119 psi

RY9212158HYS0102US0

(5) Pressure Measuring Kit

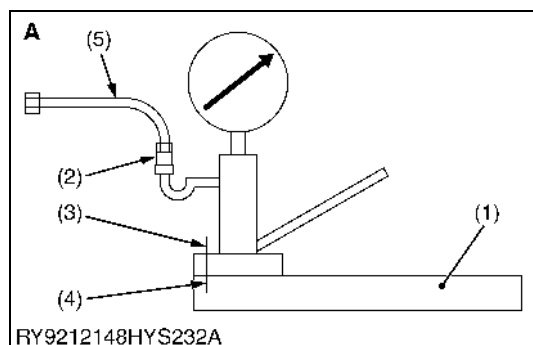

No.	Name of part	Q'ty
(1)	Support	1
(2)	Pipe joint (M12-G1/4)	1
(3)	Bolt (M10 x 35)	2
(4)	Nut (M10)	2
(5)	Test hose	1




CAUTION

- Use a test hose that can withstand pressure up to the measurement pressure.

A : Nozzle Tester

RY9212148HYS0336US0

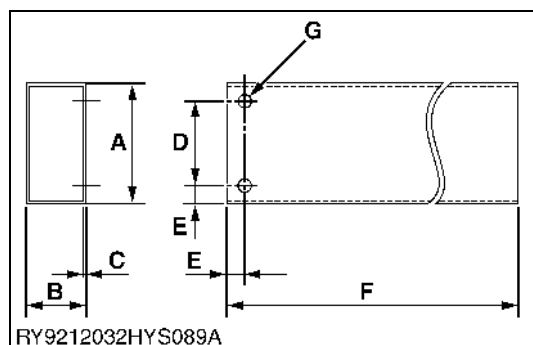


(1) Support

A	100 mm (3.94 in.)
B	50 mm (2.0 in.)
C	t = 2.3 mm (0.09 in.)
D	70 mm (2.8 in.)
E	15 mm (0.59 in.)
F	600 mm (23.6 in.)
G	2–11 mm (2–0.43 in.)

Material std.: STKR400

RY9212148HYS0337US0

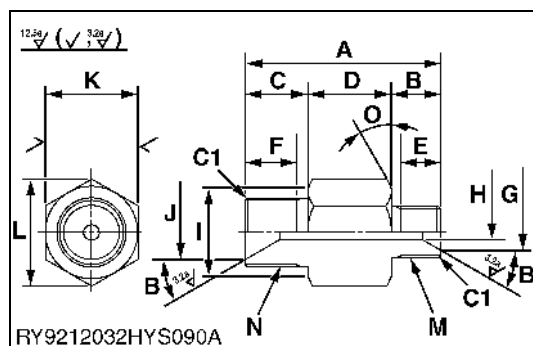

(2) Pipe joint (M12-G1/4)

A	47 mm (1.8 in.)
B	12 mm (0.47 in.)
C	15 mm (0.59 in.)
D	20 mm (0.79 in.)
E	10 mm (0.39 in.) ≤
F	12 mm (0.47 in.) ≤
G	φ 8 mm (0.3 in.)
H	φ 3 mm (0.1 in.)
I	φ 18 mm (0.71 in.)
J	φ 9.5 ± 0.2 mm (0.37 ± 0.01 in.)
K	19 +0, -0.35 mm (0.75 +0, -0.01 in.)
L	21.9 mm (0.86 in.)
M	M12 × 1.5
N	G1/4
O	0.52 rad (30 °)


RY9212148HYS0309US0

(6) Adjusting Swivel Relief Valve Pressure

■ IMPORTANT

- When checking the relief pressure of the swivel motor on the machine, measure the main relief pressure and if the main relief pressure is within factory specifications, the swivel relief valve is considered to be normal.
- If there is a problem, we recommend replacing the swivel relief valve as an assembly.

RY9212148HYS0338US0

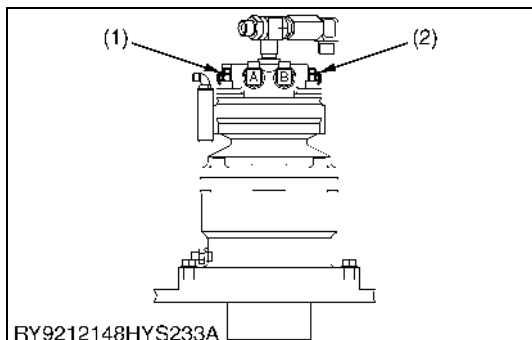

RY9212148HYS233A

Change/turn for the swivel relief valve (reference values)

	1/4	1/2	3/4	1
Amount adjuster screw turned	2.3 MPa 23.0 kgf/cm ² 326 psi	4.5 MPa 45.9 kgf/cm ² 653 psi	6.8 MPa 68.9 kgf/cm ² 979 psi	9.0 MPa 91.8 kgf/cm ² 1305 psi

- (1) Swivel Right Relief Valve (cSR) (2) Swivel Left Relief Valve (cSL)


RY9212148HYS0339US0

(7) Adjust the LS Control Differential Pressure Adjusting Spring Force




CAUTION

- Perform this adjustment procedure only when the LS regulator has been disassembled or when readjustment is necessary.
- Increasing the speed above the factory specification may damage the machine so never raise the speed above the factory specification.
- If it is out of adjustment, matching for the entire machine will be off and the operating speed of each device, including the boom, arm, etc. will be altered.

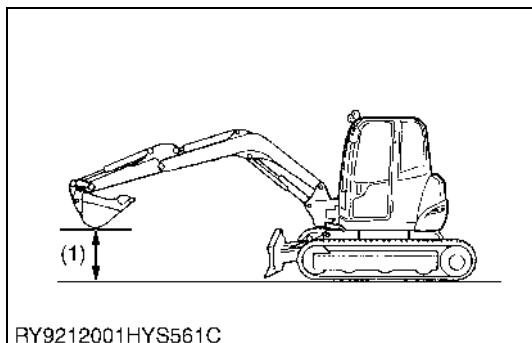

RY9212001HYS561C

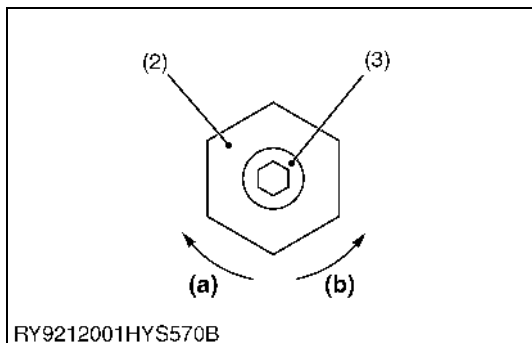

RY9212001HYS570B

[Measurement]

1. Measure the speed of the swing according the section Measuring Hydraulic Cylinder Operating Time.
2. If a value within factory specifications is not obtained, loosen the LS regulator lock nut.
3. Turn the adjuster screw with a hex wrench to adjust the spring tension.
After setting the pressure, always check the swing speed according to the section Measuring Hydraulic Cylinder Operating Time.
4. Tighten the lock nut.
5. Measure each operating time and make sure they are within specifications.

- (1) 1.0 m (40 in.)
(2) Lock Nut
(3) Adjuster Screw

- (a) Increase Speed
(b) Reduce Speed

RY9212148HYS0340US0

[6] MEASURING SWIVEL PERFORMANCE


(1) Measuring Swivel Motor Drain Volume

Purpose

- Measuring the drain volume when operating allows an assessment of swivel motor performance.

■ IMPORTANT

- Swivel motor performance is used along with swivel block performance and measurement of swivel speed to make a comprehensive assessment.
- When using this procedure to make measurements, the movement is in one direction.

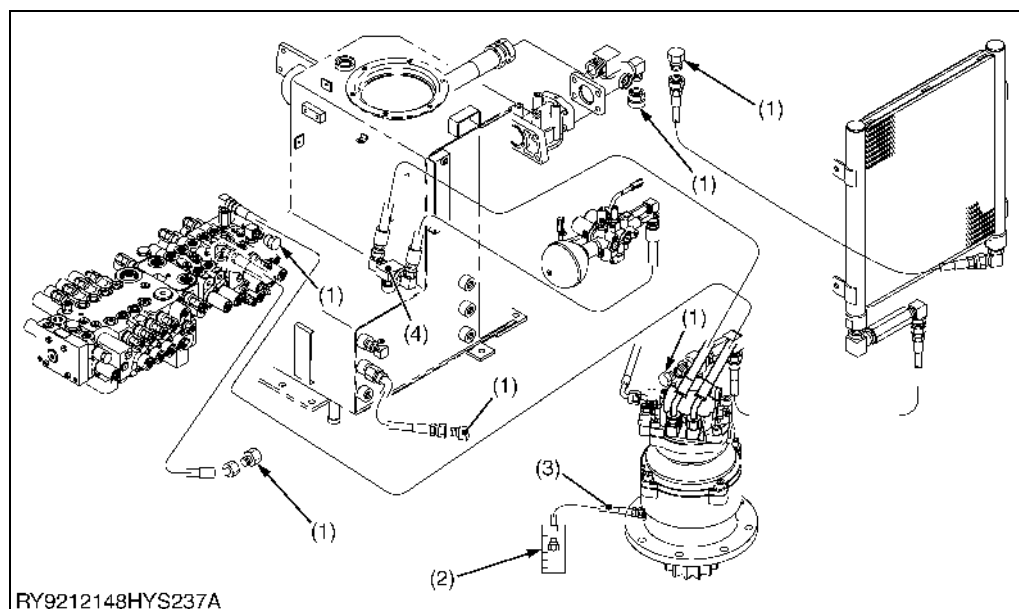

- (1) Plug
- (2) Graduated Cylinder
- (3) Test Hose
- (4) Adapter

RY9212148HYS0341US0

RY9212148HYS237A

[Measurement preparations]


- Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
- Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
- Attach a vacuum pump.
- Disconnect the hose that connects the oil cooler and the return filter on the return filter side and plug the disconnected hose and adapter.
- Disconnect the return hose that connects the control valve and the swivel motor on the swivel motor side and plug the disconnected hose and adapter.
- Disconnect one of the high-pressure hoses that connects the control valve and the swivel motor on the control valve side and split the unload valve and port T so it returns directly to the tank. Plug the hose with the disconnected adapter.
- Disconnect the swivel motor's drain hose from the swivel motor side, and plug the disconnected hose.
- Swap out the swivel motor drain hose with a test hose.
- Remove the vacuum pump.
- Operate the swivel and allow the swivel motor to warm up fully. However, operate the swivel slowly as cavitation may occur.
 - Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).



CAUTION

- Before commencing measurement, make sure there are no persons or obstacles within the swivel range.
- To measure the opposite direction, swap the swivel motor's high pressure hose.

RY9212148HYS0342US0

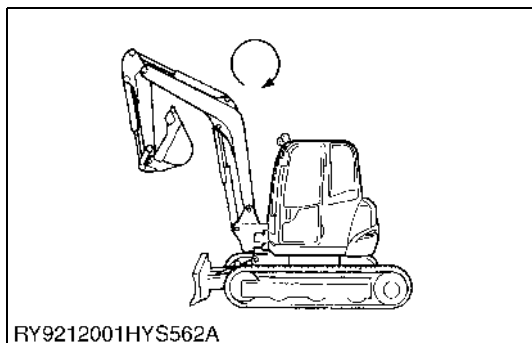**[Measurement when turning]**

1. Position each of the switches as follows.



Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

2. The position for measurement should be with maximum extension of the boom cylinder, arm cylinder and bucket cylinder.
3. Operate the swivel lever with full stroke and while maintaining a uniform swivel speed, measure the drain volume coming from the test hose in 1 minute.
4. Measure the drain volume 3 times each left and right, determine the average and take that as the measured value.

RY9212148HYS0343US0

(2) Measuring Swivel Block Performance**Purpose**

- Measure how much the machine slips on sloping ground to assess the performance of the swivel parking brake.

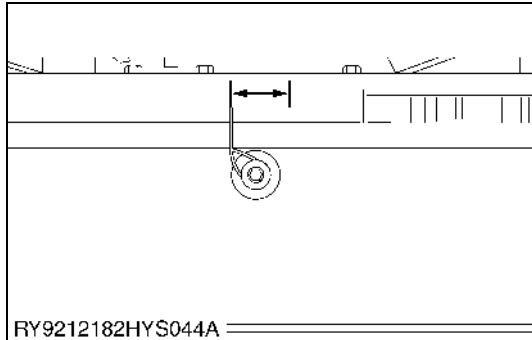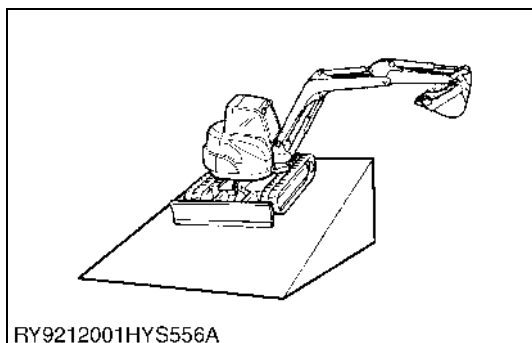**[Measurement preparation]**

1. Repeat swivel left and right operations to sufficiently warm up the swivel motor.

Hydraulic oil temperature	$50 \pm 5^{\circ}\text{C}$ ($122 \pm 9^{\circ}\text{F}$)

2. Place dirt or a weight of the specified weight (JIS heap x specific gravity 1.8) in the bucket.

Specified weight	414 kg (913 lbs)

3. Climb onto a slope of 0.35 rad (20 °) but whose surface is even and swivel the machine so the top is at 1.6 rad (90 °) to the slope.
4. The front position should be with the arm cylinder fully compressed and bucket cylinder fully extended, keeping the boom base pin and the arm end pin at the same height.
5. Place marks on the circumference of the swivel bearing and the track frame.

**CAUTION**

- Before commencing measurement, make sure there are no persons or obstacles within the swivel range.

[Measurement]

1. Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Idling	P mode	OFF	OFF


2. Start the engine, release the safety lock lever (lower) and after 1 minute, measure any deviation between the marks on the swivel bearing and the track frame.
3. Measure the swing 3 times each right/left with the engine stopped and at idle and take the average as the measured value.

RY9212148MBS0128US0

(3) Measuring Swivel Speed

Purpose

- Measure how long it takes to swivel 3 times to assess the overall performance of the swivel drive system (main and pilot lines).

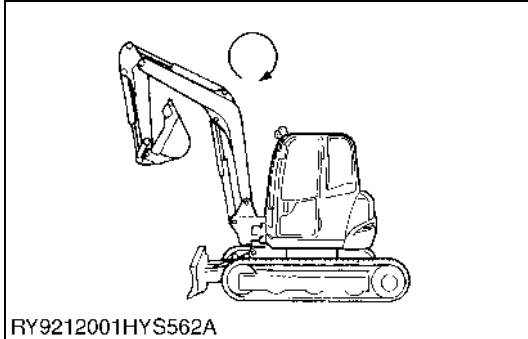

[Measurement preparation]

1. Repeat swivel left and right operations to sufficiently warm up the swivel motor.

Hydraulic oil temperature	50 ± 5 °C (122 ± 9 °F)

2. The position for measurement should be with maximum extension of the boom cylinder, arm cylinder and bucket cylinder.



CAUTION

- Before commencing measurement, make sure there are no persons or obstacles within the swivel range.

[Measurement]

1. Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

2. Operate the swivel control lever at full stroke, and once it reaches a uniform speed, measure the time taken for three turns of the swivel unit.
3. Take three measurements each swiveling left and right, determine the average and take that as the measured value.

RY9212148MBS0130US0

[7] MEASURING TRAVEL PERFORMANCE

(1) Measuring Travel Motor Drain Volume


Purpose

- Measuring the drain volume when operating and when locked allows an assessment of the travel motor performance.
- Travel motor performance is used along with travel block performance, travel speed and travel drift to make a comprehensive assessment.


RY9212148HYS0344US0



RY9212032HYS035A

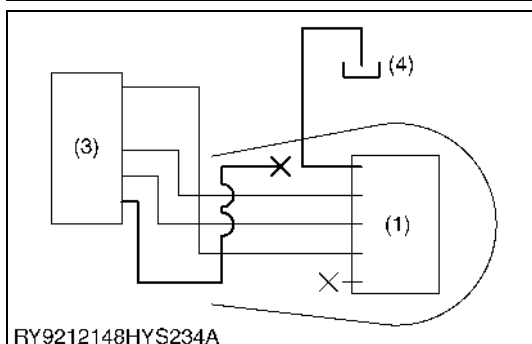

RY9212148HYS234A

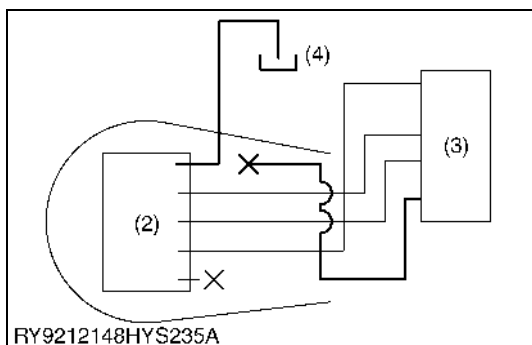

RY9212148HYS235A

[Measurement preparations]

1. Repeat left and right travel operations to sufficiently warm up the travel motor.
 - Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).
2. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
3. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic lines.
4. Use a vacuum pump and disconnect the travel motor's drain hose from the travel motor side, and insert a plug in the disconnected hose.
5. Connect a test hose to the travel motor drain port and remove the vacuum pump.
6. Start the engine and jack up the machine.



CAUTION

- Place safety blocks and supports under the jacked up machine to prevent it from dropping.
- When working near rotating parts, take care not to get your gloves/clothes caught in them.

- (1) Right Travel Motor
(2) Left Travel Motor

- (3) Swivel Joint
(4) Graduated Cylinder

RY9212148HYS0345US0

[Measurement when turning]

1. Position each of the switches as follows.

Travel speed switch	Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
1st	Max RPM	P mode	OFF	OFF
2nd	Max RPM	P mode	OFF	OFF

2. Operate the travel lever on the side to be measured full stroke and while maintaining a uniform travel speed, measure the drain volume coming from the test hose in 1 minute.
3. Measure the drain volume 3 times each in 1st and 2nd speeds, determine the average and take that as the measured value.

[Measurement when locked]

1. Position each of the switches as follows.

Travel speed switch	Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
1st	Max RPM	P mode	OFF	OFF
2nd	Max RPM	P mode	OFF	OFF

2. Lock the travel, slowly operate the travel lever forwards and backwards full stroke and measure the drain volume from the test hose in 1 minute.
3. Measure the drain volume 3 times each in 1st and 2nd speeds, determine the average and take that as the measured value.


■ IMPORTANT

- The drain volume can vary greatly depending on the position of the internal parts (pistons and barrel), so adjust the motor position and take the measurement where it drains the least.

RY9212148HYS0379US0

(2) Measuring Travel Block Performance**Purpose**

- Measure how much the machine slips on sloping ground to assess the performance of the parking brake.

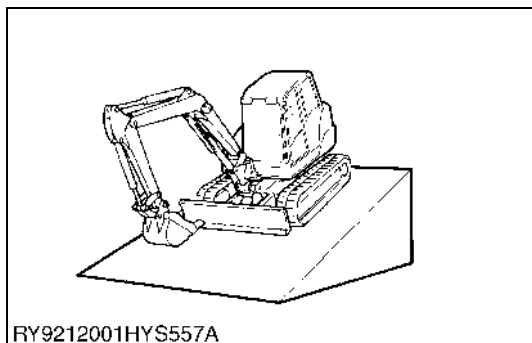

RY9212001HYS557A

[Measurement preparation]

1. Repeat left and right travel operations to sufficiently warm up the travel motor.


Hydraulic oil temperature	$50 \pm 5^{\circ}\text{C}$ ($122 \pm 9^{\circ}\text{F}$)

2. Climb onto a slope of 0.35 rad (20°) but whose surface is even.
3. Stop the machine on the slope, and set the front to travel position.

[Measurement]

1. Place the travel lever in neutral and stop the engine.
2. Make marks in the track frame and crawler, and measure the slippage after ten minutes.

RY9212148MBS0134US0

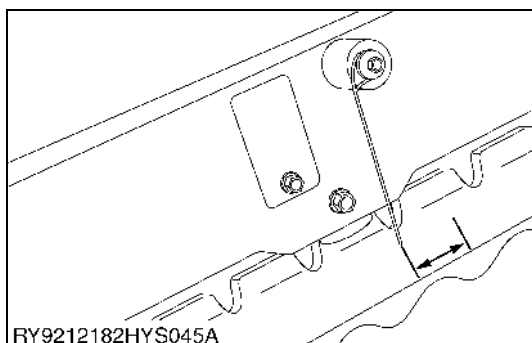


RY9212182HYS045A

(3) Measuring Travel Speed

Purpose

- Measure how long it takes to travel a distance to assess the overall performance of the travel drive system (main and pilot lines).

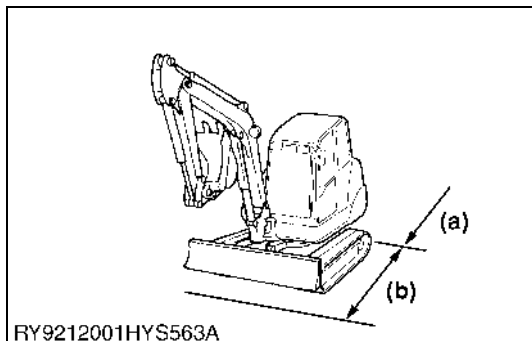

[Measurement preparation]

- Adjust the left and right crawlers to their specified dimensions and operate the travel motor to thoroughly warm it up.

Hydraulic oil temperature	$50 \pm 5^{\circ}\text{C}$ ($122 \pm 9^{\circ}\text{F}$)

- Set a level course on flat, hard ground of 10 m (390 in.) for the measurement with a run up course of 5.0 m (200 in.).
- Measure travel performance in the travel position.

[Measurement]

- Position each of the switches as follows.

No.	Travel 2-speed switch	Accelerator dial	Eco mode switch	Auto-idling switch	AC switch
1	1st	Max RPM	P mode	OFF	OFF
2	2nd	Max RPM	P mode	OFF	OFF

- Measure travel speed forwards/backwards three times each in 1st and 2nd and take the average as the measured value.

(a) Run-up 5.0 m (200 in.)


(b) Measurement distance 10 m (390 in.)

RY9212148MBS0136US0

(4) Measuring Travel Drift

Purpose

- Measure travel drift to assess left/right balance in the travel drive system (main and pilot lines).

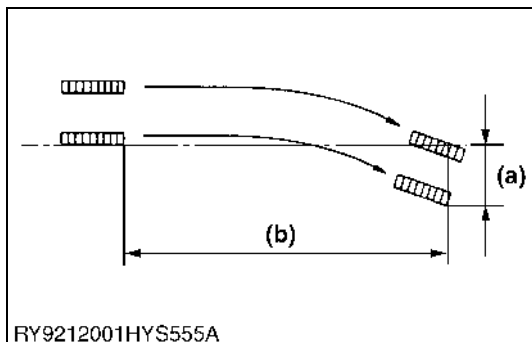

[Measurement preparation]

- Adjust the left and right crawlers to their specified dimensions and operate the travel motor to thoroughly warm it up.

Hydraulic oil temperature	$50 \pm 5^{\circ}\text{C}$ ($122 \pm 9^{\circ}\text{F}$)

- Determine a 10 m (390 in.) travel course on hard, flat ground, and put the machine in travel position for the measurement.

[Measurement]

- Position each of the switches as follows.

No.	Travel 2-speed switch	Accelerator dial	Eco mode switch	Auto-idling switch	AC switch
1	1st	Max RPM	P mode	OFF	OFF
2	2nd	Max RPM	P mode	OFF	OFF

- Measure travel drift forwards/backwards three times each in 1st and 2nd and take the average as the measured value.

(a) Drift

(b) 10 m (390 in.)

RY9212148MBS0138US0

[8] MEASURING CYLINDER SPEED

(1) Measuring Hydraulic Cylinder Operating Time

Purpose

- Measure the amount of time it takes to operate each of the hydraulic cylinders to assess the overall performance of the front drive system (main and pilot lines).

RY9212148MBS0114US0

Measurement preparation

- Stop the machine on hard, level ground.
- Repeat front operations and fully warm up each cylinder.
 - Hydraulic oil temperature of 50 ± 5 °C (122 ± 9 °F).

RY9212148MBS0115US0


Measurement

- Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

- Measure the speed of each cylinder three times and take the average as the measured value.
- Make the measurements for each cylinder in the position given below.


RY9212148MBS0116US0

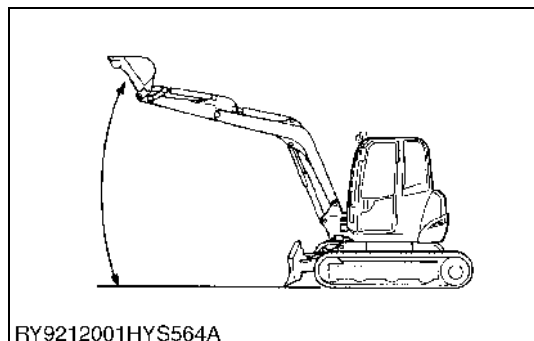

Boom Cylinder

- Arm and bucket cylinder fully compressed.
- Operate the boom control lever at full stroke and measure the time it takes the boom to go from having the bucket on the ground to the maximum lift position.
 - Do not include cushion operating time.**


RY9212148MBS0117US0

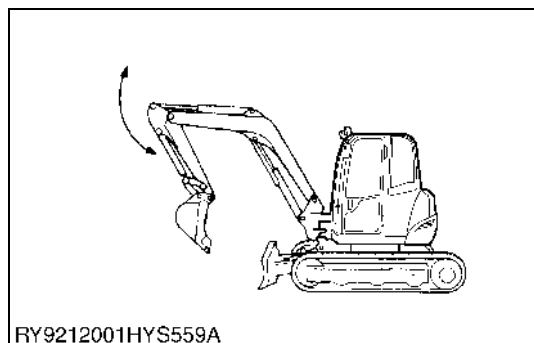

Arm Cylinder

- Boom cylinder fully extended and bucket cylinder fully compressed.
- Operate the arm control lever at full stroke and measure the time it takes the arm to go full stroke from dump to crowd.
 - Do not include cushion operating time.**


RY9212148MBS0118US0

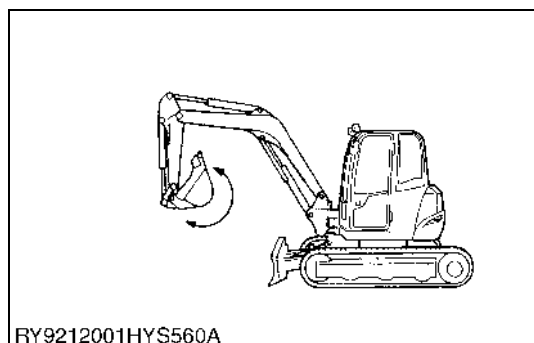

Bucket Cylinder

- Adjust the arm and the boom to positions in which the bucket will not hit the machine when the bucket is operated through its full stroke.
- Operate the bucket control lever at full stroke and measure the time it takes the bucket to go full stroke from dump to crowd.

RY9212148MBS0119US0

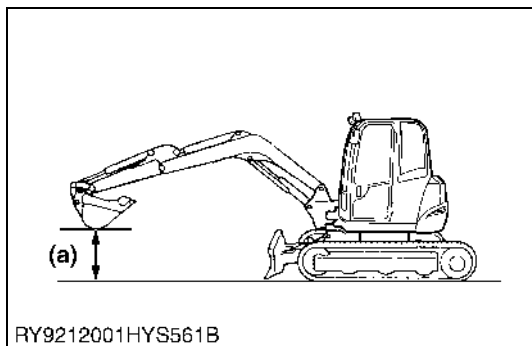


Swing cylinder

1. Arm cylinder fully compressed, bucket cylinder fully extended, and bucket bottom approximately 1.0 m (40 in.) above ground level.
2. Operate the swing pedal full stroke and measure how long it takes to swing full stroke to the right and to the left.

(a) 1.0 m (40 in.)


RY9212148MBS0120US0

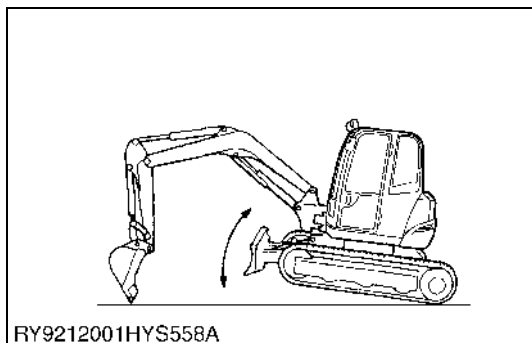

Blade cylinder

1. Jack up the machine with the front to ensure the blade can move through its entire stroke top to bottom.
2. Operate the blade control lever full stroke and measure the time it takes the blade to go full stroke up and down.

RY9212148MBS0121US0

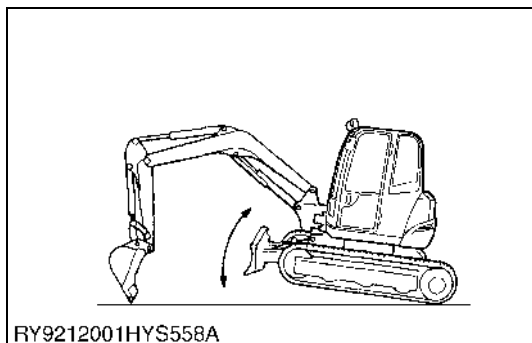

Angle Cylinder (Excavators with Angle Specification)

1. Jack up the machine with the front.
2. Operate the angle control switch full stroke and measure the time it takes the arm to go full stroke angle right and angle left.




RY9212158MBS0005US0

(2) Measuring Hydraulic Cylinder Drift

Purpose

- Measure how far a cylinder drops to assess leakage inside the cylinder, control valve and/or holding valve.
- When measuring a cylinder that has just been replaced, insure to purge any air prior to taking the measurements. Slowly operate the cylinder repeatedly to end stroke and full retraction.

RY9212148MBS0124US0

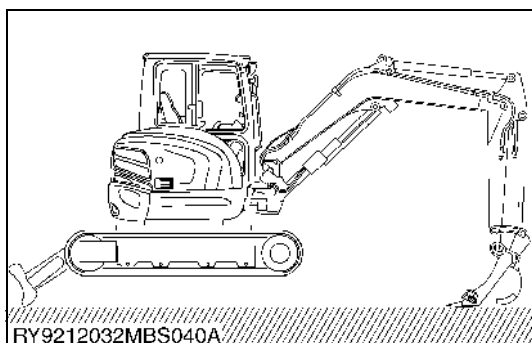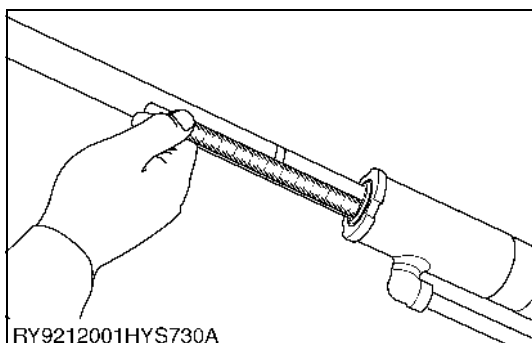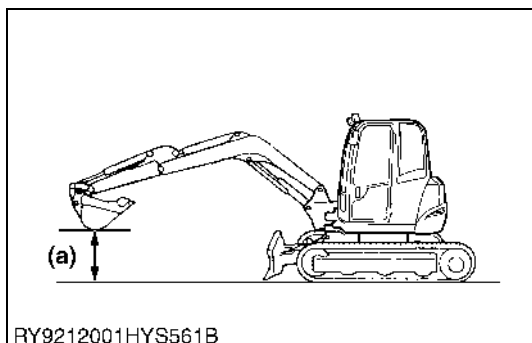

Measuring drift of the boom, arm and bucket cylinders

[Measurement preparation]

1. Repeat front operations and fully warm up each cylinder.

Hydraulic oil temperature	50 ± 5 °C (122 ± 9 °F)

2. Place dirt or a weight of the specified weight (JIS heap x specific gravity 1.8) in the bucket and position the machine on flat, hard ground.

Specified weight	414 kg (913 lbs)

3. Arm cylinder fully compressed, bucket cylinder fully extended, and bucket bottom approximately 1.0 m (40 in.) above ground level. Note that the arm cylinder should return about 50 mm (2.0 in.) from the stroke end, and be outside the cushion range.

[Measurement]

1. Stop the engine, and place marks on the boom, arm and bucket cylinder rods.
2. After ten minutes has elapsed, measure the boom cylinder compression, arm cylinder extension and bucket cylinder compression.

(a) 1.0 m (40 in.)

RY9212148MBS0125US0

Measuring blade cylinder drift

[Measurement preparation]

1. Repeat blade operations and fully warm up the cylinders.

Hydraulic oil temperature	50 ± 5 °C (122 ± 9 °F)

2. Use the blade and front to jack up the machine so blade cylinder is fully extended, the arm is perpendicular to the ground and the excavator is level.

[Measurement]

1. Stop the engine and mark the rod of the blade cylinder.
2. After 10 minutes, measure how much the blade cylinder is compressed.



CAUTION


- Never allow your feet or any body part to be under the machine when it is jacked up.

RY9212148MBS0126US0


(3) Measuring Swing Cylinder Deviation

Purpose


- Measure how far the cylinder deviates to assess leakage inside the cylinder and/or control valve.
- When measuring a cylinder that has just been replaced, insure to purge any air prior to taking the measurements. Slowly operate the cylinder repeatedly to end stroke and full retraction.

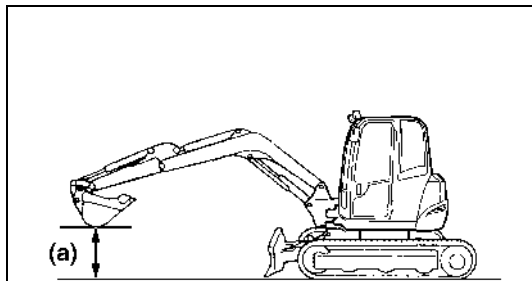

RY9212001HYS561B

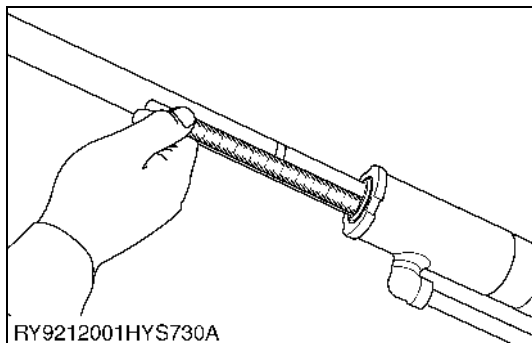

RY9212001HYS730A

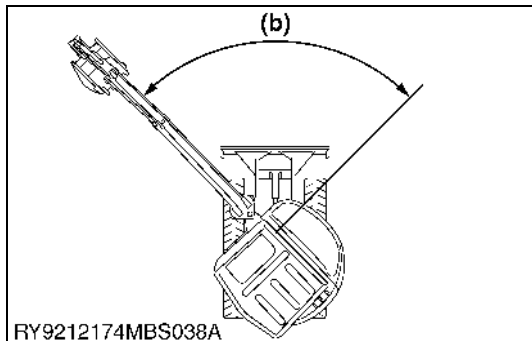

RY9212174MBS038A

[Measurement preparation]

1. Repeat swing operations through their full stroke and fully warm up the cylinders.

Hydraulic oil temperature	50 ± 5 °C (122 ± 9 °F)

2. Place dirt or a weight of the specified weight (JIS heap x specific gravity 1.8) in the bucket and position the machine on flat, hard ground.

Specified weight	414 kg (913 lbs)

3. Arm cylinder fully compressed, bucket cylinder fully extended, and bucket bottom approximately 1.0 m (40 in.) above ground level.
4. Put the arm in its central swing position and then swing it back and forth 5 times and stop.

[Measurement]

1. Stop the engine and mark the rod of the swing cylinder.
2. Position each of the switches as follows.

Accelerator dial	Eco mode switch	Auto-idle switch	AC switch
Max RPM	P mode	OFF	OFF

3. Swing the front through 1.6 rad (90 °) and stop 100 times and then measure the deviation.

■ **IMPORTANT**

- **When you stop after swinging the front, let the wobbling of the front stabilize and then perform the following operation.**

(a) 1.0 m (40 in.)


(b) 1.6 rad (90 °)

RY9212148MBS0144US0

13. HYDRAULIC DEVICE PERFORMANCE STANDARDS

[1] FLOW RATE

(1) Main Pump Discharge Flow Rate Data (Measured Values)

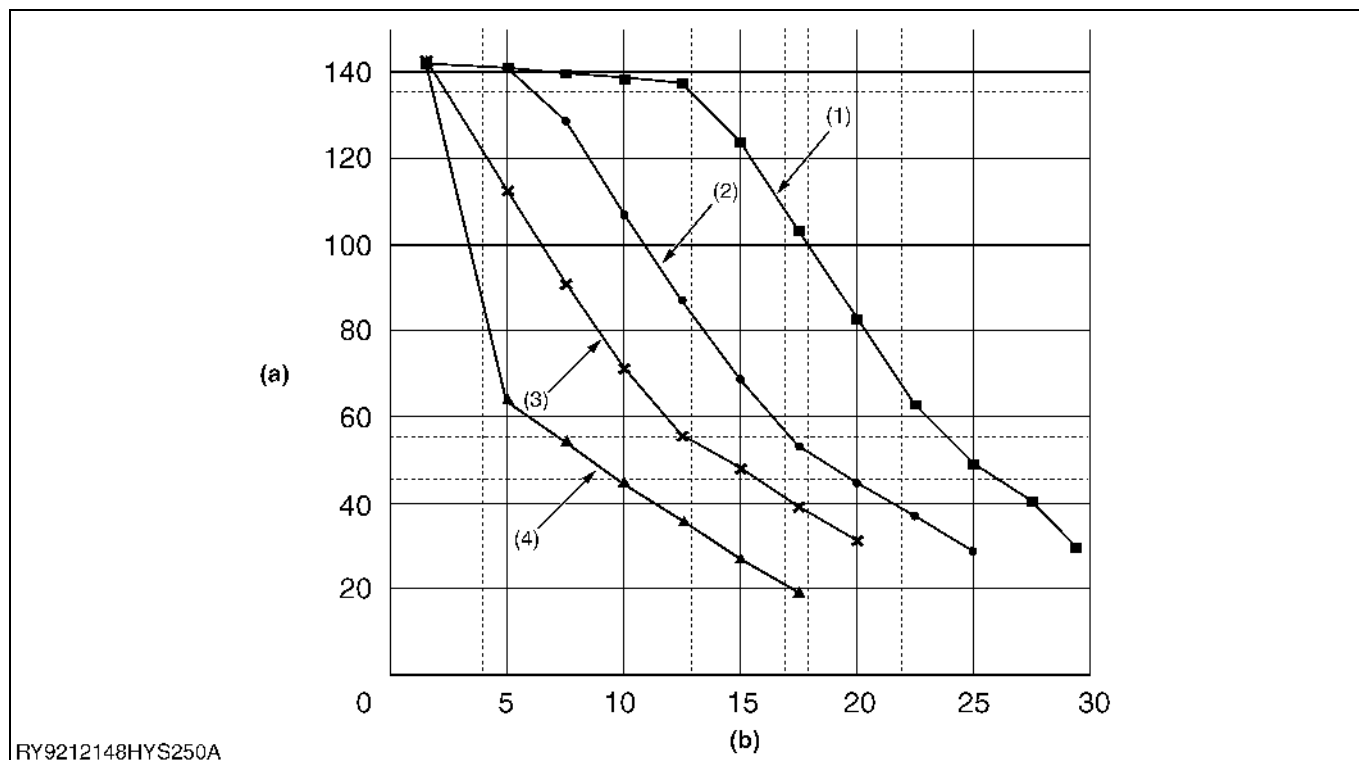

(1) P Mode ($P_i = 3.6$ MPa,
37 kgf/cm², 522 psi),
P3 = 2 MPa

(2) E Mode ($P_i = 0$ MPa,
0 kgf/cm², 0 psi), P3 = 2 MPa

(3) P Mode ($P_3 = 20.6$ MPa)
(4) E Mode ($P_3 = 20.6$ MPa)

(a) Flow Rate L/min
(b) Pressure (MPa)



CAUTION

- Measured values may vary depending on the machine.
- This data is of values converted to the rated RPM.
- The usage limit is 80% of the discharge volume.

(To be continued)


(Continued)

Pressure	MPa kgf/cm ² psi	1.5 15.3 217.96	5.0 51.0 725.5	7.5 76.5 1087.8	10.0 102.0 1450.4	12.5 127.5 1813.0	15.0 153.0 2175.6
P mode	L/min U.S.gals	142.0 37.5	141.1 37.3	139.8 36.9	138.6 36.6	137.6 36.6	123.9 32.7
E mode		142.0 37.5	141.0 37.3	128.6 34.0	107.2 28.3	87.1 23.0	68.6 18.1
P mode (P3 relief)		142.9 37.7	112.7 29.8	90.9 24.0	71.4 18.9	55.7 14.7	48.1 12.7
E mode (P3 relief)		142.8 37.7	63.7 16.8	54.3 14.3	44.6 11.8	35.9 9.5	27.3 7.2

Pressure	MPa kgf/cm ² psi	17.5 178.5 2538.2	20.0 203.9 2900.8	22.5 229.4 3263.3	25.0 255.0 3630.0	27.5 280.0 3990.0	29.4 300.0 4260.0
P mode	L/min U.S.gals	103.4 27.3	82.9 21.9	63.0 16.6	49.2 13.0	40.5 10.7	29.9 7.9
E mode		53.4 14.1	44.8 11.8	37.2 9.8	28.6 7.6	—	—
P mode (P3 relief)		39.3 10.4	31.4 8.3	—	—	—	—
E mode (P3 relief)		19.5 5.1	—	—	—	—	—

RY9212148HYS0370US0

(2) Flow Rate Data for AUX Proportional Control (Measured Values)

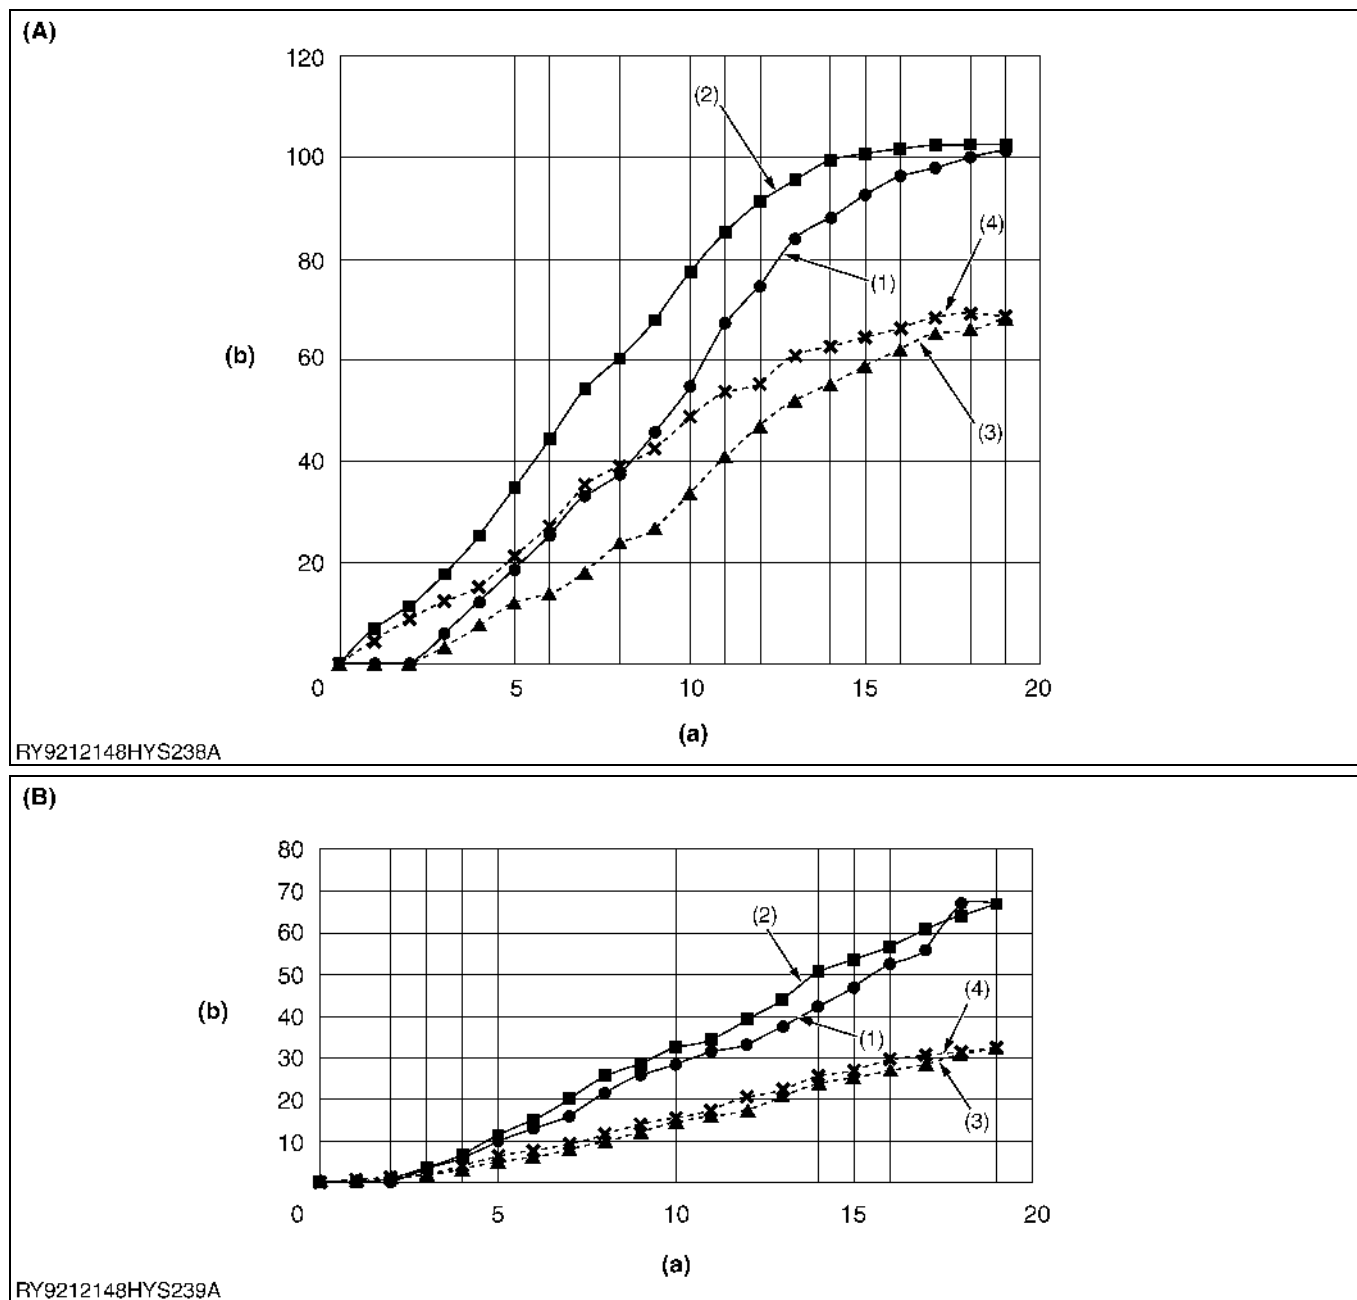

(1) Left (Max)
(2) Right (Max)

(1) Left (Idle)
(2) Right (Idle)

(A) AUX1
(B) AUX2

(a) Max Flow Setting
(Limit Value)
(b) Flow Volume L/min

The relationship between pressure P, flow Q and lever knob operation (limit value) changes proportionally as shown in the figures above.





CAUTION

- Measured values may vary with the machine.

RY9212148HYS0313US0

(3) AUX Discharge Flow Rate Data (Measured Values)

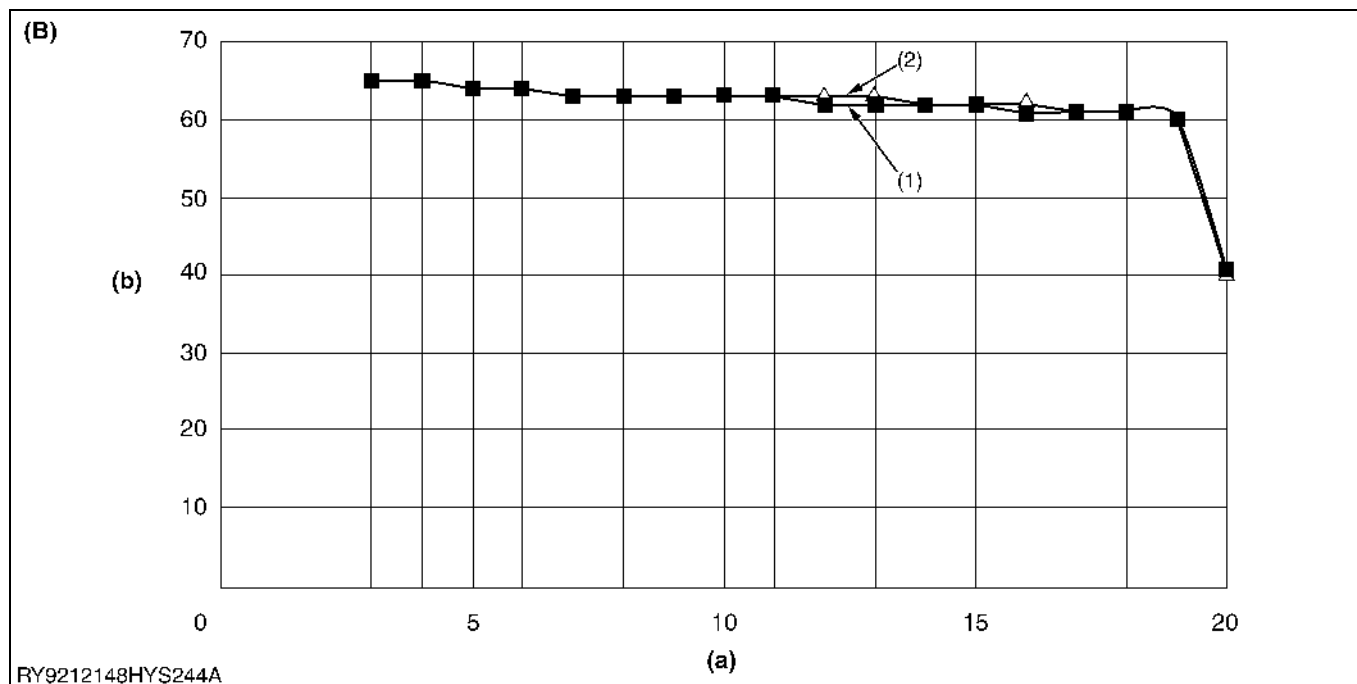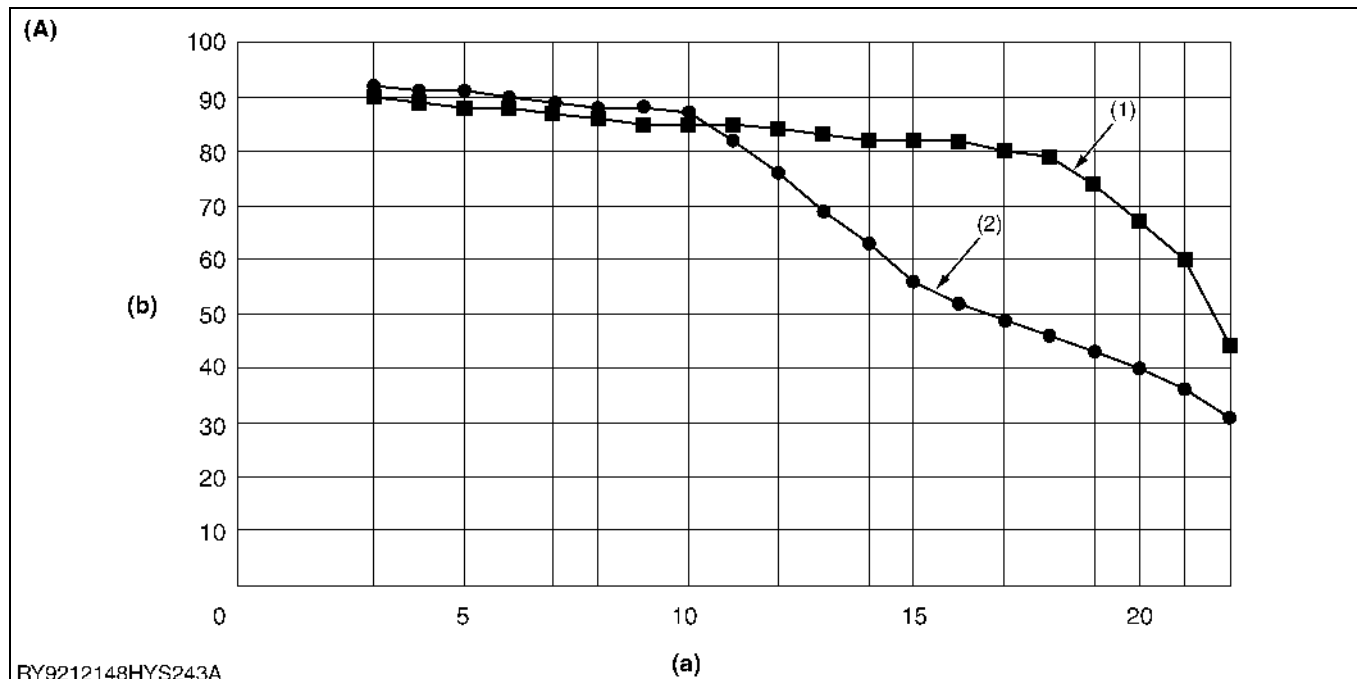

- (1) P Mode
(2) E Mode

- (a) Pressure (MPa)
(b) Flow Rate L/min

- (A) AUX1
(B) AUX2



CAUTION

- Measured values may vary depending on the machine.
- This measurement data is of the values set for the max discharge flow rate. (limit=max)

RY9212148HYS0353US0

[2] RELIEF PRESSURE (MEASURED VALUES)

Item			Notes
Travel right main pressure (aTR)		30.0 ± 0.5 MPa 306 ± 5 kgf/cm ² 4351 ± 73 psi	
Travel left main pressure (aTL)			
Main LS pressure (aLS)		27.5 ± 0.5 MPa 281 ± 5 kgf/cm ² 3989 ± 73 psi	
Main P3 pressure (aP3)		21.5 ± 0.5 MPa 219 ± 5 kgf/cm ² 3118 ± 73 psi	
Unload LS valve pressure (aUN)		2.9 ± 0.2 MPa 30 ± 2 kgf/cm ² 420 ± 29 psi	
Pilot primary pressure (aPP)		4.2 ± 0.2 MPa 43 ± 2 kgf/cm ² 610 ± 29 psi	
EP proportional solenoid pressure	P mode	3.6 ± 0.2 MPa 37 ± 2 kgf/cm ² 522 ± 29 psi	
	P mode (AC ON)	2.8 ± 0.2 MPa 28.6 ± 2 kgf/cm ² 406 ± 29 psi	Compressor: ON
	E mode	0 MPa 0 kgf/cm ² 0 psi	
	E mode (during operation)	1.6 ± 0.2 MPa 16.3 ± 2 kgf/cm ² 232 ± 29 psi	
Boom	Bottom (b1B)	31.4 ± 1.0 MPa 320 ± 10 kgf/cm ² 4554 ± 145 psi	
	Rod (b1R)		
Arm	Bottom (b2B)	30.4 ± 1.0 MPa 310 ± 10 kgf/cm ² 4409 ± 145 psi	
	Rod (b2R)	31.4 ± 1.0 MPa 320 ± 10 kgf/cm ² 4554 ± 145 psi	
Bucket	Bottom (b3B)	31.4 ± 1.0 MPa 320 ± 10 kgf/cm ² 4554 ± 145 psi	
	Rod (b3R)		
Blade	Bottom (b4B)	27.4 ± 1.0 MPa 279 ± 10 kgf/cm ² 3974 ± 145 psi	
	Rod (b4R)	19.5 ± 1.0 MPa 200 ± 10 kgf/cm ² 2830 ± 145 psi	Measurement location: P3 pressure test port

Item			Notes
AUX1	Left (b6L)	22.5 ± 1.0 MPa 230 ± 10 kgf/cm ² 3260 ± 145 psi	Measurement location: P1, P2 pressure test ports
	Right (b6R)		
Angle	Bottom (b8B)	22.5 ± 1.0 MPa 230 ± 10 kgf/cm ² 3260 ± 145 psi	
	Rod (b8R)	31.4 ± 1.0 MPa 320 ± 10 kgf/cm ² 4554 ± 145 psi	

RY9212158HYS0103US0

[3] SWIVEL PERFORMANCE

Item			Notes
Swivel motor drain volume	When turning	315 ml/min 19.22 cu.in./min	Measured eference value for new machines.
Swivel block performance	When stopped	≤43.2 mm ≤1.70 in.	
	At idle	≤43.2 mm ≤1.70 in.	
Swivel speed	3 revs	17.1 to 20.9 sec	

RY9212148HYS0348US0

[4] TRAVEL PERFORMANCE

Item				Notes
Travel motor	When turning (1st spd.)		75 ml/min 4.58 cu.in./min	Measured eference value for new machines.
	When locked (1st spd.)		300 ml/min 18.31 cu.in./min	
	When turning (2nd spd.)		260 ml/min 15.87 cu.in./min	
	When locked (2nd spd.)		330 ml/min 20.14 cu.in./min	
Travel block performance			0 mm 0 in.	
Travel speed	Rubber	1st	12.0 to 15.0 sec	
		2nd	6.9 to 8.6 sec	
	Steel	1st	12.9 to 16.4 sec	
		2nd	7.2 to 9.0 sec	
Amount of travel drift			≤600 mm ≤23.6 in.	

RY9212148HYS0380US0

[5] CYLINDER SPEED

Item				Notes
Hydraulic cylinder operating time	Boom	Ground to max lift	3.1 ± 0.3 sec	
		Max lift to ground	3.4 ± 0.3 sec	
	Arm	Crowd	3.4 ± 0.3 sec	
		Dump	3.2 ± 0.3 sec	
	Bucket	Crowd	3.1 ± 0.3 sec	
		Dump	2.2 ± 0.3 sec	
	Swing	Left	7.5 ± 0.7 sec	
		Right	7.7 ± 0.7 sec	
	Blade	Max down to Max up	2.3 ± 0.3 sec	
		Max up to Max down	3.0 ± 0.3 sec	
Angle (Angle spec.)	Left	2.1 ± 0.3 sec		
	Right	2.3 ± 0.3 sec		
Hydraulic cylinder drift	Boom	Factory spec. when new	≤ 20.0 mm ≤ 0.79 in.	
		Usage limit	≤ 100.0 mm ≤ 3.94 in.	
	Arm	Factory spec. when new	≤ 20.0 mm ≤ 0.79 in.	
		Usage limit	≤ 100.0 mm ≤ 3.94 in.	
	Bucket	Factory spec. when new	≤ 10.0 mm ≤ 0.39 in.	
		Usage limit	≤ 50.0 mm ≤ 1.97 in.	
	Blade	Factory spec. when new	≤ 20.0 mm ≤ 0.79 in.	
		Usage limit	≤ 100.0 mm ≤ 3.94 in.	
Swing cylinder deviation		Factory spec. when new	≤ 10.0 mm ≤ 0.39 in.	
		Usage limit	≤ 50.0 mm ≤ 1.97 in.	

RY9212158HYS0110US0

14. TROUBLESHOOTING

[1] TROUBLESHOOTING ALL ACTUATORS

When all actuators are slow or fail to work

- Likely to be a problem in the pilot system and/or with the engine.
- Check for problems in hydraulic oil level and/or quality.

No.	Cause	Remedy	Notes
1	Low engine RPM	• Check the engine RPM • Inspect fuel lines and air intake lines • Test the accelerator dial • Meter panel settings	
2	Faulty limit switch	• Check the operation of the limit switch Move the unload lever up/down and check for continuity in the tester mode. (when locked: OFF, when released: ON)	
3	Faulty unload valve	• Check unload valve operation 1. Disconnect the unload valve connector and test for continuity. 2. Check for damage to the spool.	
4	Pilot primary pressure relief valve (aPP) faulty	• Measure pilot primary pressure 1. Disassemble, clean and adjust or replace the relief valve	
5	Pump fitting Connector faulty	• Replace pump connector	
6	Pump drive shaft damaged	• Replace shaft	

RY9212148HYS0354US0

[2] TROUBLESHOOTING FRONT SYSTEMS

When just certain cylinder(s) fail to work, are slow or jerky

- Identify whether the fault is in the main system or the pilot system.
- If a circuit lacks power, test the pressure of the corresponding main relief valve or the overload relief valve.

No.	Cause	Remedy	Notes
1	Defective pilot valve	• Measure the pilot secondary pressure	
2	• Leak inside a cylinder • Leak inside a control valve	• Measure the hydraulic drift If hydraulic drift is outside of factory specs, take the following steps. 1. Exchange hoses with a normally operating section (on control valve side). 2. Test the hydraulic drift again. [Assessment] Within factory specs: control valve and/or overload relief valve faulty Outside specs: replace cylinder seals	
3	Overload relief valve faulty	• Diagnose the overload relief valve Temporarily replace with a known good overload relief valve and determine whether faulty or not.	
4	Main spool inside control valve sticking or damaged	• Inspect the main spool or replace the valve 1. Take the main spool out of the control valve and clean it. 2. After applying hydraulic oil, check whether it slides properly and return to the control valve.	
5	Pressure compensation valve sticking	• Inspect the pressure compensation valve 1. Take the pressure compensation valve out of the control valve and clean it. 2. After applying hydraulic oil, check whether it slides properly and return to the control valve.	

RY9212148HYS0355US0

Boom operation slow or jerky

No.	Cause	Remedy	Notes
1	Anti-drop check valve sticking or damaged	- Inspect the anti-drop check valve - Remove the anti-drop check valve from the control valve. - Check the inside and inspect for abnormalities.	
2	Shockless valve faulty	Clean or replace the shockless valve	
3	P3 bypass spool sticking	- Clean the spool - Replace the valve	

RY9212158HYS0109US0

Arm operation slow or jerky

No.	Cause	Remedy	Notes
1	Arm regenerative valve faulty	- Inspect the arm regenerative valve - Take the spool out of the control valve and clean it. - Check the inside and inspect for abnormalities.	

RY9212148HYS0357US0

Swing slow or fails to move

No.	Cause	Remedy	Notes
1	Swing external orifice faulty	Clean swing external orifice If same thing happens: problem with anti-void and/or shut-off valves	

RY9212148HYS0358US0

Swing extends or contracts

No.	Cause	Remedy	Notes
1	Anti-void faulty - Seat NG: extends - Suction NG: makes it sway	Disassemble and clean or replace the anti-void valve	

RY9212148HYS0359US0

When lever operated, it goes down and then back up

No.	Cause	Remedy	Notes
1	Load check valve inside the control valve faulty	Inspect the load check valve. Remove and clean the load check valve.	

RY9212148HYS0360US0

A great deal of hydraulic drift.

No.	Cause	Remedy	Notes
1	- Leak inside a cylinder - Leak inside a control valve	- Measure the hydraulic drift If hydraulic drift is outside of factory specs, take the following steps. - Exchange hoses with a normally operating section (on control valve side). - Test the hydraulic drift again. [Assessment] Within factory specs: control valve and/or overload relief valve faulty Outside specs: cylinder seals faulty	
2	Overload relief valve faulty	Diagnose the overload relief valve Temporarily replace with a known good overload relief valve and determine whether faulty or not.	

RY9212148HYS0361US0

Slow during multiple operations

No.	Cause	Remedy	Notes
1	Seat of unload LS valve (aUN) faulty	- Measure unload LS valve pressure 1. Disassemble and clean or replace the relief valve	
2	Seat of main LS valve (aLS) faulty	- Measure main LS valve pressure 1. Disassemble, clean and adjust or replace the relief valve	
3	Horsepower control valve faulty or loose	Check and adjust for loose nuts	

RY9212148HYS0362US0

[3] TRAVEL SYSTEM TROUBLESHOOTING**Fails to travel right and left or is slow**

- It is unlikely that the right and left pilot valve, travel motor, control valves (travel section), etc. would become faulty at the same time.
- If neither right nor left will travel, it is likely a common pilot system is faulty.
- Adjust the left/right track tension and get rid of any clumps of mud.

No.	Cause	Remedy	Notes
1	Travel pilot valve filter blockage	Clean the pilot valve filter	
2	Pp2, Pp4 filters and/or orifices blocked	Clean the filters and orifices	
3	Independent travel valve's sub-spool and/or main spool sticking	- Inspect and replace the sub-spool and/or main spool 1. Take the sub-spool and/or main spool out of the control valve and clean it. 2. After applying hydraulic oil, check whether it slides properly and return to the control valve.	

RY9212148HYS0364US0

One side fails to travel, is slow or meanders

No.	Cause	Remedy	Notes
1	Defective travel pilot valve	Measure the pilot secondary pressure	
2	Travel main relief valve faulty	Temporarily swap main relief valves forwards/backwards or left right. [Assessment] If problem swaps forwards/backwards or left-right: travel main relief valve is faulty If problem is the same: the main spool is sticking or damaged or the swivel joint and/or travel motor are faulty	
3	Main spool inside control valve or travel section is sticking or damaged	Swap the left-right travel hoses on the control valve side and see if the problem changes sides too. [Assessment] If problem switches sides: main spool is sticking or damaged If problem doesn't change: swivel joint and/or travel motor are faulty	
4	Defective travel motor	Measure the drain volume [Assessment] If within factory specs: swivel joint is faulty If outside specs: travel motor is faulty	
5	Swivel joint faulty	Swap the left/right travel hoses (swivel joint to travel motor) on the swivel joint side and see if the problem changes sides too.	

RY9212148HYS0365US0

Won't switch to high-speed travel

- Check whether the travel speed switch is switching in the tester mode.

No.	Cause	Remedy	Notes
1	Faulty 2nd speed solenoid valve at unload unit	• Check 2nd speed solenoid valve operation 1. Check whether there is electricity to the unload valve. 2. Check whether the spool is switching inside.	
2	• Defective travel motor • Swivel joint faulty	• Measure the pressure at the travel motor 2-speed switch port. [Assessment] Rated pressure: travel motor faulty Below rated pressure: swivel joint faulty	

RY9212148HYS0366US0

[4] SWIVEL SYSTEM TROUBLESHOOTING**When the swivel is slow, fails to work or is jerky.**

- Identify whether the fault is in the main system or the pilot system.

No.	Cause	Remedy	Notes
1	Defective pilot valve	• Measure the pilot secondary pressure	
2	Slow return valve faulty	Clean or replace the slow return valve	
3	Timer valve sticking or damaged	Clean or replace the timer valve	
4	Swivel shuttle valve faulty	• Measure the timer valve release pressure (When swivel left/right, or at arm crowd) • Clean or replace the swivel shuttle valve	
5	Swivel relief valve faulty	• Temporarily swap the left/right swivel relief valves. [Assessment] If the problem changes sides: swivel relief valve faulty If problem is the same: the main spool is sticking or damaged or the anticavitation valve and/or swivel motor are faulty	
6	Anticavitation valve faulty	• Swap anticavitation valves [Assessment] If the problem changes sides: anticavitation valve faulty If problem is the same: the main spool is sticking or damaged or the swivel motor is faulty	
7	Swivel motor faulty	• Measure the drain volume	
8	Main spool inside control valve sticking or damaged	• Inspect the main spool or replace the valve 1. Take the main spool out of the control valve and clean it. 2. After applying hydraulic oil, check whether it slides properly and return to the control valve.	

RY9212148HYS0367US0

Swivel drifts

- Identify whether the fault is in the main system or the pilot system.

No.	Cause	Remedy	Notes
1	Slow return valve faulty	Clean or replace the slow return valve	
2	Anti-void valve faulty	Clean or replace the anti-void valve	
3	Timer valve sticking or damaged	Clean or replace the timer valve	
4	Pilot valve spool damaged	Check that the pilot valve spool returns to neutral.	
5	Swivel relief valve faulty	Temporarily swap the left/right swivel relief valves. [Assessment] If the problem changes sides: swivel relief valve faulty If problem is the same: the main spool is sticking or damaged or the anticavitation valve and/or swivel motor are faulty	
6	Anticavitation valve faulty	Clean or replace the anticavitation valve [Assessment] If problem is not resolved: the main spool is sticking or damaged or the swivel motor is faulty	
7	Swivel motor faulty	Measure the drain volume	
8	Main spool inside control valve sticking or damaged	Inspect the main spool or replace the valve 1. Take the main spool out of the control valve and clean it. 2. After applying hydraulic oil, check whether it slides properly and return to the control valve.	

RY9212148HYS0368US0

[5] TROUBLESHOOTING MULTIPLE OPERATIONS**Front fails to operate during multiple operations or while traveling**

No.	Cause	Remedy	Notes
1	- Communication valve sub-spool sticking - Communication valve main spool sticking	Inspect the sub and main spools or replace the valve 1. Take the spool out of the control valve and clean it. 2. After applying hydraulic oil, check whether it slides properly and return to the control valve.	

RY9212148HYS0369US0

4 ELECTRICAL SYSTEM

SERVICING

CONTENTS


1.	LAYOUT OF ELECTRICAL DEVICES AND WIRING ROUTING	4-S1
[1]	PRECAUTIONS ON HOW TO CLAMP THE ELECTRICAL WIRING	4-S1
[2]	PRECAUTIONS ON HANDLING ELECTRICAL CONNECTORS	4-S1
[3]	LAYOUT AND WIRING ROUTING	4-S3
2.	METER PANEL OPERATION	4-S10
[1]	NAMES AND FUNCTIONS OF METERS	4-S10
[2]	USER SETTINGS MODE	4-S10
	(1) Log Record	4-S11
	(2) Periodic Check	4-S11
	(3) Set Clock	4-S12
	(4) Set AUX Flow Ctrl.	4-S12
	(5) Various Settings	4-S13
	(6) Language Setting	4-S13
[3]	SERVICE DEALER SETTING	4-S13
	(1) Crane Mode	4-S13
	(2) Arm Control Mode (Only on Japan Spec.)	4-S13
[4]	SERVICE/DEALER MODE	4-S14
	(1) Diagnosis	4-S16
	(2) Setting	4-S21
[5]	SETTINGS WHEN REPLACING ELECTRONIC DEVICES	4-S34
	(1) When Replacing the Meter or Main ECU	4-S34
	(2) When the Battery is Removed	4-S34
[6]	TABLE OF METER PANEL MESSAGES AND ERROR HISTORY LIST	4-S35
	(1) Red Warning Lamp Lit.	4-S35
	(2) Yellow Warning Lamp Lit.	4-S37
	(3) Other Screens	4-S38
	(4) PM Clog Level and the State of the Machine	4-S40
	(5) Table of Engine System Error Numbers	4-S43
3.	INSPECTIONS	4-S44
[1]	POWER AND GROUND	4-S44
[2]	STARTING AND STOPPING DEVICE	4-S47
[3]	RELAY LAYOUT	4-S48
4.	TROUBLESHOOTING (START-UP EQUIPMENT VERSION)	4-S50
5.	METHODS FOR DIAGNOSING ERRORS	4-S51
[1]	GUIDE TO DIAGNOSING ERRORS	4-S51
[2]	ERROR DIAGNOSIS PROCEDURE	4-S51
[3]	TESTING WITH A CIRCUIT TESTER	4-S52
6.	TROUBLESHOOTING (METER PANEL VERSION)	4-S53
[1]	MACHINE RELATED SYSTEM	4-S53
	(1) Engine Oil Pressure Errors	4-S53
	(2) Charging System Errors	4-S56
	(3) Fuel Sensor Errors	4-S60
[2]	FRONT-END SYSTEMS	4-S63
	(1) Lever Lock System Errors	4-S63
	(2) Travel 2-Speed System Error	4-S67
	(3) Angle System Errors	4-S71
[3]	AUTO IDLING (AI) SYSTEM	4-S74
	(1) AI System Errors	4-S74
	(2) Testing the AI Pressure Switch	4-S77

(3) Testing the AI Switch	4-S80
[4] ANTI-THEFT (AT) SYSTEM	4-S83
(1) Anti-Theft System Errors	4-S83
[5] POWER SUPPLY SYSTEM	4-S86
(1) Over Voltage	4-S86
(2) 5 V Short System Error.....	4-S87
[6] COMMUNICATION SYSTEM.....	4-S88
(1) CAN Communication Errors	4-S88
[7] AUX SYSTEM.....	4-S94
(1) AUX1 / AUX2 (Thumb) System Errors.....	4-S94
[8] ECO MODE SYSTEM	4-S100
(1) EP System Errors	4-S100

1. LAYOUT OF ELECTRICAL DEVICES AND WIRING ROUTING

[1] PRECAUTIONS ON HOW TO CLAMP THE ELECTRICAL WIRING

1. Do not touch the wiring or the area around it.
Do not touch where uncovered.
2. Do not clamp to fuel hoses.
3. Connect connectors and terminals securely so they do not come unplugged when pulled on gently.
4. Be sure to clamp the harness at the clamp position.
5. Clamps for securing harnesses

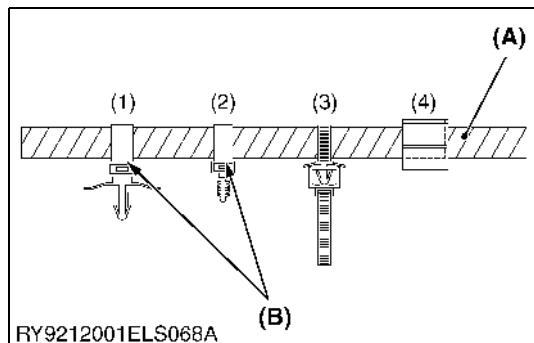

- (1) Anchor Type
(Insert Firmly Until it Catches.)
- (2) Screw Type
(Insert to the End of the Screw.)
- (3) and (4) Insert Type : Insert Until it Locks.

- (A) Harness
- (B) Clamp the Harness so It Stays in Position and Does Not Move.
Insert the End of the Cable Tie Into the Hole on the Other Side to Clamp the Harness.

RY9212001ELS0025US0


[2] PRECAUTIONS ON HANDLING ELECTRICAL CONNECTORS

1. When disconnecting connectors, grasp the body of the connector and pull it out; do not pull on the wiring harness. If the connector is the locking type, release the lock and then pull to disconnect.
2. When removing a connector's plastic cover (for water protection) to inspect it, be careful not to let any water get in the connector. If water does get in, dry it thoroughly before reassembling the connector and putting its plastic cover securely in place.
3. Straighten any bent connector terminals and make sure none are sticking out or missing. Also make sure there is no corrosion on the connector's terminals before connecting it.
4. When connecting a locking connector, be sure to press it in until you hear it click and then pull gently on the harness close to the connector and make sure the harness does not come out.

RY9212001ELS0224US0

Colors of Wiring

Color of wiring	Color code	Color of wiring	Color code
Black	B	Blue / Green	L/G
Green	G	Blue / Orange	L/Or
Blue	L	Blue / Red	L/R
Pink	P	Blue / White	L/W
Red	R	Blue / Yellow	L/Y
White	W	Light Green / Blue	Lg/B
Yellow	Y	Light Green / Red	Lg/R
Brown	Br	Light Green / White	Lg/W
Gray	GY	Light Green / Yellow	Lg/Y
Light Green	Lg	Orange / White	Or/W
Orange	Or	Pink / White	P/W
Sky Blue	Sb	Pink / Blue	P/L
Black / Green	B/G	Red / Black	R/B
Black / Blue	B/L	Red / Green	R/G
Black / Pink	B/P	Red / Blue	R/L
Black / Violet	B/V	Red / White	R/W
Black / Red	B/R	Red / Yellow	R/Y
Black / White	B/W	Violet / White	V/W
Black / Yellow	B/Y	White / Black	B/W
Brown / Black	Br/B	White / Green	W/G
Brown / Yellow	Br/Y	White / Blue	W/L
Brown / Red	Br/R	White / Red	W/R
Green / Black	G/B	White / Yellow	W/Y
Green / Blue	G/L	Yellow / Black	Y/B
Green / Red	G/R	Yellow / Green	Y/G
Green / White	G/W	Yellow / Blue	Y/L
Green / Yellow	G/Y	Yellow / Red	Y/R
Blue / Black	L/B		

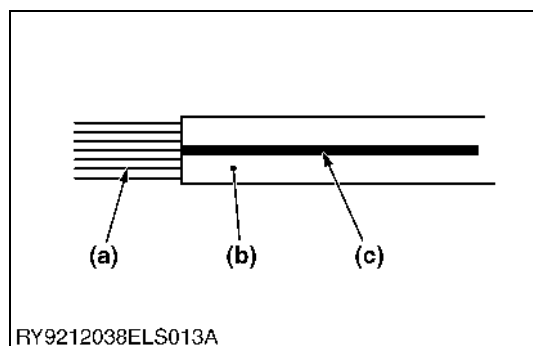**(Ex.)**

1.25-Y/R means :

1.25 : Wire size (mm²)

Y : Base color (yellow)

R : Stripe color (red)


- Do not pull on or step on wires. Also, do not cut wires on burred edges or the like.
- Do not twist or pinch wiring when installing it.

(a) Wire Size (mm²)


(c) Stripe Color

(b) Insulation Base Color

RY9212038ELS0009US0

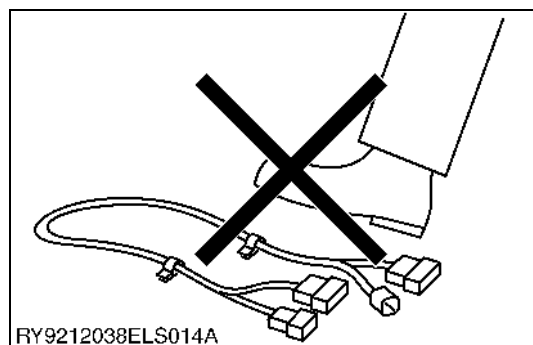

[3] LAYOUT AND WIRING ROUTING

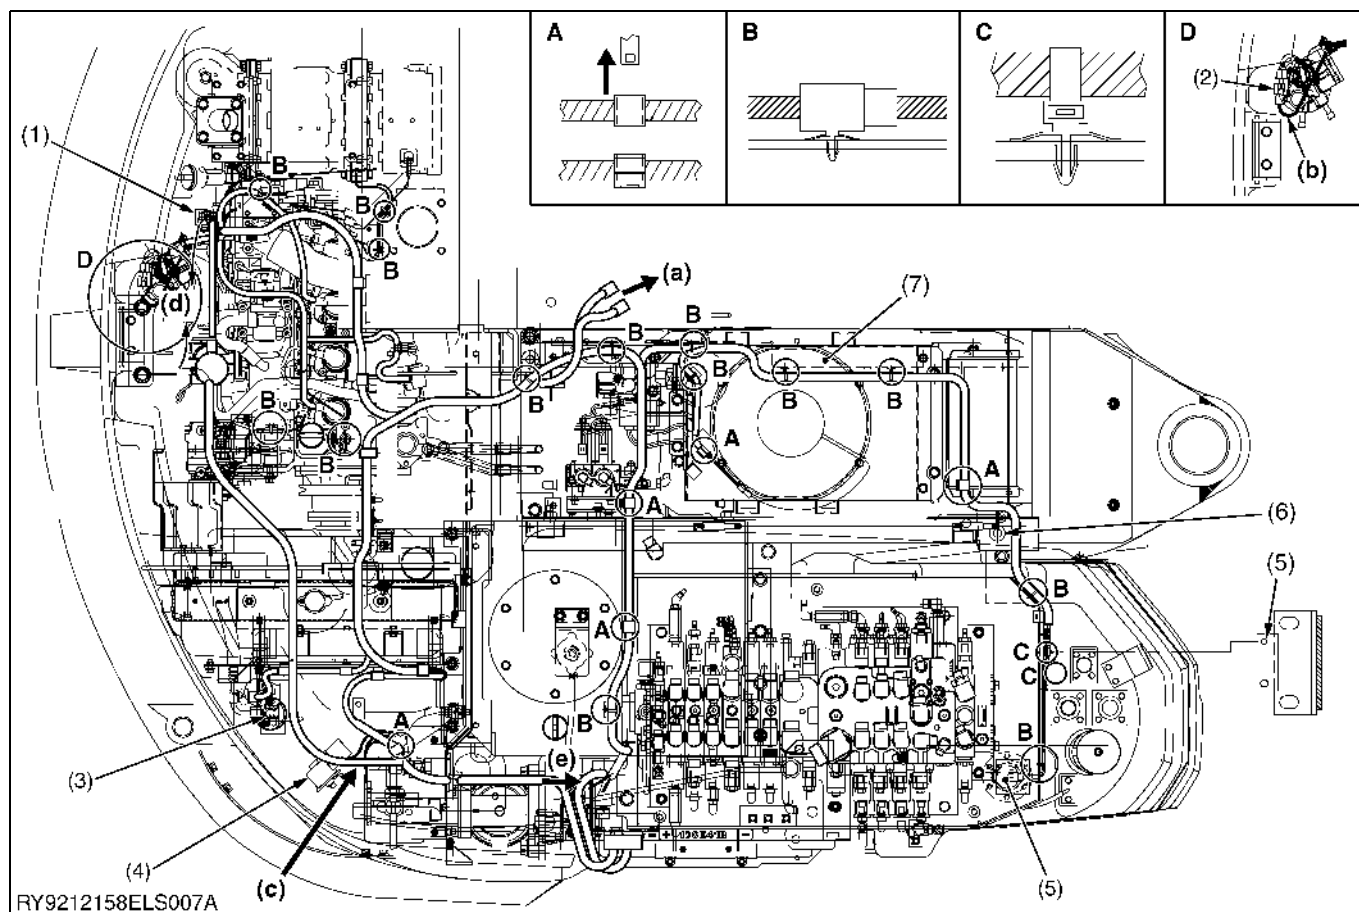


- (1) RPM sensor
- (2) Fuel filter heater
- (3) AC switch
- (4) Fuel pump

- (5) Fuel level gauge
- (6) Ground cable
- (7) Condenser fan
- (a) To main harness

- (b) Must not interfere with hood lock bracket
- (d) To starter relay
- (e) To (+) battery terminal
- (c) Fuel pump harness to pass to the inside of the battery cable.


RY9212158ELS0017US0

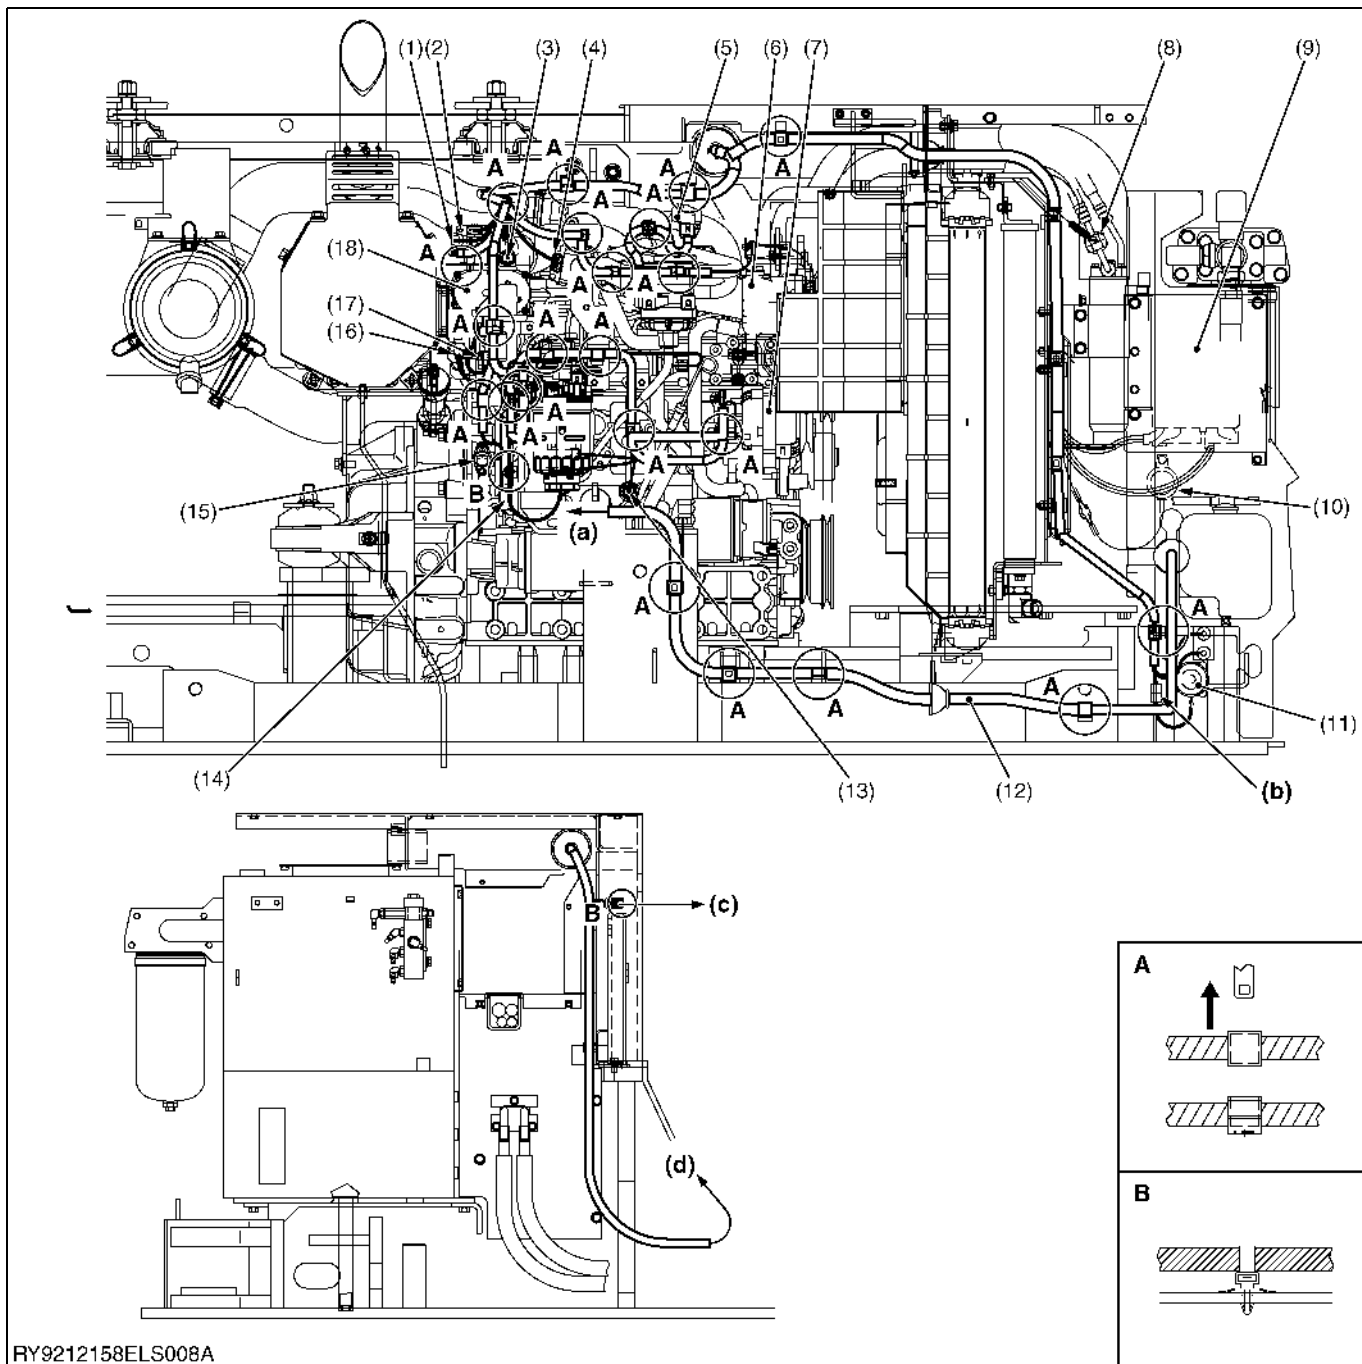

(1) DPF pressure differential sensor	(8) AC switch	(13) Oil switch
(2) Boost sensor	(9) Engine ECU	(14) Water level switch
(3) Air intake temperature sensor	(10) Travel alarm buzzer (optional)	(15) NE sensor
(4) EGR valve	(11) Fuel pump	(16) G sensor harness
(5) Air flow sensor	(12) (+) battery cable	(17) Water temperature sensor
(6) Compressor		(18) Air intake throttle valve
(7) Alternator		

- (a) To starter relay
 (b) Be sure to install fuel pump connector so it is vertical
 (c) To fuel supply pump
 (d) To main harness


RY9212158ELS0018US0

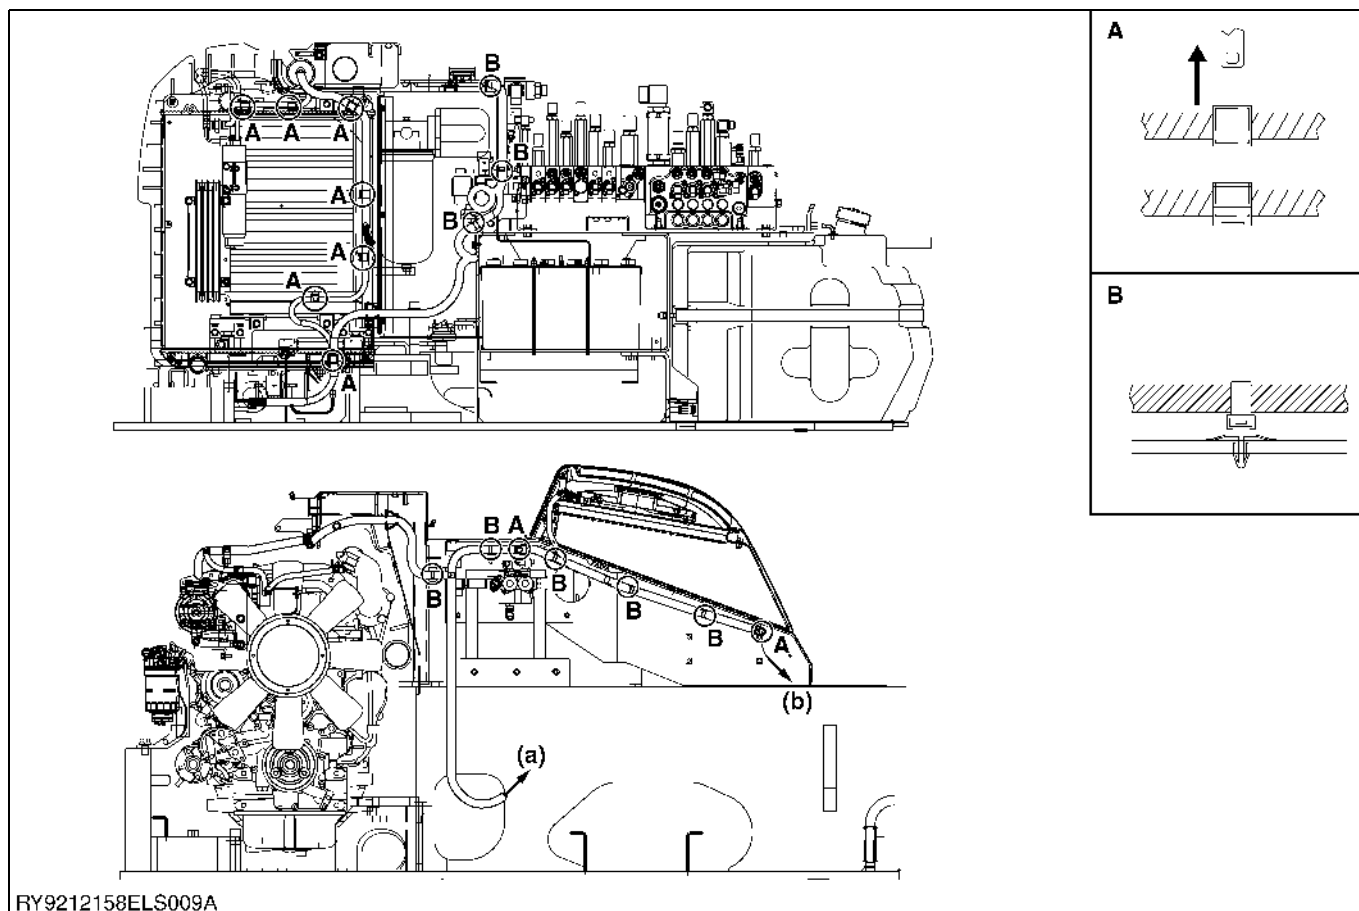

(a) To main harness

(b) To fuel sensor

RY9212158ELS0019US0

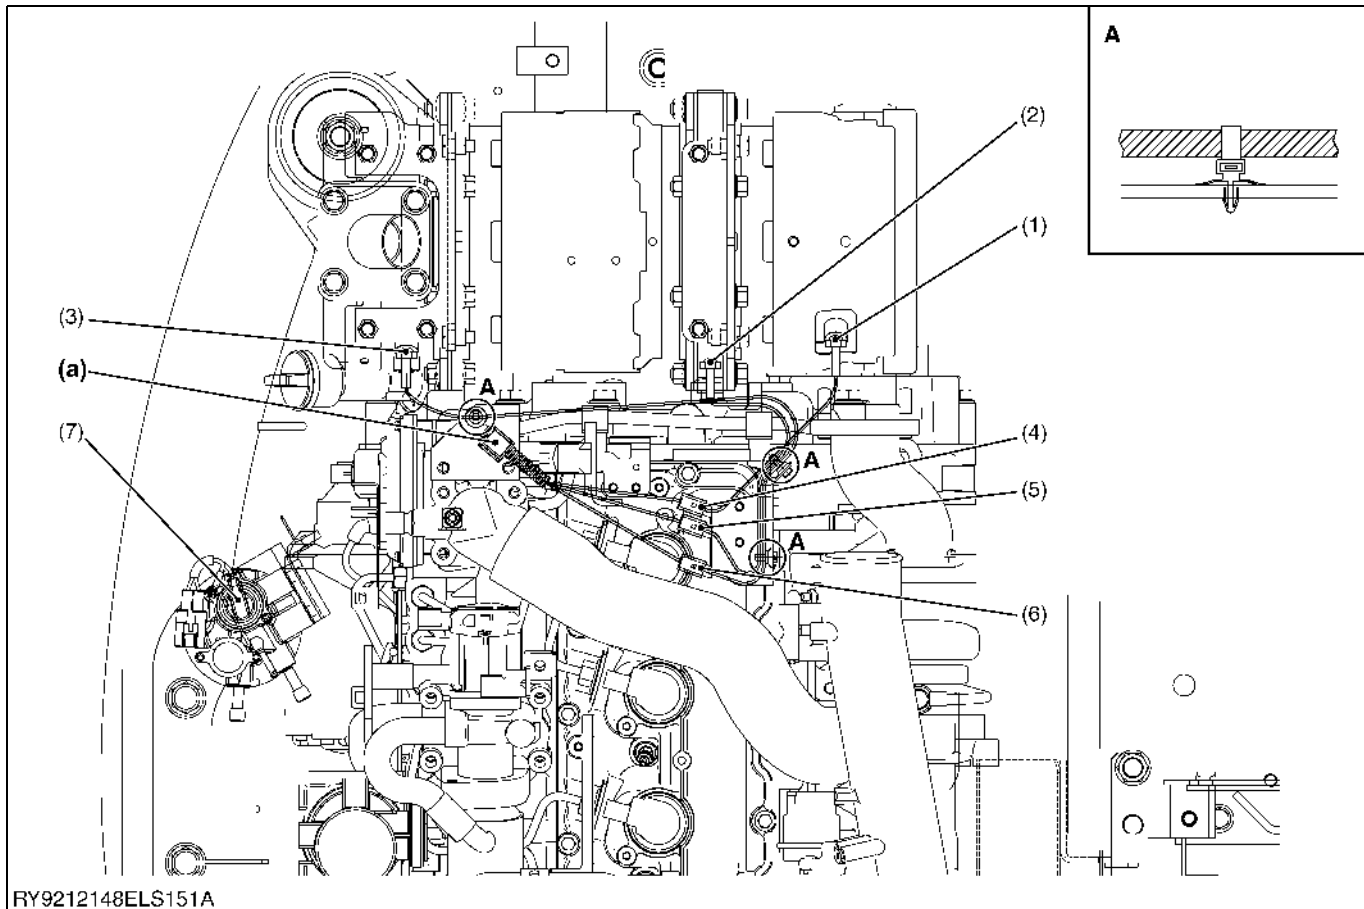


(1) DPF outlet temperature sensor 0 (black)	(3) DPF outlet temperature sensor 2 (white)	(5) DPF outlet temperature sensor connector 1 (dark gray)	(7) Fuel temperature sensor
(2) DPF outlet temperature sensor 1 (dark gray)	(4) DPF outlet temperature sensor connector 0 (black)	(6) DPF outlet temperature sensor connector 2 (white)	(a) From engine harness

■ **IMPORTANT**

- **When attaching sensors, match the color of the connectors to those of the harness.**

RY9212148ELS0210US0

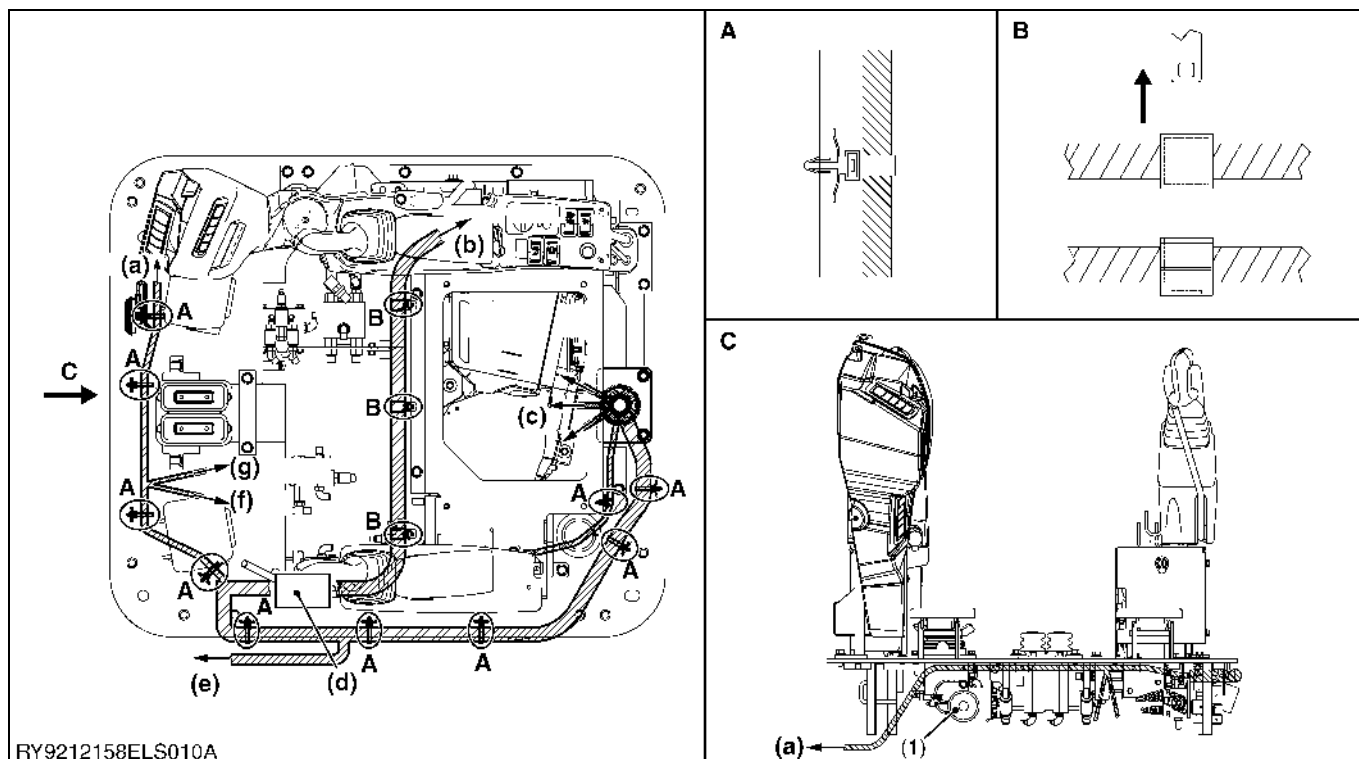


(1) Horn
(a) To front

(b) To engine harness
(c) To AC unit

(d) Harness connector
(e) Ground

(f) To angle solenoid
(g) To travel pressure sensor

RY9212158ELS0020US0

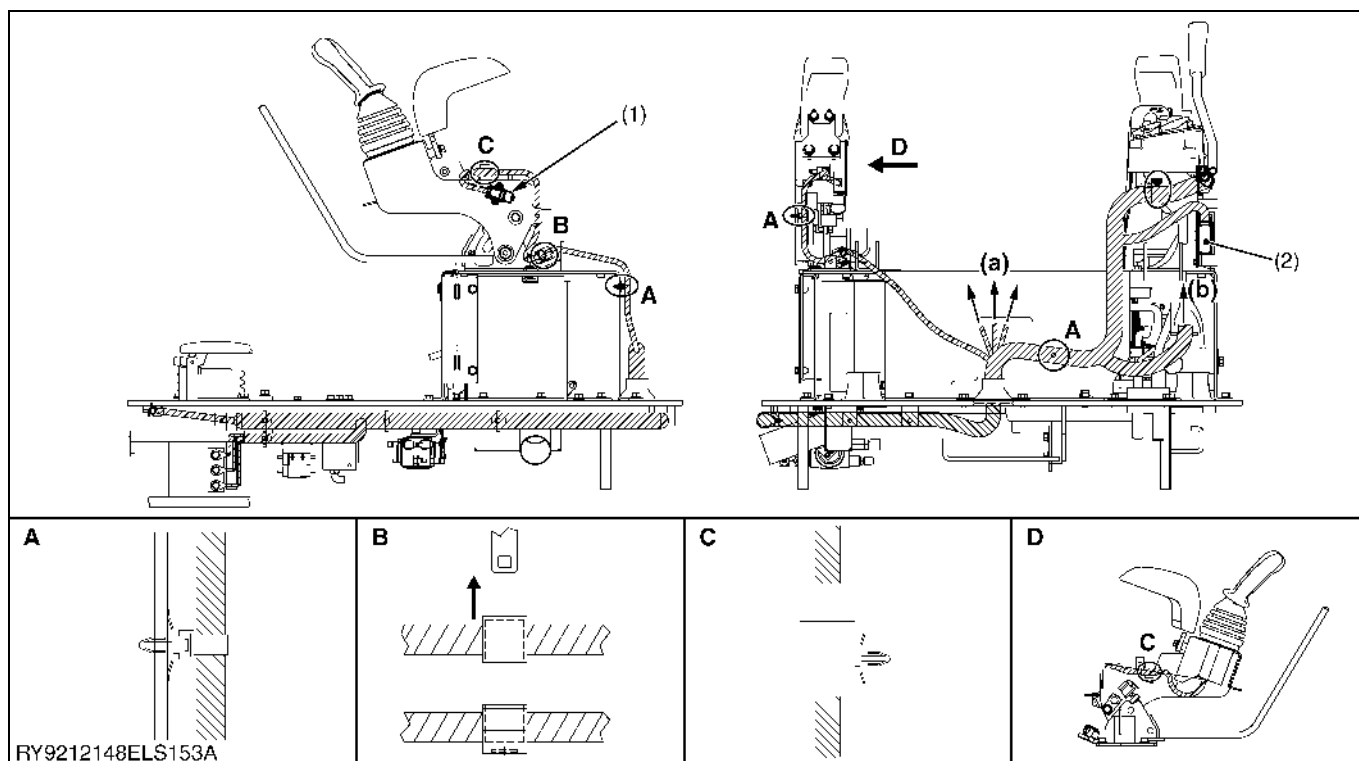


(1) Limit switch

(2) Main ECU

(a) To AC unit


(b) To fuse box

RY9212148ELS0212US0

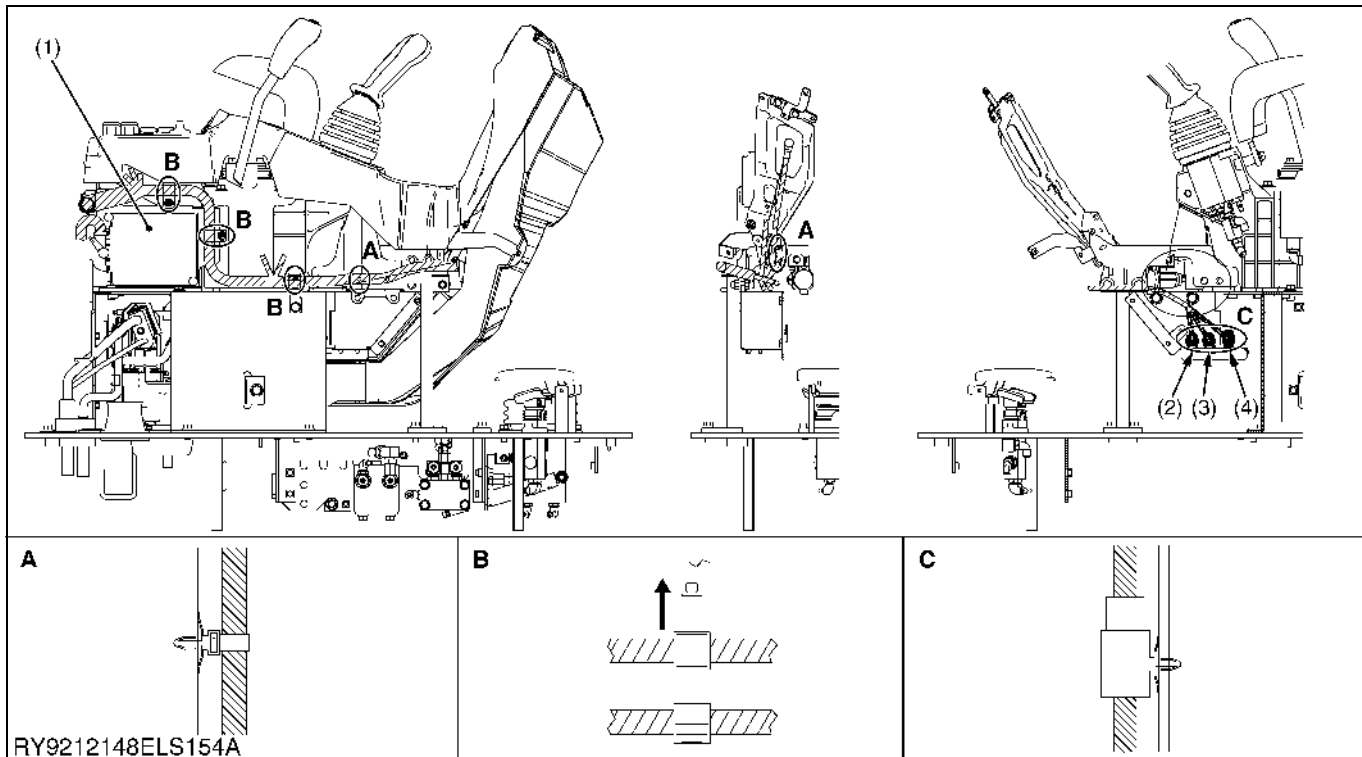


- (1) Main ECU (2) CAN comm connector (4-pin) (3) CAN comm connector (2-pin) (4) Engine diagnosis tool connector (4-pin)

RY9212148ELS0213US0

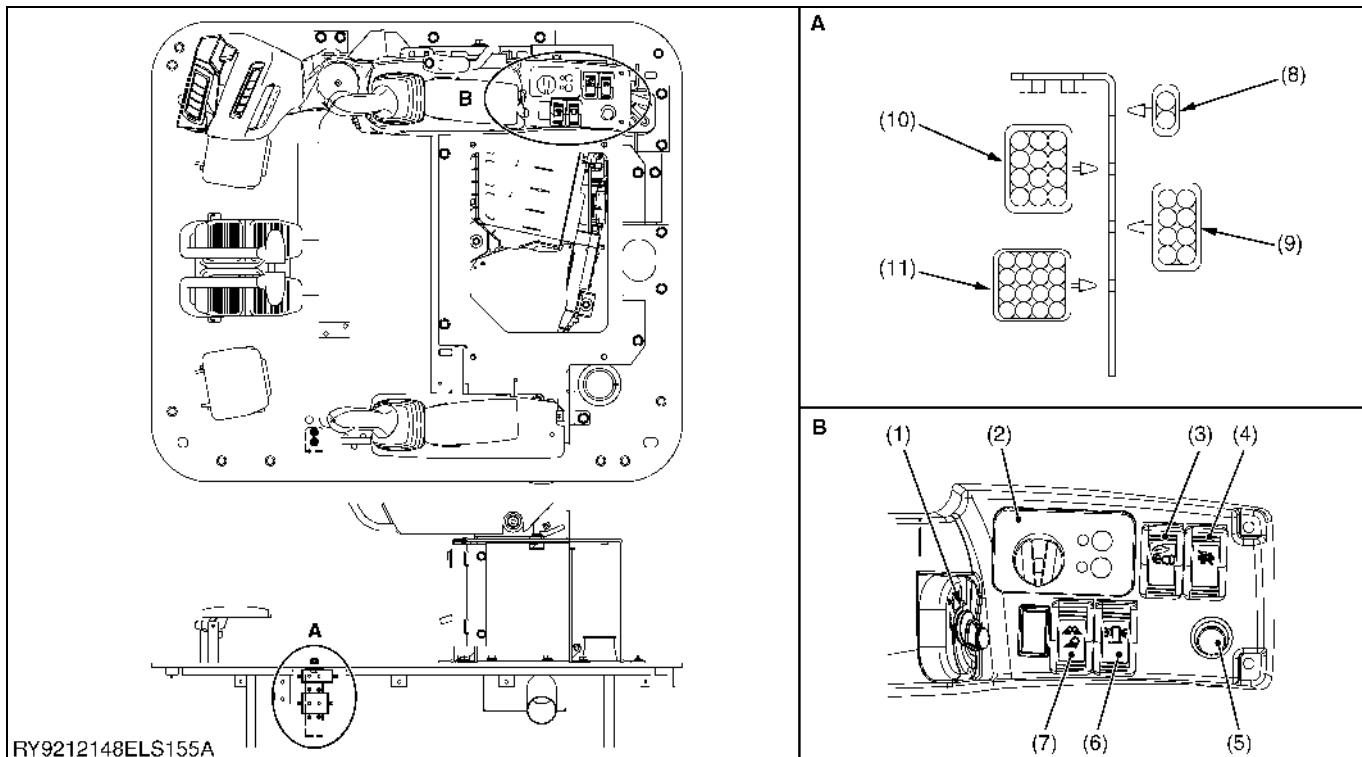

- (1) Anti-theft antenna (2) AI console (3) EP switch (4) DPF inhibit switch (5) Engine stop knob (6) Beacon switch (7) Worklight switch (8) Relay connector (2-pin) (9) Relay connector (8-pin) (10) Relay connector (12-pin) (11) Relay connector (16-pin)

RY9212148ELS0214US0

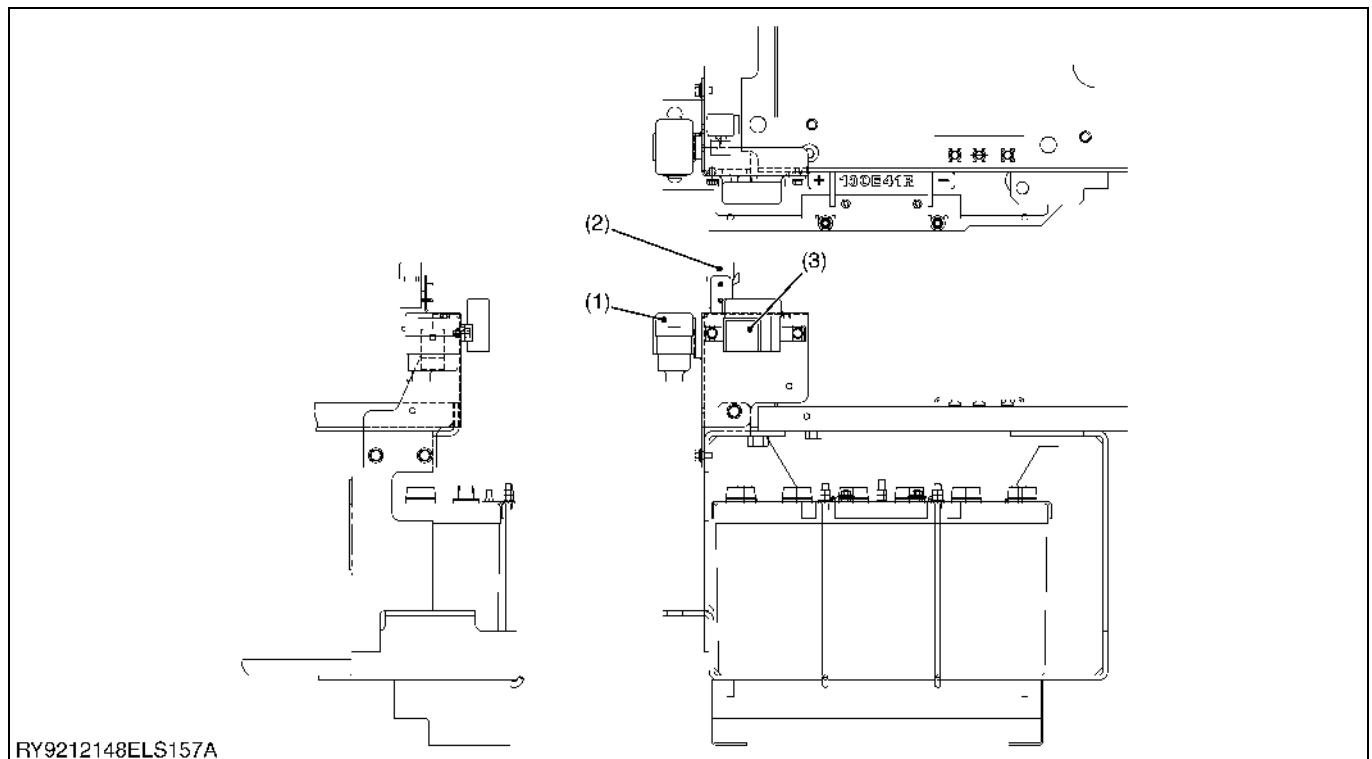


RY9212148ELS157A

(1) Relay box

(2) Fuse box (condenser fan)

(3) Slow-blow fuse box

RY9212148ELS0216US0

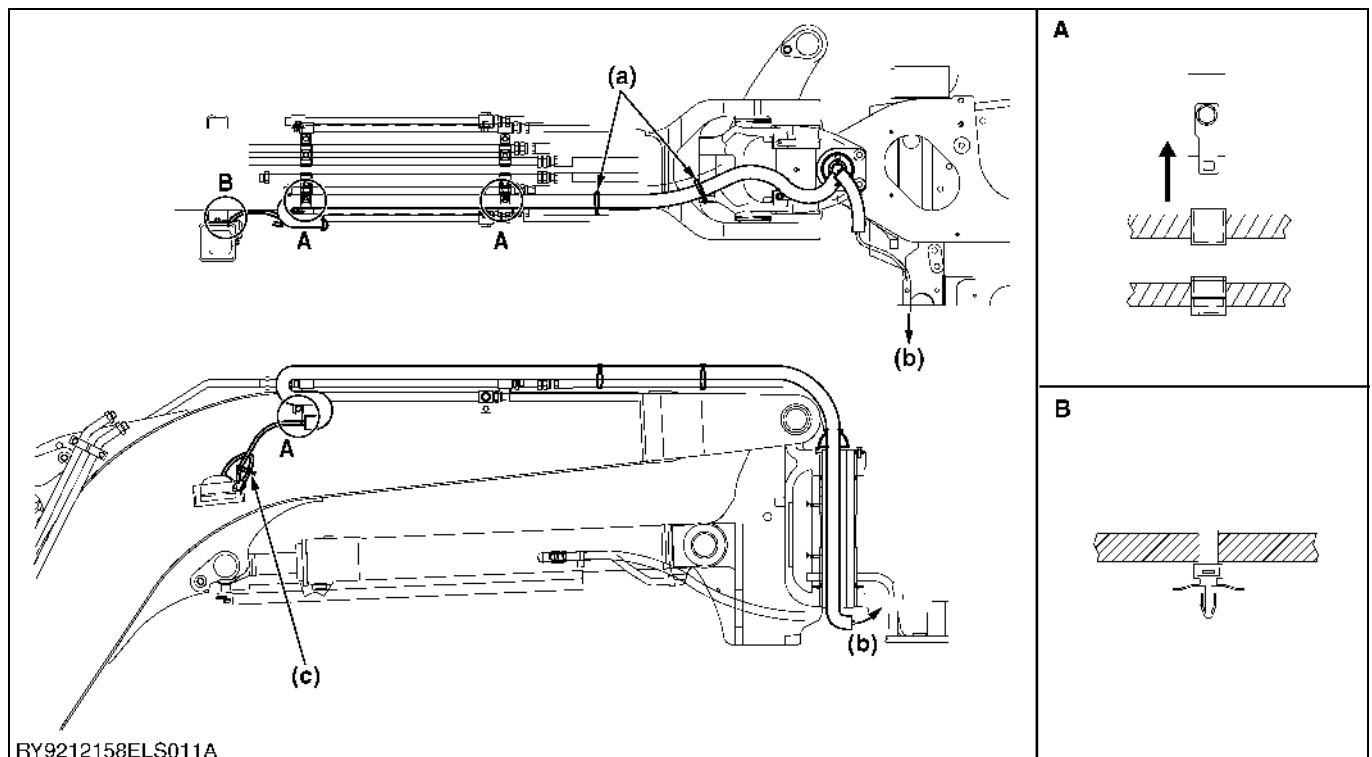

RY9212158ELS011A

(a) Arm bottom hoses and clamps


(b) To main harness

(c) Clamp wiring

RY9212158ELS0022US0

2. METER PANEL OPERATION


[1] NAMES AND FUNCTIONS OF METERS

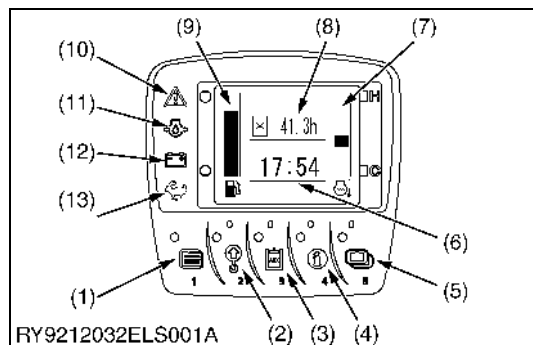

Normal display

(1) User Setting Switch (Switch 1)	(8) Hour Meter - Engine Tachometer
(2) Overload Warning Switch (Switch 2)	(9) Fuel Gauge
(3) AUX Port Enable Switch (Switch 3)	(10) Warning Lamp (Red, Yellow)
(4) Information Switch (Switch 4)	(11) Oil Lamp
(5) Display Selector Switch (Switch 5)	(12) Charge Lamp
(6) Clock Display	(13) 2-Speed Indicator Lamp
(7) Water Temperature Gauge	

RY9212148ELS0001US0

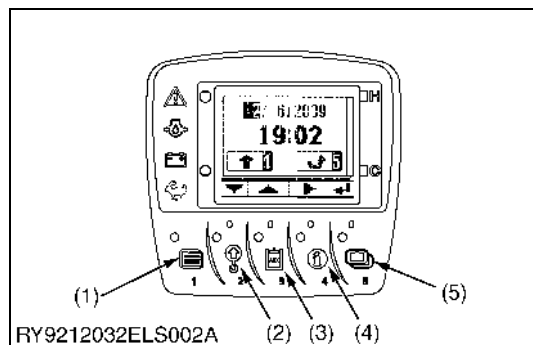

Display at menu-selection

(1) Direction cursor switch (Switch 1)	(4) Cursor Move Switch (Switch 4)
Stop each setting and return to the original screen.	(5) Save switch (Switch 5)
(2) Cursor move switches (Switch 2)	Decision of the Selection Item.
Move Down the Selection Item.	Selecting the Item at the Menu-Selection Position.
Move Down the Menu-Selection Position.	
(3) Cursor Move Switches (Switch 3)	
Move Up the Selection Item.	
Move Up the Menu-Selection Position.	

RY9212007ELS0002US0

[2] USER SETTINGS MODE


- Turn the key from OFF to ON and press switch 1 to enter the user settings mode.

	Item	Description
(1)	Log Record	Allows you to check the hours in use for each day for up to 3 months prior.
(2)	Periodic Check	Allows you to check the periodic check items and operate the meter panel after conducting periodic inspections.
(3)	Set Clock	Sets the clock.
(4)	Set AUX Flow Ctrl	Sets the AUX flow control.
(5)	Various Settings	Allows you to change the order of the date display and the clock display method.
(6)	Language Setting	Changes the language of the meter panel display.

RY9212148ELS0002US0


(1) Log Record

- Allows you to check the hours in use for each day for up to 3 months prior.

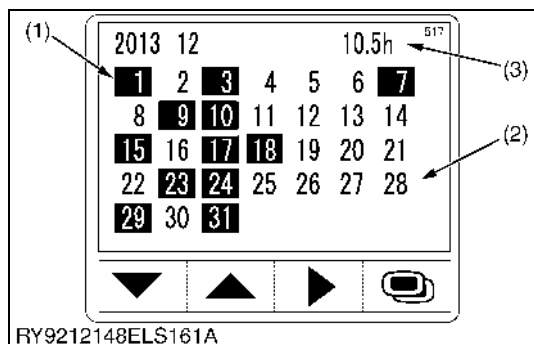

- Select Log Record.
- Select the month and day of the hours in operation you wish to check to display the hours in use in the upper right of the screen.
- If you press switch 5, you can check the hours in operation for one month.

[Sample screenshot using switch 5]

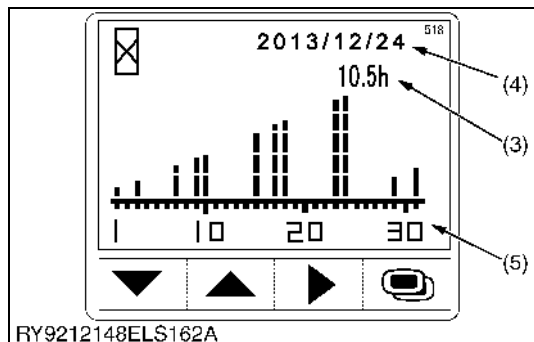


(1) Days in Use (B/W reversed)	(4) Selected Date
(2) Days not in Use	(5) Horizontal Axis (Day)
(3) Hours Used for Selected Date	

RY9212148ELS0016US0

(2) Periodic Check

- Allows you to check the periodic check items and operate the meter panel after conducting periodic inspections.

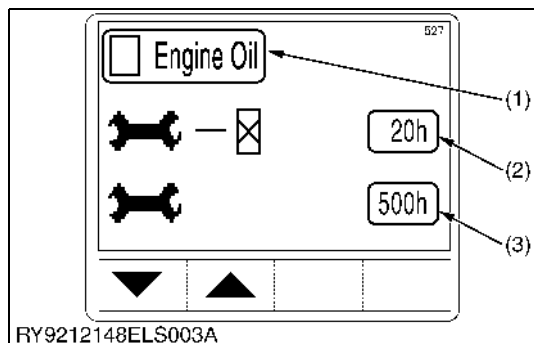

- Select Periodic Check and check the periodic check items.

■ IMPORTANT

- Once an item is within 10 hours of its periodic check time, switches 4 and 5 can be selected.

- | |
|--|
| (1) Check Item |
| (2) Hours Until Service (Next check time - service hour meter) |
| Service Hour Meter : hour meter + offset time |
| (3) Next Check Time |

RY9212148ELS0017US0

Operation after making a periodic check

- Select Periodic Check and select the periodic check item that was performed.
- Press switch 4 and make sure the check mark is displayed in the upper left of the meter panel.
- Press switch 5.

■ IMPORTANT

- When "Periodic Check Selection" is set to Manual, switch 4 cannot be selected unless the worklight is pressed "ON". (Std. for European spec)
- When the "Periodic Check Selection" is set to Auto, turning the key ON/OFF 10 times means the periodic check has been done. (Std. for other than European specs)



- To perform the check, press switch 5. To return, press switch 1.


■ IMPORTANT

- Once you initiate a check (switch 5), you cannot go back.

- | |
|---|
| (1) Hours Until Service (5 hours until periodic check time) |
|---|

RY9212148ELS0018US0

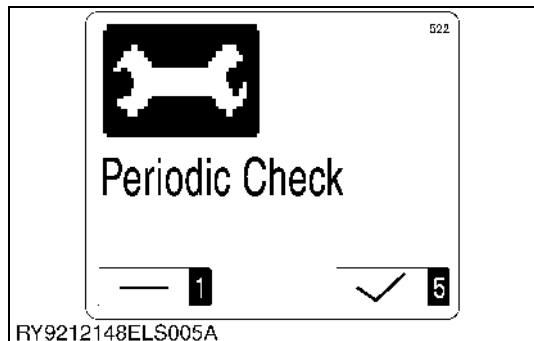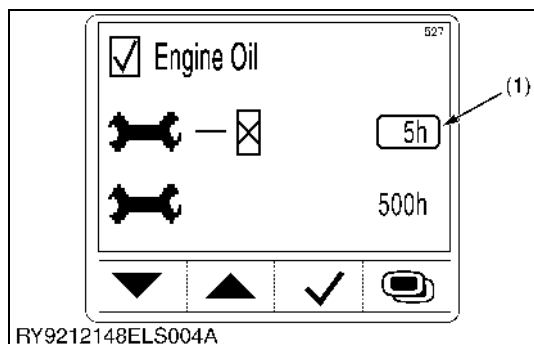

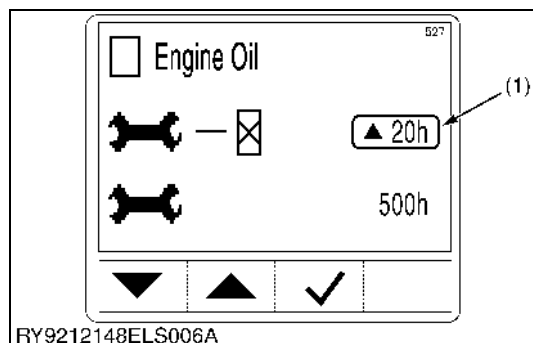

RY9212148ELS006A

[Display when periodic check time exceeded]

Ex.) 20 hours past time to change the engine oil

Service hour meter: 520 hours

(1) Hours Until Service (past 20 hours)

RY9212148ELS0019US0

Periodic Check Items List (The following check items are displayed on the LCD screen at the corresponding hour meter time.)


No.	Check Item	Interval	Hour meter indication							Subsequently
			50	100	250	500	600	750	1000	
1	Engine oil (CJ-4)	Change				○			○	Every 500 hrs
2	Hydraulic oil								○	Every 1000 hrs
3	Air cleaner element	Replace							○	Every 1000 hrs
									○	Every 1000 hrs
4	Fuel filter	Replace				○			○	Every 500 hrs
5	Engine oil filter					○			○	Every 500 hrs
6	Travel motor gear oil	Change	●			○			○	Every 500 hrs
7	Hydraulic return filter	Replace			●			○		Every 500 hrs
8	Hydraulic suction filter								○	Every 1000 hrs
9	Pilot filter								○	Every 1000 hrs
10	Grease idler and track rollers	—								Every 2000 hrs
11	DPF	clean								Every 3000 hrs

● First operation

RY9212158ELS0005US0

(3) Set Clock

- Sets the clock.

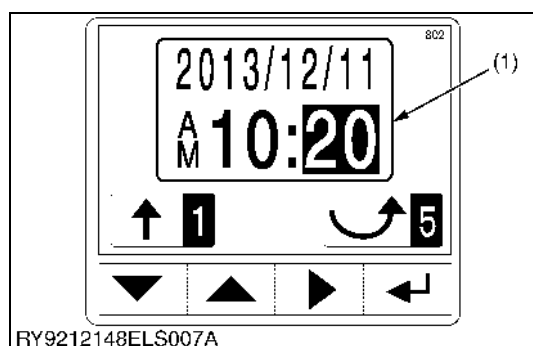

RY9212148ELS007A

1. Select "Set Clock" and set the clock.

[NOTE]


- Clock precision: 2 seconds/day

■ NOTE

- Clock settings can be made with the display methods in the "Various Settings" mode.

(1) Clock Setting Screen

RY9212148ELS0021US0

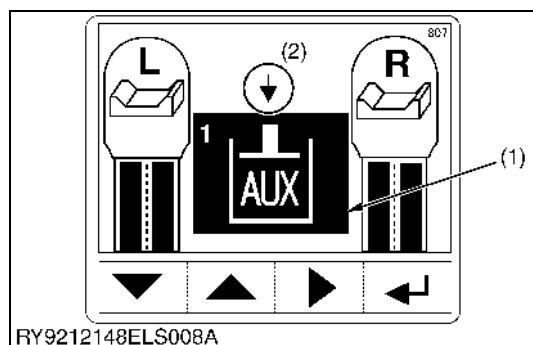(4) Set AUX Flow Ctrl

RY9212148ELS008A

1. Select "Set AUX Flow Ctrl" and set the auxiliary flow control.

■ NOTE

- When shipped only icons 1 and 2 are recorded. (N.A. spec.)
- When shipped only icons 1, 2 and 3 are recorded. (Eur. spec.)


(1) Icons (1 to 5)

(2) Cursor

RY9212148ELS0022US0

(5) Various Settings

- Allows you to change the order of the date display and the clock display method.

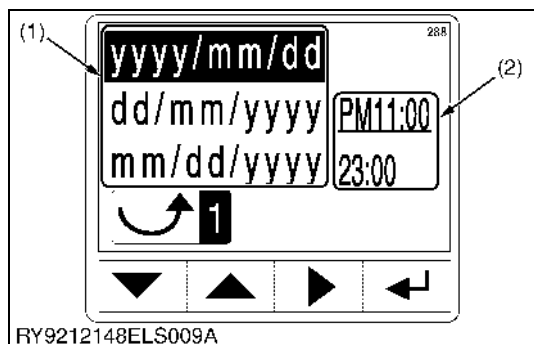

- Select Various Settings and then Calendar.
- Select the date and clock display methods as desired.

When shipped	N.A. and Australia Specs	MDY/AM-PM
	Eur. spec.	DMY/24 Hour
	Japan spec	YMD/AM-PM

- (1) Select the Y/M/D Display Order (2) Select Either AM-PM or 24 Hour Display

RY9212148ELS0023US0

(6) Language Setting

- Changes the language of the meter panel display.



- Select "Language Setting" and select a language.

■ IMPORTANT

- In Eur. ver., 11 languages are available.
- In US ver., English only.
- In Canada ver., English and French only.

- (1) Language selection screen

RY9212148ELS0024US0


[3] SERVICE DEALER SETTING

- Turning the key ON while holding SW1 down, allows you to enter the hide user mode.
- There are two items in the hide user mode, the crane mode and the arm control mode.

RY9212148ELS0025US0

(1) Crane Mode

- Disables the overload alarm on excavators that have the overload alarm. (Eur. spec.)
- Disables the crane function on excavators with the crane specification. (Japan spec.)

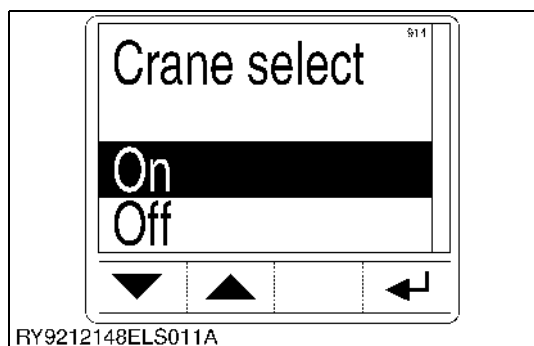

- Select the crane mode.
- Select the desired setting.
- Press SW5 to make the setting.

- When shipped: enabled


■ IMPORTANT

- The setting is displayed and can be made on the N.A. specification as well (Does not affect this machine).

RY9212148ELS0026US0

(2) Arm Control Mode (Only on Japan Spec.)

- Disables the ability to switch the arm control on machines with the arm control specification.

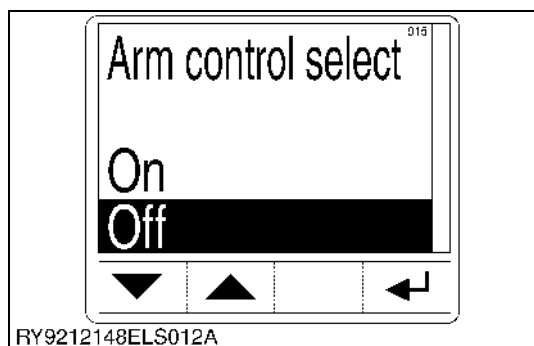

- Select the arm control mode.
- Select the desired setting.
- Press SW5 to make the setting.

- When shipped: enabled

■ IMPORTANT

- The setting is displayed and can be made on the Japan specification as well (Does not affect this machine).

RY9212148ELS0027US0

[4] SERVICE/DEALER MODE

- Turning the key ON while holding down SW5 puts the machine in the service/dealer mode.
- Select a language. (Eur. spec.: 5 languages, US spec.: 1 language, Canada spec.: 2 languages)
- There are 2 items in the service/dealer mode, namely "Diagnosis" and "Setting," which allow you to check/set the content in the tables below.

Mode	Item		Description	Notes
(1) Diagnosis	[A] Tester		Checks the data from each sensor and switch.	
	[B] Retrieve Fail Record		Checks the record of past failures.	
	[C] Delete Fail Record		Deletes the record of past failures.	
(2) Setting	[A] AI Set		Make the setting when the AI motor, accelerator dial or governor sensor is touched. Also make the setting when part(s) are replaced.	
	[B] AUX1 Set	(A) Knob Set	Set when the AUX1 knob is replaced.	
		(B) (w/attach) Start Point Set	Set when the AUX1 proportional valve and/or spool are replaced. (w/ attachment mounted)	
		(C) (w/o attach) Start Point Set	Set when the AUX1 proportional valve and/or spool are replaced. (w/ pressure gauge mounted)	
		(D) Feeling Adj.	Make setting when the AUX1 start point is inaccurate.	
	[C] AUX2/Thumb Set	(A) Knob Set	Make setting when the AUX2 knob is replaced.	
		(B) (w/attach) Start Point Set	Set when the AUX2 proportional valve, spool and/or ECU are replaced. (w/ attachment mounted)	
		(C) (w/o attach) Start Point Set	Set when the AUX2 proportional valve, spool and/or ECU are replaced. (w/ pressure gauge mounted)	
		(D) Feeling Adj.	Make setting when the AUX2 start point is inaccurate.	
	[D] AS Set	(A) Front Angle Set	Set when the AS position meter is replaced.	Only on RX series (Japan)
		(B) Start Point Set	Set when the AS 4-way proportional valve and/or control valve are replaced.	
		(C) Feeling Adj.	Set when you wish to change the sensitivity of the AS cylinder end cushion feel.	
		(D) Bucket Set	Set when using a bucket that is wider than the standard bucket.	
	[E] Crane Set	(A) Front Angle Set	Set when the crane's position meter is replaced.	Crane spec. only (Japan)
		(B) Maximum Set	Make the setting when the AI motor, accelerator dial or governor sensor is touched. Also make the setting when part(s) are replaced.	
	[F] Over Load Warning		Sets/changes the overload warning pressure.	Eur. spec. only
	[G] Model Set		Set when the ECU and/or meters are replaced.	


Mode	Item		Description	Notes
(2) Setting	[H] Others	(A) AI Motor Drive	Moves the AI motor position when the accelerator dial is replaced.	
		(B) Exchange (AUX1) (2/Thumb)	Operates AUX2 via the AUX1 knob. Or operates AUX1 via the AUX2 knob.	
		(C) Periodic Check Selection	Changes the method of canceling the periodic check guidance to automatic or to manual.	
		(D) Periodic Check Display	Turns off the display of periodic check guidance. Or turns it on.	
		(E) Annual Guidance	Turns on the display of annual check guidance. Or turns it off.	
		(F) Periodic Check Set	When the meter is replaced, sets the periodic check time prior to replacement to prevent a discrepancy in the periodic check time.	
		(G) Clock Set Warning (Y/N)	Turns the message, "Set clock" to be displayed/not when the clock has the wrong time.	
		(H) Arm Control Adj	Set when making fine adjustments to the stop position of the arm crowd limit.	Japan spec. only
		(I) Multipurpose Mode	Changes the operating conditions of the multi-purpose switch.	
		(J) All Fail Record	Checks all the fail records since the machine was shipped.	
		(K) Opening Select	Changes the opening display screen.	

RY9212148ELS0028US0

(1) Diagnosis

[A] Tester

- Makes it possible to check the data from each sensor and switch.
- Determines when a setting is outside parameters and when a switch or solenoid is irregular in terms of continuity.
- Selecting Diagnosis → Tester puts it into this diagnosis mode.

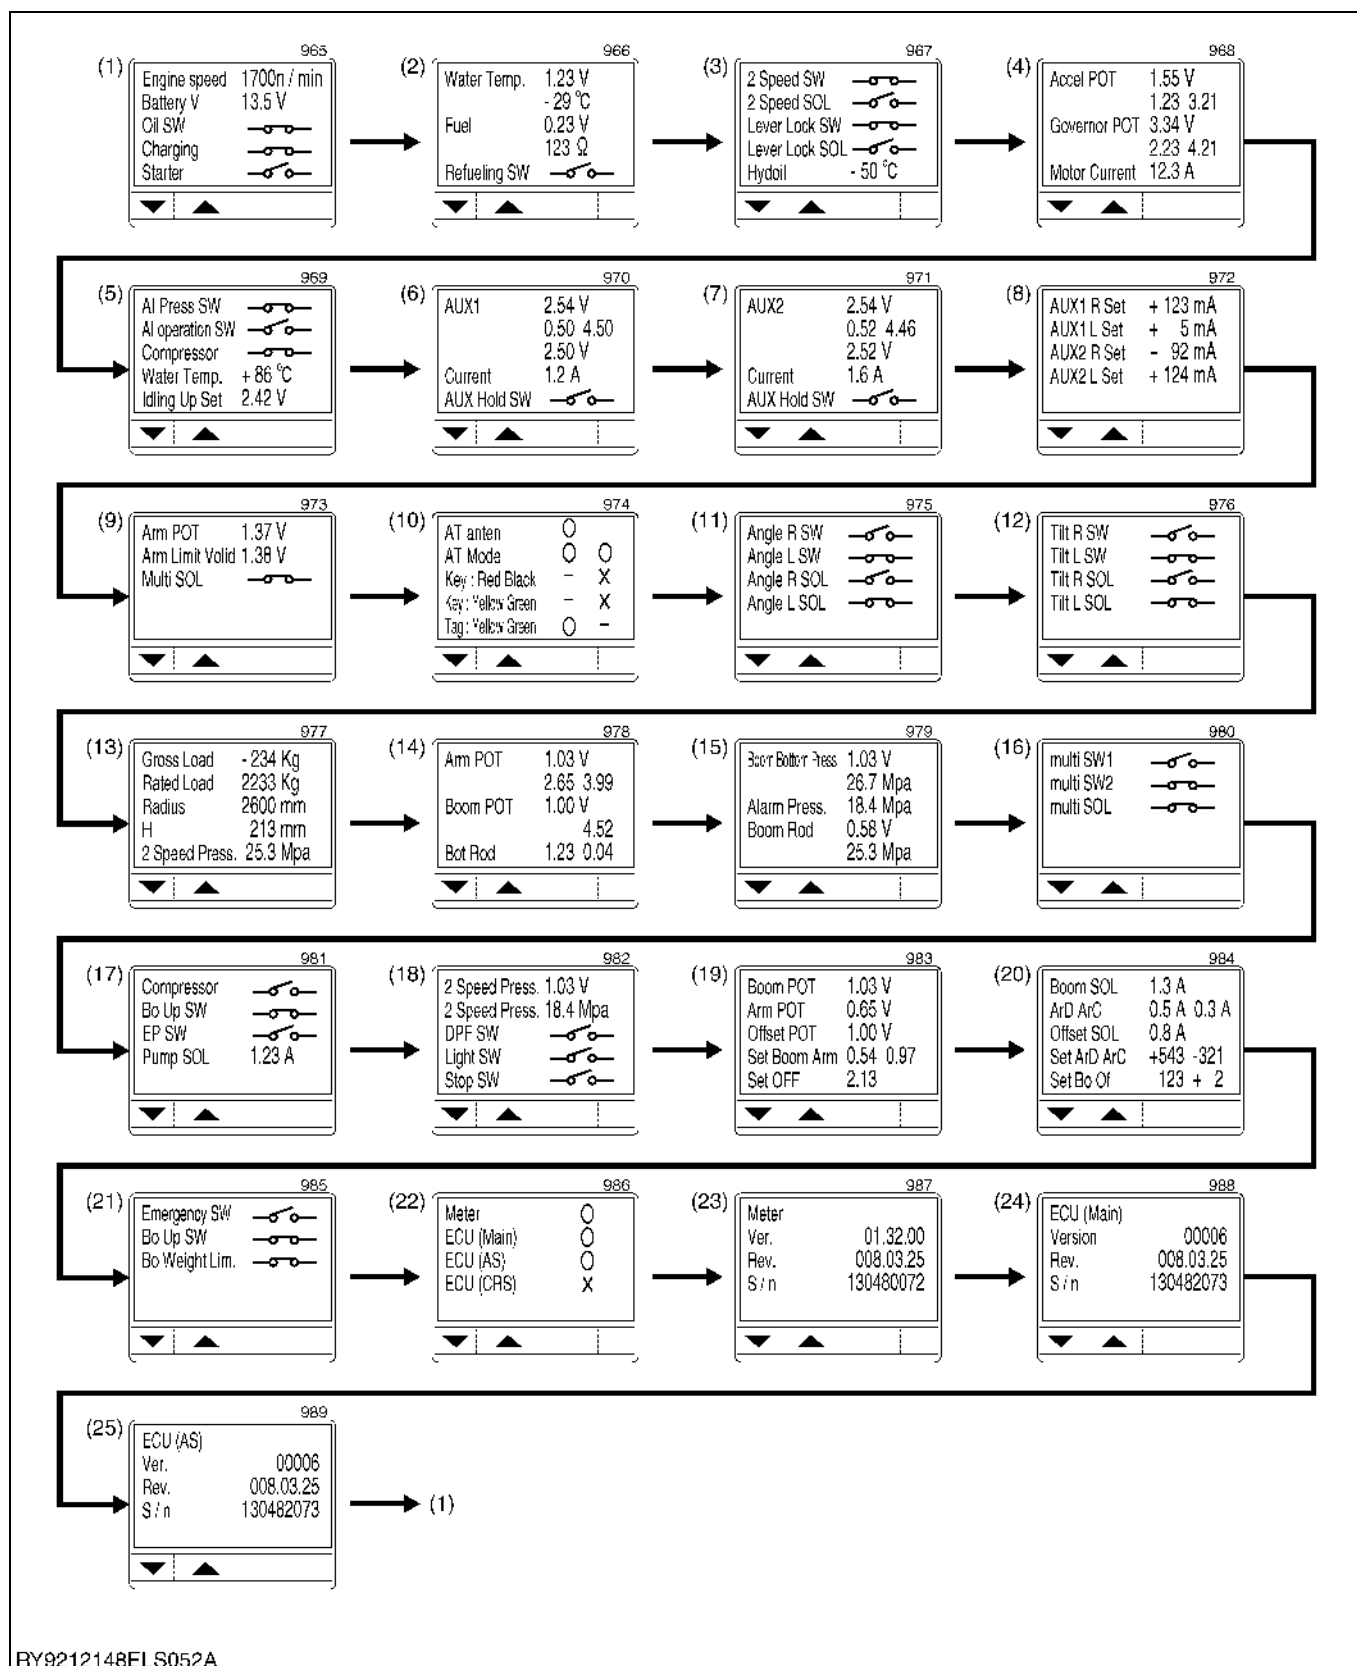

PY9212148ELS052A

(To be continued)

(Continued)

Screen No.	Content displayed	Description/std. value	Notes
1	Engine RPM	• Current value (n/min)	
	Battery voltage	• Battery voltage $\pm$ 0.5V	
	Oil switch	• Prior to engine start: ON	
	Charge	• After engine start: OFF	
	Starter	• Key in the Start position: ON • Key in any other position: OFF	
2	Water temperature	• Current value (V) • Current value ($^{\circ}$ C)	Common rail spec. voltage (V) is dummy data
	Fuel	• Current value (V) • Current value (Ω)	
		When cut off	When shorted
		Voltage	5.0 V
		Resistance	260 Ω
			0 Ω
		[NOTE]	
		KX080	
		Full	5 Ω or less
		Showing 1/2	42.19 Ω
		3 dots remaining	101.0 Ω
		Empty	101.0 Ω or higher
		• Fuel low warning displayed when 3 dots remaining.	
	Fuel supply switch	• Press switch: ON • Release switch: OFF	
3	2-speed switch	• Press switch: ON • Release switch: OFF	
	2-speed solenoid	• With output signal from ECU: ON • No output signal from ECU: OFF	
	Lever lock switch	• Lever down: ON • Lever up: OFF	
	Lever lock solenoid	• With output signal from ECU: ON • No output signal from ECU: OFF	
	Oil temperature sensor	• Dummy data	
4	Accelerator POT	• Current value: 1.50 to 3.30 V • Current value: idle, MAX	
	Governor POT	• Current value: 0.25 to 4.75 V • Current value: idle, MAX	Common rail spec. is dummy data
	Motor amperage	• AI motor operating: 0.0 to 15.0A • AI motor stopped: 0.0 to 2.0 A	
5	AI pressure switch	• Not operating: ON • Operating: OFF	
	AI control switch	• Press switch: ON • Release switch: OFF	
	Compressor	• Operating: ON	
	Water temperature	• Current value ($^{\circ}$ C)	
	Idle up	• Idle up setting value (V)	Common rail spec. is dummy data
6	AUX1	• Current value: 0.25 to 4.75 V • Setting value: left or right • Setting value: neutral	Only for models equipped with AUX1 proportional control (EU, N.A.)
	Amperage	• Operating: 0.5 to 2.0 A • Stopped: 0 to 0.2A	
	AUX hold switch	• Press switch: ON • Release switch: OFF	

Screen No.	Content displayed	Description/std. value			Notes
7	AUX2	- Current value: 0.25 to 4.75 V - Setting value: left or right - Setting value: neutral			Only for models equipped with AUX2 proportional control (EU, N.A.)
	Amperage	- Operating: 0.5 to 2.0 A - Stopped: 0 to 0.2A			
	AUX hold switch	- Press switch: ON - Release switch: OFF			
8	AUX1 right setting	Aux start point setting value			Only for models equipped with AUX proportional control (EU, N.A.)
	AUX1 left setting				
	AUX2 right setting				
	AUX2 left setting				
9	Arm POT	Current value: 0.25 to 4.75 V			Arm limit spec only Japanese models
	Arm limit setting value	Arm stop setting value			
	Arm limit solenoid	- With output signal from ECU: ON - No output signal from ECU: OFF			
10	Anti-theft antenna	- Antenna working normally: O - Antenna malfunction: X			If unknown or Anti-Theft deactivated: –
	On/off enabled/cancelled	Have key: O No key: X	Anti-theft mode: O Anti-theft off: X		
	Red key, Black key	Same red key: O Different red key: X	Same black key: O Wrong red or black key: X		
	Yellow or green key	Same yellow key: O Different yellow key: X	Same green key: O Different green key: X		
	(Tag) yellow or green	Same yellow key: O Different yellow key: X	Same green key: O Different green key: X		
11	Angle right switch	- Press switch: ON - Release switch: OFF			Angle spec. only N.A. models
	Angle left switch				
	Angle right solenoid	- With output signal from ECU: ON - No output signal from ECU: OFF			
	Angle left solenoid				
12	Tilt right switch	- Press switch: ON - Release switch: OFF			Tilt spec. only N.A. models
	Tilt left switch				
	Tilt right solenoid	- With output signal from ECU: ON - No output signal from ECU: OFF			
	Tilt left solenoid				
13	Actual load	Current value (kg)			Crane spec. only Japanese models
	Rated load	Current value (kg)			
	Radius	Current value (mm)			
	Height	Current value (mm)			
	Travel pressure	Current value (MPa)			
14	Arm POT	- Current value: 0.25 to 4.75 V - Setting value: arm crowded, arm dump end			
	Boom POT	- Current value: 0.25 to 4.75 V - Setting value: boom up end			
	Bottom pressure, rod pressure	Current value: 0.50 to 4.50 V			
15	Boom bottom pressure	- Current value (V) - Current value (MPa)			Only EU models
	Warning pressure	Current value (MPa)			
		Boom rod pressure	- Current value (V) - Current value (MPa)		


Screen No.	Content displayed	Description/std. value			Notes	
16	Multi-purpose1 switch 1 (AI control dial)	- Press switch: ON - Release switch: OFF				
	Multi-purpose2 switch 2 (AUX left knob)					
	Multi-purpose switch solenoid	- With output signal from ECU: ON - No output signal from ECU: OFF				
17	Compressor	Operating: ON				
	Boom up pressure switch	- Stopped or fine operation: ON - Full stroke operations: OFF				
	EP switch	- Press switch: ON - Release switch: OFF				
	EP solenoid	Current amperage (A)				
			KX080-4	KX080-4 (2-piece boom spec.)		
		P mode (AC OFF)	0 mA		AC is Air Conditioner	
		P mode (AC ON)	600 mA			
		E mode (During travel or full boom up stroke operation)	940 mA	840 mA		
E mode		1650 mA				
18	Travel pressure sensor	- Current value (V) - Current value (MPa)				
	DPF switch	- Press switch: ON - Release switch: OFF				
	Worklight switch					
	Stop engine switch					
19	Boom POT	Current value: 0.25 to 4.75 V			Only on RX series (Japan)	
	Arm POT					
	Offset POT					
	Setting Bo Ar	Setting value: boom up, arm crowded				
	Setting Of	Setting value: offset right				
20	Boom solenoid	- Operating: 0.4 to 1.2 A - Stopped: 0.0 to 0.6A				
	Arm dump/crowd					
	Offset solenoid					
	Setting ArD ArC	Start point setting: arm dump, arm crowd				
	Setting Bo Of	Starting point setting: boom up, offset right				
21	Emergency switch	- Press switch: ON - Release switch: OFF				
	Boom up pressure switch	- During boom up operation: ON - Not operating: OFF				
	Boom height limit	- Normally: ON - At height limit: OFF				
22	Meter	Normally: O [If the meter exists, then O]				
	ECU (main)	Normally: O [If the ECU (main) exists, then O]				
	ECU (AS)	Normally: O [If the ECU (AS) exists, then O]			Only on RX series (Japan)	
	ECU (CRS)	Normally: O [If the ECU (CRS) exists, then O]				
23	Meter					
	Ver	Program version				
	Rev	Program creation date (Y/M/D)				
	Serial No.	Serial no. (different number each machine)				

Screen No.	Content displayed	Description/std. value	Notes
24	ECU (main)		
	Ver	• Program version	
	Rev	• Program creation date (Y/M/D)	
	Serial No.	• Serial no. (different number each machine)	
25	ECU (AS)		Only on RX series (Japan)
	Ver	• Program version	
	Rev	• Program creation date (Y/M/D)	
	Serial No.	• Serial no. (different number each machine)	

RY9212148ELS0029US0

[B] Retrieve Fail Record

- Checks the record of past failures.

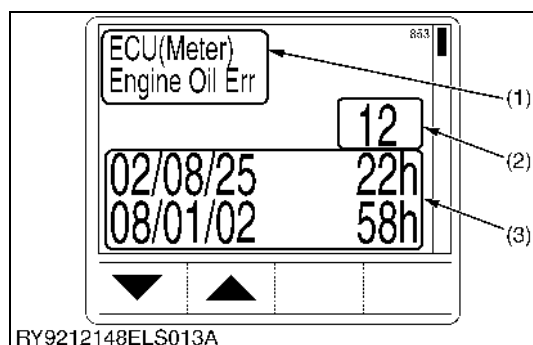

- Select Diagnosis → Retrieve Fail Record.
- If there are more than one failure records, you can toggle the display each time you press switch 2 or 3.

[Display when fail record exists]

(1) Content of Failure detected by the ECU (main or meter or AS) that detected it	(3) Date and hour meter of initial occurrence and date and hour meter of last occurrence
(2) Number of occurrences (1 to 255)	

RY9212148ELS0030US0



[Display when no fail record exists]

RY9212148ELS0031US0

[C] Delete Fail Record

- Deletes the record of past failures.



- Select Diagnosis → Delete Fail Record.

[Display when fail record deleted]

■ IMPORTANT


- Even when fail records are deleted, they are still recorded in the all fail record.

RY9212148ELS0032US0

(2) Setting

[A] AI Set

- Make the setting when the AI motor, accelerator dial or governor sensor is touched. Also make the setting when part(s) are replaced.

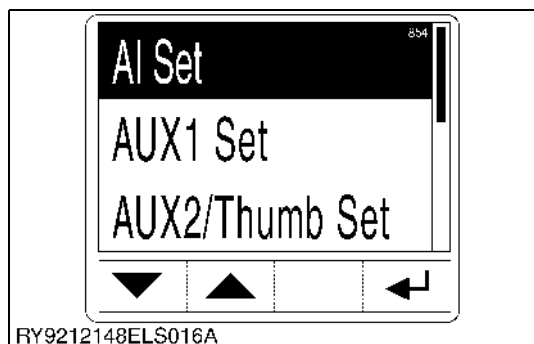

1. Select Setting → AI set.
2. Follow the instructions on the meter panel.
3. Press SW5 to make the setting.
4. Follow the instructions on the meter panel and repeat steps 2 and 3.

[Work flow]


Accel to MAX → Accel to Idling

RY9212148ELS0033US0

[B] AUX1 Set

(A) Knob Set

- Set when the knob is replaced.

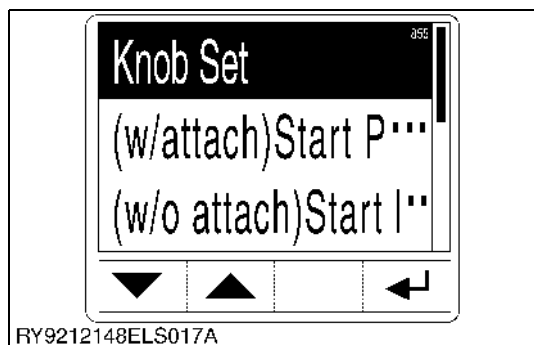

1. Select Setting → AUX1 Set → Knob set.
2. Follow the instructions on the meter panel.
3. Press SW5 to make the setting.
4. Follow the instructions on the meter panel and repeat steps 2 and 3.


[Work flow]

AUX Knob R END → AUX Knob L END → Knob to Neutral

RY9212148ELS0034US0

(B) (w/attach) Start Point Set

- Make setting when the AUX1 proportional valve, spool and/or AUX1 knob is replaced.
- Mount an attachment on the AUX1 port and make the setting.

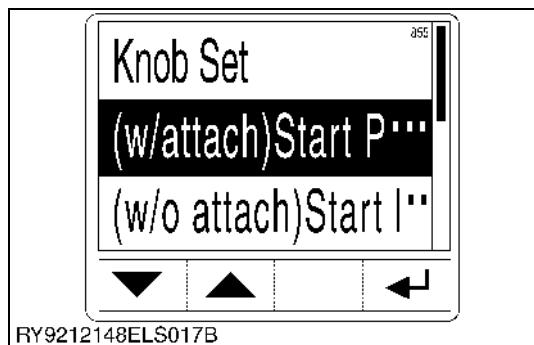

1. Select Setting → AUX1 Set → (w/attach) Start Point Set.
2. Follow the instructions on the meter panel.
3. Press SW5 to make the setting.
4. Follow the instructions on the meter panel and repeat steps 2 and 3.

[Work flow]

Accel to MAX → Measure L when attachment moves → Measure R when attachment moves

RY9212148ELS0035US0

(C) (w/o attach) Start Point Set

- Make setting when the AUX1 proportional valve, spool and/or AUX1 knob is replaced.
- Use this setting method when an attachment is not available.



1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic line.
3. Attach a pressure gauge at the end of the AUX1 discharge (high pressure side, low pressure side).
4. Select Setting → AUX1 Set → (w/o attach) Start Point Set.
5. Follow the instructions on the meter panel.
6. Press SW5 to make the setting.
7. Follow the instructions on the meter panel and repeat steps 2 and 3.


[Work flow]

Accel to MAX → Measure L when pressure rises → Measure R when pressure rises

RY9212148ELS0036US0

(D) Feeling Adj.

- Adjust the AUX1 start point to customer's specification.

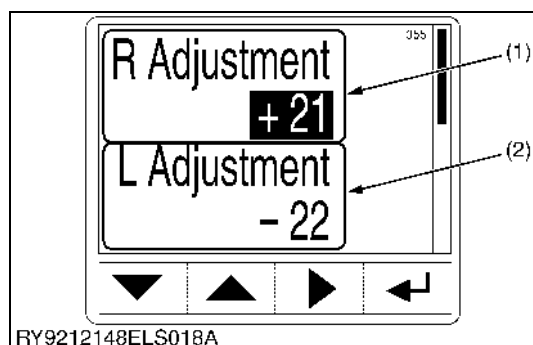

1. Select Setting → AUX1 Set → Feeling Adj.
2. Follow the instructions on the meter panel and change the number while monitoring the feel.
3. Press SW5 to make the setting.

**CAUTION**

- Only use if it does not work properly even after making the start point setting.

(1) Right Fine Adjustment Value

(2) Left Fine Adjustment Value

RY9212148ELS0037US0

[C] AUX2/Thumb Set**(A) Knob Set**

- Set when the AUX2 knob is replaced.



1. Select Setting → AUX2/Thumb Set → Knob set.
2. Follow the instructions on the meter panel.
3. Press SW5 to make the setting.
4. Follow the instructions on the meter panel and repeat steps 2 and 3.

[Work flow]

AUX Knob R END → AUX Knob L END → Knob to Neutral

RY9212148ELS0038US0

(B) (w/attach) Start Point Set

- Make setting when the AUX2 proportional valve, spool and/or AUX2 knob is replaced.
- Mount an attachment on the AUX2 port and make the setting.



1. Select Setting → AUX2/Thumb Set → (w/attach) Start Point Set.
2. Follow the instructions on the meter panel.
3. Press SW5 to make the setting.
4. Follow the instructions on the meter panel and repeat steps 2 and 3.

[Work flow]

Accel to MAX → Measure L when attachment moves → Measure R when attachment moves

RY9212148ELS0039US0

(C) (w/o attach) Start Point Set

- Make setting when the AUX2 proportional valve, spool and/or AUX2 knob is replaced.
- Use this setting method when an attachment is not available.



1. Place the mini excavator on flat hard ground, lower the bucket and the blade, and stop the engine.
2. Follow the chapter Releasing Pressure in the Hydraulic System and release pressure in the hydraulic line.
3. Attach a pressure gauge at the end of the AUX2 discharge (high pressure side, low pressure side).
4. Select Setting → AUX2/Thumb Set → (w/o attach) Start Point Set.
5. Follow the instructions on the meter panel.
6. Press SW5 to make the setting.
7. Follow the instructions on the meter panel and repeat steps 2 and 3.


[Work flow]

Accel to MAX → Measure L when pressure rises → Measure R when pressure rises

RY9212148ELS0040US0

(D) Feeling Adj.

- Adjust the AUX2 start point to customer's specification.

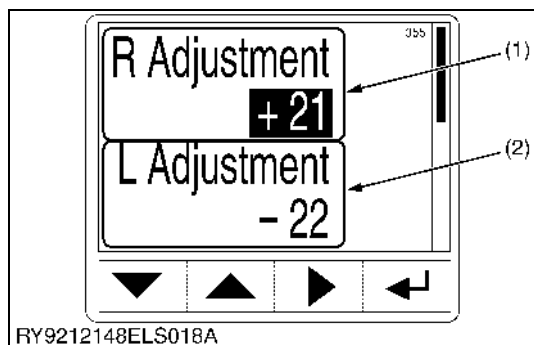

1. Select Setting → AUX2/Thumb Set → Feeling Adj.
2. Follow the instructions on the meter panel and change the number while monitoring the feel.
3. Press SW5 to make the setting.


**CAUTION**

- Only use when it does not work properly even after making the start point setting.

(1) Right fine adjustment value

(2) Left fine adjustment value

RY9212148ELS0041US0

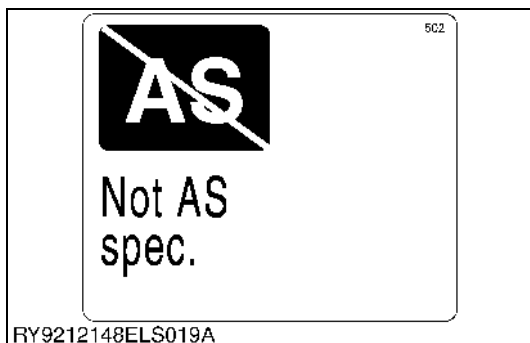[D] AS Set (Japan Spec. Only)**[Display when not the Japan spec.]**

RY9212148ELS0042US0

[E] Crane Set (Japan Spec. Only)**[Display when not the Japan spec.]**

RY9212148ELS0043US0


[F] Overload Warning (Eur. Spec. Only)

- Sets/changes the overload warning pressure.



1. Select Setting → Overload warning.
2. Enter a pressure warning value appropriate for the specification.

RY9212158ELS0002US0

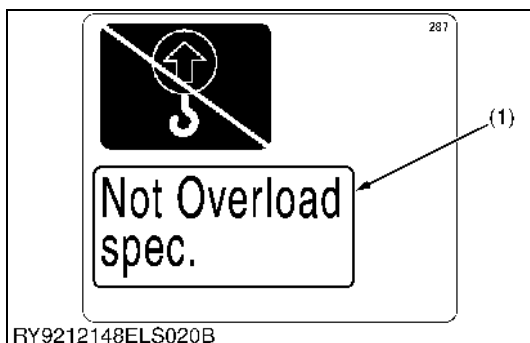
**[Display when not overload warning spec.]**

- (1) Not the crane spec. or the overload warning spec.

RY9212148ELS0045US0

[G] Model Set

- Set when the ECU and/or meters are replaced.
- Select Diagnosis → Model Set to make this setting.
- After setting the model, it is necessary to make the AI, AUX1 knob and AUX2 knob settings.

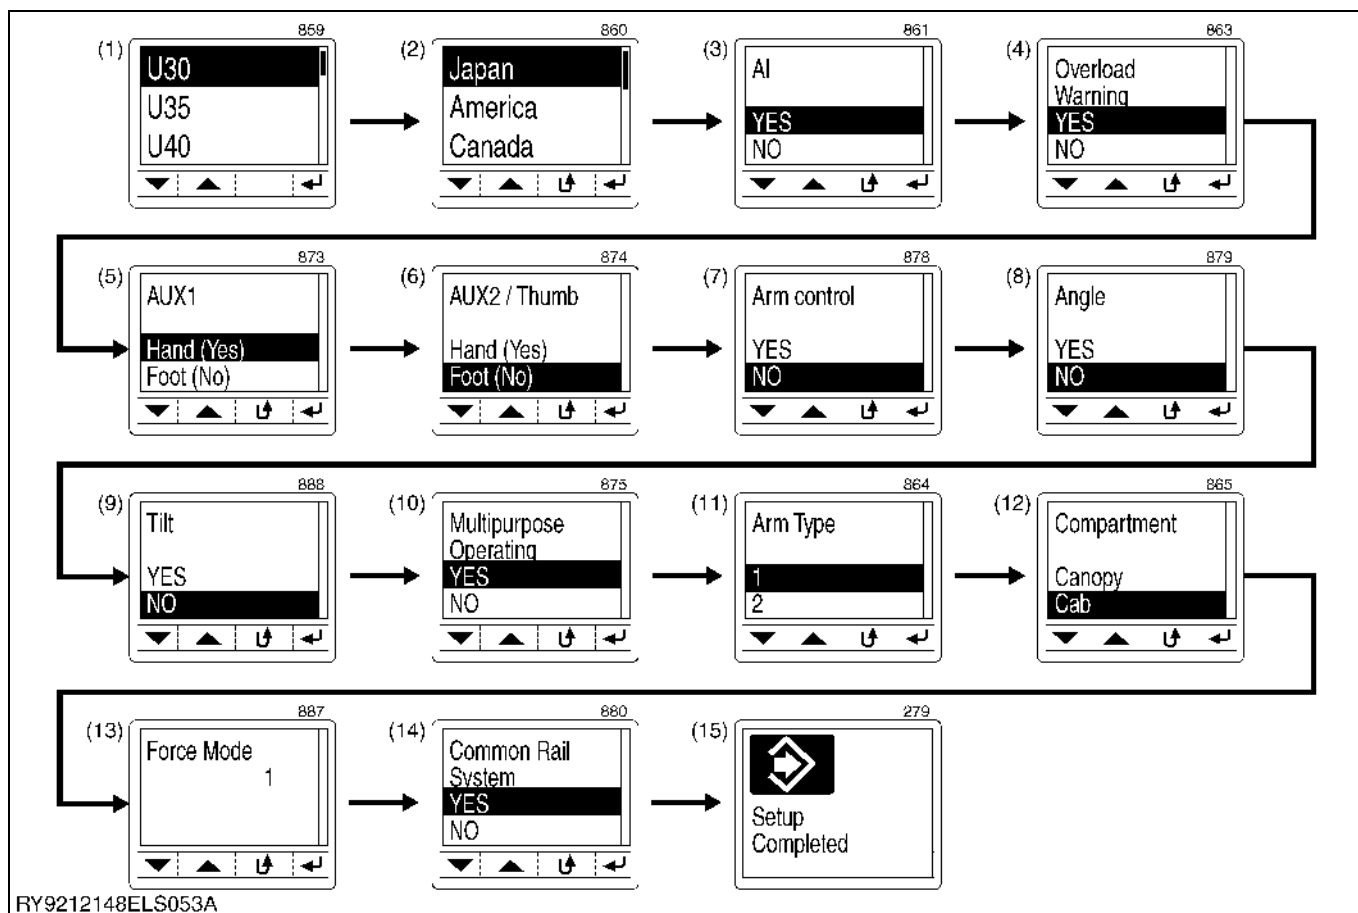


Screen No.	Content displayed	Notes
(1)	Model name	
(2)	Destination	
(3)	AI	
(4)	Overload Warning	Eur. spec.: YES N. Am. spec.: NO
(5)	AUX1	
(6)	AUX2 / Thumb	
(7)	Arm Control	Japan spec.: YES (Arm limit spec. only)
(8)	Angle	N. Am. spec.: YES (Angle spec. only)
(9)	Tilt	N. Am. spec.: YES (Tilt spec. only)
(10)	Multipurpose Operating	Has multi-purpose switch connector spec.: YES
(11)	Arm Type	2-piece boom spec.: 2 Other specs.: 1
(12)	Compartment	
(13)	Force Mode	W/ eco mode spec.:1 (KX080-4) W/AC mode spec.:2 No AC spec.: 0
(14)	Common Rail System	
(15)	Setup Completed	

RY9212158ELS0023US0

[H] Others**(A) AI Motor Drive**

- Moves the AI motor position when the accelerator dial is replaced.

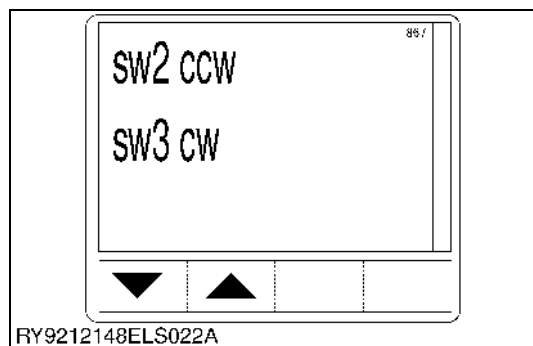

- Select Setting → Others → AI Motor Drive.
- Press switch 2 or 3 to move the lever position.

- Switch 2: Counterclockwise
- Switch 3: Clockwise


■ IMPORTANT

- The common rail spec. does not have an AI motor, so this does not function.**

RY9212148ELS0003US0

(B) Exchange (AUX1) (2/Thumb)

- Operates AUX2 via the AUX1 knob. Or operates AUX1 via the AUX2 knob.

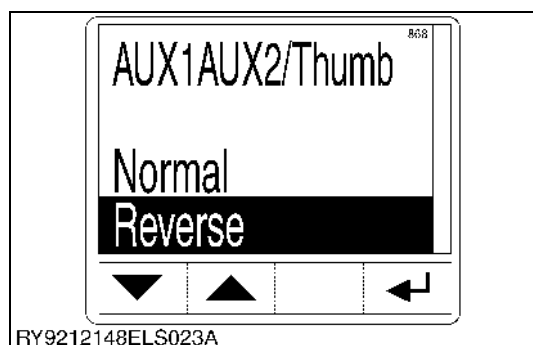


- Select Setting → Others → Exchange (AUX1) (2/Thumb).
- Select the desired operating method.
- Press SW5 to make the setting.

	AUX1	AUX2
Normal	Right control lever	Left control lever
Reverse	Left control lever	Right control lever

RY9212148ELS0004US0

(C) Periodic Check Selection

- Changes the method of canceling the periodic check guidance to automatic or to manual.

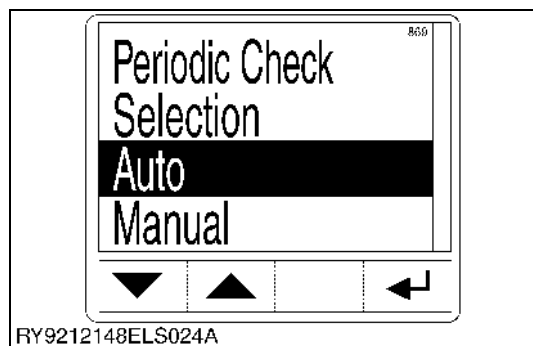


- Select Setting → Others → Periodic Check Selection.
- Select the desired operating method.
- Press SW5 to make the setting.

Selection mode	Method for canceling periodic check guidance
Auto (N.A. spec.)	Turn the key ON/OFF 10 times or operate the meter panel after making periodic checks.
Manual (Eur. spec.)	Operate meter panel after making periodic check.

RY9212148ELS0005US0

(D) Periodic Check Display

- Turns off the display of periodic check guidance. Or turns it on.

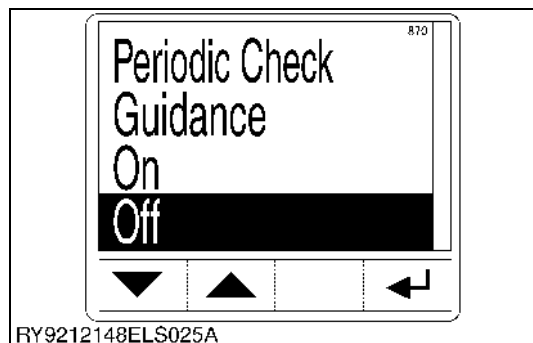


- Select Setting → Others → Periodic Check Display.
- Select the desired operating method.
- Press SW5 to make the setting.

- When shipped: displays

RY9212148ELS0006US0

(E) Annual Guidance


- Turns on the display of annual check guidance. Or turns it off.

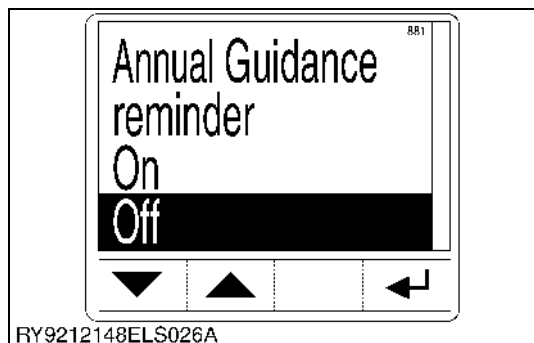

1. Select Setting → Others → Annual Guidance.
2. Select the desired operating method.
3. Press SW5 to make the setting.

- When shipped: does not display


RY9212148ELS0007US0

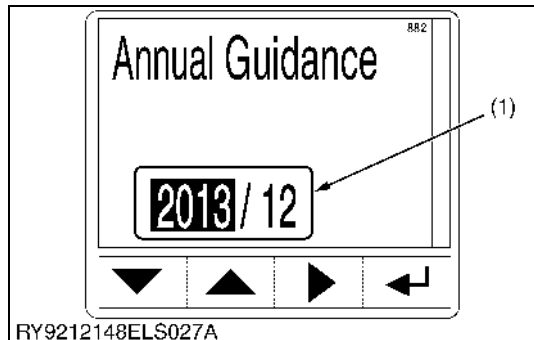**[When display is selected]**

1. Set the year and month to be displayed.
2. Press SW5 to make the setting.


- (1) Annual check guidance display period (Y/M)

RY9212148ELS0008US0

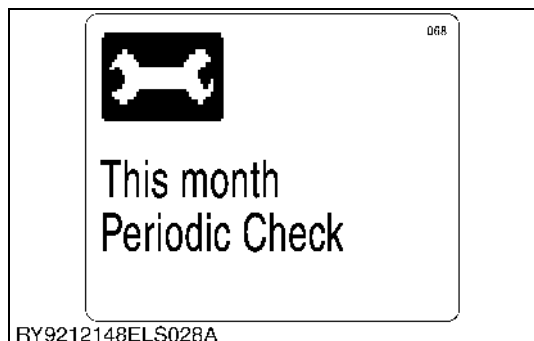**[Display when the set month is reached]****■ IMPORTANT**

- Each time the key is turned ON, the message is displayed for 10 seconds on the normal screen.
- Use Periodic Check in the user setting mode to turn it off.

RY9212148ELS0009US0

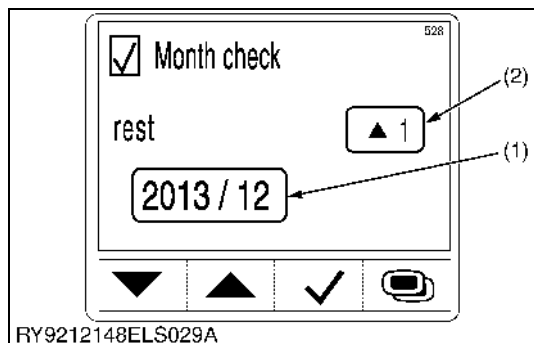**[Display from Periodic Check in the user setting mode]**

- (1) Selected year and month
- (2) Minus 1 month (Ex.: one month past the period set for the check.)

RY9212148ELS0010US0

(F) Periodic Check Set

- When the meter is replaced, sets the periodic check time prior to replacement to prevent a discrepancy in the periodic check time.




RY9212148ELS030A

1. Select Setting → Others → Periodic Check Set.
2. Enter the service hour meter prior to replacing the meter.
3. Press SW5 to make the setting.

RY9212148ELS0011US0

(G) Clock Set Warning (Y/N)

- Sets whether to display the message, "Set clock" or not.

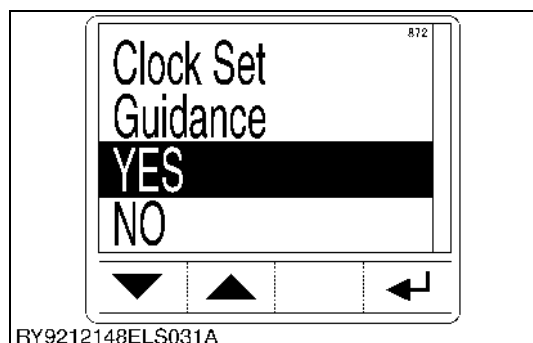

RY9212148ELS031A


1. Select Setting → Others → Clock Set Warning (Y/N).
2. Select the desired operating method.
3. Press SW5 to make the setting.

- When shipped: prompts to set the clock

RY9212148ELS0012US0

(H) Arm Control Adj (Japan spec. only)

- Set when making fine adjustments to the stop position of the arm crowd limit.

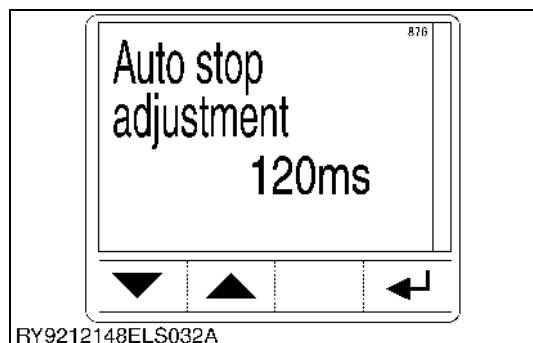

RY9212148ELS032A

1. Select Setting → Others → Arm control Adj.
2. Change to the desired value (0 to 250ms).
3. Press SW5 to make the setting.

- When shipped: 150ms
Increasing the value: stops closer to the dump side than the original stop position
Reducing the value: stops closer to the near side than the original stop position


■ IMPORTANT

- The setting is displayed and can be made on the Japan specification as well. (Does not affect this machine.)

RY9212148ELS0013US0

(I) Multipurpose Mode


- Enabling the multi-purpose switch function on machines equipped with AUX1 and AUX2 makes 10 modes available for use.
- Depending on the selected mode, it becomes necessary to add equipment to the machine, such as ON/OFF switches, solenoid valves, wire harness, hydraulic hoses, etc.
- The multi-purpose switch allows you to control added solenoid valves and to operate hydraulic devices.

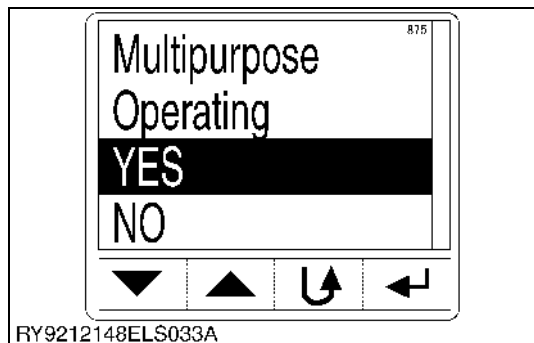

- Select Setting → Model Set.
- Make sure the multi-purpose specification is set to "YES."

■ IMPORTANT

- If the multi-purpose specification is set to "NO," the multi-purpose mode will not work, so select "YES" and redo the setting.

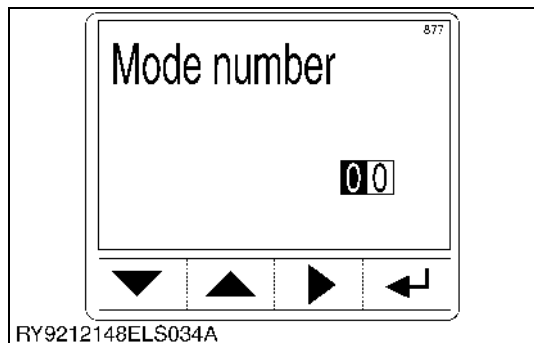

- Select Setting → Others → Multi-purpose mode.
- Enter the number of the mode you wish to use.
- Press SW5 to make the setting.

- Available mode numbers: 00 to 10
Mode number when shipped: 00
(Multi-purpose switch function disabled and AUX2 hold function disabled)

RY9212148ELS0014US0

(a) Position of Connector for Operating Added Solenoid Valve




■ IMPORTANT

- Available from serial number: 030546


- Multi-purpose connector

RY9212148ELS0048US0

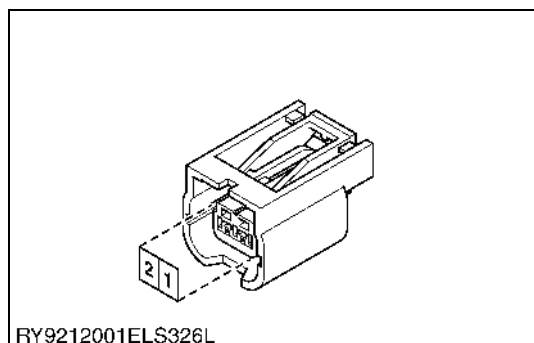

Pin No.	Terminal	Max rated amperage
<1>	+ Terminal	1 A
<2>	- Terminal	—

RY9212148ELS0049US0

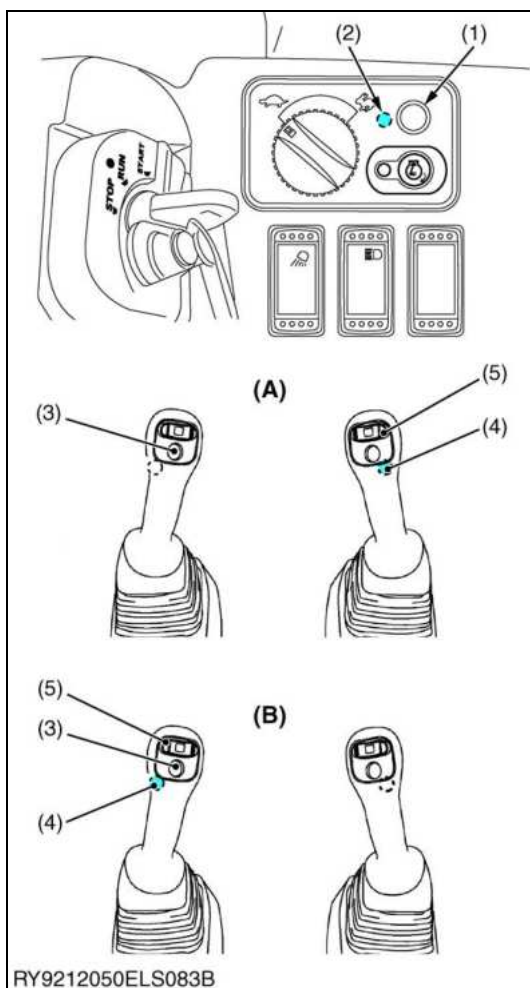(b) Names of Parts

- (1) Multi-Purpose Switch A
- (2) Indicator
- (3) Multi-Purpose Switch B
- (4) AUX2/Thumb Hold Switch
- (5) AUX2/Thumb Knob


(A) N.A. Spec.
(B) Australia/Eur. Spec.

RY9212148ELS0050US0

(c) Description of Each Mode**Mode No. 01: Enables the AUX2 hold switch.**

- Pressing the AUX2/Thumb hold switch turns the AUX2 signal ON. Pressing the switch again turns the AUX2 signal OFF.
- The AUX2/Thumb knob signal takes priority over the AUX2/thumb hold switch signal.

Example of Usage: Attachment that is not influenced by the operation of the front, such as a mower (rotary type)

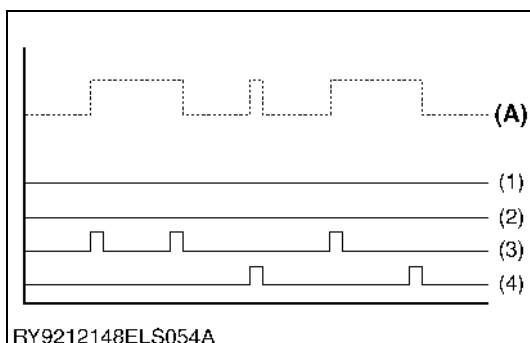


- (1) Multi-Purpose Switch A
- (2) Multi-Purpose Switch B
- (3) AUX2/Thumb Hold Switch
- (4) AUX2/Thumb Knob

(A) AUX2 signal

RY9212148ELS0051US0

Mode No. 02: (Ex.) Switches swivel/swing operation ON/OFF.

- Pressing multi-purpose switch A or multi-purpose switch B turns and keeps the multi-purpose signal ON. Pressing the switch again turns the multi-purpose signal OFF.

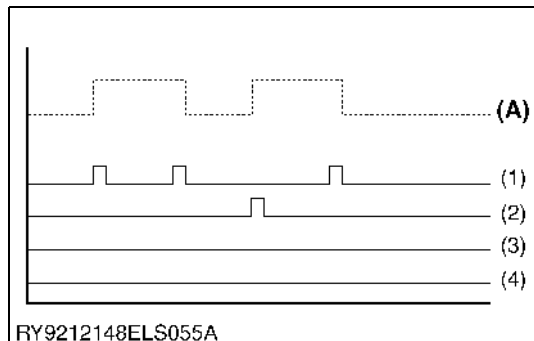

- (1) Multi-Purpose Switch A
- (2) Multi-Purpose Switch B
- (3) AUX2/Thumb Hold Switch
- (4) AUX2/Thumb Knob

(A) Multipurpose signal

RY9212148ELS0052US0


Mode No. 03: Mode No. 01 + Mode No. 02

- Enables the AUX2 hold switch.
- Pressing multipurpose switch A or multipurpose switch B switches the operation of swivel/swing ON/OFF.

RY9212148ELS0053US0

Mode No. 04: Turns the water sprinkler for asphalt planer, etc. ON/OFF.

- The multi-purpose signal is ON only while multipurpose switch A or B is pressed.

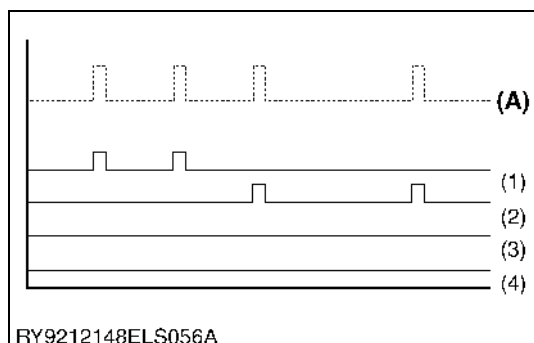

- (1) Multi-Purpose Switch A
- (2) Multi-Purpose Switch B
- (3) AUX2/Thumb Hold Switch
- (4) AUX2/Thumb Knob

(A) Multipurpose signal

RY9212148ELS0054US0


Mode No. 05: Mode No. 01 + Mode No. 04

- Enables the AUX2 hold switch.
- The multi-purpose signal is ON only while multipurpose switch A or B is pressed.

RY9212148ELS0055US0

Mode No. 06: Operates the hydraulic quick hitch (operation of blade, swing, etc.)

- Turns the multipurpose switch signal ON while multipurpose switch A is pressed.
- Operating the actuator while multipurpose switch A is pressed operates the quick hitch.
- Enables the hydraulic quick hitch for single or multi-operation

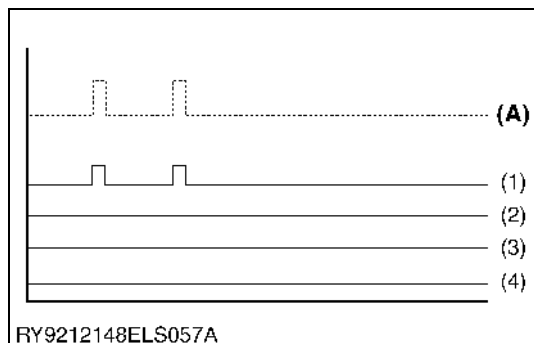

- (1) Multi-Purpose Switch A
- (2) Multi-Purpose Switch B
- (3) AUX2/Thumb Hold Switch
- (4) AUX2/Thumb Knob

(A) Multipurpose signal

RY9212148ELS0056US0


Mode No. 07: Mode No. 01 + Mode No. 06

- Enables the AUX2 hold switch.
- Operating the swing while multipurpose switch A is pressed operates the quick hitch.

RY9212148ELS0057US0

Mode No. 08: Operates the hydraulic quick hitch or for using Tiltrotator

- The multi-purpose signal is ON only while multipurpose switches A and B are pressed simultaneously.
- Enables a spring-locked hydraulic quick hitch

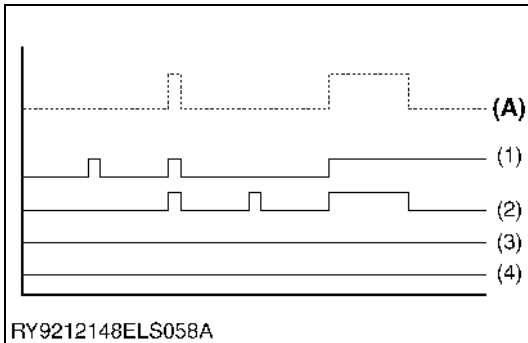

- (1) Multi-Purpose Switch A
 (2) Multi-Purpose Switch B
 (3) AUX2/Thumb Hold Switch
 (4) AUX2/Thumb Knob

(A) Multipurpose signal

RY9212148ELS0058US0


Mode No. 09: Mode No. 01 + Mode No. 08

- Enables the AUX2 hold switch.
- Operates a hydraulic quick hitch or for using Tiltrotator.

RY9212148ELS0059US0

Mode No. 10: Operates a hydraulic quick hitch (Assigns AUX2 to the dedicated quick hitch port)

- While pressing multipurpose switch A, operating the AUX2/thumb knob turns the multipurpose switch signal ON.
- Enables the hydraulic quick hitch for single or multi-operation

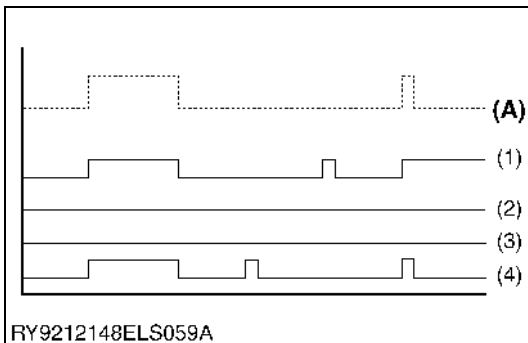


- (1) Multi-Purpose Switch A
 (2) Multi-Purpose Switch B
 (3) AUX2/Thumb Hold Switch
 (4) AUX2/Thumb Knob

(A) Multipurpose signal

RY9212148ELS0060US0

(J) All Fail Record

- Checks all the fail records since the machine was shipped.

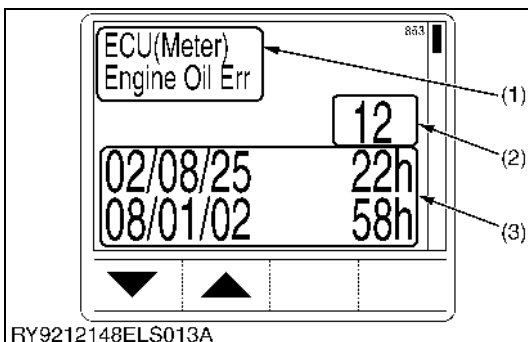

1. Select Setting → Others → All Fail Record.
2. If more than one failure record exists, each press of switch 2 or 3 toggles the display.

[Display when fail record exists]**■ IMPORTANT**

- The content displayed when retrieving all fail records is not deleted even if you delete individual fail records.

- (1) Content of failure detected by the ECU (main or meter or AS) that detected it
 (2) Number of occurrences (1 to 255)
 (3) Date and hour meter of initial occurrence and date and hour meter of last occurrence


RY9212148ELS0061US0

[Display when no fail record exists]**■ IMPORTANT**

- As the failures governed by the engine ECU are not left on this machine (all fail record), use the engine diagnosis tool.


- (1) No fail records

RY9212148ELS0062US0

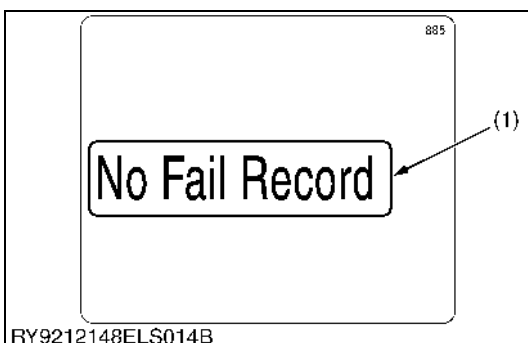

(K) Opening Select

- Changes the opening display screen.

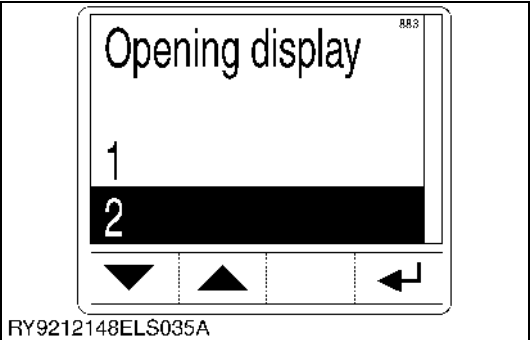


1. Select Setting → Others → Opening select.
2. Select the number of the desired display method.
3. Press SW5 to make the setting.

Number	Screen display
(1)	Silhouette of the excavator
(2)	Kubota logo


- When shipped: 2

RY9212148ELS0063US0

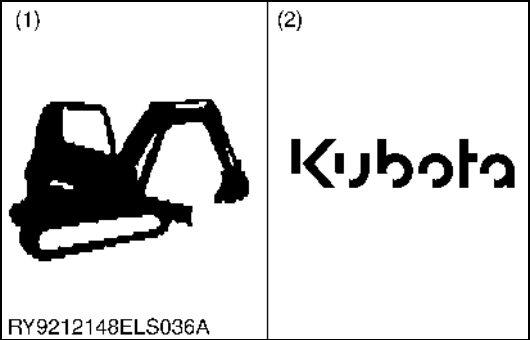

[5] SETTINGS WHEN REPLACING ELECTRONIC DEVICES

(1) When Replacing the Meter or Main ECU

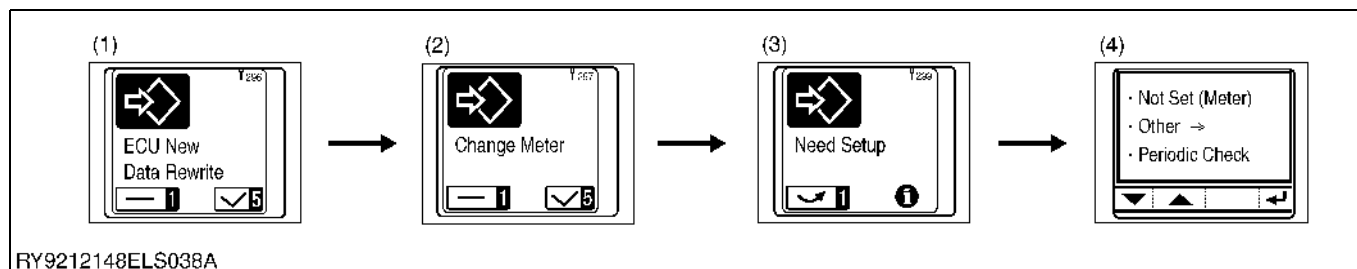


	Content displayed	Explanation
(1)	Overwrite ECU with new data	Press switch 5 "Yes" to overwrite data. Press switch 1 "No" when checking whether another machine's meter or ECU that is temporarily installed is working or not. If "No" is selected, the normal screen appears.
(2)	Meter changed	[Initializes saved settings.] Press switch 5 "Yes" if the meter has been changed. Press switch 1 "No" if the ECU has been changed.
(3)	Need setup	Pressing switch 4 allows you to check the items that need to be set up.
(4)	List of items that need to be set up	After checking the items that need to be set up, turn the key to OFF to make the settings.

■ IMPORTANT

- Never install an ECU from a previous model (spec. other than common rail) as doing so will damage the ECU.

RY9212148ELS0064US0

(2) When the Battery is Removed

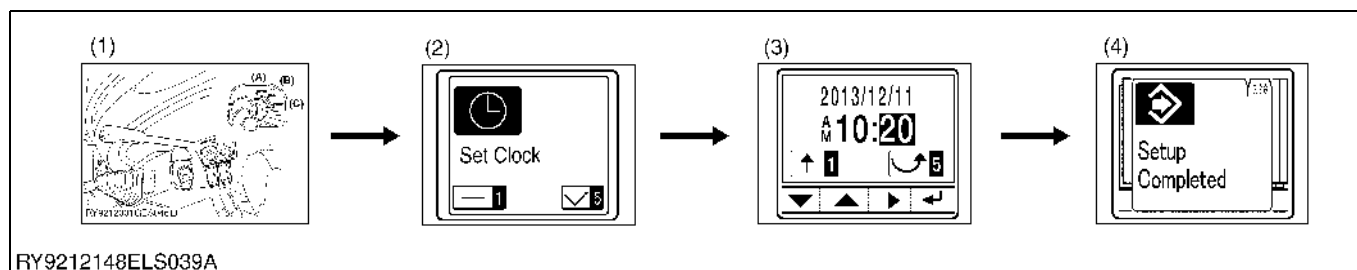

No.	Content displayed	Explanation
(1)	(A) STOP (B) RUN (C) START	Install the battery and turn the key to [RUN] .
(2)	Set Clock	Press switch 5 "Yes" to set. Press switch 1 "No" to skip setting it. If "No" is selected, the normal screen appears.
(3)	Setting screen	[Clock setting guide] • Pressing switch 4 (▶) changes the setting item from Yr→ Mo→ Day→ Hr→ Min→ Yr. • Pressing switch 2 (▼) reduces the number. • Pressing switch 2 (▲) increases the number. • Pressing switch 1 while on the clock setting screen takes the screen back without changing the time.
(4)	Setup complete	




- When in the dealer mode, it is also possible to disable the warning via "Clock Set Warning (Y/N)." (Set to display when shipped)
- After removing the battery, the condenser inside the meter holds its charge for about 2 days.





RY9212148ELS0015US0

[6] TABLE OF METER PANEL MESSAGES AND ERROR HISTORY LIST

(1) Red Warning Lamp Lit

When needed, pressing switch 4 ⓘ displays a detailed description.

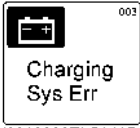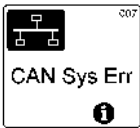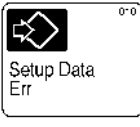No.	Screen display	Pressing SW4 ⓘ	Message in fail record	Reason detected/steps to take
1	 Engine Oil Press Err Stop Engine RY9212032ELS044B	—	[Meter] Engine oil pressure error	a)Engine oil pressure low b)Oil switch always ON c)Short in harness
2	 Over heat Engine to idle for cooling RY9212032ELS045B	—	[Meter] Overheated	Engine overheated [118°C (244°F)--automatically goes to idle]
3	 Charging Sys Err RY9212032ELS046B	—	[Meter] Charging System Error	Low alternator voltage detected a)Alternator faulty b)Fan belt loose/off c)Break in harness d)Fuse blown (10 A)
4	 Fuel Sensor Err RY9212032ELS047B	—	[Meter] Fuel Sensor Error	a)Connector disconnected b)Break in harness
5	 CAN Sys Err RY9212032ELS049B	CANSys (main)	[Meter] CAN Sys (Main)	a)Connector disconnected b)ECU (+B) fuse blown (5 A) c)Break or short in harness
		CANSys (CRS)	[Meter] CAN Sys (CRS)	a)Connector disconnected b)Slow blow fuse (CRS) blown (30 A) c)Engine ECU relay faulty d)Break or short in harness
6	 Setup Data Err RY9212148ELS043A	—	[Meter] Setup Data Error	Go through the model setup again. If this doesn't fix it, it's a faulty meter.
7	 Water got mixed with fuel RY9212148ELS060A	—	[Main ECU] Water mixed with fuel	a) Water mixed with fuel in the fuel filter [Reference value:80 to 130 ml (0.07 to 0.11 Imp-qts, 0.08 to 0.14 U.S.qts)] b)Short in the fuel filter line
8	 Travel 2 Speed Sys Err RY9212032ELS051B	2-speed solenoid	[Main ECU] 2-speed SOL	a)2-speed solenoid line short
9	 AUX1 Sys Err RY9212148ELS040A	AUX1 knob	[Main ECU] AUX1 knob	a)AUX1 knob connector disconnected b)Break or short in harness
		AUX1 right SOL	[Main ECU] AUX1 right SOL	a)AUX1 right solenoid connector disconnected b)Break or short in harness
		AUX1 left SOL	[Main ECU] AUX1 left solenoid	a)AUX1 left solenoid connector disconnected b)Break or short in harness

    No.	Screen display	Pressing SW4 	Message in fail record	Reason detected/steps to take
10	 RY9212148ELS041A	AUX2/thumb knob	[Main ECU] AUX2/thumb knob	a)AUX2 knob connector disconnected b)Break or short in harness
		AUX2/thumb right SOL	[Main ECU] AUX2/thumb right solenoid	a)AUX2 right solenoid connector disconnected b)Break or short in harness
		AUX2/thumb left SOL	[Main ECU] AUX2/thumb left solenoid	a)AUX2 left solenoid connector disconnected b)Break or short in harness
11	 RY9212032ELS052B	Over voltage	[Main ECU] Over voltage	a)Activated by 18V+ b)Alternator faulty
12	 RY9212148ELS061A	Angle right solenoid	[Main ECU] Angle right solenoid	a)Angle right solenoid line short
		Angle left solenoid	[Main ECU] Angle left solenoid	a)Angle left solenoid line short
13	 RY9212032ELS053B	Accelerator sensor	[Main ECU] Accelerator sensor	a)AI console connector disconnected b)Break or short in harness
14	 RY9212032ELS054B	Antenna	[Main ECU] Antenna	a)Connector disconnected b)Break in harness c)Antenna faulty
15	 RY9212032ELS050B	Lever lock solenoid	[Main ECU] Lever lock solenoid	a)Lever lock solenoid line short
16	 RY9212148ELS042A	Multipurpose SOL	[Main ECU] Multipurpose solenoid	a)Multipurpose solenoid line short
17	 RY9212032ELS055B	External 5V	[Main ECU] External 5V	Short in 5V line
18	 RY9212148ELS063A	1 to 64	—	Engine system error
19	 RY9212148ELS064A	Travel pressure	[Main ECU] Travel pressure	a)Pressure sensor connector disconnected b)Break or short in harness
		EP solenoid	[Main ECU] EP solenoid	a)EP solenoid connector disconnected b)Break or short in harness

RY9212158ELS0003US0






(2) Yellow Warning Lamp Lit


When needed, pressing switch 4  displays a detailed description.

No.	Screen display	Pressing SW4 	Message in fail record	Reason detected/steps to take
1	 006 Feed Fuel RY9212148ELS065A	—	—	Fuel low Displayed at 6 minute intervals.
2	 011 Water temp. Rising RY9212148ELS066A	—	—	Water temperature rising. Displayed at 6 minute intervals. (110 to 117°C, 230 to 242°F)
3	 050 Wrong Key Unable to start RY9212148ELS067A	—	—	Tried to start engine with an unregistered key (Anti-theft spec. only)
4	 051 Registered RED Key Unable to start RY9212148ELS068A	—	—	Tried to start engine with a red key (Anti-theft spec. only)
5	 064 Exceed rated Load RY9212148ELS069A	—	—	Suspended weight is over the rated load (Eur. overload warning spec. only)
6	 066 1250h Periodic Check Soon RY9212148ELS070A	Check location displayed	—	Displayed 10 hours before periodic check due
7	 067 1250h Periodic Check Passed RY9212148ELS071A	Check location displayed	—	Past time for periodic check
8	 068 This month Periodic Check RY9212148ELS072A	—	—	Annual check
9	 069 Set Clock RY9212148ELS048A	—	—	The clock may have the wrong time.

RY9212148ELS0066US0

(3) Other Screens

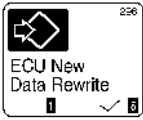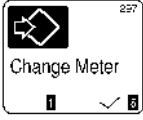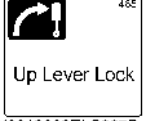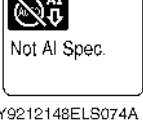
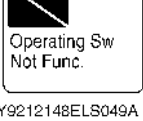
No.	Screen display	Pressing SW4 	Message in fail record	Reason detected/steps to take
1	 RY9212148ELS050A	—	—	Switch 2 (crane) pressed on machine w/o overload warning
2	 RY9212148ELS046A	—	—	When meter or ECU replaced without doing setup
3	 RY9212148ELS045A	—	—	During setup after changing the meter or the ECU, this screen comes up to confirm the meter has been changed.
4	 RY9212148ELS044A	The setup item is displayed.	—	When neither the meter nor the ECU have been replaced, but some setting needs to be made.
5	 RY9212032ELS067B	—	—	If you attempt to start the engine with the lever lock still down.
6	 RY9212032ELS074B	—	—	If you press switch 3 (AUX) with the lever lock still up.
7	 RY9212148ELS073A	—	—	If you turned the key OFF but fail to take it out (Anti-theft spec. only)
8	 RY9212166ELS083A	—	—	- If you press switch 3 (AUX) on a machine w/o AUX1/AUX2/thumb spec. - If you setup the model as AUX1 (w/o) and press switch 3 (AUX).
9	 RY9212148ELS074A	—	—	- If you press the AI switch on a machine w/o the AI spec. - If you set up the model as AI (w/o) spec. and press the AI switch.
10	 RY9212148ELS049A	—	—	If you press the multipurpose switch before registering it.

 No.	Screen display	Pressing SW4 	Message in fail record	Reason detected/steps to take
11	 RY9212148ELS075A	—	—	During communication with the key (Anti-theft spec. only)
12	 RY9212148ELS076A	—	—	Displayed for 5 seconds when put in the E mode.
13	 RY9212148ELS077A	—	—	Displayed for 5 seconds when auto-regeneration of the DPF is inhibited.
14	 RY9212148ELS078A	—	—	Displayed for 5 seconds when the inhibition on DPF auto-regeneration is cancelled.

RY9212148ELS0067US0

(4) PM Clog Level and the State of the Machine

  Inhibit switch ON

Clog Level	Warning lamp	Buzzer	Engine output	Screen	Content displayed	Status and correction
Level 0	OFF	—	—	—	—	—
Level 1	OFF	—	—	—	—	—
Level 2	Blinking (Yellow)	··PiPiPi·	—	 RY9212148ELS088A	Regeneration of DPF is inhibited. Allow regeneration.	—
Level 3	Blinking (Red)	··PiPiPi· (0 to 50 sec.) Pi-...Pi- (50 to 60 sec.)	50 %	 RY9212148ELS089A	Regeneration of DPF is inhibited. Allow regeneration. HP limited to low power.	*2
		Pi-...Pi- (from 60 sec.)	—	 RY9212148ELS092A	Engine forced to stop Increase RPM and restart	Turn and maximize the accelerator dial and restart *1
Level 4	Blinking (Red)	PiPiPiPi (0 to 50 sec.) Pi-...Pi- (from 50 sec.)	50 %	 RY9212148ELS085A	DPF clogged up Needs maintenance	Use the engine diagnosis tool and regenerate it manually *1 *2
Level 5	Blinking (Red)	PiPiPiPi (Continue)	50 %	 RY9212148ELS091A	Replace the DPF	DPF is clogged. Needs replacement.

The engine rpm drops up to only 1900 rpm while pressing the AI switch.

PM clog level does not change when the key is turned OFF. The level stays the same when the engine restarts.

*1 : If the lever lock is up, the engine stops forcibly in 60 seconds.

*2 : If the lever lock is down, the engine does not stop. The same buzzer from 0 to 50 sec. keeps sounding.

RY9212148ELS0221US0

Inhibit switch OFF

Clog Level	Warning lamp	Buzzer	Engine output	Engine RPM	Screen	Contents displayed	Status and correction
Level 0	OFF	—	—	—	—	—	—
Level 1	Blinking (Yellow)	..PiPiPi.. (Every 60 sec.)	—	—	 Exhaust temp rise Operate Carefully Possible to work. RY9212148ELS080A	Exhaust temperature rising Operate carefully Can continue working	More than 1900 engine RPM needed: DPF regenerates Less than 1900 engine RPM: DPF may not auto-regenerate due to open air and water temp.
Level 2	Blinking (Yellow)	..PiPiPi.. (Every 60 sec.)	—	More than 1900 rpm	 Exhaust temp rise Operate Carefully Possible to work. RY9212148ELS080A	Exhaust temperature rising Operate carefully Can continue working	Being auto-regenerated
				Less than 1900 rpm	 Exhaust temp rise Operate Carefully Possible to work. RY9212148ELS080A	Exhaust temperature rising Operate carefully Can continue working	- When the engine RPM is low, DPF may not auto-regenerate due to open air and water temp. - The screen changes every 3 sec.
					 Raise engine speed RY9212148ELS082A	Increase engine RPM	
Level 3	Blinking (Yellow)	PiPiPi (Every 60 sec.)	50 %	More than 1900 rpm	 Exhaust temp rise Operate Carefully Possible to work. RY9212148ELS080A	Exhaust temperature rising Operate carefully Can continue working	- Being auto-regenerated - The screen is changed every 3 sec.
					 Now HP limited RY9212148ELS079A	HP limited to low power	
	Blinking (Red)	..PiPiPi.. (0-50 sec.)	50 %	Less than 1900 rpm	 Exhaust temp rise Operate Carefully Possible to work. RY9212148ELS081A	Exhaust temperature rising Operate carefully Can continue working	- When the engine RPM is low, DPF may not auto-regenerate due to open air and water temp. - The screen changes every 3 sec.
		Pi...Pi- (50-60 sec.)			 Raise engine speed Now HP limited RY9212148ELS084A	Increase engine RPM HP limited low power	
		Pi...Pi- (from 60 sec.)	—		 Warning-stop engine. Rev up and restart. RY9212148ELS092A	Engine forced to stop Increase RPM and restart	Turn and maximize the accelerator dial and restart. *1
Level 4	Blinking (Red)	PiPiPiPi (0-50 sec.) Pi...Pi- (from 50 sec.)	50 %	—	 DPF is clogged up Need repairing RY9212148ELS085A	DPF clogged up Needs maintenance	Use the engine diagnosis tool and regenerate it manually *1 *2

Clog Level	Warning lamp	Buzzer	Engine output	Engine RPM	Screen	Contents displayed	Status and correction
Level 5	Blinking (Red)	PiPiPiPi (Continue)	50 %	—	 Exchange the DPF.	Replace the DPF	DPF is clogged. Needs replacement.

RY9212148ELS091A

The engine rpm drops up to only 1900 rpm while pressing the AI switch.

PM clog level does not change when the key is turned OFF. The level stays the same when the engine restarts.

*1 : If the lever lock is up, the engine stops forcibly in 60 seconds.

*2 : If the lever lock is down, the engine does not stop. The same buzzer from 0 to 50 sec. keeps sounding.

RY9212148ELS022US0

(5) Table of Engine System Error Numbers



Symptom when error occurs	●	Always happens
	○	May happen

No. Displayed	Error location	Engine performance			Notes
		Limited RPM	Limited HP	Won't start	
1	RPM sensor system	○	○	○	
2	Fuel/rail pressure system	●	●	●	Fuel may run out.
3	SCV system error	●	●		
4	Intake temperature sensor system				
5	Water temperature sensor system	●	●		
6	Fuel temperature sensor system				
7	Injector system	●	●	○	
8	Intake pressure sensor system		○		
9	Battery voltage related	●	●	○	
10	Sensor voltage related	●	●	○	
11	Main relay related				
12	Atmospheric pressure sensor related		○		
13	EGR valve related		●		
14	EGR starting to close warning				
15	Emissions warning		●		
16	Air heater related				
17	Engine ECU	○	○	○	
18	Communication error	○	○		
19	Mass airflow sensor related		○		
20	Intake throttle				
21	Pressure differential sensor related				
22	Exhaust temperature sensor (DOC intake)				
23	Exhaust temperature sensor (DOC outlet)				
24	Exhaust temperature sensor (DPF outlet)				
25	Simultaneous break in all exhaust temperature sensors				
26	DOC reaction	●	●		
27	DPF regeneration time up				
28	Insufficient DPF regeneration water temperature rise				
29	Regeneration too frequent		●		
30	Engine fuel system (P/L)	●	●		
31	Engine fuel system (rail pressure)	●	●		
32	Engine fuel system (fuel leak)	●	●	●	
33	Engine fuel system (SCV)	●	●	●	
34	Engine fuel system (Supply pump)	●	●		
35	Engine air intake system (Insufficient intake)	●	●		
36	Engine air intake system (Insufficient boost pressure)	●	●		
37	Engine exhaust temperature (DOC inlet temperature error)			●	
38	Engine exhaust temperature (DPF inlet temperature error)			●	
39	Engine exhaust temperature (DPF outlet temperature error)			●	
40	Starter relay start warning				
60	Other errors	○	○	○	

RY9212148ELS0069US0

3. INSPECTIONS

[1] POWER AND GROUND

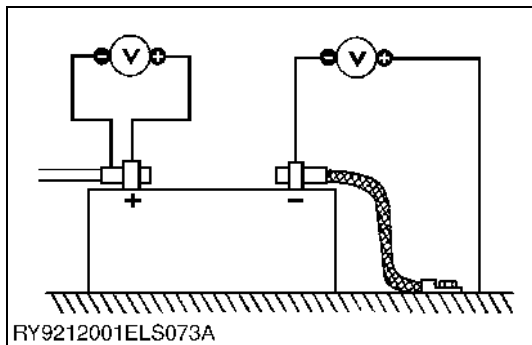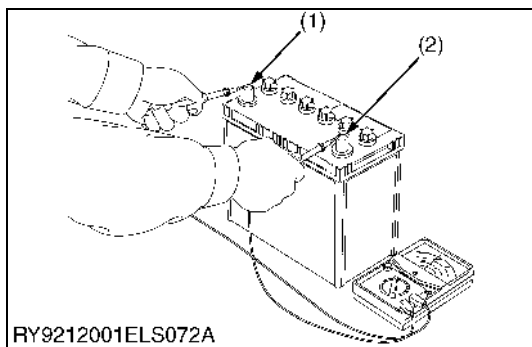

Battery

Check the voltage between the terminals

1. Connect a circuit tester between the (+) and (-) terminals of the battery and measure the voltage across the terminals.
2. If the measurement is below factory specs, check the specific gravity of the electrolyte.

Voltage between terminals	Factory specification	At least DC 12 V

Check the condition of terminal connections



1. Put an electrical load on the battery. (E.g.: Turn the key switch to RUN and turn a worklight on.
2. Connect the (+) side of the circuit tester to the (+) terminal of the battery and the (-) side of the circuit tester to the (+) battery cable. Measure the voltage.
3. Connect the (-) side of the circuit tester to the (-) terminal of the battery and the (+) side of the circuit tester to the (-) battery cable. Measure that voltage.
4. If the measurements are greater than factory specs, check the condition of the contacts at the terminals.

Voltage between terminals	Factory specification	At least DC 0.1 V

(1) (-) Terminal

(2) (+) Terminal

RY9212001ELS0034US0

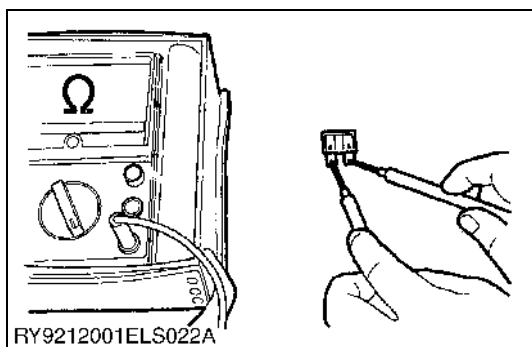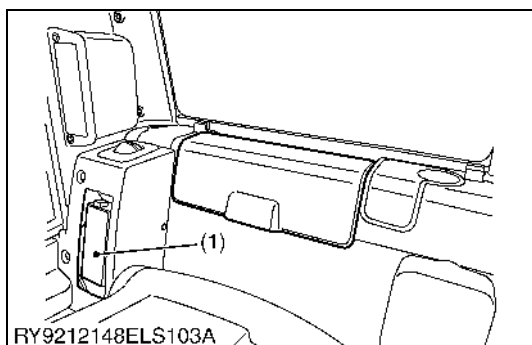

Ground

Check whether GND wire(s) are securely connected to the body.

RY9212148ELS0136US0

Fuses

■ IMPORTANT

- When replacing a fuse, always use the same capacity fuse and replace it after determining why it blew.


(1) Fuse box

RY9212148ELS0138US0

Inspecting fuses

- Measurement parameter: check continuity across its terminals


RY9212001ELS0031US0

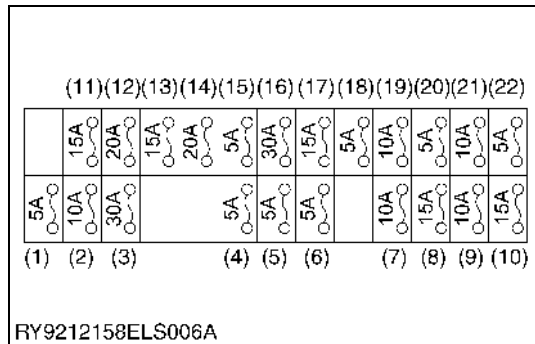

Fuse Layout and Capacities

(1)	A/C Controller (+B)	(12)	Cab Work Light
(2)	Meter (+B)	(13)	Radio (AC)
(3)	Blower Motor	(14)	Fuel Filter Heater
(4)	Relay	(15)	ECU (+B)
(5)	ECU (AC)	(16)	ECU (POWER)
(6)	Room Light	(17)	Beacon
(7)	Starter	(18)	Horn Switch
(8)	Wiper/Washer	(19)	Horn
(9)	Compressor	(20)	Lever Lock
(10)	Electrical Outlet	(21)	Alternator
(11)	Front Work Light	(22)	Fuel Pump

RY9212158ELS0016US0

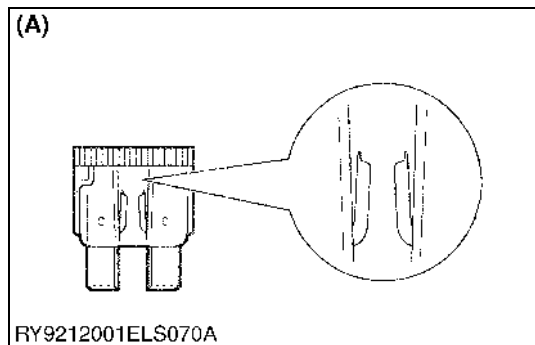

Precautions when a Fuse Blows

When a fuse blows, there are 2 potential causes. The first is when an overload of current exceeds the rated amperage of the fuse, blowing it; the other is when it blows due to a repetitive, intermittent current.

These two cases can be readily recognized visually, so when a fuses blows, take note of the following points.

1. When a fuse blows due to an overload of current exceeding its rated capacity.

An overload current produces a blown fuse such as shown at left **(A)**.

You should not immediately replace a fuse that blows in this way with a new one.

The fuse will just blow again when subjected to the overload current, so first inspect the circuit for a short or a problem with a device, then after fixing the problem, install a fuse of the same capacity.

The purpose of the original fuse is to provide a margin of safety, so never replace a fuse with one of a higher capacity.


If you replace a fuse with one of a higher capacity, it presents the danger of a current overload damaging the electrical device(s) and/or the wiring in the circuit before blowing the fuse.


2. When a fuse blows due to a repetitive, intermittent current.

A repetitive, intermittent current produces a blown fuse such as shown at left **(B)**. In general, this kind of blown fuse occurs after a relatively long period of time, so it does not happen very often. With this kind of blown fuse, it is OK to replace it with a fuse of the same capacity.

(A) Fuse Blown by Current Overload (B) Fuse Blown by Thermal Fatigue

RY9212001ELS0032US0

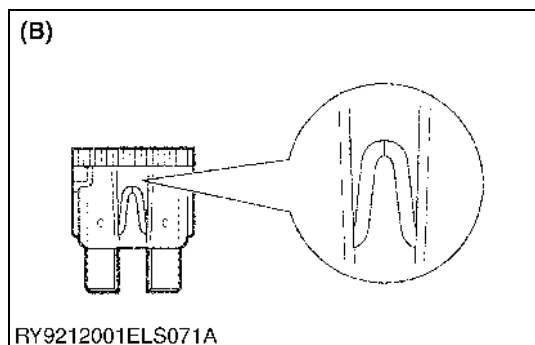

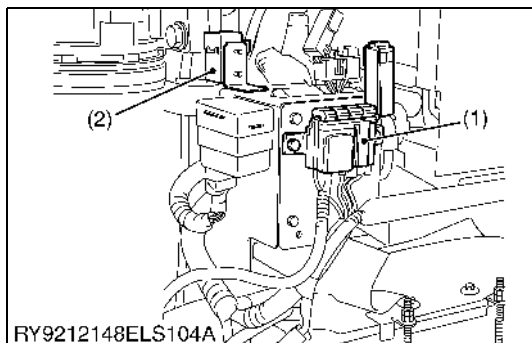

Slow-blow fuses


■ IMPORTANT

- When replacing a slow-blow fuse, always use the same capacity fuse and replace it after determining why it blew.

(1) Slow-blow fuse box

(2) Electric fan fuse


RY9212148ELS0139US0

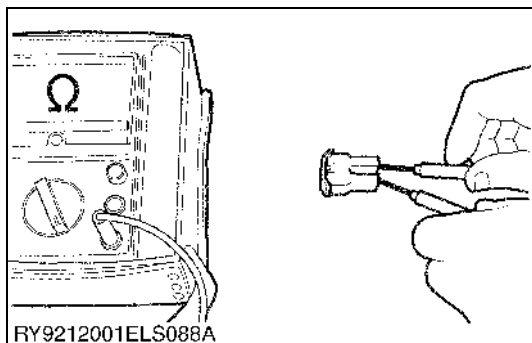

Inspecting slow-blow fuses

- Measurement parameter : check continuity across its terminals

RY9212001ELS0028US0

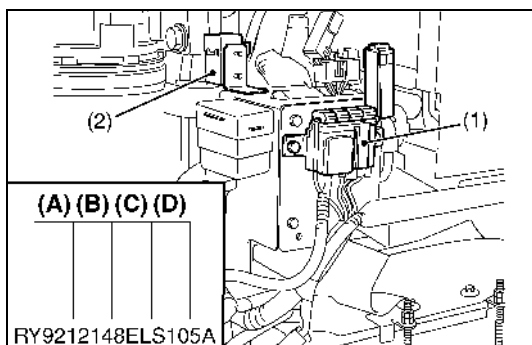

Slow Blow Fuse Layout and Capacities

(A)	Alternator (100 A)
(B)	Engine ECU (30 A)
(C)	Main Power (60 A)
(D)	Engine Power (50 A)

(1) Slow-blow fuse box

(2) Electric fan fuse (20 A)

RY9212148ELS0141US0

[2] STARTING AND STOPPING DEVICE



Key switch

Checks

- Remove the key switch's 3P connector.
- Turn the key switch to the RUN position and then check the continuity between the red / white wire terminal of the connector on the key switch side and the red wire terminal on the connector.
- Turn the key switch to the START position and then check the continuity between the black/white wire terminal of the connector on the key switch side and the red wire terminal on the connector.

Key switch circuit table

(●—● : Continuity)


Position	(3)	(1)	(2)
STOP			
RUN	●—●	●—●	
START	●—●	●—●	●—●

RY9212050ELS011A

(1) Red / White
(2) Black / White

(3) Red

RY9212050ELS0027US0

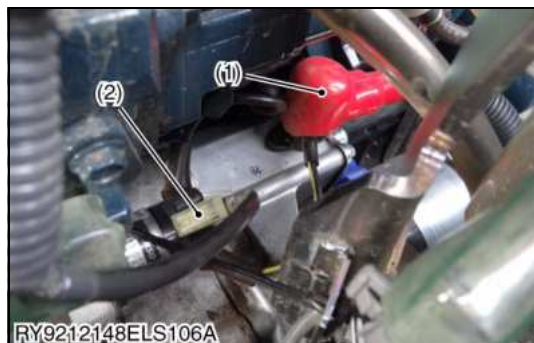

Starter

1. Power supply to terminal B

■ IMPORTANT

- The battery voltage always exists at terminal B of the starter, so do not short it during inspection.

1. Connect the (+) side of the circuit tester to terminal B of the starter and the (–) side to the body and measure the voltage.
2. If the measurement meets the factory spec, the harness between the battery and terminal B is OK.
3. If the measurement is outside of factory specs, check the condition of the battery cable (+) contact and that of the GND (–) cable and the body.

Measured voltage	Factory specification	11 to 14 V (battery voltage)

2. Power supply to starter's pull-in and holding coils

1. Remove the connector from the starter's S terminal.
2. Connect the (+) of the circuit tester to the connector on the harness side and the (–) to the body.
3. Put the machinery operation lock lever in the lock position and measure the voltage with the key switch held in the START position.

If the measurement meets factory specs, the circuit from the battery to the S terminal is OK (harness, key switch, auto-release relay).



Measured voltage	Factory specification	11 to 14 V (battery voltage)

(1) Terminal B

(2) Terminal S

RY9212148ELS0137US0


[3] RELAY LAYOUT

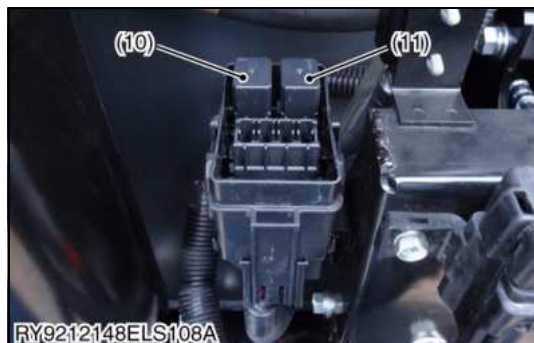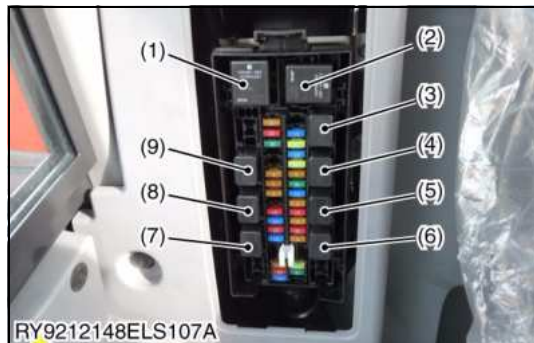

Relay Layout and Capacities

(1)	Power relay (40A)
(2)	Glow relay (40A)
(3)	Horn relay (20A)
(4)	Starter relay (20A)
(5)	Beacon relay (20A)
(6)	Worklight relay (20A)
(7)	ECU (Power) relay (20 A)
(8)	Blower relay (20A)
(9)	Compressor relay (20A)
(10)	Condenser relay (20 A)
(11)	Engine ECU relay (20A)

RY9212148ELS0142US0

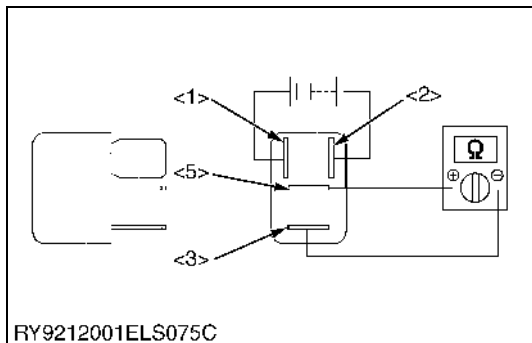

Testing the Starter Relay

1. Voltage check

[Measurement Conditions]

1. Remove the starter relay.
2. Key switch: ON
3. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (+ terminal side)	Pin No.
1	Starter relay	<1>	Starter relay	<2>
2	Starter relay	<1>	Body GND	—

Normal: 12V (battery voltage)

Irregular: Large discrepancy from 12V

2. Continuity check

[Measurement Conditions]


1. Key switch: OFF
2. Remove the starter relay.
3. Apply battery voltage across relay terminals 1 and 2.
4. Check for continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (+ terminal side)	Pin No.
1	Starter relay	<5>	Starter relay	<3>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0143US0

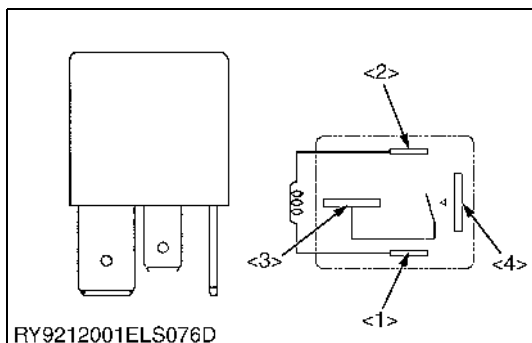

Glow relay inspection

1. Voltage check

[Measurement Conditions]

1. Remove the glow relay.
2. Key switch: ON
3. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (+ terminal side)	Pin No.
1	Glow relay	<1>	Glow relay	<2>

Normal: 12V (battery voltage)

Irregular: Large discrepancy from 12V

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Remove the glow relay.
3. Apply battery voltage across relay terminals 1 and 2.
4. Check for continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (+ terminal side)	Pin No.
1	Glow relay	<3>	Glow relay	<4>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0144US0

4. TROUBLESHOOTING (START-UP EQUIPMENT VERSION)

Engine does not start

Checkpoint	Cause	Solution
Check whether "Wrong Key" is displayed when it is in the start position. Determine whether it is the registered key or not in the tester mode.	The engine was not started with the registered key.	Start the engine with the registered key.
Check slow-blow and other fuses.	Slow-blow and/or other fuses are blown.	After determining the cause of slow-blow and/or other fuses blowing, replace them.
Check whether GND wire(s) are securely connected to the body.	Ground defective	Tighten GND wire bolt(s).
Check battery voltage and specific gravity.	Battery fault	Recharge or replace the battery.
Check continuity between key switch terminals.	Key switch faulty	Replace the key switch.
Measure the voltage at terminal B of the starter.	Break in continuity of the harness or starter relay.	Repair the harness. Replace the harness, starter relay and/or fuses.
Measure the voltage at terminal S of the starter.	Break in continuity in the harness, starter relay and/or fuses.	Repair the harness. Replace the harness, starter relay and/or fuses.

The engine fails to start sometimes.

Checkpoint	Cause	Solution
Is the key on a metal keyring or have a metal fob?	The key fob and/or keyring are interfering with communication between the key and the antenna.	Get rid of the key fob and/or ring.

Engine starts even with unregistered keys

Checkpoint	Cause	Solution
Check whether the anti-theft system is "OFF" or not initialized.	As the anti-theft function is not working, even unregistered keys can start the engine.	Please contact Kubota service.

RY9212148ELS0135US0

5. METHODS FOR DIAGNOSING ERRORS

The most important thing in diagnosing a malfunction is inferring the cause of the problem. It is important because inferring the cause allows for a narrowing of the places that need to be inspected, and thus reducing wasted inspection work. And the inference has to be supported by theory and practice--relying on intuition does not work.

RY9212038ELS0013US0

[1] GUIDE TO DIAGNOSING ERRORS

When diagnosing errors if you fail to go through the proper procedures, it clouds the view of the actual problem and conversely, in the end you are liable to make an incorrect guess about the cause and repair. For that reason, it is necessary to think through the following 4 steps when diagnosing errors.

1	Error Diagnosis Procedure	Accurately observe what the problem is. Check whether that problem is the only one or whether there are other problems.
2	Infer the Cause of the Error	When inferring the cause of an error, it is important to grasp the circuits in the wiring diagram as a system. Of course you have to know how switches, relays, etc. function, but having a broader view of the causes of errors, such as from experience of what caused past errors that you repaired, is necessary to making inferences.
3	Test Specified Locations and Find the Cause	Error diagnosis is a matter of building up facts from tests and step by step getting closer to the real cause. While making checks, you always have to be thinking, which test can I make where to be more effective.
4	Check your Repairs	After repairing a fault, always check and make sure the system is functioning normally. And make sure no new problem has arisen.

These materials provide information necessary for diagnosing errors and the overall wiring diagram and circuit diagrams for each system were compiled with a view to simplifying error diagnosis.

1. The circuit diagrams show the layout of connectors and wiring routing on the machine.
2. The circuit diagrams show the structure of circuits in the system and indicate the normal (not operating) state of all of the kinds of switches.
3. The flow of electricity when switches are operated is explained based on the circuit diagrams and how each device operates is indicated.
4. Troubleshooting tips are provided to help identify the causes of errors from multiple pieces of information and using common sense.

If you cannot pinpoint the cause based on these tips, follow the circuit for each system to diagnose the error.

RY9212148ELS0071US0

[2] ERROR DIAGNOSIS PROCEDURE

All diagnoses of malfunctions should narrow down the cause via the following procedures and specify the faulty location.

(Not following the procedures results in not knowing the cause of the fault.)

1	Observing the Malfunction	- Normal meter display - Abnormal meter display
2	Checking the Faulty Line	Check in the meter's service mode. Checking for Breaks in Wiring
3	Specify the Faulty Circuit with a Circuit Tester	Test related circuits with a circuit tester. Specify any faulty circuits in a harness.
4	Diagnose Sensors and Actuators with the Tester	Judge sensors and actuators as normal or abnormal.
5	Final Operation Check	Clear the history display after completing repairs. After clearing the history and thoroughly checking operations, check for a history display again.


RY9212038ELS0015US0

[3] TESTING WITH A CIRCUIT TESTER


Testing Voltage and Continuity at a Connector

To prevent damage to the connector terminal contacts and/or reducing the water-proofing of the connector when testing a connector for voltage and/or continuity, follow the guidelines below.


RY9212038ELS0016US0

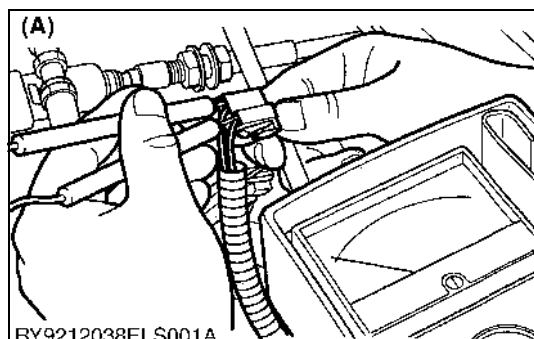


RY9212038ELS001A

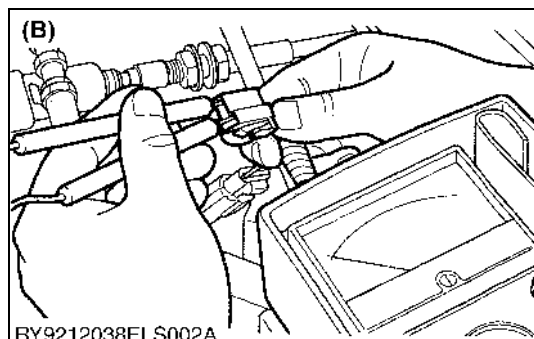


RY9212038ELS002A

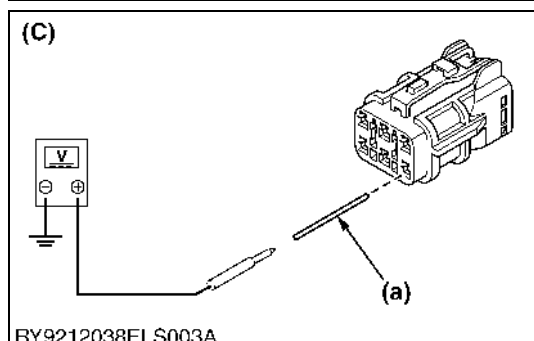

RY9212038ELS003A

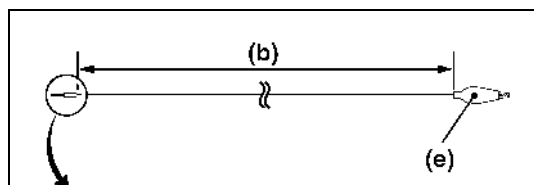

RY9212038ELS0017US0

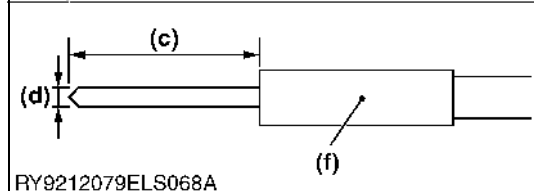

RY9212079ELS068A

1. General (not waterproof) connectors
 - Insert the test lead from the harness side. Female terminals are particularly prone to damage so always insert the test leads from the harness side.
 - ECU connector terminal pins are extremely small, so do not try and force a test lead in; use the special tool.
2. Waterproof connectors
 - If you try to test the circuit when it is in a closed state and force the test leads in from the harness side, it will reduce the effectiveness of its waterproofing, leading to corrosion, so never do this.
 - When testing a male pin, touch the test lead directly to the pin. In this situation, be very careful not to short circuit across connector terminals.
3. Special tools
 - When the connector pin holes are smaller than the test leads, use thin wires.



RY9212079ELS070A

- (A) Correct Example
 (B) Incorrect Example
 (C) Using a Special Tool

- (a) Measuring Harness
 (b) 600 to 700 mm (23.7 to 27.5 in.)
 (c) 10 mm (0.39 in.)
 (d) 0.6 mm (0.02 in.)
 (e) Clip
 (f) Tape


RY9212038ELS0017US0

6. TROUBLESHOOTING (METER PANEL VERSION)

[1] MACHINE RELATED SYSTEM

(1) Engine Oil Pressure Errors

[A] Checking the Meter Panel

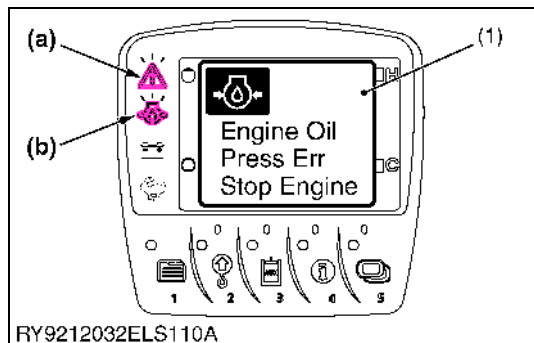

1. Information displayed on the meter panel

- When an error appears on the meter panel, stop the engine right away.
- Check the level of the engine oil.
- Check whether or not the warning lamp (a) on the panel is blinking red.
- Check whether the oil lamp (b) is lit in red or off.


[Reason error screen displayed]

- Engine oil pressure low
- Oil switch always ON
- Short in harness

- (1) Engine Oil
Press Err
Stop Engine

- (a) Warning Lamp
(b) Oil Lamp

RY9212148ELS0072US0

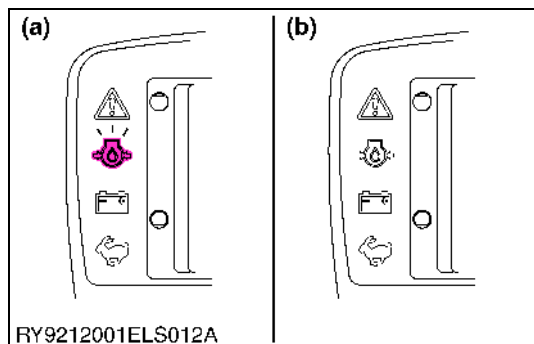


[Test Conditions]

- Key switch : ON

- (a) If the oil lamp is lit : caused by a short
(b) If the oil lamp is off : caused by break in wiring

RY9212148ELS0073US0

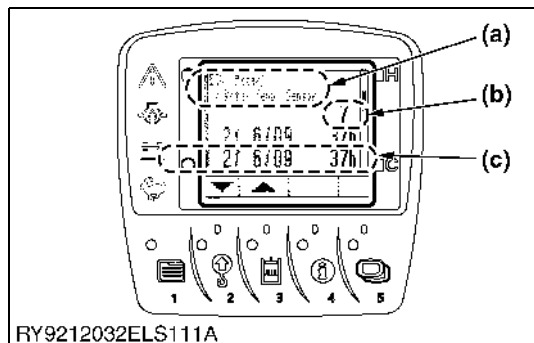


2. Reading the failure history

- Select the failure history read mode.
- Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.

Ex.) The last failure record was February 6, 2009 at 37 hours.

- (a) Failure (c) The Last Breakdown Date (y/m/d) and Hour Meter.
(b) Number of Failure

RY9212032ELS0001US0

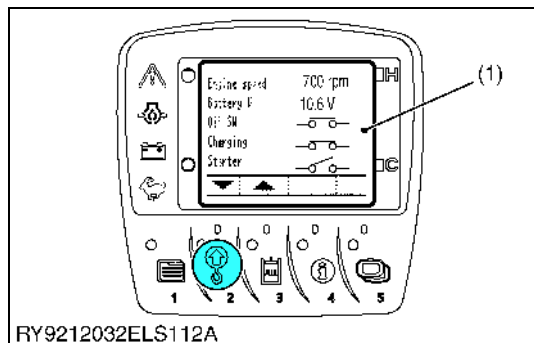

3. Tester mode


- Select the tester mode.
- Check the operation of the oil switch according to the table below.

	Regu- lar	Oil Lamp	When cut off	Oil Lamp	When shorted	Oil Lamp
Key Off	—○—	Off	—○—	Off	—○—	Off
Key On	—○—	Lit	—○—	Off	—○—	Lit
Key Start	—○—	Off	—○—	Off	—○—	Lit

- (1) Engine Speed
Battery V
Oil SW
Charging
Starter

RY9212148ELS0074US0

[B] Inspecting each Device Visually and Physically

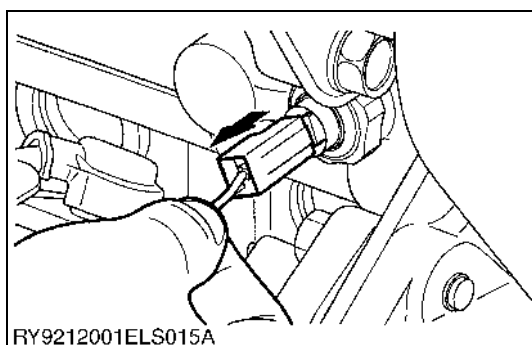

1. Causes when a break in wiring

[Test Conditions]

1. Key switch : OFF
2. The oil switch connector is disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the operation of the oil switch again in the tester mode.

RY9212148ELS0075US0




2. Causes when a short

[Test Conditions]

1. Key switch : OFF
2. The oil switch wire is pinched against or touching the body.
If the insulation is damaged, repair it properly and check the operation of the oil switch again in the tester mode.

RY9212148ELS0076US0

[C] Testing with a Circuit Tester

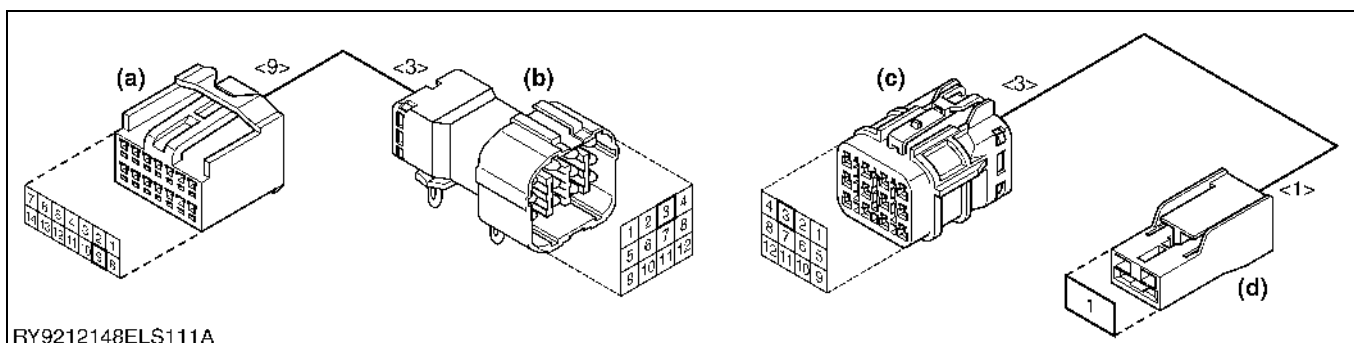

(a) Meter panel connector

(b) Engine (solenoid) connector

(c) Main (solenoid) connector

(d) Engine oil pressure switch connector

- If connectors (b) (c) are removed, the engine will start but the machine will not operate.

RY9212148ELS0145US0

1. Voltage check

[Measurement Conditions]

1. Disconnect the engine oil pressure switch connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Engine oil pressure switch	<1>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0146US0

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.


Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Engine oil pressure switch	<1>	Main (solenoid)	<3>
(2)	Engine (solenoid)	<3>	Meter panel	<9>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0147US0

[D] Testing the Equipment Itself

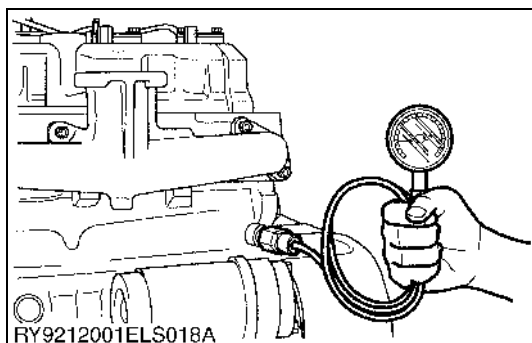

1. Measuring engine pressure

[Measurement Conditions]

1. Remove the engine oil switch, attach a pressure gauge and measure the pressure.

Engine Oil Pressure	At idle	Usage limit	50 kPa 0.51 kgf/cm ² 7.25 psi
	At Rated RPM	Factory specification	200 to 390 kPa 2.04 to 3.98 kgf/cm ² 29.01 to 56.56 psi
		Usage limit	150 kPa 1.53 kgf/cm ² 21.76 psi

Tightening torque	Oil switch tapering screw R1/8	15 to 19 N·m 1.5 to 1.9 kgf·m 11.1 to 14.0 lbf·ft

RY9212148ELS0077US0

[E] Steps to Take after Completing Repairs



1. Delete failure record


1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

(1) No Fail Record

RY9212148ELS0148US0

(2) Charging System Errors

[A] Checking the Meter Panel

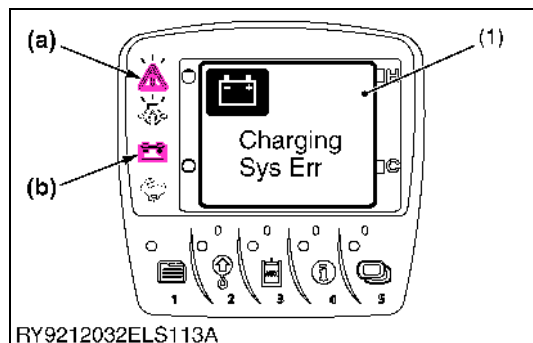

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Check whether the charging lamp (b) is lit in red or off.

[Reason error screen displayed]


- Alternator faulty
- Fan belt loose/off
- Break in the harness
- Fuse blown (10A)

(1) Charging Sys Err

(a) Warning Lamp

(b) Charging Lamp

RY9212148ELS0078US0

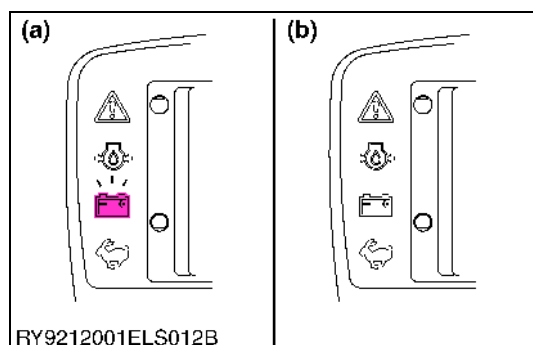


[Test Conditions]

1. Key switch : ON

(a) If the charging lamp is lit : caused by a short

(b) If the charging lamp is off : caused by break in wiring

RY9212148ELS0079US0

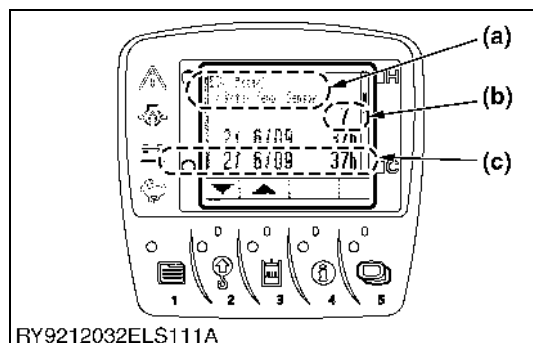

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.


Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

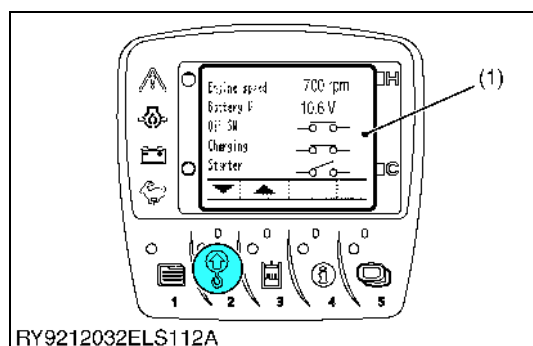

3. Tester mode


1. Select the tester mode.
2. Check the operation of the charge according to the table below.

	Regu- lar	Charge	When cut off	Charge	When shorted	Charge
Key Off		Off		Off		Off
Key On		Lit		Off		Lit
Key Start		Off		Off		Lit

- (1) Engine Speed
Battery V
Oil SW
Charging
Starter

RY9212148ELS0080US0


[B] Inspecting each Device Visually and Physically

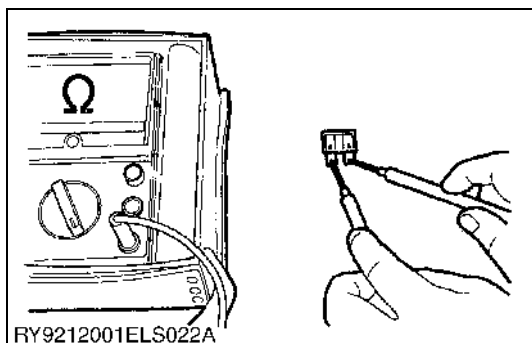

1. Checking fuses

Check whether the alternator fuse (10A) is blown.

RY9212001ELS0064US0

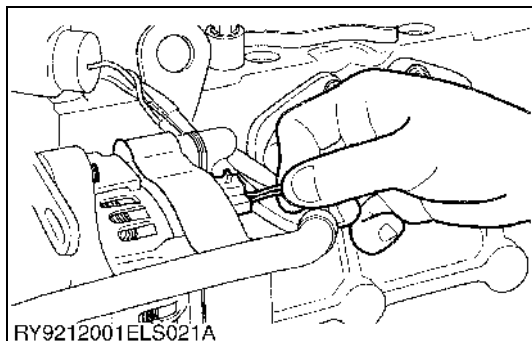

2. Causes when a break in wiring

[Test Conditions]

1. Key switch : OFF
2. The alternator connector is disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the operation of the charging switch again in the tester mode.

RY9212148ELS0081US0



3. Causes when a short


[Test Conditions]

1. Key switch : OFF
2. The alternator connector wire is pinched against or touching the body.

If the insulation is damaged, repair it properly and check the operation of the charging switch again in the tester mode.

RY9212148ELS0082US0

[C] Testing with a Circuit Tester

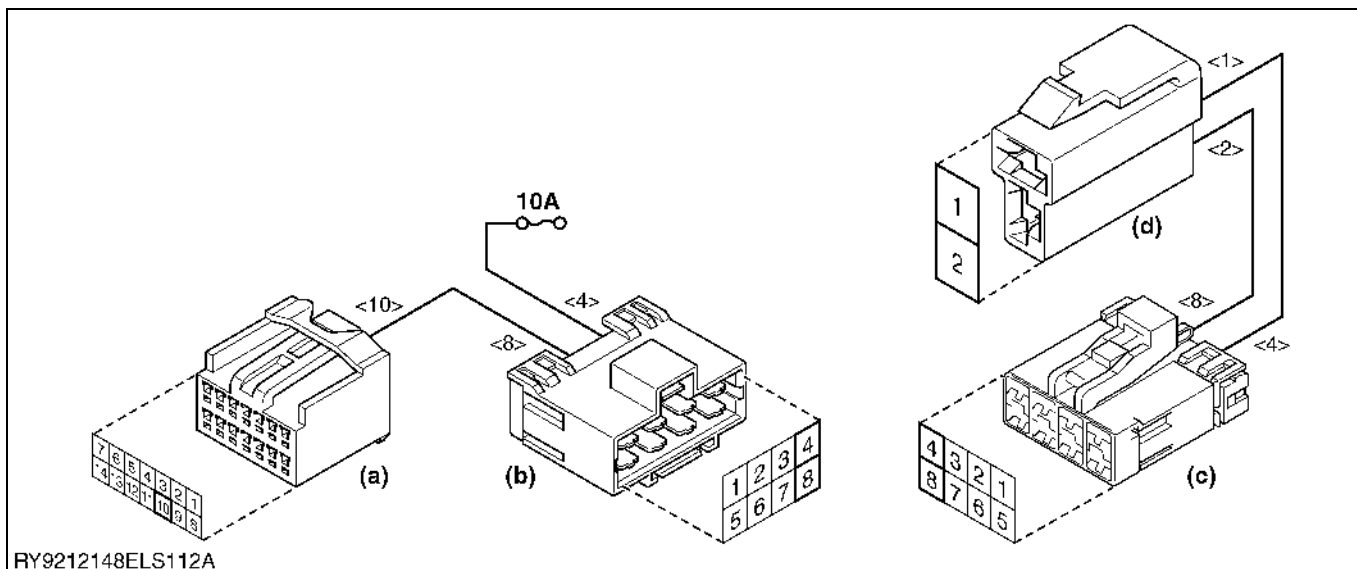

- (a) Meter panel connector (b) Engine (open) connector (c) Main (open) connector (d) Alternator connector

- If connectors (b) (c) are removed, the engine will not start.

RY9212148ELS0149US0

1. Voltage check**[Measurement Conditions]**

1. Disconnect the alternator connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Alternator	<1>	Body GND	—
(2)	Alternator	<2>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0150US0

2. Continuity check**[Measurement Conditions]**



1. Key switch: OFF
2. Disconnect the connector and fuse to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Alternator	<1>	Main (open)	<4>
(2)	Alternator	<2>	Main (open)	<8>
(3)	Engine (open)	<4>	10 A fuse	—
(4)	Engine (open)	<8>	Meter panel	<10>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0151US0

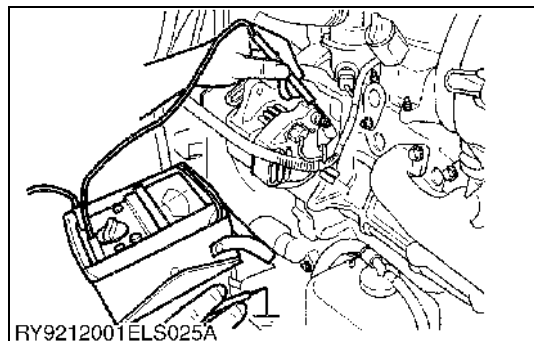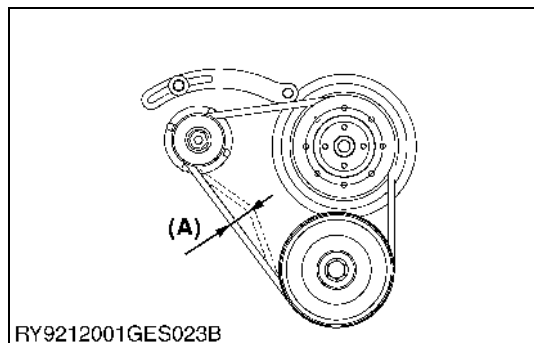[D] Testing the Equipment Itself**1. Inspecting the alternator**

1. Check for a cut, loose or slipping fan belt.
2. Measure the voltage between terminal B of the alternator and body GND. If the measured voltage is about 12V, it is normal. If the measured voltage is low, it may indicate insufficient battery capacity or looseness in connections somewhere before the alternator.
3. Next, start the engine and measure the voltage generated when the alternator is operating. Take the measurement between terminal B on the alternator side and the body GND. If the measured voltage is about 14V, it is normal. If the measured voltage does not vary from the battery voltage (about 12V), then the alternator itself or the regulator is faulty.

(A) Displacement 12 to 15 mm
(0.47 to 0.59 in.)

RY9212148ELS0083US0

[E] Steps to Take after Completing Repairs**1. Delete failure record**


1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

(1) No Fail Record

RY9212148ELS0148US0

(3) Fuel Sensor Errors

[A] Checking the Meter Panel

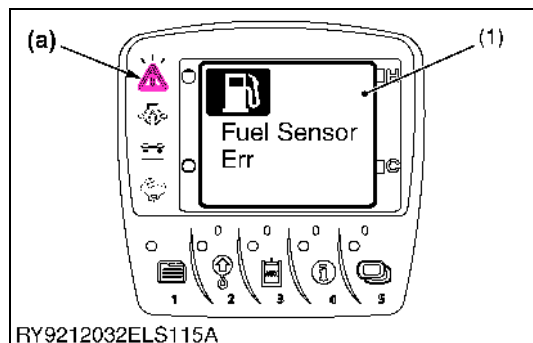

1. Information displayed on the meter panel

Check whether or not the warning lamp (a) on the panel is blinking red.

[Reason error screen displayed]

- Connector disconnected
- Break in the harness

(1) Fuel Sensor Err

(a) Warning Lamp

RY9212148ELS0084US0


[Test Conditions]

1. Key switch : ON

(a) If the fuel level is at the top : caused by a short

(b) If the fuel level is blank : caused by a break

RY9212148ELS0085US0

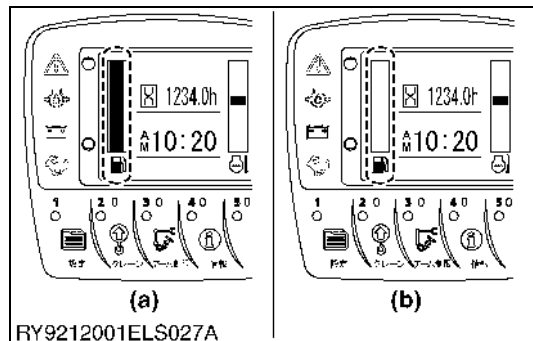

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.


Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

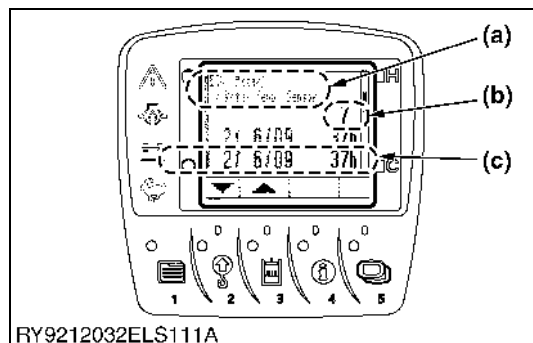


3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Check the display for the voltage and resistance of the fuel based on the following table.

	Fuel voltage	Resistance
When cut off	5.00 V	218 Ω
When shorted	0.00 V	0 Ω

- (1) Water Temp.
Fuel
Refueling SW

RY9212148ELS0086US0

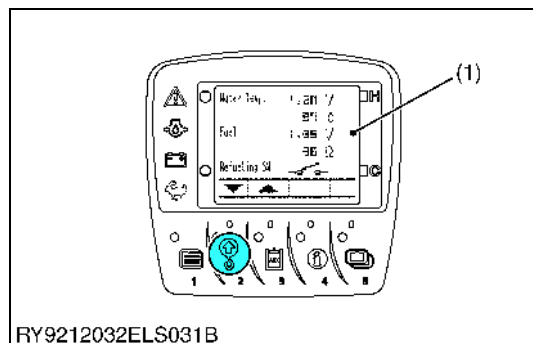

[B] Inspecting each Device Visually and Physically



1. Causes when a break in wiring

[Test Conditions]

1. Key switch : OFF
2. Fuel sensor connector disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the voltage and resistance for the fuel again in the tester mode.

RY9212148ELS0087US0




2. Causes when a short

[Test Conditions]

1. Key switch : OFF
2. The fuel sensor wire is pinched against or touching the body. If the insulation is damaged, repair it properly and check the voltage and resistance for the fuel again in the tester mode.

RY9212148ELS0088US0

[C] Testing with a Circuit Tester

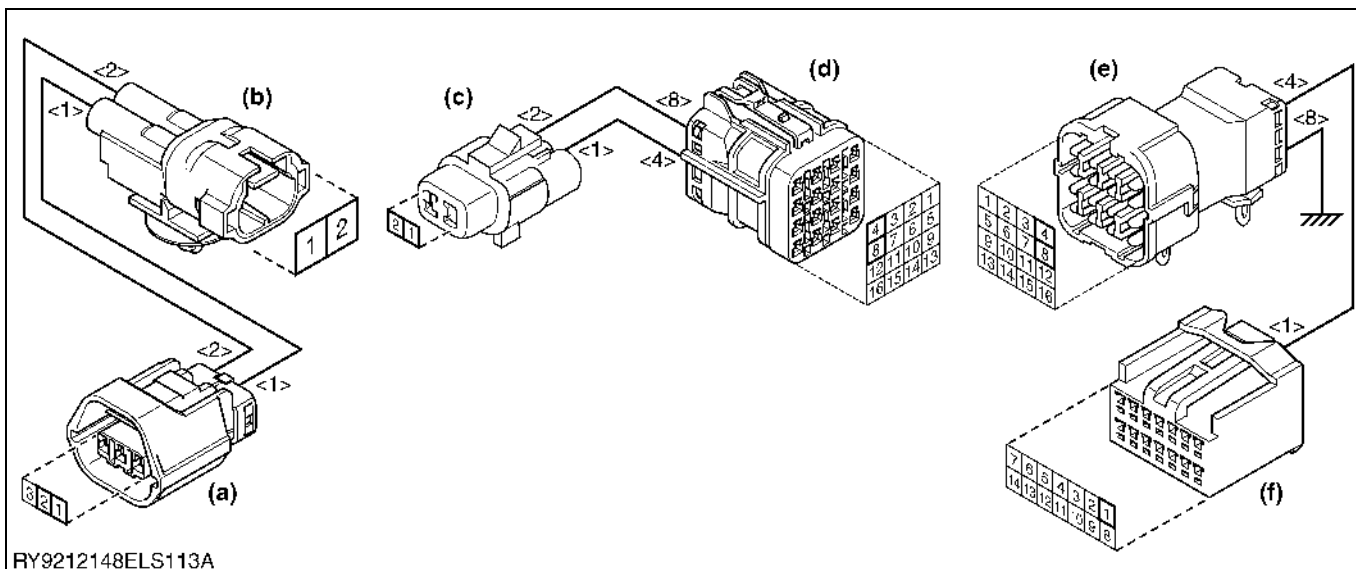

RY9212148ELS113A

- (a) Sensor, fuel connector (c) Fuel sensor connector (e) Engine (signal) connector (f) Meter panel connector
 (b) Engine (fuel sensor) connector (d) Main (signal) connector

- If connectors (d) (e) are removed, the engine will crank but not start. Further, "CAN comm error" and "fuel sensor error" are displayed on the meter panel.

RY9212148ELS0152US0

1. Voltage check**[Measurement Conditions]**

1. Disconnect the fuel sensor connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Sensor, Fuel	<1>	Sensor, Fuel	<2>
(2)	Sensor, Fuel	<1>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0153US0

2. Continuity check**[Measurement Conditions]**


1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Sensor, Fuel	<1>	Engine (fuel sensor)	<1>
(2)	Sensor, Fuel	<2>	Engine (fuel sensor)	<2>
(3)	Fuel sensor	<1>	Main (signal)	<4>
(4)	Fuel sensor	<2>	Main (signal)	<8>
(5)	Engine (signal)	<4>	Meter panel	<1>
(6)	Engine (signal)	<8>	Body GND	—

Regular: Continuity

Irregular: No continuity

RY9212148ELS0154US0

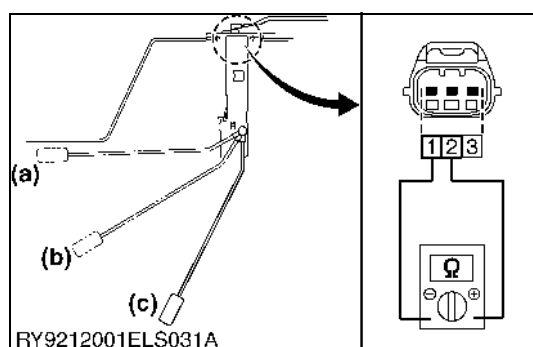[D] Testing the Equipment Itself**1. Inspecting the fuel sensor****[Measurement Conditions]**

1. Key switch : OFF
2. Disconnect the connector from the fuel sensor and take measurements.
3. Refer to the following table for the resistance at different float positions.

Factory Spec

Float position	F (a)	1/2 (b)	E (c)
Resistance value (Ω)	5 ≥	42.19	101.0 ≤

(a) Full

(b) Half

(c) Empty

RY9212148ELS0089US0

[E] Steps to Take after Completing Repairs



1. Delete failure record

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.


(1) No Fail Record

RY9212148ELS0148US0

[2] FRONT-END SYSTEMS

(1) Lever Lock System Errors

[A] Checking the Meter Panel

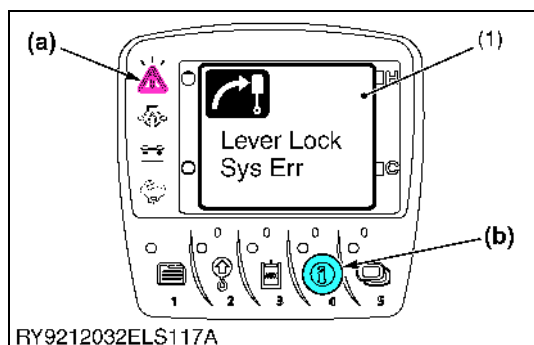

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.) Lever lock solenoid

[Reason error screen displayed]


- Lever lock solenoid line short

(1) Lever Lock Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0090US0

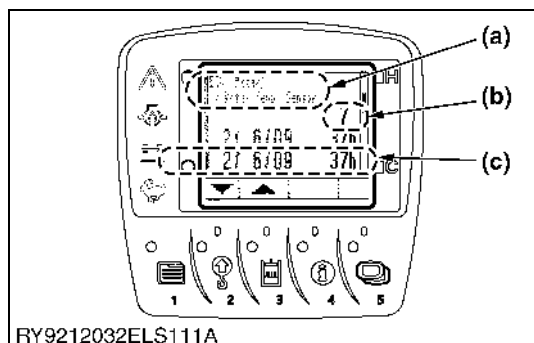

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.



Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

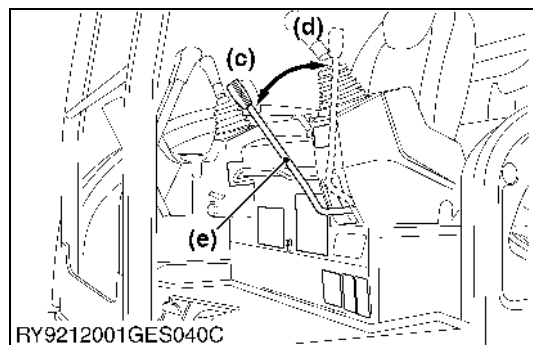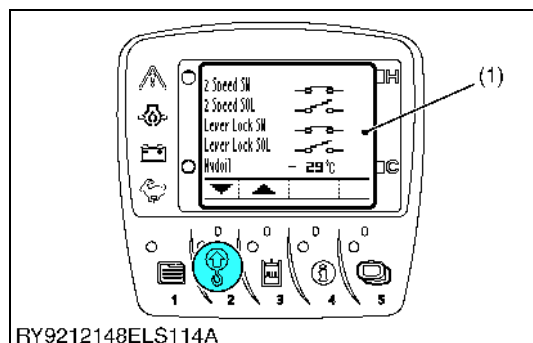

3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Put the machinery operation lever lock in the [Unlock] position.
4. Operate the lever lock switch and lever lock solenoid and check the switch according to the following table.


	Regular	Warning lamp	When cut off	Warning lamp	When shorted	Warning lamp
Lever lock switch ON		Off		Off		Off
Lever lock switch OFF		Off		Off		Off
Lever lock solenoid ON		Off		Off		Off
Lever lock solenoid OFF		Off		Off		Off

- (1) 2 Speed SW
2 Speed SOL
Lever Lock SW
Lever Lock SOL
Hydoil

- (c) Unlock
(d) Lock
(e) Machinery Operation Lever Lock

RY9212148ELS0091US0


[B] Inspecting each Device Visually and Physically

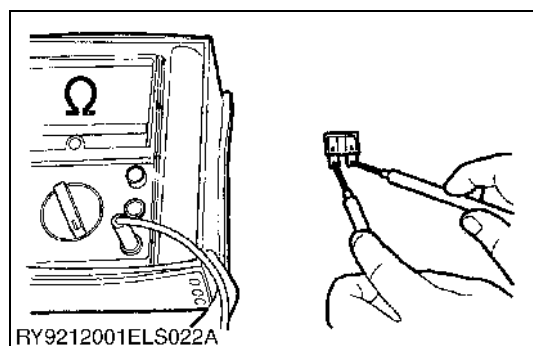

1. Checking fuses

1. Check whether the 5A lever lock fuse is blown.

RY9212001ELS0088US0

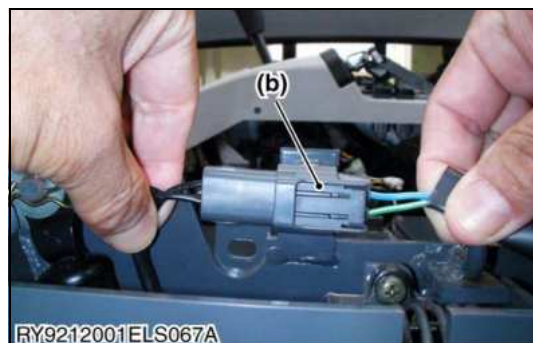

2. Causes when a break in wiring

[Test Conditions]

1. Key switch : OFF
2. The lever lock switch connector is disconnected.
3. The lever lock solenoid connector is disconnected.
4. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the lever lock switch and lever lock solenoid in the tester mode.

- (a) Lever Lock Solenoid Connector (b) Lever Lock Switch Connector

RY9212148ELS0092US0


3. Causes when a short

[Test Conditions]

1. Key switch : OFF
2. The lever lock switch connector wire and/or lever lock solenoid connector are pinched against or touching the body.
If the insulation is damaged, repair it properly and check the lever lock switch and the lever lock solenoid again in the tester mode.

RY9212148ELS0093US0

[C] Testing with a Circuit Tester

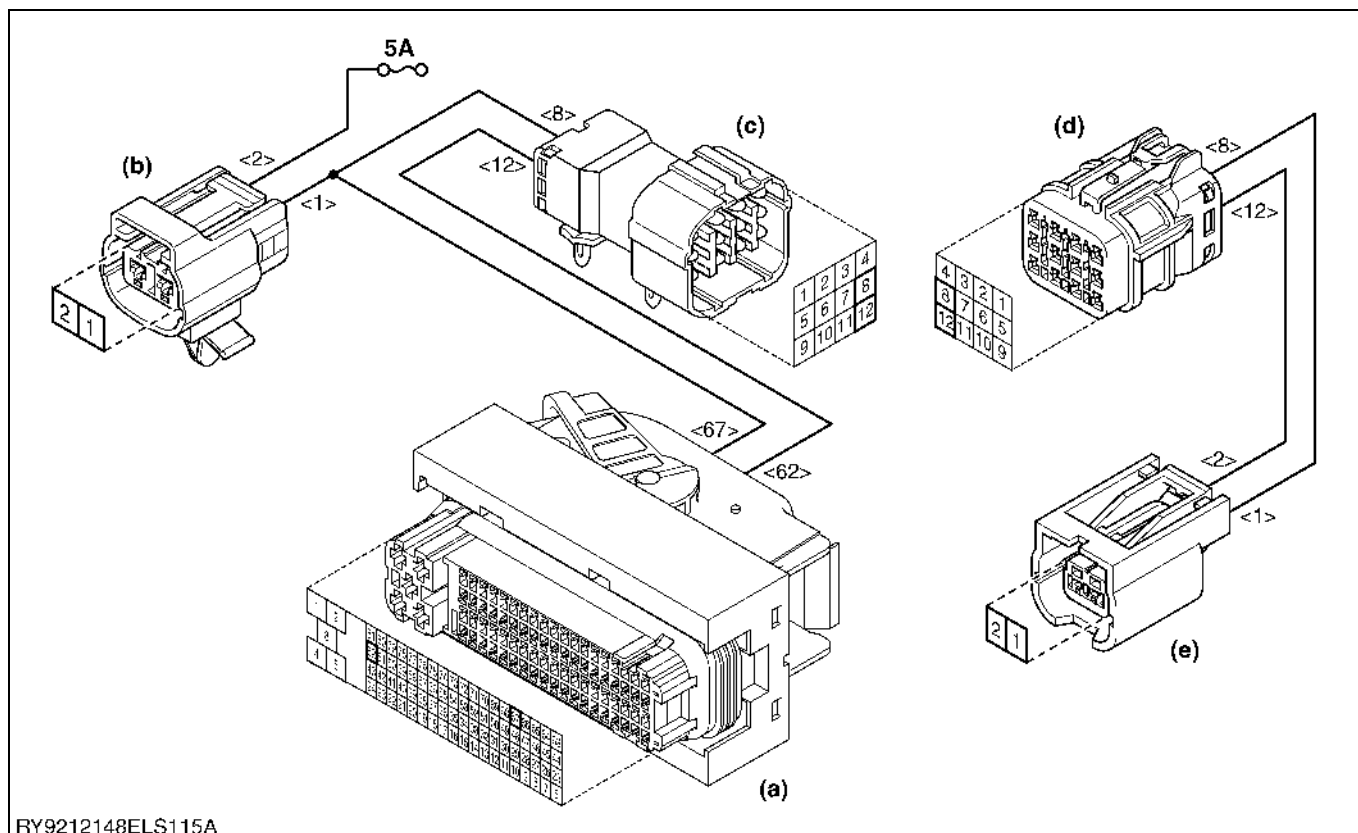

RY9212148ELS115A

- (a) Main ECU connector (c) Engine (solenoid) connector (d) Main (solenoid) connector (e) Lever lock solenoid connector
- (b) Lever lock switch connector

- If connectors (c) (d) are removed, the engine will start but the machine cannot be operated.

RY9212148ELS0155US0

1. Voltage check

[Measurement Conditions]

1. Disconnect the connector to be tested.
2. Key switch: ON
3. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Lever lock switch	<2>	Lever lock switch	<1>
(2)	Lever lock switch	<2>	Body GND	—
(3)	Lever lock solenoid	<1>	Lever lock solenoid	<2>
(4)	Lever lock solenoid	<1>	Body GND	—

- To check the solenoid line, put the control lever lock in the [Unlock] position.
Regular: 12V
Irregular: Large discrepancy from 12V

RY9212148ELS0156US0

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.


Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	5A fuse	—	Lever lock switch	<2>
(2)	Lever lock switch connector	<1>	Engine (solenoid)	<8>
(3)	Lever lock switch	<1>	Main ECU	<67>
(4)	Main ECU	<62>	Engine (solenoid)	<12>
(5)	Main (solenoid)	<8>	Lever lock solenoid	<1>
(6)	Main (solenoid)	<12>	Lever lock solenoid	<2>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0157US0

[D] Testing the Equipment Itself

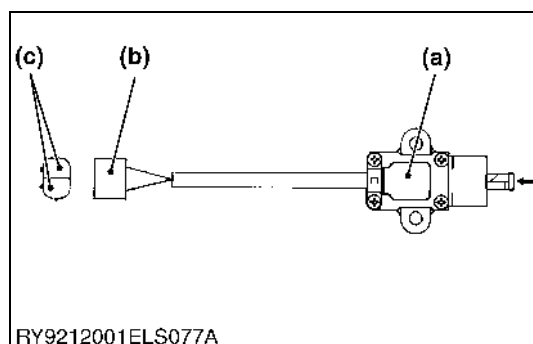

1. Inspecting the lever lock switch

[Test Conditions]

1. Key switch: OFF
2. Disconnect the lever lock switch connector from the machine and press the switch and check for continuity.

Regular: Continuity


Irregular: No continuity

(a) Lever lock switch

(b) Lever lock switch Connector

(c) Lever lock switch Connector terminals

RY9212148ELS0094US0

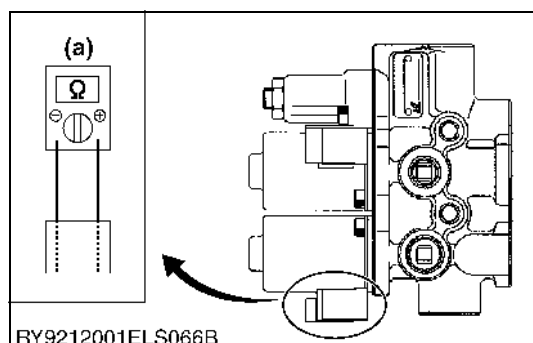

2. Testing the lever lock solenoid

[Test Conditions]

1. Key switch : OFF
2. Disconnect lever lock solenoid connector from the machine and test the solenoid separately.

Lever lock solenoid	Factory specification	12 Ω ±10 %

(a) Lever Lock Solenoid Terminals

RY9212148ELS0095US0

[E] Steps to Take after Completing Repairs



1. Delete failure record


1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

(1) No Fail Record

RY9212148ELS0148US0

(2) Travel 2-Speed System Error

[A] Error from the Meter Panel

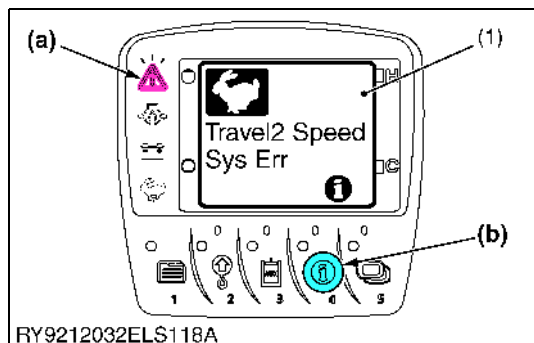

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.) 2-speed solenoid

[Reason error screen displayed]


- 2-speed solenoid line short

(1) Travel2 Speed Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0096US0

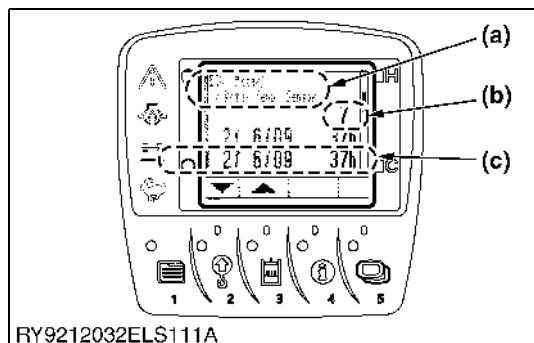

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.


Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

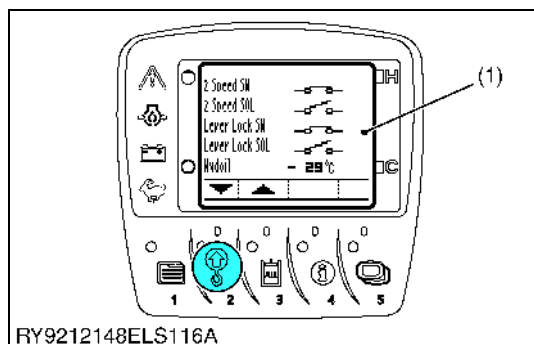

3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Put the machinery operation lever lock in the [Unlock] position and press the 2-speed switch.
4. Operate the 2-speed switch and check the 2-speed switch and 2-speed solenoid based on the following table.

	Regu- lar	2- speed lamp	When cut off	2- speed lamp	When shorte d	2- speed lamp
2-speed switch ON		Lit		Lit		Off
2-speed switch OFF		Off		Off		Off
2-speed solenoid ON		Lit		Lit		Off
2-speed solenoid OFF		Off		Off		Off

(1) 2 Speed SW

2 Speed SOL

Lever Lock SW


Lever Lock SOL

HydOil


(2) 2-Speed Switch

(a) Angle Blade Version

(b) Standard Version

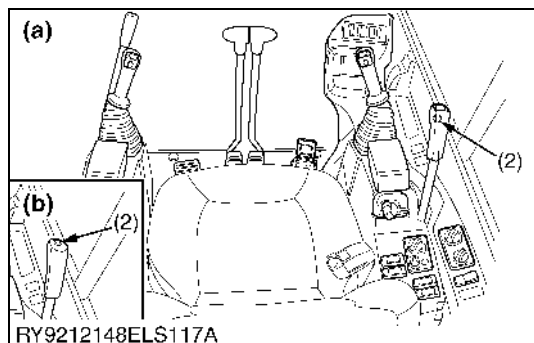

RY9212148ELS0097US0

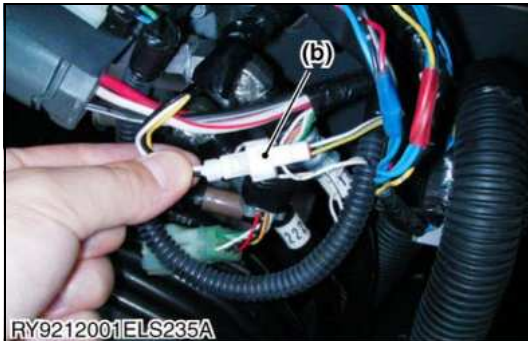[B] Inspecting each Device Visually and Physically**1. Causes when a break in wiring****[Test Conditions]**

1. Key switch : OFF
2. The 2-speed solenoid connector disconnected.
3. The 2-speed switch connector disconnected.
4. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the 2-speed solenoid and the 2-speed switch in the tester mode.

(a) 2-Speed Solenoid Connector

(b) 2-Speed Switch Connector

RY9212148ELS0098US0


2. Causes when a short**[Test Conditions]**

1. Key switch : OFF
2. The wiring of the 2-speed solenoid connector and/or the 2-speed switch connector are pinched against or touching the body

If the insulation is damaged, repair it properly and check the 2-speed solenoid and the 2-speed switch again in the tester mode.

RY9212148ELS0099US0

[C] Testing with a Circuit Tester

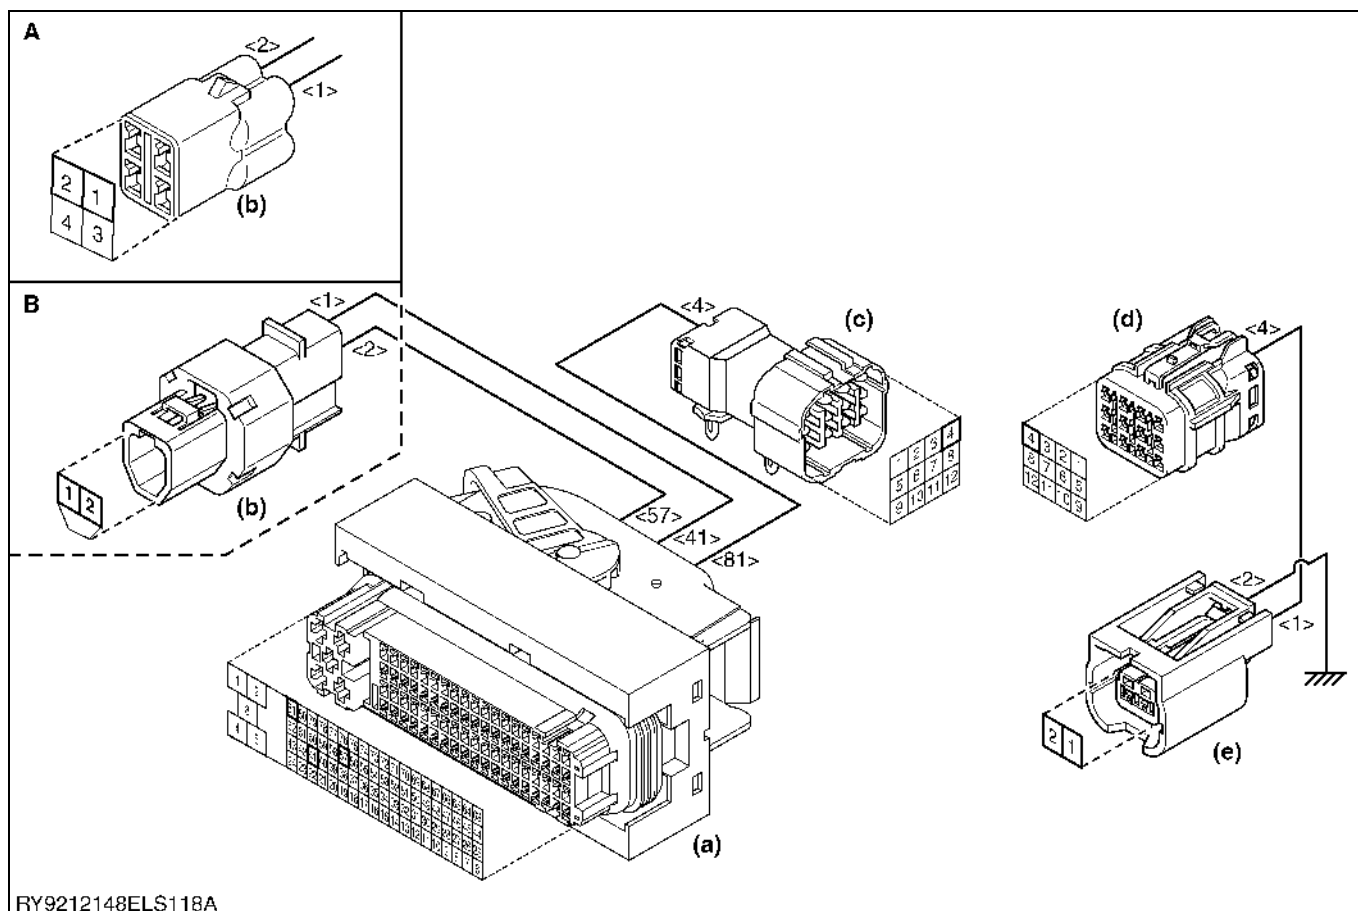

RY9212148ELS118A

- (a) Main ECU connector (c) Engine (solenoid) connector (e) 2-speed solenoid connector A : Angle Specification
 (b) 2-speed switch connector (d) Main (solenoid) connector B : Standard Spec

- If connectors (c) (d) are removed, the engine will start but the machine will not operate.

RY9212148ELS0158US0

1. Voltage check

[Measurement Conditions]

- Disconnect the connector to be tested.
- Key switch: ON
- Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	2-speed switch	<1>	2-speed switch	<2>
(2)	2-speed switch	<1>	Body GND	—
(3)	2-speed solenoid	<1>	2-speed solenoid	<2>
(4)	2-speed solenoid	<1>	Body GND	—

- To check the solenoid line, put the machinery operation lever lock in the [Unlock] position and press the 2-speed switch.
 Regular: 12V
 Irregular: Large discrepancy from 12V

RY9212148ELS0159US0

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.


Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	2-speed switch	<2>	Main ECU	<57>
(2)	2-speed switch	<1>	Main ECU	<41>
(3)	Main ECU	<81>	Engine (solenoid)	<4>
(4)	Main (solenoid)	<4>	2-speed solenoid	<1>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0160US0

[D] Testing the Equipment Itself

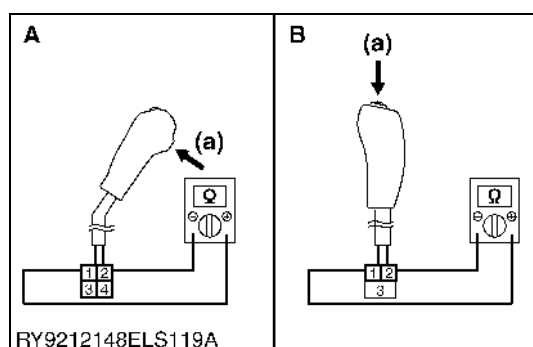

1. Testing the 2-speed switch

[Test Conditions]

1. Key switch: OFF
2. Disconnect the 2-speed switch connector from the machine and press the switch and check for continuity.

Regular: Continuity


Irregular: No continuity

(a) 2-speed switch

A : Angle Specification

B : Standard Specification

RY9212148ELS0100US0

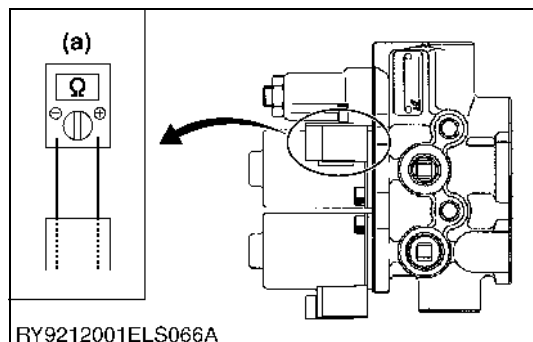

2. Testing the 2-speed solenoid

[Test Conditions]

1. Key switch : OFF
2. Disconnect 2-speed solenoid connector from the machine and test the solenoid separately.

2-speed solenoid	Factory specification	12 Ω ±10 %

(a) 2-Speed Solenoid Terminals

RY9212148ELS0101US0

[E] Steps to Take after Completing Repairs



1. Delete failure record


1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

(1) No Fail Record

RY9212148ELS0148US0

(3) Angle System Errors

[A] Checking the Meter Panel

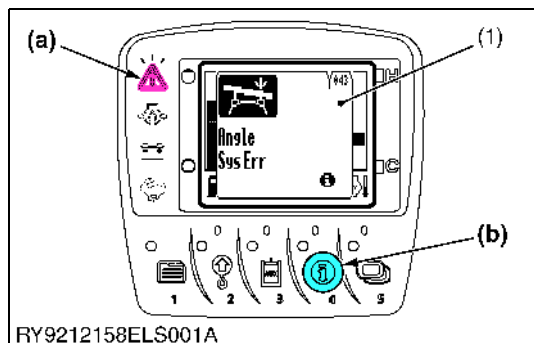

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.)

- Angle right solenoid
- Angle left solenoid

[Reason error screen displayed]


- Short in solenoid line

(1) Angle Sys Err

(a) Warning lamp

(b) Info button

RY9212158ELS0011US0

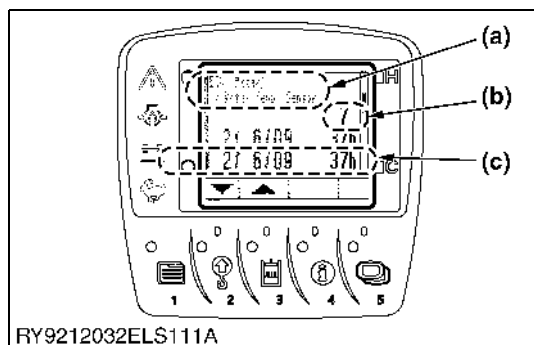

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.


Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

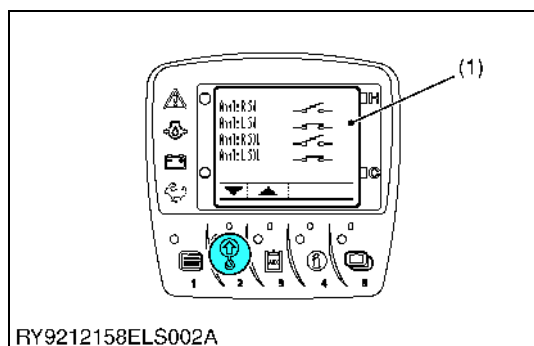

3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Put the machine's lever lock in the release position and operate the angle control.
4. Check the angle operation.

(1) Angle R SW


Angle L SW

Angle R SOL

Angle L SOL

RY9212158ELS0012US0

[B] Inspecting each Device Visually and Physically

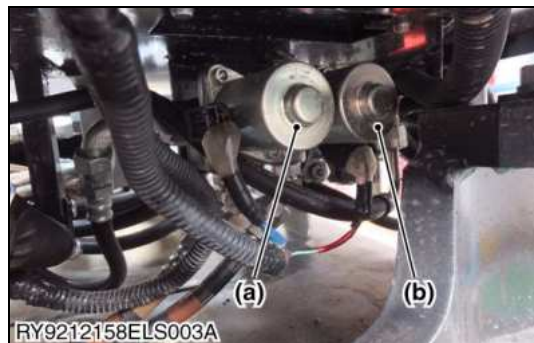

1. Causes when a break in wiring

[Test Conditions]

1. Key switch: OFF
2. Angle solenoid connector disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull w/3kgf or less force)

If it comes off, plug the connector back in and check the angle solenoid again in the tester mode.

(a) Left angle solenoid valve

(b) Right angle solenoid valve

RY9212158ELS0006US0


2. Causes when a short

[Test Conditions]

1. Key switch: OFF
2. If the connector wiring is pinched and touching the body, or if the insulation is damaged, repair it properly and check the angle solenoid operation again in the tester mode.

RY9212158ELS0007US0

[C] Testing with a Circuit Tester

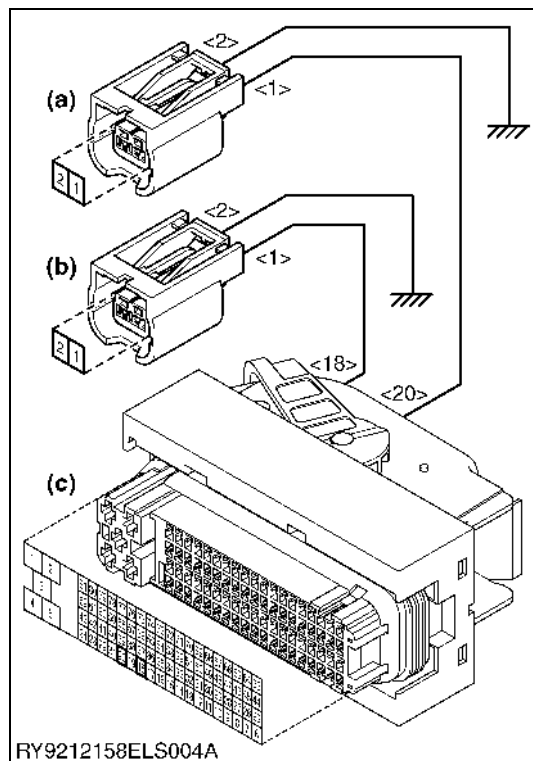

RY9212158ELS004A

1. Voltage check

[Measurement Conditions]

1. Disconnect the angle solenoid connector.
2. Key switch: ON
3. Put the machinery operation lever lock in the [Unlock] position and press the angle control button.
4. Check the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Left angle solenoid	<1>	Body GND	—
(2)	Right angle solenoid	<1>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

- (a) Left angle solenoid connector (c) Main ECU connector
(b) Right angle solenoid connector

RY9212158ELS0013US0

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.


Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Left angle solenoid	<1>	Main ECU	<20>
(2)	Right angle solenoid	<1>	Main ECU	<18>

Regular: Continuity

Irregular: No continuity

RY9212158ELS0014US0

[D] Testing the Equipment Itself

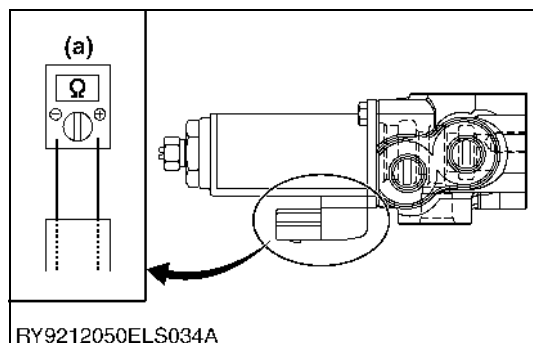

RY9212050ELS034A

1. Test the angle solenoid

[Test Conditions]

1. Key switch: OFF
2. Disconnect the angle solenoid connector from the machine and test the solenoid independently.

Angle solenoid	Factory specification	12 Ω ± 10 %

- (a) Angle solenoid terminals

RY9212158ELS0015US0

[E] Steps to Take after Completing Repairs**1. Delete failure record**

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.


(1) No Fail Record

RY9212148ELS0148US0

[3] AUTO IDLING (AI) SYSTEM

(1) AI System Errors

[A] Checking the Meter Panel

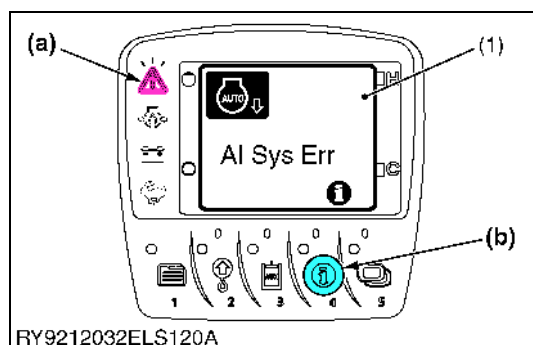

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.) Accelerator sensor

[Reason error screen displayed]


- AI console connector disconnected
- Break or short in harness

(1) AI Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0104US0

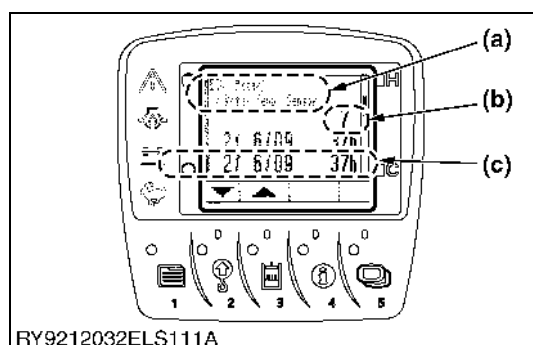

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.

Ex.) The last failure record was February 6, 2009 at 37 hours.


(a) Failure

(c) The Last Breakdown Date (y/m/d)

(b) Number of Failure

and Hour Meter.

RY9212032ELS0001US0

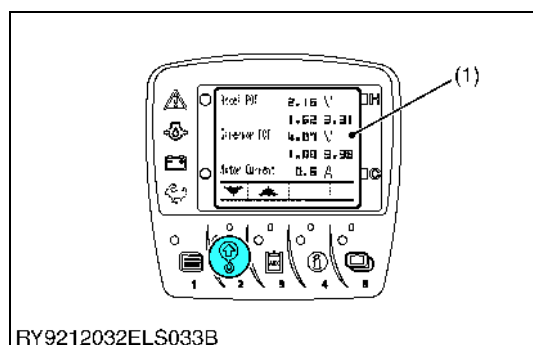

3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Turn the accelerator dial to the right (hi-speed) and to the left (lo-speed) and check the accelerator POT voltage based on the following table.


Design Value	Accelerator POT	Regular	When cut off	When shorted
	Idling	Approx. 1.50 V	0.01 V	Voltage fails to stabilize
	MAX	Approx. 3.30 V	0.01 V	


(1) Accel POT
Governor POT
Motor Current

(b) Slow

(c) Fast

RY9212148ELS0105US0

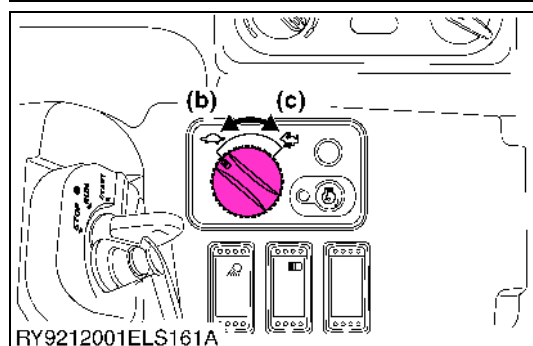

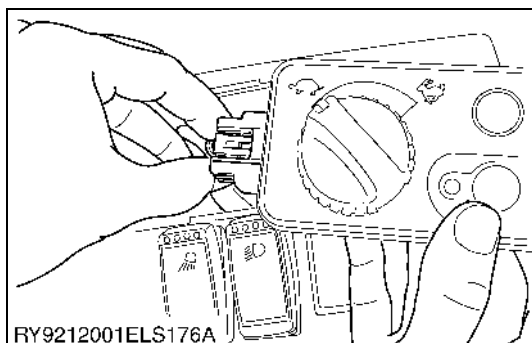[B] Inspecting each device visually and physically**1. Causes when a break in wiring****[Test Conditions]**

1. Key switch : OFF
2. AI console connector disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely, turn the accelerator dial to the right (hi-speed) and the left (lo-speed) and check the voltage of the accelerator sensor again in the tester mode.


RY9212148ELS0106US0

2. Causes when a short**[Test Conditions]**

1. Key switch : OFF
2. The wiring of the AI console connector is pinched against or touching the body.

If the insulation is damaged, repair it properly, turn the accelerator dial to the right (hi-speed) and the left (lo-speed) and check the voltage of the accelerator sensor again in the tester mode.

RY9212148ELS0107US0

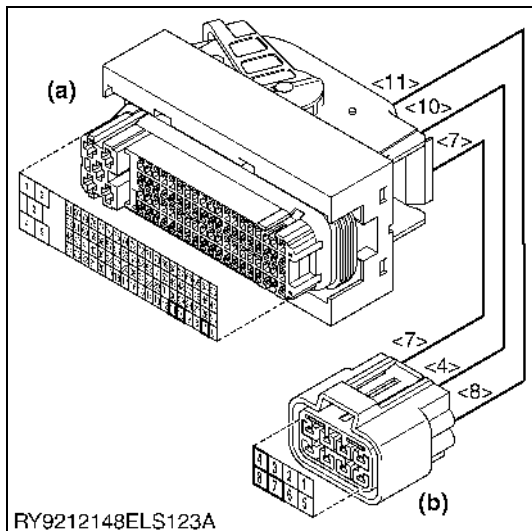[C] Testing with a Circuit Tester**1. Voltage check****[Measurement Conditions]**

1. Disconnect the AI console connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AI console	<8>	AI console	<4>
(2)	AI console	<8>	Body GND	—

Regular: 5V

Irregular: Large discrepancy from 5V

(a) Main ECU Connector

(b) AI console Connector

RY9212148ELS0168US0

2. Continuity check**[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.


Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AI console	<7>	Main ECU	<7>
(2)	AI console	<8>	Main ECU	<11>
(3)	AI console	<4>	Main ECU	<10>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0169US0

[D] Testing the Equipment Itself

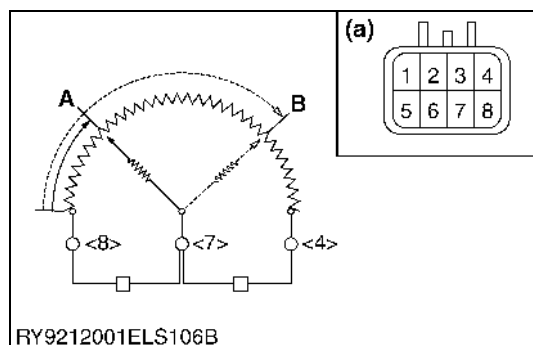

1. Testing the accelerator sensor

[Measurement Conditions]

1. Key switch : OFF
2. Disconnect the accelerator sensor from the machine and test it separately.

Factory specification	Min.	Max.
Accelerator sensor 4 to 8	1 k Ω $\pm$ 10 %	1 k Ω $\pm$ 10 %
Accelerator sensor 7 to 8	720 Ω	380 Ω
Accelerator sensor 4 to 7	380 Ω	720 Ω

(a) Accelerator Dial Terminal Numbers

RY9212148ELS0108US0



2. Settings after replacing device

1. Make AI settings.

- (1) AI Set
AUX Set
AUX2/Thumb Set

RY9212148ELS0109US0

[E] Steps to Take after Completing Repairs



1. Delete failure record


1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

- (1) No Fail Record

RY9212148ELS0148US0

(2) Testing the AI Pressure Switch

[A] Checking the Meter Panel

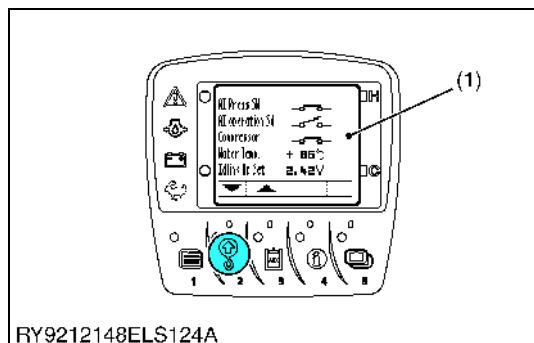

1. Tester mode


1. Select the tester mode.
2. Start the engine.
3. Check the operation of the AI pressure switch according to the table below.

	Regular	When cut off	When shorted
Operating			
Not operating			

- (1) AI Press SW
AI operation SW
Compressor
Water Temp.
Idling Up Set

RY9212148ELS0110US0

[B] Inspecting each Device Visually and Physically

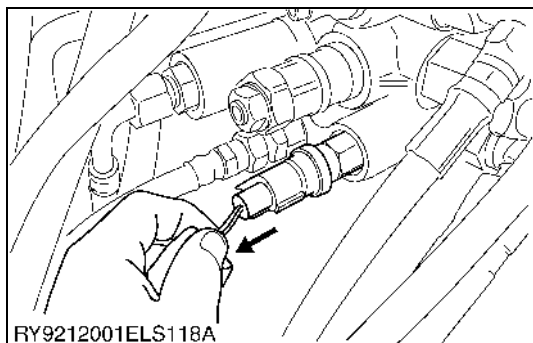

1. Causes when a break in wiring

[Test Conditions]

1. Key switch : OFF
2. The AI pressure switch connector is disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the operation of the auto-idle switch again in the tester mode.

RY9212148ELS0111US0




2. Causes when a short

[Test Conditions]

1. Key switch : OFF
 2. The wire of the auto-idle pressure switch connector is pinched against or touching the body.
- If the insulation is damaged, repair it properly and check the operation of the auto-idle switch again in the tester mode.

RY9212148ELS0112US0

[C] Testing with a Circuit Tester

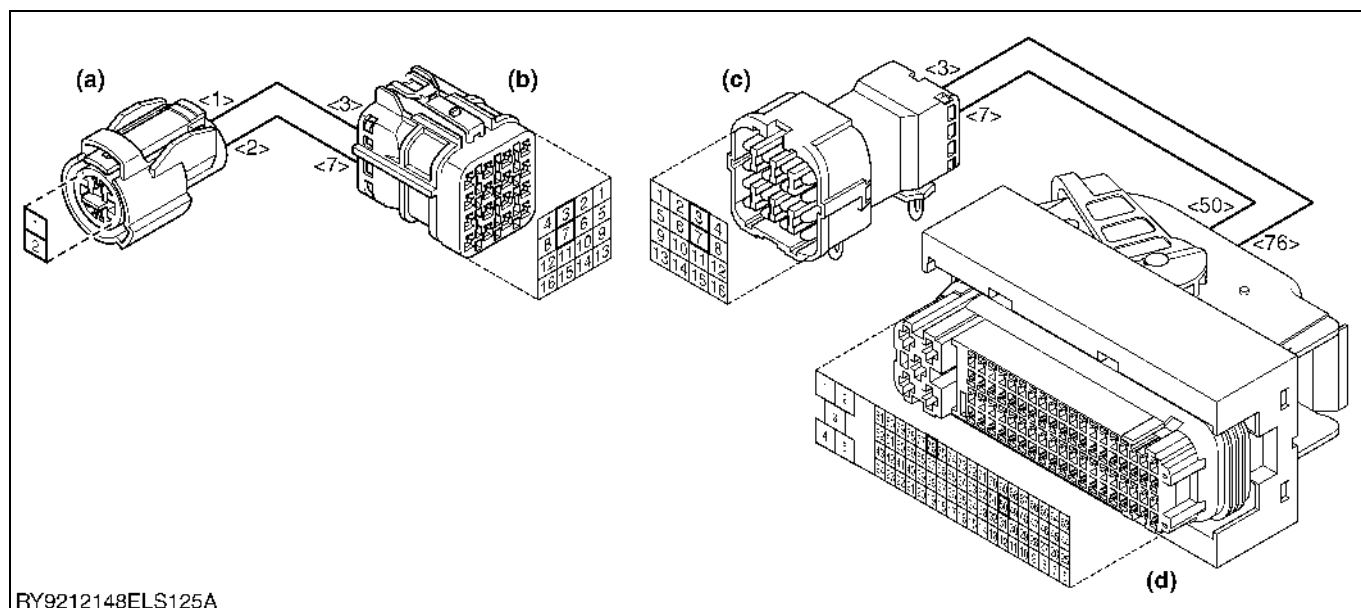

RY9212148ELS125A

(a) AI pressure switch connector (b) Main (signal) connector (c) Engine (signal) connector (d) Main ECU connector

- If connectors (b) (c) are removed, the engine will crank but not start. Further, "CAN comm error" and "fuel sensor error" are displayed on the meter panel.

RY9212148ELS0170US0

1. Voltage check

[Measurement Conditions]

- Disconnect the AI pressure switch connector.
- Key switch: ON
- Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AI pressure switch	<1>	AI pressure switch	<2>
(2)	AI pressure switch	<1>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0171US0

2. Continuity check

[Measurement Conditions]


- Key switch: OFF
- Disconnect the connector to be tested.
- Test the continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AI pressure switch	<1>	Main (signal)	<3>
(2)	AI pressure switch	<2>	Main (signal)	<7>
(3)	Engine (signal)	<3>	Main ECU	<76>
(4)	Engine (signal)	<7>	Main ECU	<50>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0172US0

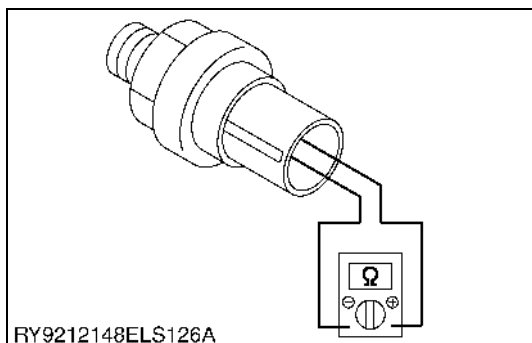[D] Testing the Equipment Itself**1. Testing the AI pressure switch****[Test Conditions]**


1. Key switch: OFF
2. Disconnect the AI pressure switch connector from the control valve and attach the tester.
3. Start the engine and check continuity when it is operating and when not operating.

When operating: No continuity

When not operating: Continuity

The AI switch is normally closed (normally ON)

RY9212148ELS0173US0

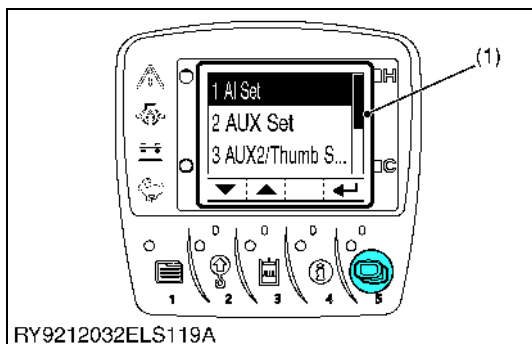**2. Settings after replacing device**

1. Make AI settings.

- (1) AI Set
AUX Set
AUX2/Thumb Set

RY9212148ELS0205US0

[E] Steps to Take after Completing Repairs**1. Delete failure record**



1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

- (1) No Fail Record

RY9212148ELS0148US0

(3) Testing the AI Switch

[A] Checking the Meter Panel

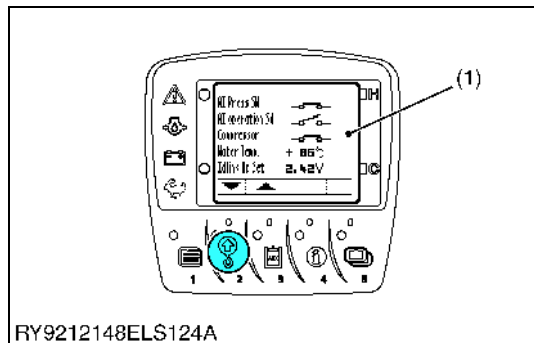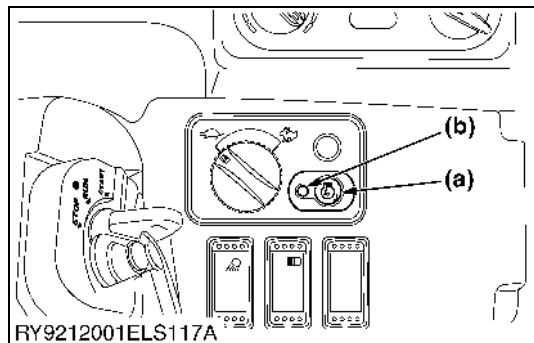

1. Information displayed on the meter panel

- When the AI switch (a) on the panel is pressed, check whether the AI lamp (b) lights or is off.

Regular: lamp lights

Irregular: lamp off

(a) AI switch

(b) AI Lamp

RY9212148ELS0113US0

2. Tester mode


- Select the tester mode.
- Check the operation of the AI switch according to the table below.

	Regular	When cut off	When shorted
With AI SW pressed			
With AI SW released			

- (1) AI Press SW
AI operation SW
Compressor
Water Temp.
Idling Up Set

RY9212148ELS0114US0

[B] Inspecting each Device Visually and Physically

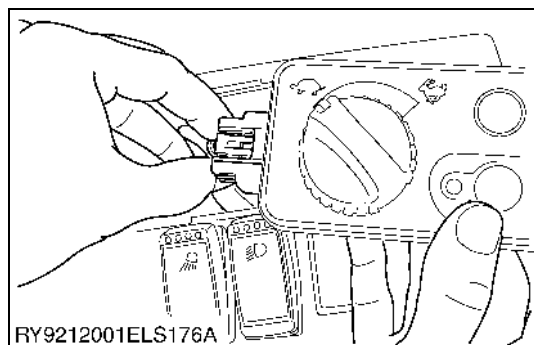

1. Causes when a break in wiring

[Test Conditions]

- Key switch : OFF
- AI console connector disconnected.
- There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the operation of the AI switch again in the tester mode.

RY9212148ELS0115US0

2. Causes when a short


[Test Conditions]

- Key switch : OFF
- The wiring of the AI console connector is pinched against or touching the body.

If the insulation is damaged, repair it properly and check the operation of the AI switch again in the tester mode.

RY9212148ELS0116US0

[C] Testing with a Circuit Tester

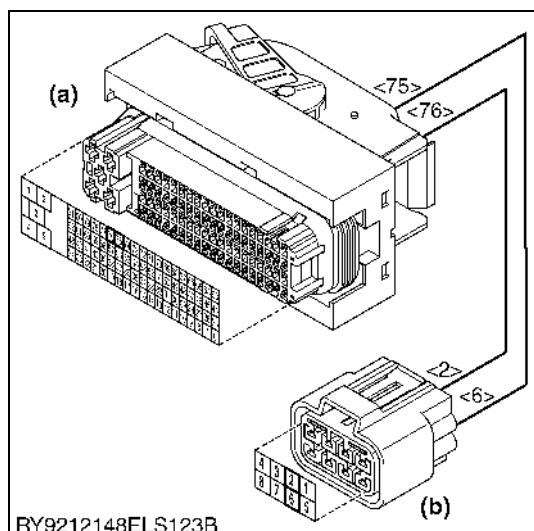

1. Voltage check

[Measurement Conditions]

1. Disconnect the AI console connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AI console	<2>	AI console	<6>
(2)	AI console	<2>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

(a) Main ECU connector

(b) AI console connector

RY9212148ELS0174US0

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AI console	<6>	Main ECU	<75>
(2)	AI console	<2>	Main ECU	<76>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0175US0

[D] Testing the Equipment Itself



1. Testing the AI switch

[Measurement Conditions]

1. Key switch: OFF
2. Remove the AI console from the machine and replace with a new AI console.
3. Select the tester mode and check the operation of the AI switch.

Criteria

Regular	AI switch released: no continuity AI switch pressed: continuity
Irregular	Other than above


RY9212148ELS0117US0

2. Settings after replacing device

1. Make AI settings.

- (1) AI Set
AUX Set
AUX2/Thumb Set

RY9212148ELS0118US0

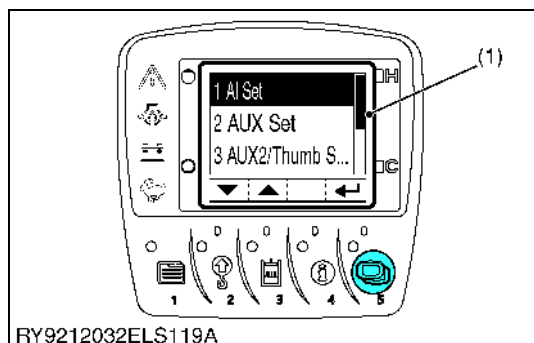

[E] Steps to Take after Completing Repairs**1. Delete failure record**

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.


(1) No Fail Record

RY9212148ELS0148US0

[4] ANTI-THEFT (AT) SYSTEM

(1) Anti-Theft System Errors

[A] Checking the Meter Panel

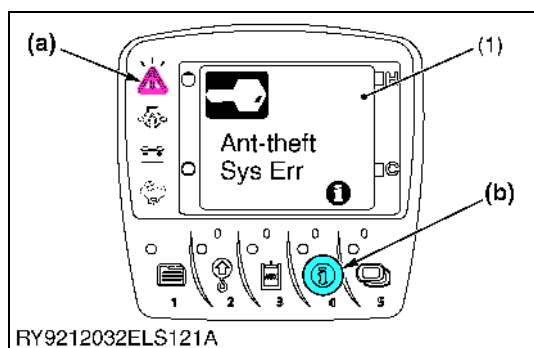

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.) Antenna

[Reason error screen displayed]


- Anti-theft connector disconnected
- Break in the harness
- Antenna faulty

(1) Anti-theft Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0119US0

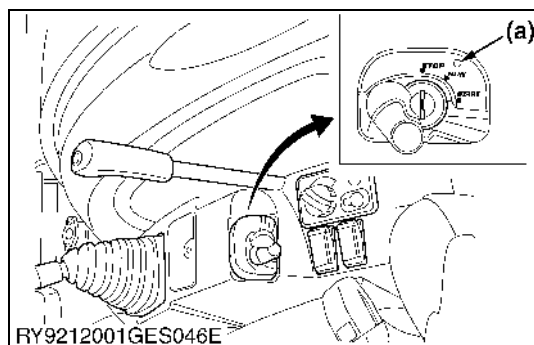


[Test Conditions]

1. Key switch : OFF
2. Check whether the anti-theft indicator is blinking or not.

(a) Anti-Theft Indicator

RY9212001ELS0198US0

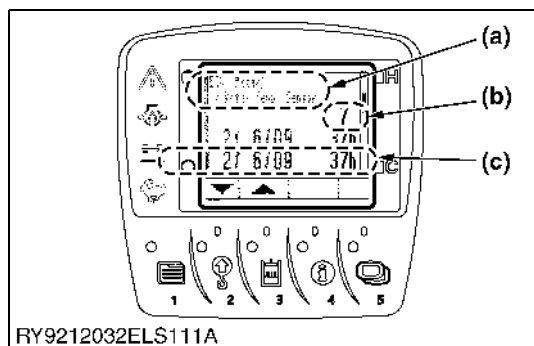

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.


Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

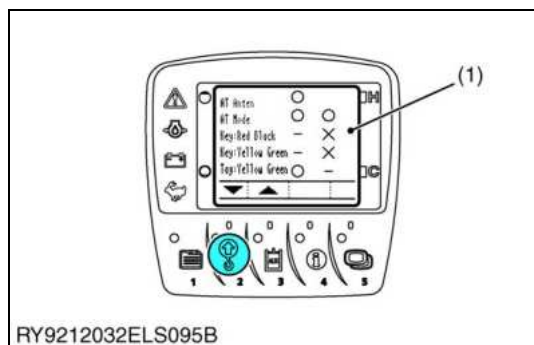

3. Tester mode

1. Select the tester mode.
2. Check the anti-theft antenna.

	Regular		Irregular	
Anti-theft antenna	○		×	
On/off Valid cancel	○	○	×	○
Red key Black key	—	○	—	—

(1) AT Antenna

AT Mode


Key : Red Black

Key : Yellow Green

Tag : Yellow Green

RY9212032ELS0026US0

[B] Inspecting each Device Visually and Physically

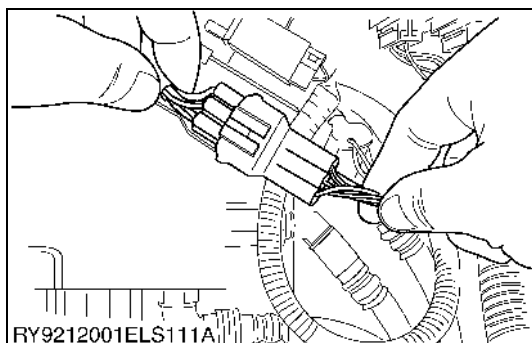

1. Causes when a break in wiring

[Measurement Conditions]

1. Key switch : OFF
2. Anti-theft connector disconnected.
3. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull with a max of 3 kgf (30 N, 7 lbf) of force) If it comes off, plug the connector back in securely and check the anti-theft antenna again in the tester mode.

RY9212148ELS0120US0



2. Causes when a short

[Measurement Conditions]


1. Key switch : OFF
2. The anti-theft connector wire is pinched against or touching the body.

If the insulation is damaged, repair it properly and check the operation of the anti-theft antenna again in the tester mode.

(a) Anti-Theft Connector

RY9212148ELS0121US0

[C] Testing with a Circuit Tester

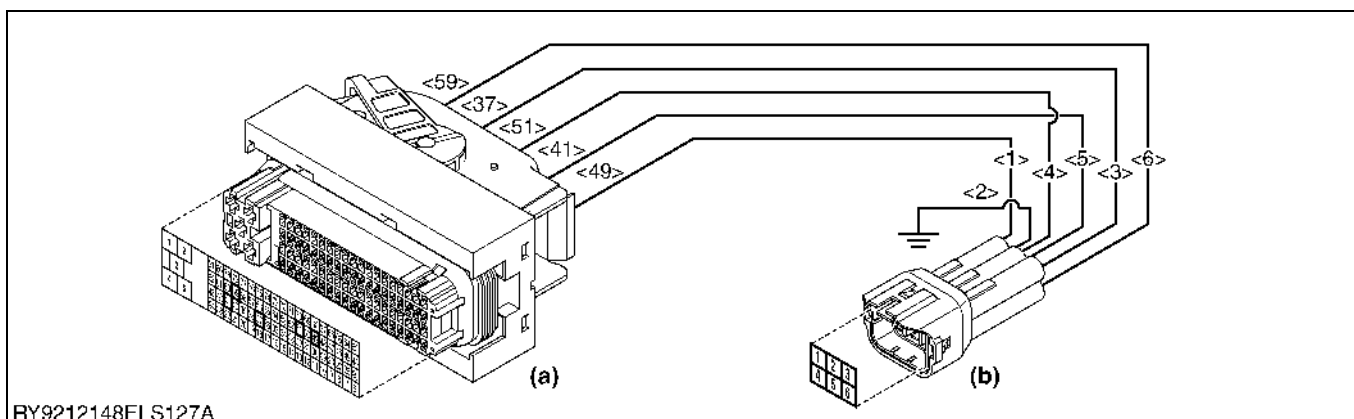

(a) Main ECU

(b) Anti-theft connector

RY9212148ELS0206US0

1. Voltage check

[Measurement Conditions]

1. Disconnect the anti-theft connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Anti-theft connector	<5>	Anti-theft connector	<2>
(2)	Anti-theft connector	<5>	Body GND	—
(3)	Anti-theft connector	<6>	Anti-theft connector	<2>
(4)	Anti-theft connector	<6>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0122US0

2. Continuity check

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Anti-theft connector	<1>	Main ECU connector	<49>
(2)	Anti-theft connector	<3>	Main ECU connector	<37>
(3)	Anti-theft connector	<4>	Main ECU connector	<51>
(4)	Anti-theft connector	<5>	Main ECU connector	<41>
(5)	Anti-theft connector	<6>	Main ECU connector	<59>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0123US0

[D] Testing the Equipment Itself



RY9212001ELS240A

1. Inspecting the anti-theft antenna

[Measurement Conditions]

1. Key switch : OFF
2. Replace with a new antenna.
3. Select the tester mode and check the anti-theft antenna.

RY9212001ELS0205US0

[E] Steps to Take after Completing Repairs



RY9212032ELS114A

1. Delete failure record

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.


(1) No Fail Record

RY9212148ELS0148US0

[5] POWER SUPPLY SYSTEM

(1) Over Voltage

[A] Checking the Meter Panel

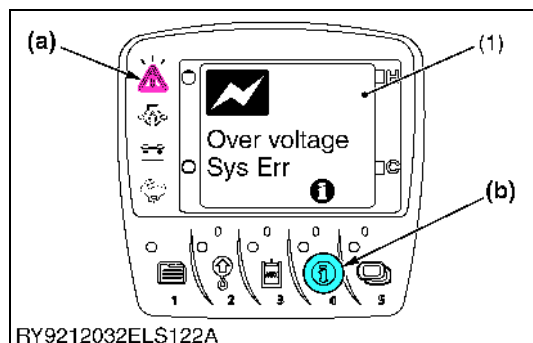

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.) Over voltage

[Reason error screen displayed]

- Activated by 18V+
- Alternator faulty

(1) Over voltage Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0124US0



Check whether the machine has been jump started with a 24 V battery.

Ex.) Whether switched to 24V

(a) 12 V

(b) 24 V

RY9212001ELS0207US0

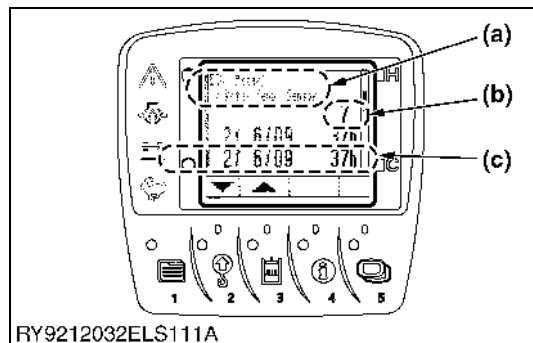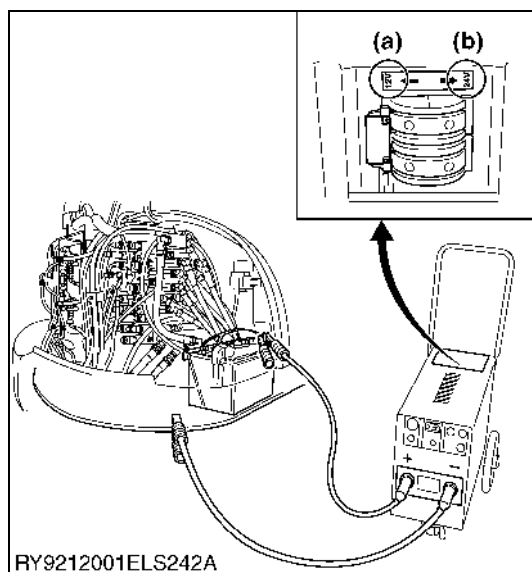

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.

Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure


(c) The Last Breakdown Date (y/m/d) and Hour Meter.

(b) Number of Failure

RY9212032ELS0001US0


An alternator recharging error is also possible.
Refer to the pages on the recharging system errors.

RY9212001ELS0209US0

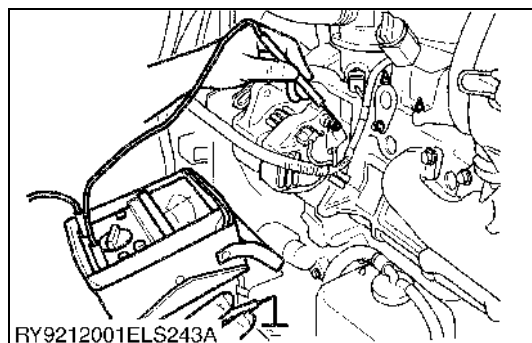

(2) 5 V Short System Error

[A] Checking the Meter Panel

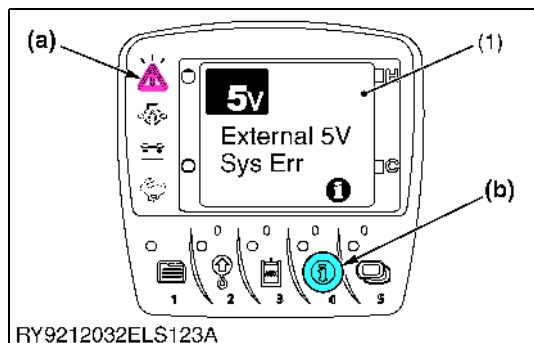

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.) External 5V

[Reason error screen displayed]


- Short in 5 V line

(1) External 5 V Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0125US0

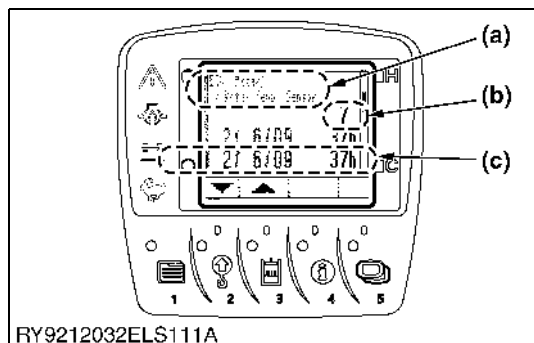

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.

Ex.) The last failure record was February 6, 2009 at 37 hours.


(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

Testing the 3.5V line

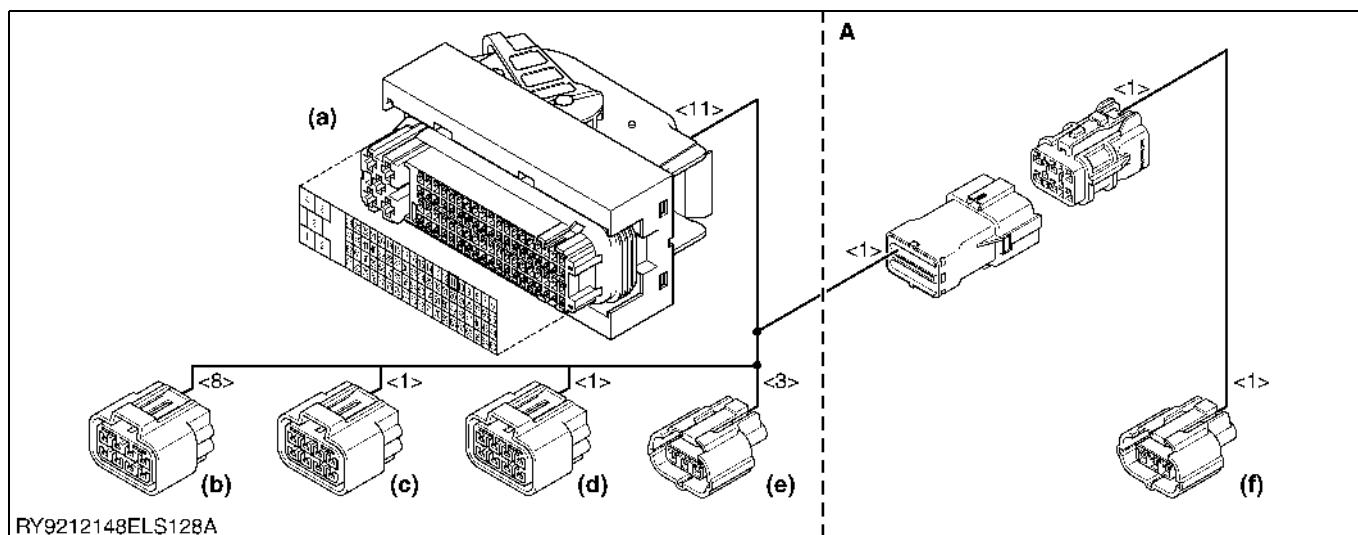

- (a) Main ECU connector
(b) AI console connector
(c) AUX1 switch connector

- (d) AUX2/Thumb switch connector

- (e) Travel pressure sensor connector
(f) Boom pressure sensor connector

A : Eur. spec. only

[Test Conditions]


1. Check whether each line is pinched against or touching the body. If the insulation is damaged, repair it properly and check the meter display again.

RY9212148ELS0126US0

[6] COMMUNICATION SYSTEM

(1) CAN Communication Errors

[A] Checking the Meter Panel

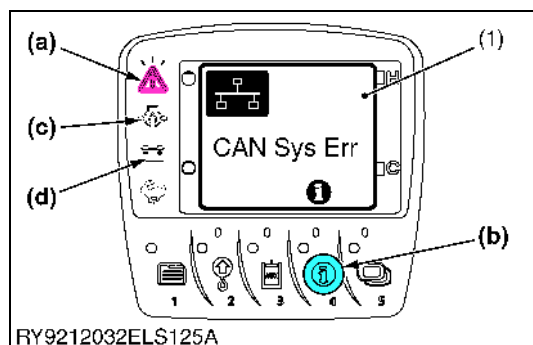

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.)

- CAN system (main)
- CAN Sys (CRS)

[Reason error screen displayed]

- ECU connector disconnected
- Fuse blown
- Break or short in harness
- Engine ECU relay faulty

(1) CAN Sys Err


(a) Warning Lamp

(b) Info Button

(c) Oil Lamp

(d) Charging Lamp

RY9212148ELS0127US0

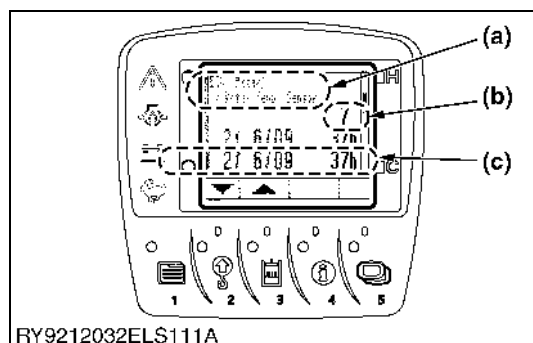

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.


Ex.) The last failure record was February 6, 2009 at 37 hours.

(a) Failure

(b) Number of Failure

(c) The Last Breakdown Date (y/m/d) and Hour Meter.

RY9212032ELS0001US0

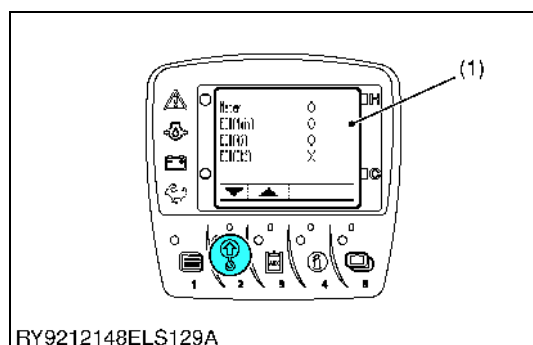

3. Tester mode

1. Select the tester mode.
2. Confirm the ECU is O.

	Regular	Irregular
ECU (main)	○	×
ECU (AS)	×	×
ECU (CRS)	○	×


(1) Meter

ECU (Main)

ECU (AS)


ECU (CRS)

RY9212148ELS0128US0

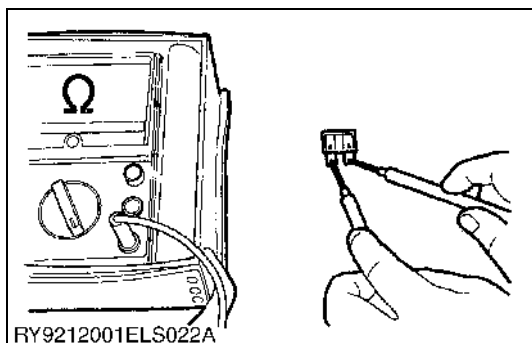[B] Inspecting each Device Visually and Physically**1. Checking fuses**

1. Check if the 5A ECU (+B) fuse is blown.

RY9212158ELS0008US0

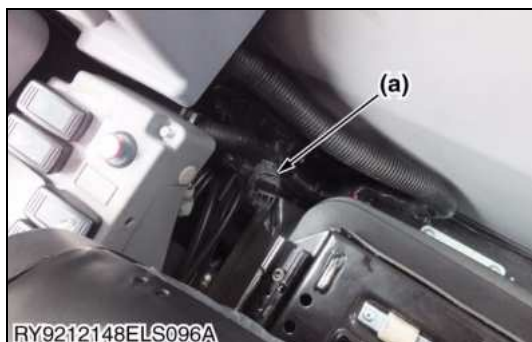**2. Causes when a break in wiring****[Test Conditions]**

1. Key switch: OFF
2. Check whether the joint connector is disconnected.
3. Check whether the machine's ECU connector is disconnected.

(a) Joint connector


RY9212148ELS0177US0

**3. Causes when a short****[Test Conditions]**

1. Key switch: OFF
2. The CAN connector wire is pinched against or touching the body.
If the insulation is damaged, repair it properly and check the ECU (main) again in the tester mode.

(a) CAN communication (2 wires)

RY9212148ELS0129US0

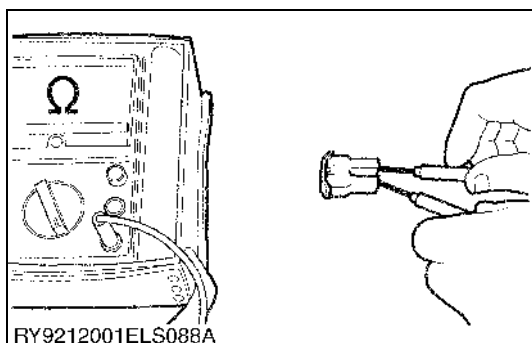**1. Checking fuses**

1. Check if the 30A ECU (CRS) slow blow fuse is blown.

RY9212148ELS0178US0


**2. Checking relays**

1. Replace the engine ECU and condenser motor relays.
After replacing them, check for normal operation.

(a) Engine ECU relay

(b) Condenser motor relay

RY9212148ELS0179US0

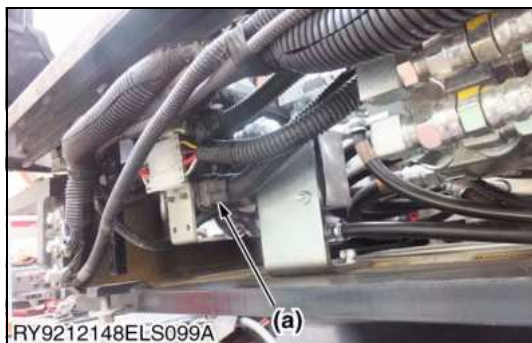

3. Causes when a break in wiring


[Test Conditions]

1. Key switch: OFF
2. Check if the relay connector (16 pin) is disconnected.
3. Check whether the engine ECU connector is disconnected.

(a) Relay connector (16-pin)

(b) Engine ECU

RY9212148ELS0180US0

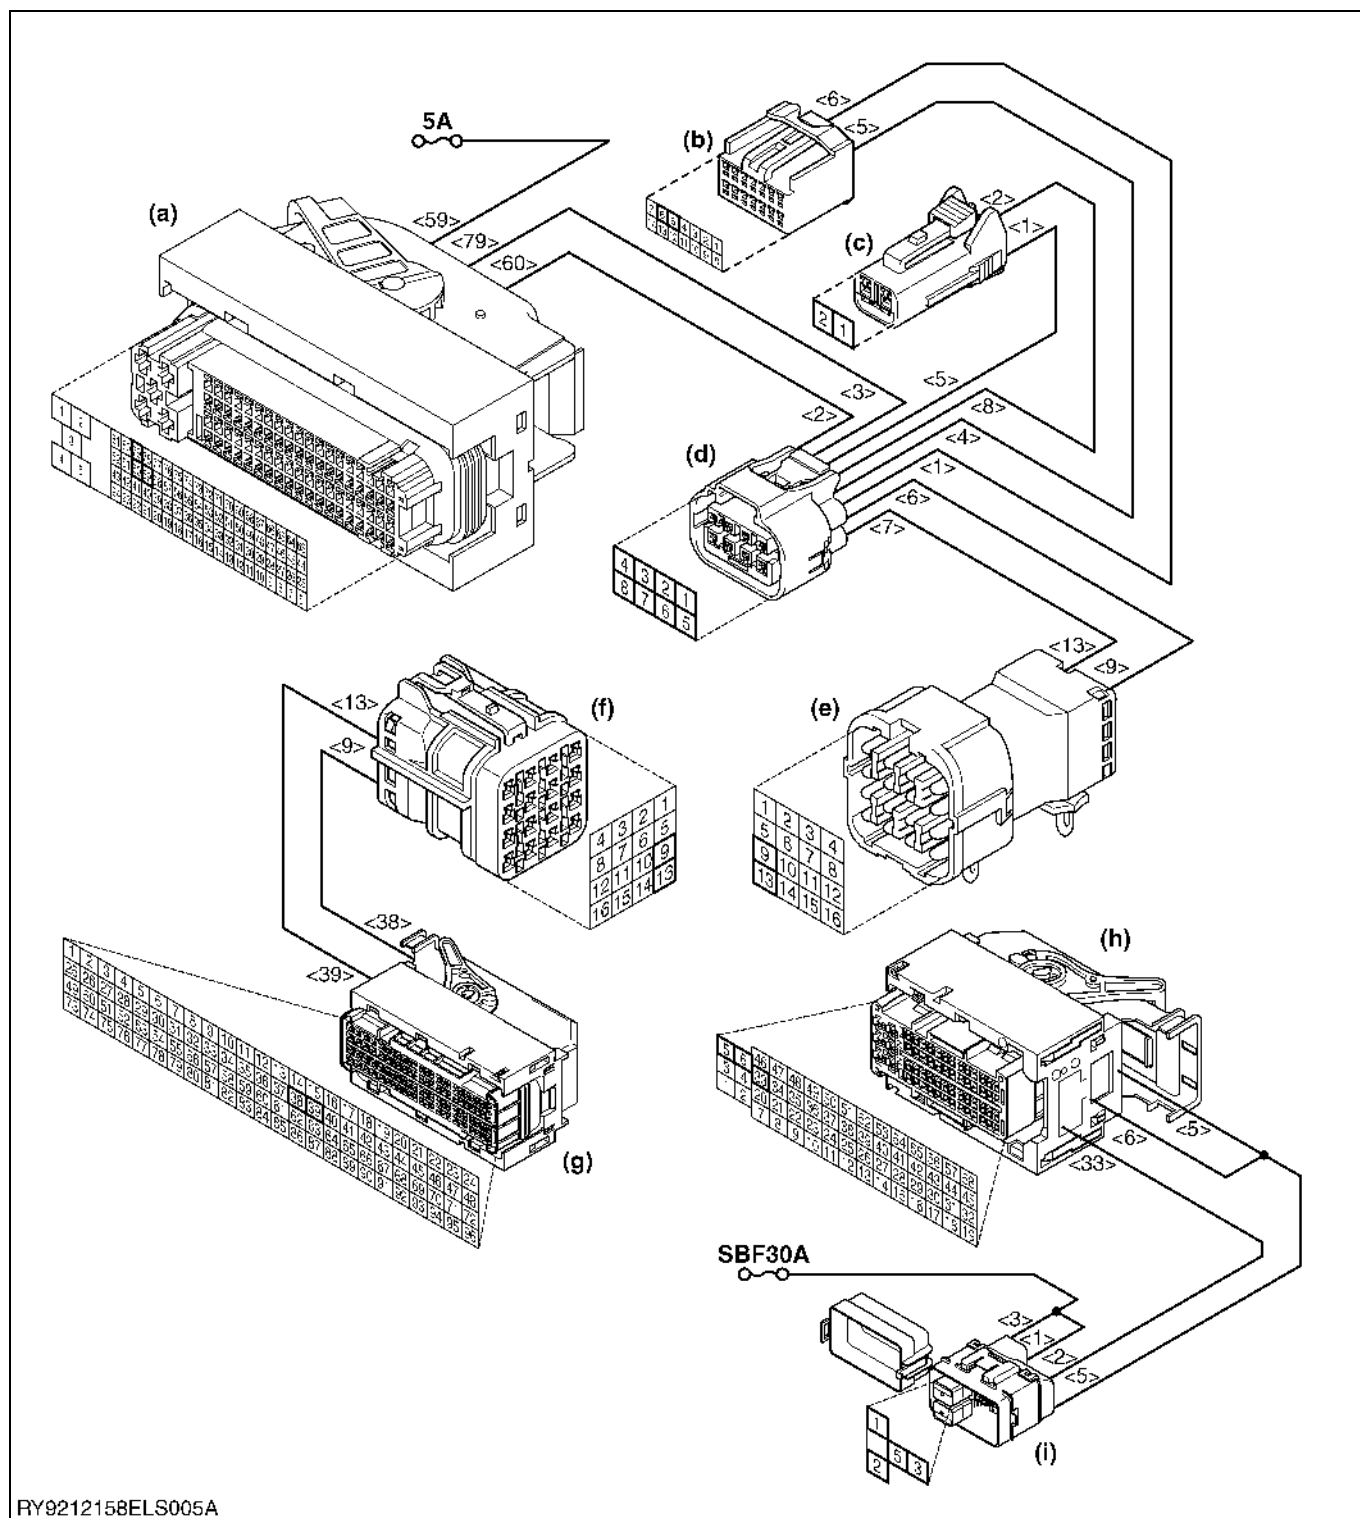[C] Testing with a Circuit Tester

RY9212158ELS005A

(a) Main ECU connector
 (b) Meter panel connector
 (c) CAN comm connector

(d) Joint connector
 (e) Engine (signal) connector

(f) Main (signal) connector
 (g) Engine ECU (96 pin) connector

(h) Engine ECU (58 pin) connector
 (i) Engine relay

RY9212158ELS0009US0

CAN communication error (main)**1. Voltage check****[Measurement Conditions]**

1. Disconnect the ECU connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Main ECU	<59>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0182US0

2. Continuity check**[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	5A fuse	—	Main ECU	<59>
(2)	Main ECU	<60>	Joint connector	<2>
(3)	Main ECU	<79>	Joint connector	<3>
(4)	Joint connector	<5>	CAN connector	<1>
(5)	Joint connector	<8>	CAN connector	<2>
(6)	Joint connector	<1>	Meter panel	<6>
(7)	Joint connector	<4>	Meter panel	<5>

Regular: Continuity

Irregular: No continuity

RY9212158ELS0010US0

CAN communication error (CRS)**1. Voltage check****[Measurement Conditions]**

1. Disconnect the ECU connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Main ECU	<5>	Body GND	—
(2)	Main ECU	<6>	Body GND	—
(3)	Main ECU	<33>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0184US0

2. Continuity check**[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	SBF (CRS) 30A	—	Engine ECU relay	<1>
(2)	SBF (CRS) 30A	—	Engine ECU relay	<3>
(3)	Engine ECU relay	<5>	Engine ECU	<5>
(4)	Engine ECU relay	<5>	Engine ECU	<6>
(5)	Engine ECU relay	<2>	Engine ECU	<33>
(6)	Joint connector	<6>	Engine (signal)	<9>
(7)	Joint connector	<7>	Engine (signal)	<13>
(8)	Main (signal)	<13>	Engine ECU	<39>
(9)	Main (signal)	<9>	Engine ECU	<38>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0185US0

[D] Steps to Take after Completing Repairs

RY9212032ELS114A

1. Delete failure record

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.


(1) No Fail Record

RY9212148ELS0148US0

[7] AUX SYSTEM

(1) AUX1 / AUX2 (Thumb) System Errors

[A] Checking the Meter Panel

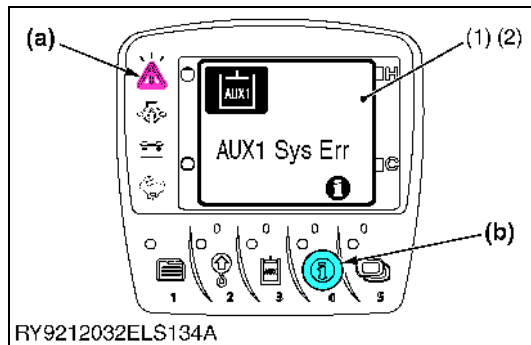

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex.)

- AUX1/AUX2 (thumb) knob
- AUX1/AUX2 (thumb) right SOL
- AUX1/AUX2 (thumb) left SOL


[Reason error screen displayed]

- AUX1/AUX2 (thumb) control lever connector disconnected
- AUX1/AUX2 (thumb) solenoid connector disconnected
- Break or short in harness

- (1) AUX1 Sys Err
(2) AUX2 Sys Err

- (a) Warning Lamp
(b) Info Lamp

RY9212148ELS0130US0

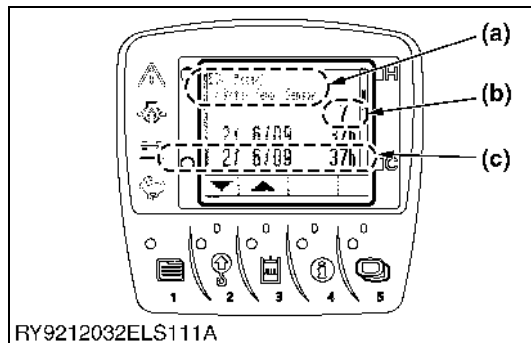

2. Reading the failure history


1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.

Ex.) The last failure record was February 6, 2009 at 37 hours.

- (a) Failure
(b) Number of Failure

- (c) The Last Breakdown Date (y/m/d) and Hour Meter.


RY9212032ELS0001US0

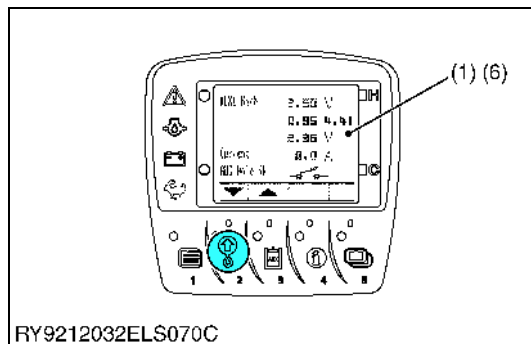

3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Measure the voltage of AUX switch based on the table below.

	Indicated value	Set value (ex.)			At stop
		Left (small)	Right (large)	Center (medium)	
AUX1 knob switch	0.25 to 4.75 V	0.95 V	4.41 V	2.36 V	0 V
AUX2 / Thumb knob switch	0.25 to 4.75 V	0.77 V	4.21 V	2.59 V	0 V
Output current	0.5 to 2.0 A				0 to 0.2 A

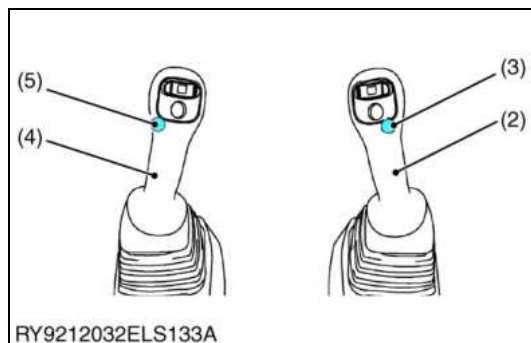


	Regular	When cut off	When shorted
Press the AUX one way hold SW			
Release the AUX one way hold SW			

- (1) AUX1 Knob Current
AUX Hold SW
(2) Control Lever (Light)
(3) AUX One Way Hold SW

- (4) Control Lever (Left)
AUX One Way Hold SW
(6) AUX2 / Thumb knob Current
AUX Hold SW

RY9212148ELS0131US0

[B] Inspecting each Device Visually and Physically

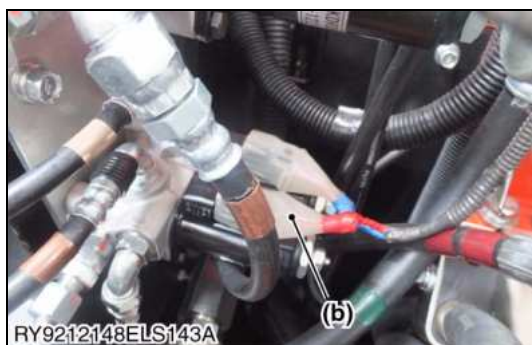

1. Causes when a break in wiring

[Test Conditions]

1. Key switch: OFF
2. AUX1/AUX2 solenoid connector disconnected.
3. AUX control lever connector disconnected.
4. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (Pull with a max of 3kgf of force) If it comes off, plug the connector back in securely and check the AUX1 and 2 solenoids in the tester mode.

(a) AUX1 SOL

(b) AUX2 SOL

RY9212148ELS0132US0

2. Causes when a short

[Test Conditions]


1. Key switch: OFF
2. The AUX1, AUX2 solenoid connector and/or AUX control lever connector wiring is pinched and touching the body, or if the insulation is damaged, repair it properly and check the AUX solenoids again in the tester mode.

(c) AUX control lever connector

RY9212148ELS0133US0

[C] Testing with a Circuit Tester

Switch side

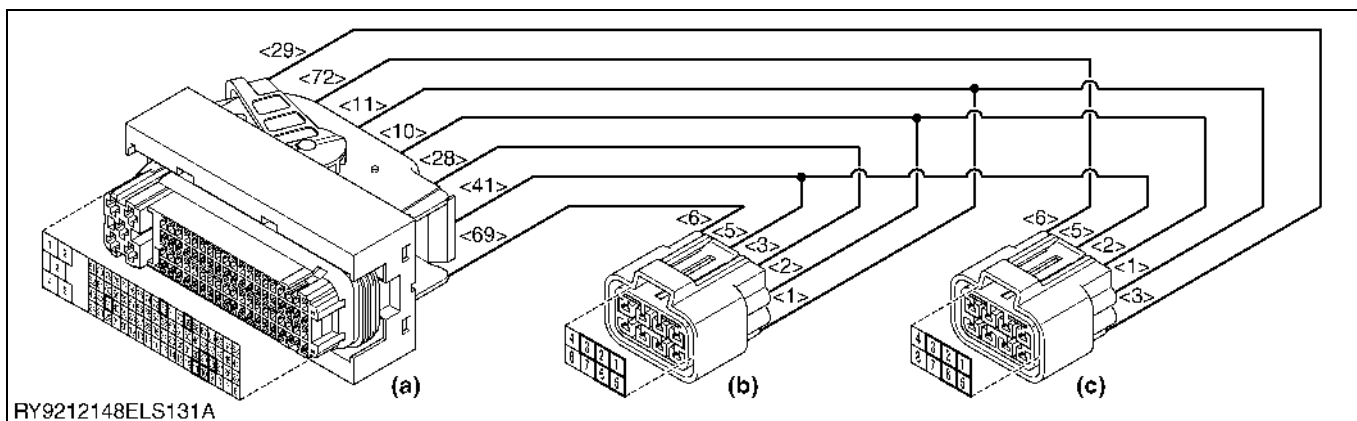

(a) Main ECU connector

(b) Right control lever connector

(c) Left control lever connector

RY9212148ELS0186US0

1. Voltage check (AUX hold switch)**[Measurement Conditions]**

1. Disconnect the AUX1/AUX2 control lever connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Right control lever	<5>	Right control lever	<6>
(2)	Right control lever	<5>	Body GND	—
(3)	Left control lever	<5>	Left control lever	<6>
(4)	Left control lever	<5>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0187US0

2. Voltage check (AUX1/AUX2 switch)**[Measurement Conditions]**

1. Disconnect the AUX1/AUX2 control lever connector.
2. Key switch: ON
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Right control lever	<1>	Right control lever	<2>
(2)	Right control lever	<1>	Body GND	—
(3)	Left control lever	<1>	Left control lever	<2>
(4)	Left control lever	<1>	Body GND	—

Regular: 5V

Irregular: Large discrepancy from 5V

RY9212148ELS0188US0

3. Continuity check (AUX hold switch)**[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Main ECU	<41>	Right control lever	<5>
(2)	Right control lever	<6>	Main ECU	<69>
(3)	Main ECU	<41>	Left control lever	<5>
(4)	Left control lever	<6>	Main ECU	<72>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0189US0

4. Continuity check (AUX1/AUX2 switch)**[Measurement Conditions]**


1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Right control lever	<3>	Main ECU	<28>
(2)	Right control lever	<1>	Main ECU	<11>
(3)	Right control lever	<2>	Main ECU	<10>
(4)	Left control lever	<3>	Main ECU	<29>
(5)	Left control lever	<1>	Main ECU	<11>
(6)	Left control lever	<2>	Main ECU	<10>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0190US0

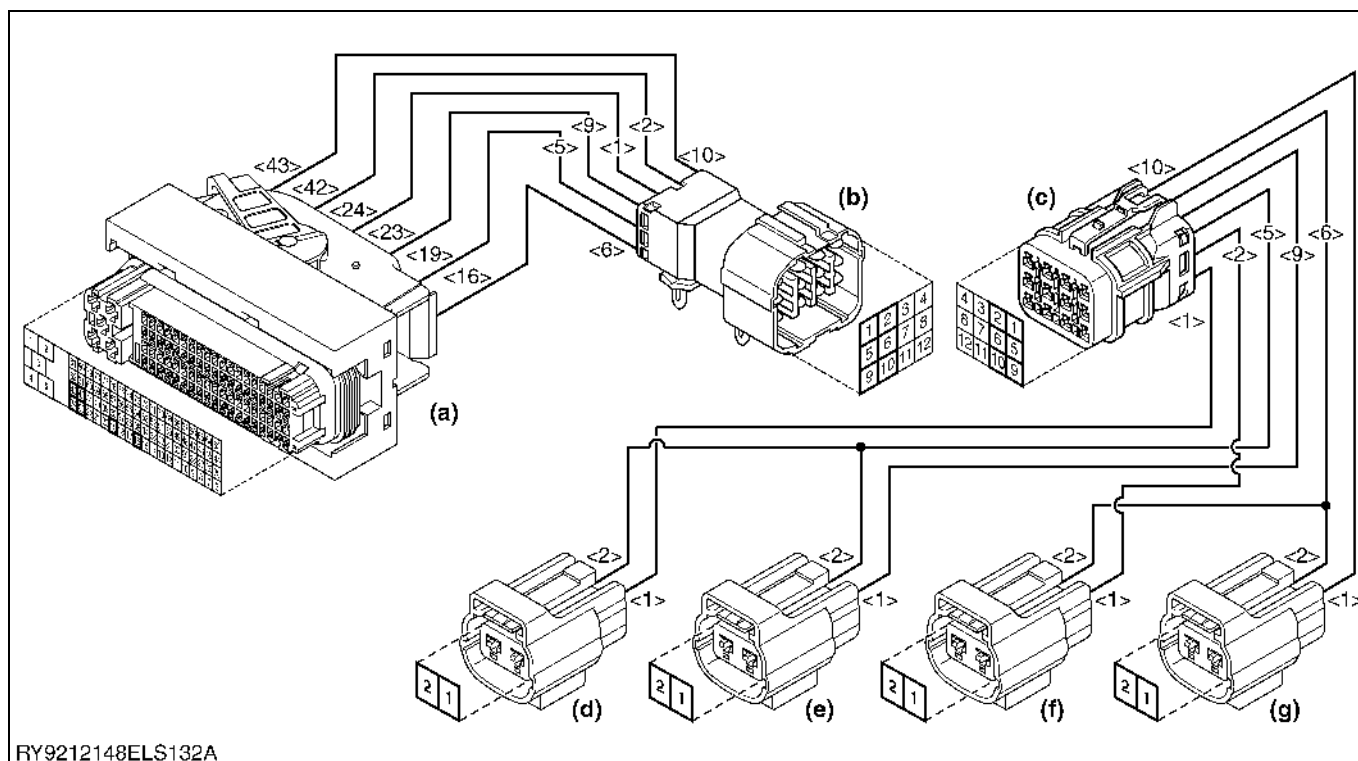Solenoid side

RY9212148ELS132A

(a) Main ECU connector

(d) AUX1 (R) solenoid connector

(f) AUX2 (R) solenoid connector

(g) AUX2 (L) solenoid connector

(b) Engine (solenoid) connector

(e) AUX1 (L) solenoid connector

(c) Main (solenoid) connector

- If connectors (c) (d) are removed, the engine will start but the machine will not operate.

RY9212148ELS0191US0

1. Continuity check (AUX1 solenoid)**[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AUX1 (right) solenoid	<1>	Main (solenoid)	<1>
(2)	AUX1 (right) solenoid	<2>	Main (solenoid)	<5>
(3)	AUX1 (left) solenoid	<1>	Main (solenoid)	<9>
(4)	AUX1 (left) solenoid	<2>	Main (solenoid)	<5>
(5)	Main ECU	<24>	Engine (solenoid)	<1>
(6)	Main ECU	<23>	Engine (solenoid)	<9>
(7)	Main ECU	<19>	Engine (solenoid)	<5>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0192US0

2. Continuity check (AUX2 solenoid)**[Measurement Conditions]**


1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	AUX2 (right) solenoid	<1>	Main (solenoid)	<2>
(2)	AUX2 (right) solenoid	<2>	Main (solenoid)	<6>
(3)	AUX2 (left) solenoid	<1>	Main (solenoid)	<10>
(4)	AUX2 (left) solenoid	<2>	Main (solenoid)	<6>
(5)	Main ECU	<42>	Engine (solenoid)	<2>
(6)	Main ECU	<43>	Engine (solenoid)	<10>
(7)	Main ECU	<16>	Engine (solenoid)	<6>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0193US0

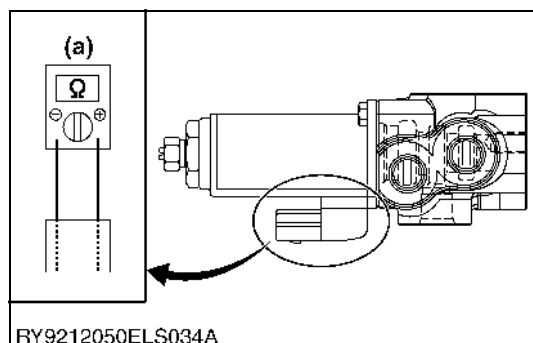[D] Testing the Equipment Itself**1. Testing the AUX1 / AUX2 solenoid****[Test Conditions]**

1. Key switch : OFF
2. Disconnect AUX1 / AUX2 solenoid connector from the machine and test the solenoid separately.

AUX1 / AUX2 solenoid	Factory specification	3.2 ± 0.5 Ω (at 20 °C, 68 °F)

(a) AUX1 / AUX2 Solenoid Terminals

RY9212148ELS0134US0

[E] Steps to Take after Completing Repairs**1. Delete failure record**

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.


(1) No Fail Record

RY9212148ELS0148US0

[8] ECO MODE SYSTEM

(1) EP System Errors

[A] Checking the Meter Panel

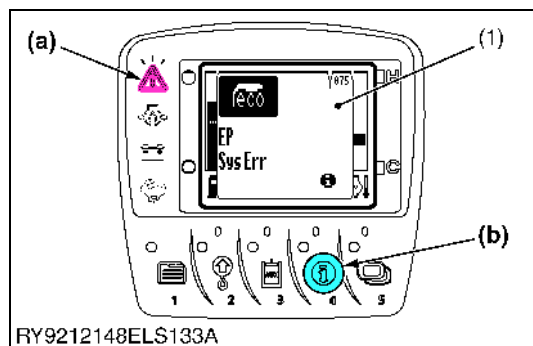

1. Information displayed on the meter panel

1. Check whether or not the warning lamp (a) on the panel is blinking red.
2. Press the info button (b) and check the additional content.

Ex) EP solenoid travel pressure

[Reason error screen displayed]


- Pressure sensor connector disconnected
- EP solenoid connector disconnected
- Break or short in harness

(1) EP Sys Err

(a) Warning Lamp

(b) Info Button

RY9212148ELS0194US0

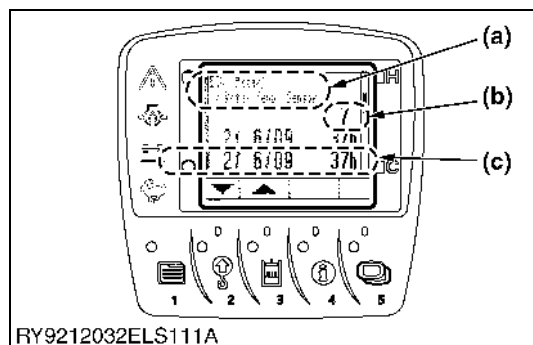

2. Reading the failure history

1. Select the failure history read mode.
2. Read the failure history and check the date (y/m/d) and hour meter of the last occurrence.

Ex.) The last failure record was February 6, 2009 at 37 hours.


(a) Failure

(c) The Last Breakdown Date (y/m/d)


(b) Number of Failure

and Hour Meter.


RY9212032ELS0001US0

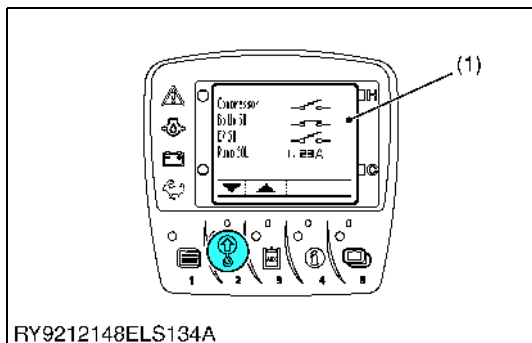

RY9212148ELS134A

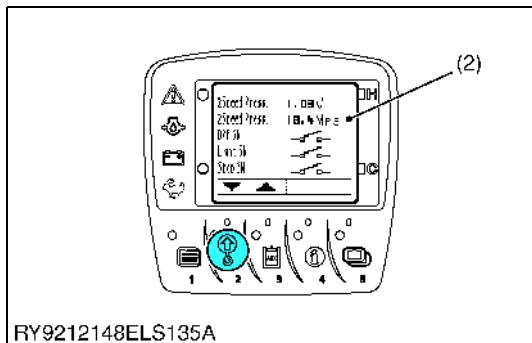

RY9212148ELS135A

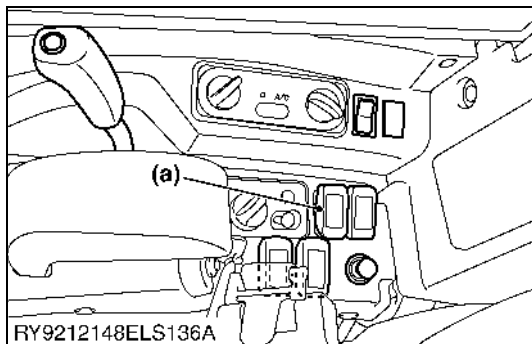

RY9212148ELS136A

3. Tester mode

1. Select the tester mode.
2. Start the engine.
3. Put the machine's lever lock in the unlock position and press the EP switch.
4. Operate the EP switch and check operation of the EP switch and EP solenoid based on the table below.
5. Put the excavator in travel and check the travel pressure sensor operation.

	Regular	When cut off	When shorted
EP SW ON			
EP SW OFF			

	Mode	Factory specification
EP solenoid	P mode	0 to 0.6 A
	E mode	0.84 to 1.65 A

Design Value	Regular	When cut off	When shorted
Travel pressure	Current value	0 V	Not stable

- (1) Compress
Boom Up SW
EP SW
Pump SOL
- (2) 2Speed Press
2Speed Press
DPF SW
Light SW
Stop SW

(a) EP Switch

RY9212148ELS0195US0

[B] Inspecting each Device Visually and Physically



RY9212148ELS145A

1. Causes when a break in wiring

[Test Conditions]

1. Key switch: OFF
2. EP solenoid connector disconnected.
3. Travel pressure sensor connector disconnected.
4. There is a break somewhere in the wiring.

Pull on the harness and make sure the connector/harness does not come off. (pull w/3kgf or less force)

If it comes off, plug the connect or back in and check again in the tester mode.

- (1) EP solenoid connector

RY9212148ELS0196US0

2. Causes when a short

[Test Conditions]

1. Key switch: OFF
2. The EP solenoid connector and/or travel pressure sensor connector wires are pinched against or touching the body.
If the insulation is damaged, repair it properly and check the EP solenoid and travel pressure sensor again in the tester mode.


- (2) Travel pressure sensor connector

RY9212148ELS0197US0



RY9212148ELS146A

[C] Testing with a Circuit Tester

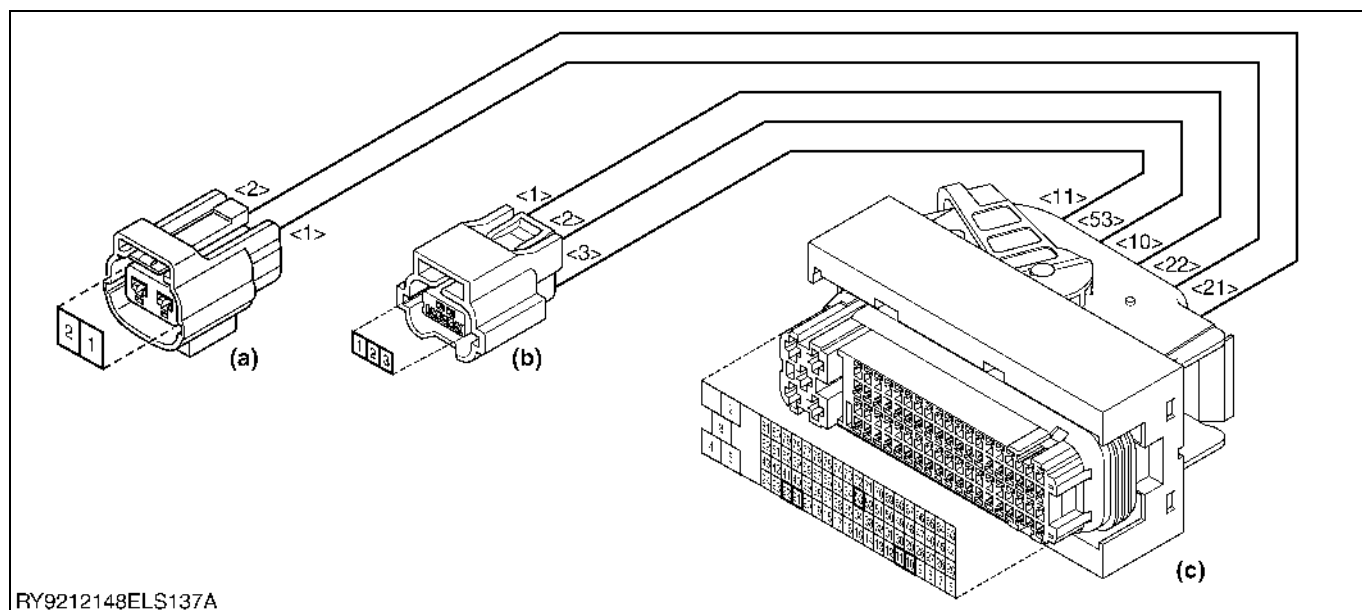

(a) EP Solenoid Connector

(b) Travel Pressure Sensor Connector

(c) Main ECU Connector

RY9212148ELS0198US0

1. Voltage check (EP solenoid)

[Measurement Conditions]

1. Disconnect the EP solenoid connector.
2. Key switch: ON
3. EP switch: ON
4. Measure the voltage based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	EP solenoid	<1>	EP solenoid	<2>
(2)	EP solenoid	<1>	Body GND	—

Regular: 12V

Irregular: Large discrepancy from 12V

RY9212148ELS0199US0

2. Continuity check (EP solenoid)

[Measurement Conditions]

1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Measurement	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	EP solenoid	<1>	Main ECU	<22>
(2)	EP solenoid	<2>	Main ECU	<21>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0200US0

3. Voltage check (travel pressure sensor)**[Measurement Conditions]**

1. Disconnect the travel pressure sensor connector.
2. Key switch: ON
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Travel pressure sensor	<3>	Travel pressure sensor	<1>
(2)	Travel pressure sensor	<3>	Body GND	—

Regular: 5V

Irregular: Large discrepancy from 5V

RY9212148ELS0201US0

4. Continuity check (travel pressure sensor)**[Measurement Conditions]**


1. Key switch: OFF
2. Disconnect the connector to be tested.
3. Test the continuity based on the table below.

Mea- sure- ment	Connector Name (+ terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(1)	Travel pressure sensor	<1>	Main ECU	<10>
(2)	Travel pressure sensor	<2>	Main ECU	<53>
(3)	Travel pressure sensor	<3>	Main ECU	<11>

Regular: Continuity

Irregular: No continuity

RY9212148ELS0202US0

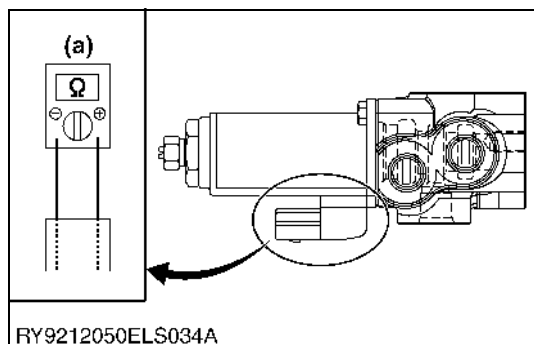[D] Testing the Equipment Itself**1. Testing the EP solenoid****[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect EP solenoid connector from the machine and test the solenoid separately.


EP solenoid	Factory specification	$3.2 \pm 0.5 \Omega$ [20 °C (68 °F)]

Regular: Within factory spec

Irregular: Outside factory spec.

(a) EP Solenoid Terminal

RY9212148ELS0203US0

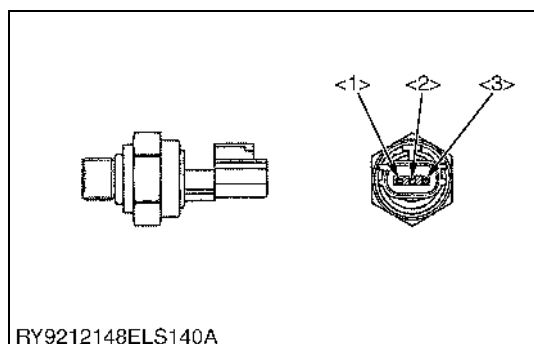**2. Testing the pressure sensor****[Measurement Conditions]**

1. Key switch: OFF
2. Disconnect the pressure sensor connector from the machine and test the pressure sensor independently.

Load resistance <2> - <3>	Factory specification	22 kΩ

Regular: Within factory spec

Irregular: Outside factory spec.

RY9212148ELS0204US0

[E] Steps to Take after Completing Repairs**1. Delete failure record**

1. While in the service/dealer mode, select Delete Fail Record and delete the record.
2. After deleting the record, start the engine again and check to make sure the warning is not shown on the meter panel.

(1) No Fail Record

RY9212148ELS0148US0

5 CABIN


MECHANISM

CONTENTS

1. AIR CONDITIONING SYSTEM	5-M1
[1] STRUCTURE	5-M1
[2] HOW THE MECHANISMS OF THE SYSTEM WORK	5-M2
[3] COMPRESSOR.....	5-M3
[4] AIR CONDITIONING UNIT	5-M6
[5] CONDENSER.....	5-M11
[6] RECEIVER	5-M12
[7] PRESSURE SWITCH.....	5-M13
[8] ELECTRICAL SYSTEM.....	5-M14
(1) Electrical Circuits	5-M14
(2) Relays.....	5-M15
(3) Blower Switch.....	5-M16
2. WIPER.....	5-M17
[1] WIPER SWITCH.....	5-M17
[2] WIPER.....	5-M17
[3] WIPER MOTOR	5-M18

1. AIR CONDITIONING SYSTEM

[1] STRUCTURE

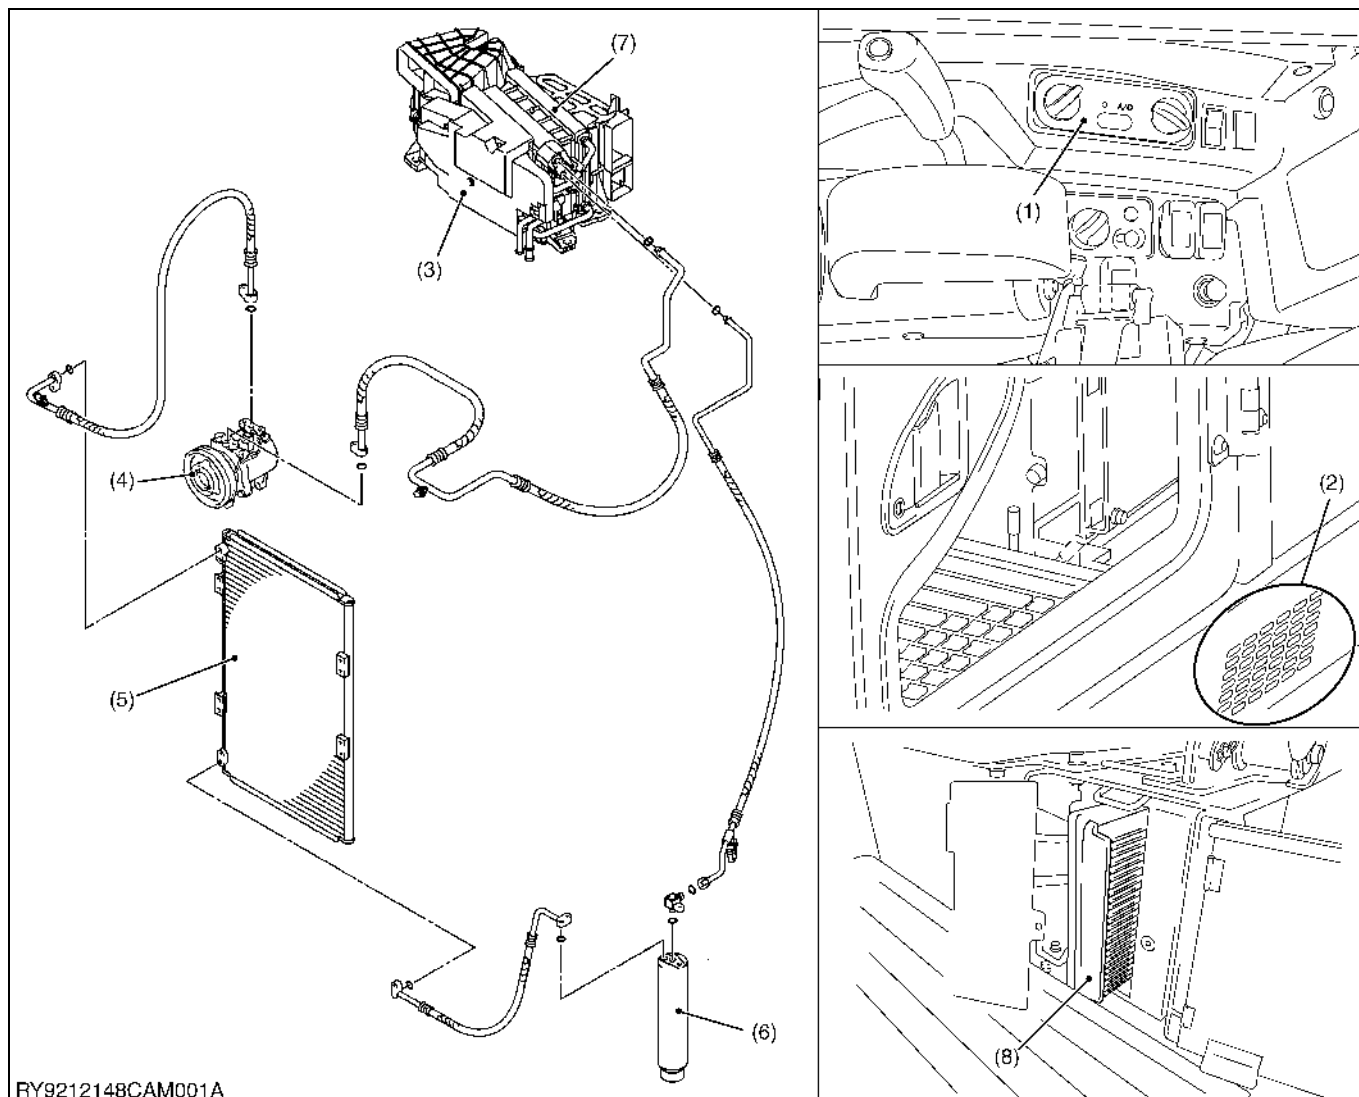


(1) Control panel	(3) AC Unit	(5) Condenser	(7) Heater core
(2) External air intake	(4) Compressor	(6) Receiver	(8) AC filter

The cabin is equipped with a high-capacity, low-profile air conditioner that can circulate cabin air or bring in fresh air from outside. Cabin air and outside air are directed through the AC filter to the AC unit. The cabin or outside air that is sucked into the AC unit is cooled and dehumidified by the cooler of the AC unit. When the system is used for heating, the air is heated by the heater core and then expelled from the air vents. The air vents can be opened and closed and the direction of the airflow can be adjusted.

Cooling capacity	Factory specification	3.4 kW $\pm$ 10 %
Heating capacity		4.1 kW $\pm$ 10 %
Type of refrigerant (charge capacity)		R134a 950 g 2.09 lbs
Pressure sensor (low)		0.196 MPa 2.0 kgf/cm ² 28.4 psi
Pressure sensor (high)		3.14 MPa 32.0 kgf/cm ² 455 psi

RY9212148CAM0004US0

[2] HOW THE MECHANISMS OF THE SYSTEM WORK

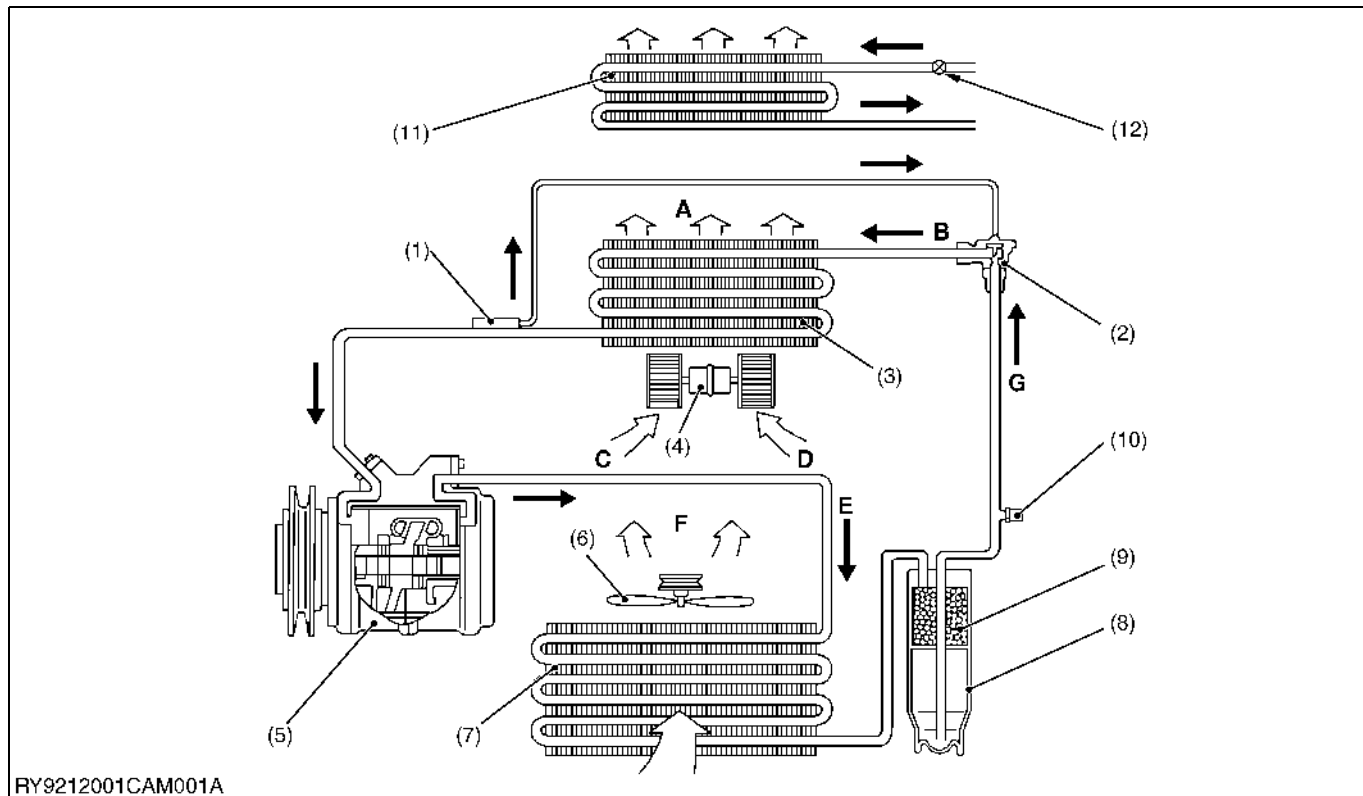

(1) Capillary Tube (Heat Sensitive Capillary Tube)	(7) Condenser
(2) Expansion Valve	(8) Receiver
(3) Evaporator	(9) Dryer
(4) Blower Motor	(10) Pressure Switch
(5) Compressor	(11) Heater Core
(6) Engine Cooling Fan	(12) Hot Water Valve

A : Cooled Air
B : Low Pressure and Temperature Vapor
C, D : Air Passes Through In / Outside Air Filter

E : High Pressure/Temperature Gas
F : Hot Air
G : Liquid

This air conditioning system works as follows.


1. Refrigerant passes through the evaporator (3), is vaporized and then is compressed by the compressor (5) to approximately 1.47 MPa (15 kgf/cm², 210 psi) and raised to a temperature of approximately 70 °C (158 °F) the refrigerant is then sent in this state to the condenser (7).
2. The vaporized refrigerant passes through the condenser (7), where it is cooled down to approximately 50 °C (122 °F) and the refrigerant changes back from a vapor to a liquid; it is then sent on to the receiver (8). Then the heat from inside the cabin that is captured by the condenser (7) is released outside the cabin.
3. The liquid refrigerant collects in the receiver (8) and any moisture is removed from the refrigerant by the dryer (9).
4. The liquid refrigerant then passes on to the expansion valve (2), where it is sprayed through the small holes in the valve into the evaporator (3), which produces a mist of the refrigerant; its pressure and temperature drop and the refrigerant evaporates.
5. The refrigerant simultaneously captures heat from the surface of the evaporator's (3) pipes and evaporates vigorously at 0 °C (32 °F).
6. As this happens, warm air from inside the cabin is drawn into the evaporator (3) by the blower motor (4) and the refrigerant captures the heat and evaporates. In this way the air in the cabin is cooled.

[NOTE]

- Because the warm air inside the cabin is cooled quickly, the moisture in the air condenses. In other words, the air in the cabin can be dehumidified.
7. The refrigerant vaporized in the evaporator (3) is returned to the compressor (5) and compressed, changing it back into a liquid. In doing so, the refrigerant is put under high pressure and temperature.
 8. The air that passed through the evaporator (3) can be adjusted to the desired temperature by then passing it through the heater core (11). Engine coolant is heated by the engine and the amount of the coolant that flows into the heater core (11) is controlled by the hot water valve (12), and this adjusts the temperature of the air that flows through the heater core (11).

RY9212001CAM0002US0

[3] COMPRESSOR

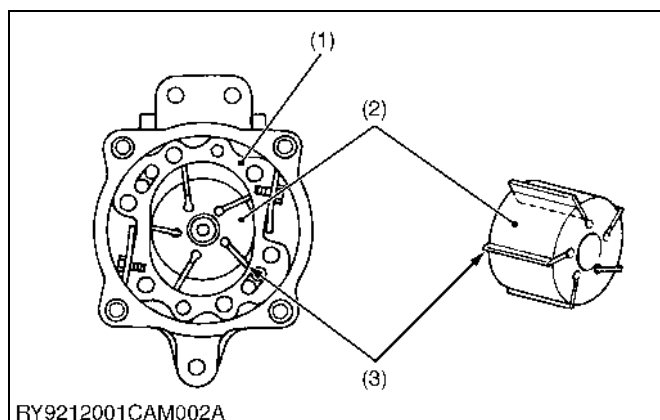

The vane type of compressor installed in this system is composed of a cylinder (1) that is elliptical in cross-section, along with five vanes (3) attached to the rotor (2). This vane compressor has two each of intake and discharge ports.

The five vanes (3) are attached to the rotor (2) and as it rotates, the tips of the vanes come in contact with the walls of the cylinder (1) and an airtight compression space is maintained both by the centrifugal force exerted by the rotor (2) along with the back pressure on the vanes (3), which is in proportion to the rpms of the rotor (2).

As a result, the volume changes in each of the five segments of the cylinder, which are divided by the five vanes (3) in the cylinder (1).

Each time that the rotor (2) rotates, each of the five segments of the cylinder goes through two cycles of intake, compression and discharge.

(1) Cylinder
(2) Rotor

(3) Vane

RY9212001CAM0003US0

How it Works


As the rotor (3) turns, the volume of space in a segment, as divided by the cylinder (1) and vanes (4), increases, sucking refrigerant gas from the intake port (2) into the cylinder space.

As the rotor (3) turns further, the volume of the space created between the cylinder (1) and vanes (4) decreases, compressing the refrigerant gas. As the rotor (3) continues to turn, the refrigerant gas is compressed further, putting it under a great deal of pressure, pressing on the discharge valve and opening it. The refrigerant gas is then expelled via the discharge port (5).

(1) Cylinder
(2) Intake Port
(3) Rotor
(4) Vane
(5) Discharge Port

(A) Compression Cycle
(B) Discharge Cycle
(C) Intake Cycle

RY9212001CAM0004US0

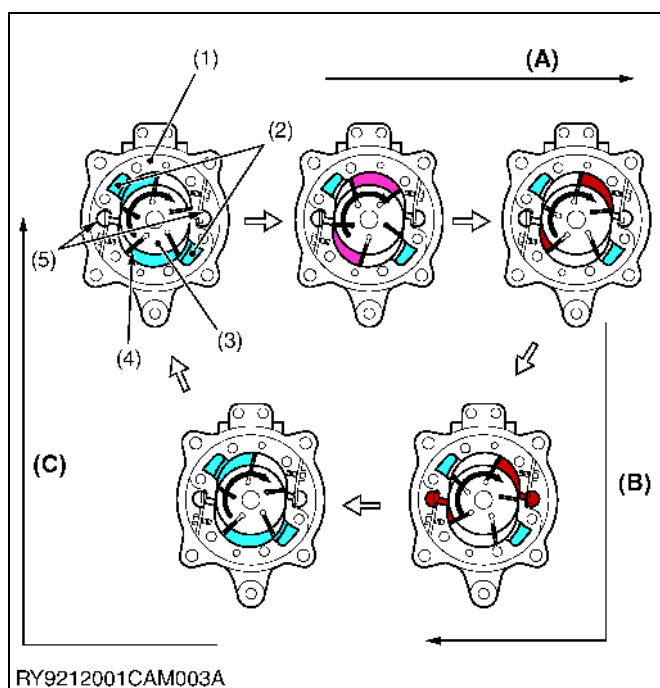

Compressor Oil


The compressor oil is dissolved in the refrigerant and circulates throughout the entire cooling system acting as the lubricating oil for the compressor. However, because the previously used R12 compressor oil does not dissolve in R134a, it does not circulate through the cooling cycle. So it drastically reduces the working life of the compressor.

As a result, it is imperative that the right compressor oil is always used. The mineral oil that is used in an R12 cooling system cannot be used in an R134a cooling system. A synthetic PAG oil has to be used in an R134a cooling system. This oil mixes extremely well with refrigerant gas and provides the entire system with the optimum lubrication.

Volume of Oil	Product Name
110 to 120 cc 0.116 to 0.127 U.S.qts 0.098 to 0.106 Imp.qts	ND-OIL8 <PAG* oil>

*PAG : Polyalkylene glycol (synthetic oil)

RY9212001CAM0005US0

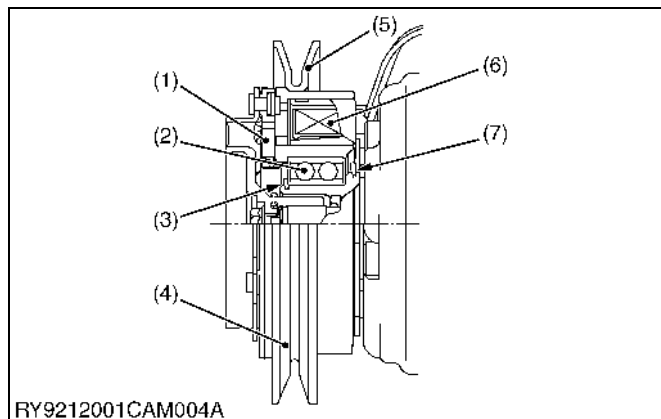


Magnetic Clutch

A magnetic clutch is a device that governs the mechanical linkage between the engine and the compressor. When the engine is rotating and the AC switch is on, air at cabin temperature comes out and when the temperature reaches the temperature set with the temperature control switch, or when the cabin gets hot, the clutch works to stop or to drive the compressor, respectively.

The hub of the magnetic clutch is attached to the compressor shaft and when it is not driving the compressor, it is separate from the rotor and just the pulley turns. When the AC switch is turned on, current flows into the stator coil, making the stator into a magnet, which then holds onto the hub and the pulley turns along with the compressor.

(1) Pressure Plate	(5) Rotor w/ Pulley
(2) Ball Bearing	(6) Stator
(3) Snap Ring	(7) Snap Ring
(4) Pulley	

RY9212001CAM0006US0

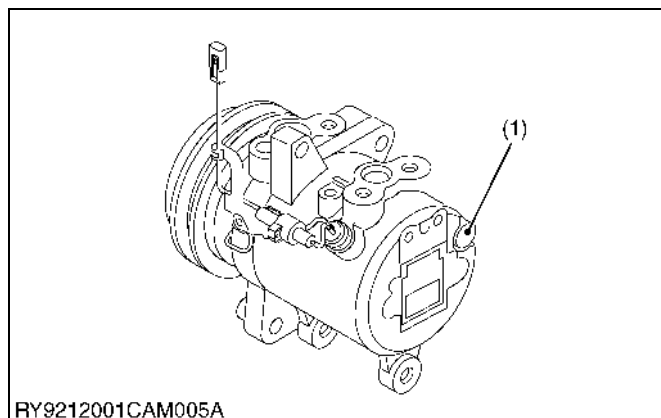



B. Safety Valve

The valve opens when the refrigerant pressure reaches the specified pressure, thus relieving the pressure. When the pressure becomes abnormally high, it overcomes the force of the spring, allowing refrigerant to leak out of the relief port; when the pressure drops the reverse happens--the spring overcomes the pressure and the safety valve closes. When an error occurs, this also keeps the discharge of refrigerant to a minimum.

(1) Safety Valve	a : 113 L/min. (27.2 U.S.gals./min., 24.86 Imp.gals./min.)
(A) Refrigerant Leak Route	b : 2.75 MPa
(B) Functional Characteristics	(C) Amount of Refrigerant Leaked c : 3.43 MPa
(D) Pressure	(35.0 kgf/cm ² , 497.8 psi) d : 4.12 MPa (42.0 kgf/cm ² , 598.0 psi)

RY9212001CAM0007US0

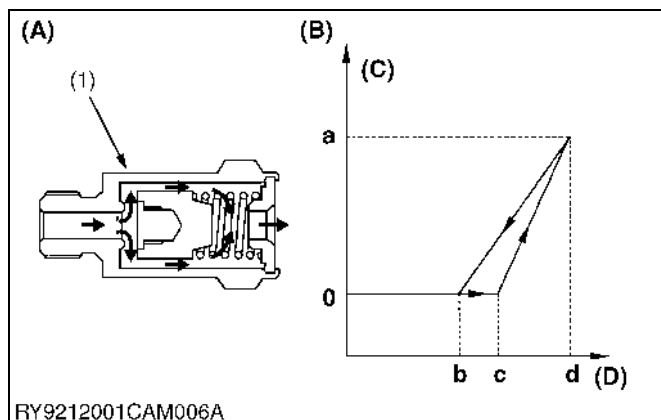

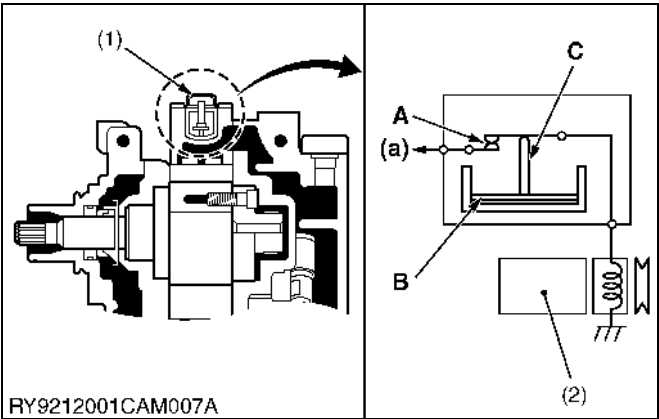

Temperature Sensor

A temperature sensor is installed on the head of the vane type of compressor. This sensor detects the temperature of the refrigerant and when the refrigerant becomes unusually hot, it cuts off the magnetic clutch, stopping the compressor. The temperature sensor is composed of a bimetallic strip and contacts. A bimetallic strip is a sandwich of two metals with different rates of expansion and it bends when heated due to these different rates of expansion. This characteristic is exploited when there is an excessive temperature via the rod, which breaks the contact and switches the magnetic clutch off.

Operating Ranges	OFF	153 to 163 °C 307 to 325 °F
	ON	120 ± 5 °C 248 ± 41 °F
Tightening torque	Temperature Sensor	11.8 ± 1.47 N·m 1.2 ± 0.15 kg·fm 8.7 ± 1.08 lbf·ft

- (1) Temperature Sensor

(2) Compressor


(a) To battery + Terminal
- A : Contact

B : Bimetallic Strip

C : Rod

RY9212001CAM0008US0

[4] AIR CONDITIONING UNIT

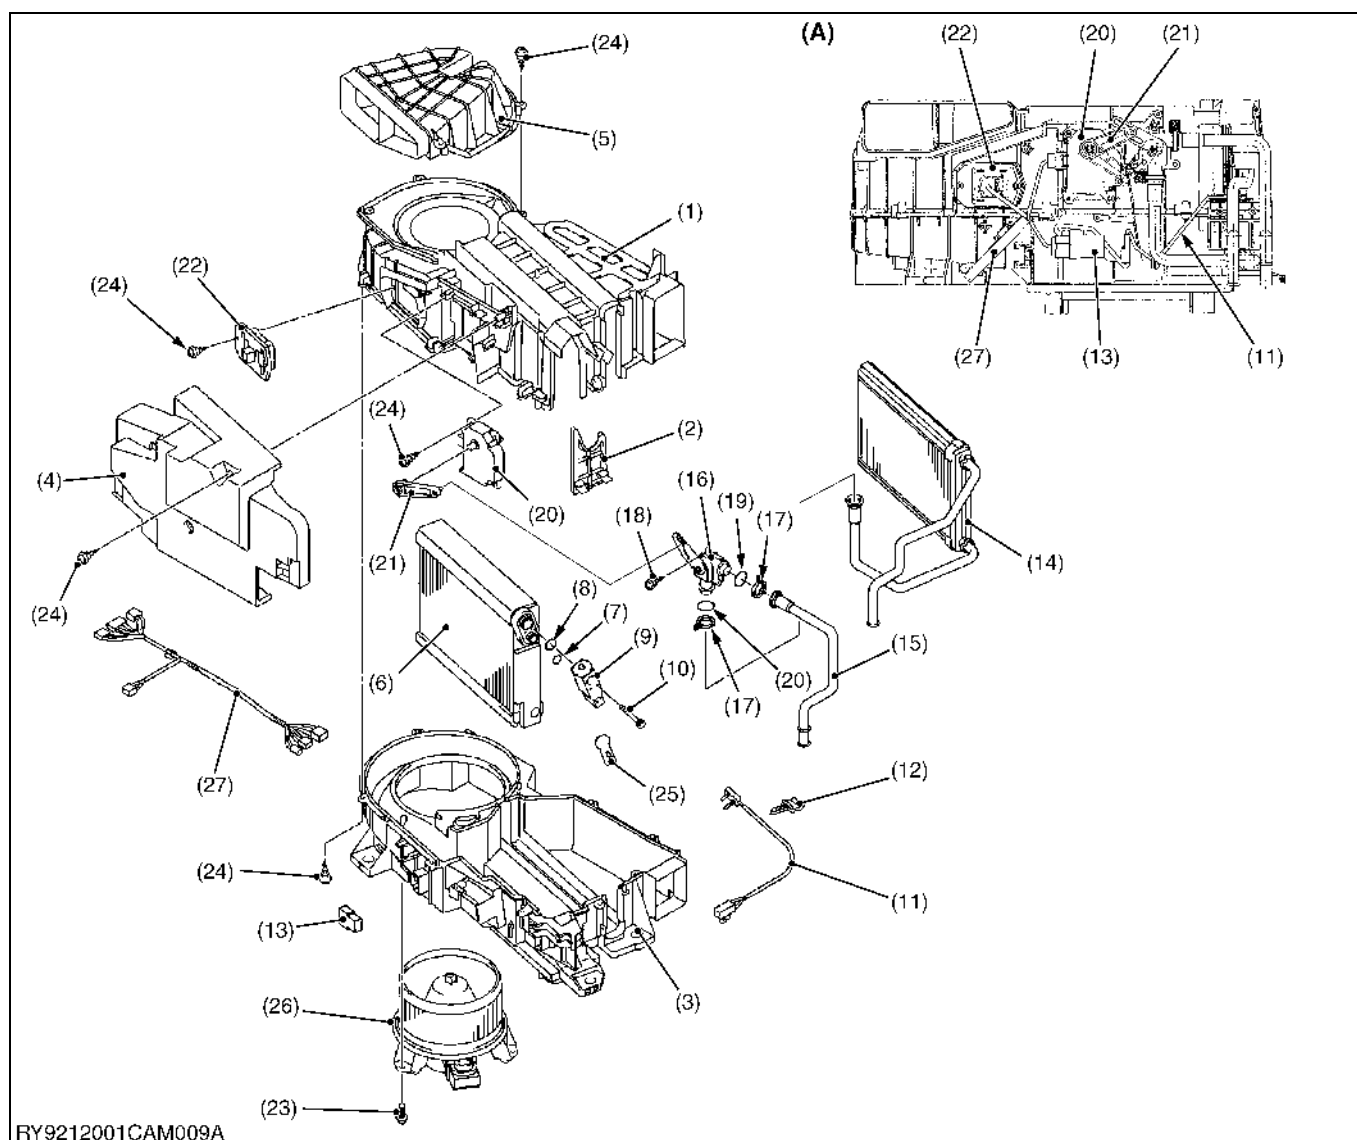


(A) Diagram of Linkages and Electrical Parts

The diagram above was created for general explanations of the air conditioning unit, so it may differ from the air conditioning unit installed in the machine covered by this workshop manual. Similarly, this does not guarantee the parts used inside the air conditioning unit are the same.

The air conditioning unit is composed of an evaporator, an expansion valve, a heater core, a blower, etc.

No.	Name of part	No.	Name of part	No.	Name of part
(1)	Upper case	(10)	Bolt	(19)	O-Ring
(2)	Side cover	(11)	Fin thermistor	(20)	Servo motor
(3)	Lower case	(12)	Clamp	(21)	Linkage lever
(4)	Linkage cover	(13)	AC Amp	(22)	Blower resistor
(5)	Intake cover	(14)	Heater core	(23)	Self-tapping screw
(6)	Evaporator	(15)	Pipe	(24)	Self-tapping screw
(7)	O-Ring	(16)	Hot water valve	(25)	Cap
(8)	O-Ring	(17)	Pipe clip	(26)	Blower motor
(9)	Expansion valve	(18)	Screw	(27)	Wire harness

RY9212148CAM0001US0

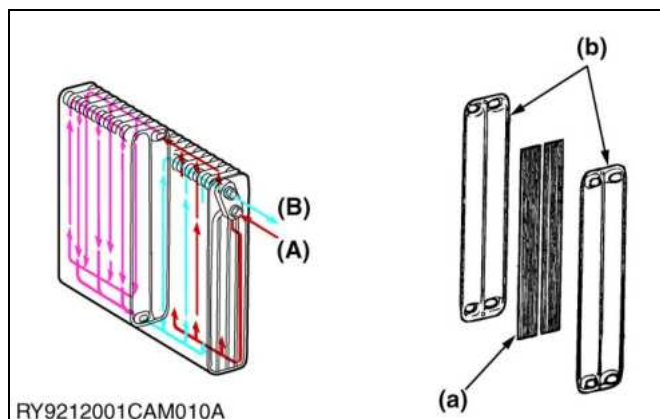


Evaporator

The evaporator takes the refrigerant, which has been made liquid by the condenser and cooled and put under low-pressure by the expansion valve, and by evaporating it, the heat and humidity of the air passing through the evaporator is removed, thus producing cool, dehumidified air.

- (a) Fins (A) Inlet
(b) Tubes (B) Outlet

RY9212001CAM0010US0

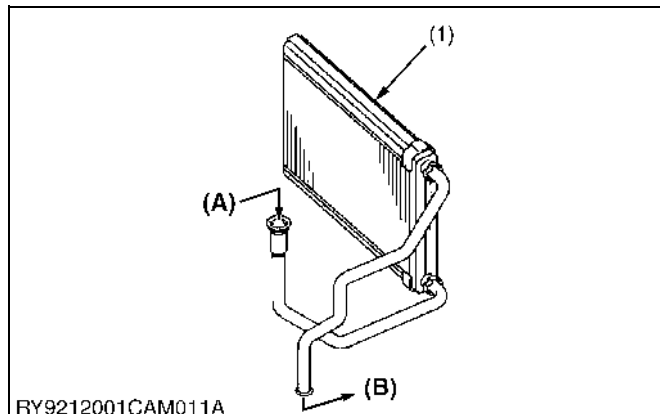


Heater Core

The heater core dissipates the heat of the heated engine coolant. So, the air that is blown through it by the blower motor passes through the fins of the heater core and the air takes on the heat of the coolant.

- (1) Heater Core (A) Inlet
(B) Outlet

RY9212001CAM0011US0

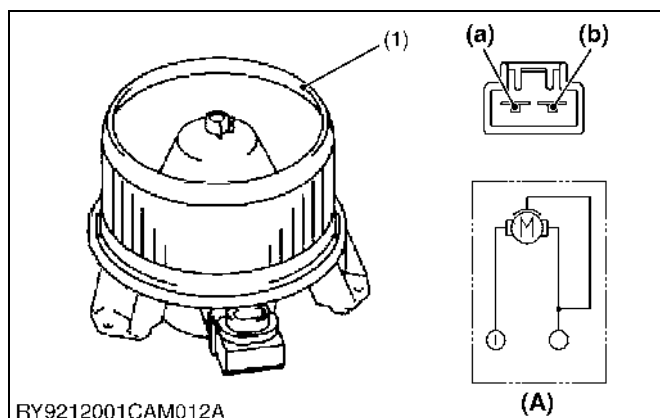

Blower


The blower is built into the right side of the AC unit. The blower forces cool, warm or fresh outside air through the vents into the cabin.

The rpm of the blower motor can be adjusted to three levels with the blower resistor. The blower fan is the type that uses centrifugal force and it sucks in air parallel to its axis of rotation and blows it out perpendicular to the centrifugal force, or in other words, perpendicular to the axis of rotation.

Specifications (at 20 °C)	
Model	DC Ferrite
Rated Voltage	12 V
No load RPM	4300 ± 400 rpm
No load amperage	1 to 3 A
Direction of rotation (viewed from drive side)	Left
Rated load torque	461 N·m, 47.0 kgf·m, 340 lbf·ft
RPM	2800 ± 280 rpm
Amperage	18.3 ± 1.8A

- (1) Blower (A) Circuit Diagram
(a) (+) Terminal
(b) (-) Terminal

RY9212001CAM0012US0

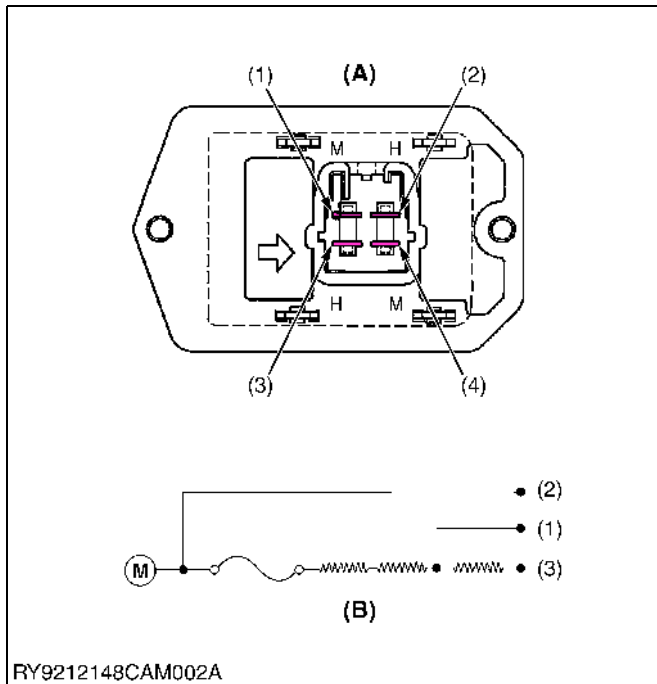


Blower resistor

Acts as the blower switch and controls the rpm of the blower motor by switching the degree of resistance. The fan speed can be switched to three levels, 1, 2 and 3, with 3 being the fastest.

- (1) MI
- (2) HI
- (3) LO
- (4) Blank

- (A) Blower Resistor
- (B) Wiring Diagram

RY9212148CAM0006US0

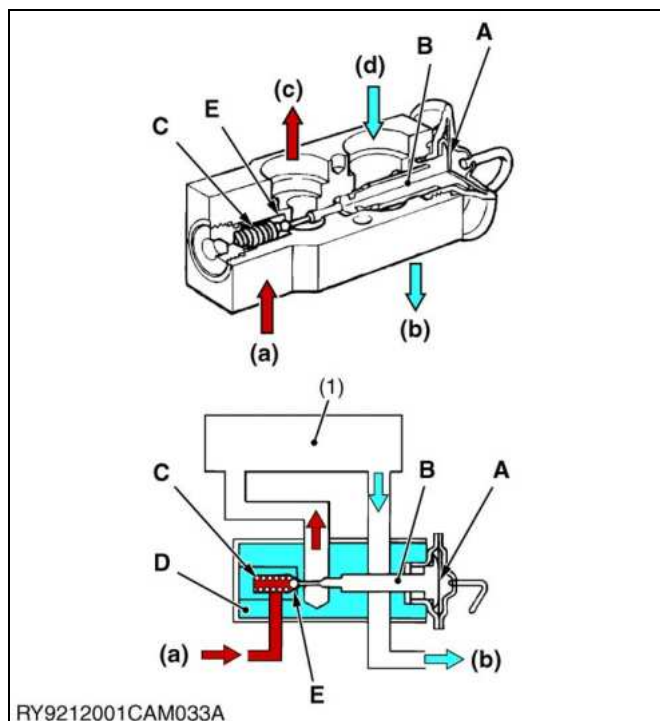

Expansion Valve

[Functions]

The expansion valve works in the following two ways.

1. By spraying the liquid refrigerant, which is hot and under high pressure, it makes it expand rapidly, producing a low-temp, low-pressure refrigerant vapor.
2. It adjusts the amount of refrigerant according to the vaporized state of the refrigerant in the evaporator. In order to take full advantage of the capabilities of the evaporator, a state must always be maintained in which the liquid refrigerant takes on the ambient heat, then it is completely vaporized at the outlet of the evaporator. In order to do so, the expansion valve automatically adjusts the volume of refrigerant in response to changes in the cabin temperature (cooling load) and changes in the compressor RPM.

[Structure (box type)]

- The expansion valve is composed of a diaphragm, heat-sensing rod, and a needle valve (ball) and the refrigerant gas is enclosed upstream of the diaphragm. The downstream side of the diaphragm is pressurized by the evaporator outlet pressure.

[How it Works]

- The heat-sensitive rod senses the temperature of the refrigerant passing to the evaporator and the temperature at that point is communicated to the refrigerant gas on the upstream side of the diaphragm via the heat-sensitive rod. As such, the pressure of the gas varies with the temperature, thus moving the heat-sensitive rod directly connected to the diaphragm and adjusting the opening of the needle valve.

Evaporator outlet temperature	Operation
When low (when cooling load is low)	The pressure of the gas in the diaphragm chamber drops, reducing the volume and moving the heat-sensitive rod to the right, which constricts the needle valve and reduces the flow of refrigerant to the evaporator.
When high (when cooling load is high)	The pressure of the gas in the diaphragm chamber rises, increasing the volume and moving the heat-sensitive rod to the left, which opens the needle valve and supplies more refrigerant to the evaporator.


(1) Evaporator

A : Diaphragm
B : Heat-Sensitive Rod
C : Spring

D : Body
E : Needle Valve

(a) From Receiver (Hi-Pressure)
(b) To Compressor (Lo-Pressure)
(c) To Evaporator
(d) From Evaporator

RY9212001CAM0014US0

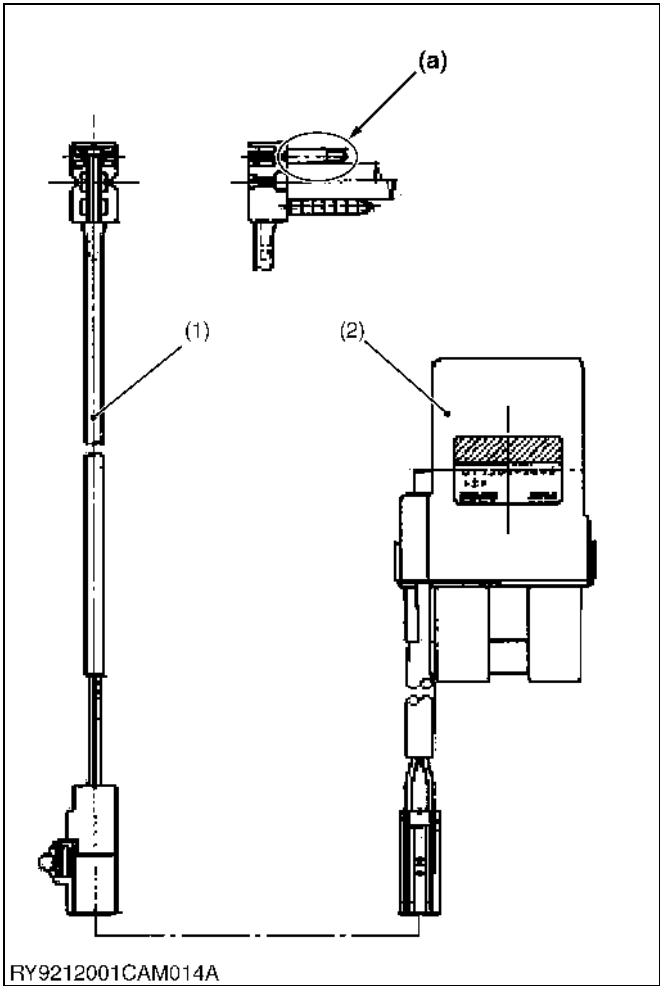

Fin Thermistor (for frost control)

[Function]

Senses the temperature of the fins of the evaporator and when they are too cold, it stops the compressor and prevents frost from forming before it happens.

[How it Works]


The sensor of the fin thermistor senses the evaporator's fin temperature and if the resistance inside the sensor exceeds the thermo-amp resistance setting, its internal circuit shuts off the power to the compressor clutch.

Specifications					
Rated Voltage	DC12 V				
Measurement Conditions	DC13 ±0.2 V at 25 ± 5 °C (77 ± 9 °F)				
Temperature Detection	OFF R1	4383 ±131 Ω (2 °C, 36 °F)			
	ON R2	(4095 Ω) (3.35 °C, 38 °F)			
	Hysteresis	215 ±5.0 Ω (1 °C, 34 °F)			
Usage Conditions					
Temperature Range	−30 to 80 °C (−22 to 176 °F)				
Voltage Range	DC10 to 16 V				
Operating Voltage Range	DC8 to 16 V (at 25 °C, 77 °F)				
Temperature Detection	10 °C / 50 °F	15 °C / 59 °F	20 °C / 68 °F	25 °C / 77 °F	30 °C / 86 °F
Resistance Value	2.96 kΩ	2.34 kΩ	1.87 kΩ	1.50 kΩ	1.22 kΩ

- (1) Fin Thermistor

(2) Thermo-Amp
- (a) Evaporator Fin Temperature Detector

RY9212001CAM0015US0

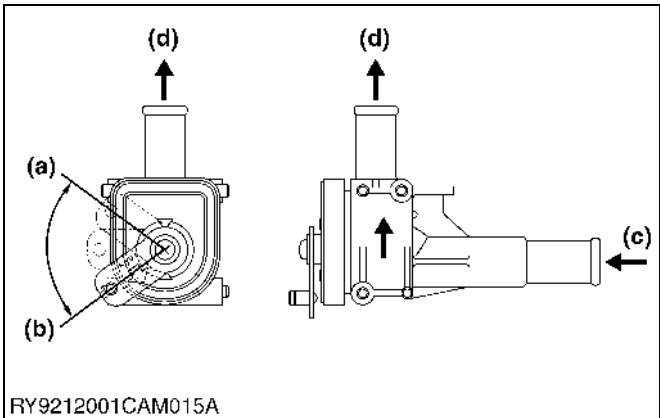

Hot Water Valve


The hot water valve is the valve that adjusts the volume of engine coolant that flows into the heater core, and this adjustment changes the temperature of the heater core and thus controls the temperature of air flowing through it.

- (a) Open (MAX Hot)


(b) Closed (MAX Cool)
- (c) Inlet

(d) Outlet

RY9212001CAM0016US0

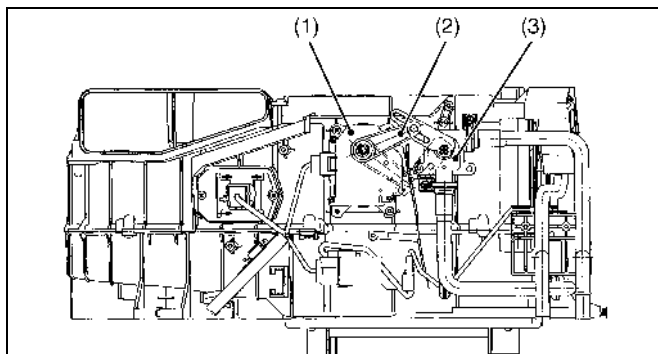

RY9212001CAM016A

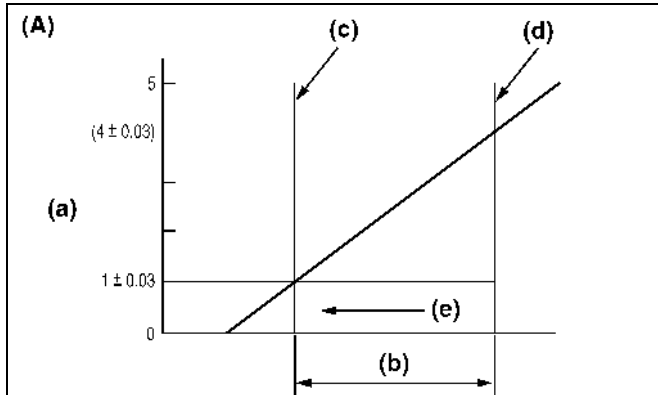

RY9212001CAM034A

Servo Motor (for adjusting temperature)

The servo motor is composed of a motor, a potentiometer, movable contacts, etc., and operates according to signals from the AC's CPU.

The servo motor uses a DC ferrite motor and rotates forward and reverse. Its potentiometer also uses variable resistance and changes the resistance value according to the operating angle.

The servo motor and the hot water valve are linked via a linkage lever and turning the temperature control dial on the control panel opens/closes the hot water valve and adjusts the temperature of air vented inside the cabin.


Specifications (at 20 °C, 68 °F)	
Model	DC Ferrite
Rated Voltage	12 V
Rated load torque	0.3 N·m, 0.03 kgf·m, 0.2 lbf·ft
RPM	3.5 to 5.5 rpm
Amperage	0.02 to 0.10 A
Potentiometer Linearity	± 3 %
Impressed Voltage Terminals	6 (POS.2) 7 (POS.1)

- (1) Servo Motor
- (2) Linkage Lever
- (3) Hot Water Valve


- (A) Potentiometer Output Schematic
- (a) Voltage (V)
- (b) Operating Angle 60 °
- (c) MAXCOOL
- (d) MAXHOT
- (e) CW

RY9212001CAM0017US0

[5] CONDENSER

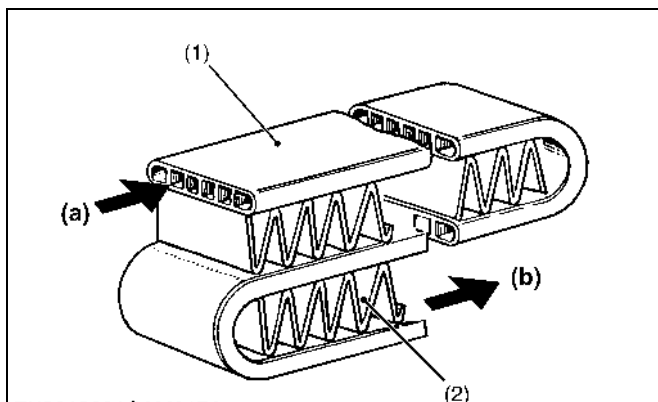

RY9212001CAM017A

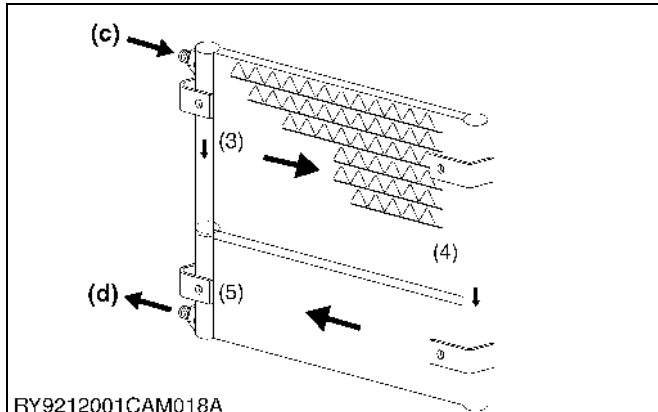


RY9212001CAM018A

The hot, compressed refrigerant is under high pressure and in a gaseous state; the condenser cools it and returns it to a liquid state. In the interval between entering and passing through the condenser, the refrigerant is cooled and becomes liquid refrigerant again. At this point, it is necessary to be sure the refrigerant is liquid at the outlet of the condenser. If the refrigerant is not condensed enough in the condenser some refrigerant would be in a gaseous state and that would reduce the AC's cooling efficiency.

- (1) Tubes
- (2) Fins
- (3) Vapor
- (4) Vapor/Liquid Mix
- (5) Liquid
- (a) Gaseous Refrigerant
- (b) Liquid Refrigerant
- (c) Inlet (70 °C, 158 °F)
- (d) Outlet (50 °C, 122 °F)

RY9212001CAM0018US0

[6] RECEIVER

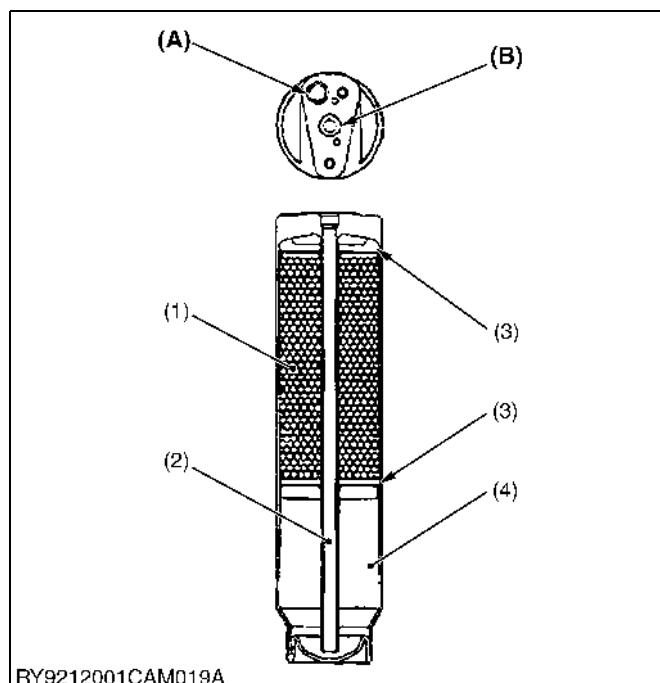

The receiver is composed of a receiver tank, dryer, strainer and a receiver tube.

[Receiver Tank]

In the AC system, the rpm of the compressor changes in response to changes in the engine rpm, so the appropriate amount of refrigerant in the cooling circuit also changes. The receiver tank is the part that reacts to those changes; when a lot of refrigerant is not required in the cooling circuit, excess refrigerant is stored temporarily in the tank and when more coolant is needed, it is supplied to the circuit via the receiver tube.

It also acts to store the balance of refrigerant charges and for extra refrigerant to counteract the leak of small amounts of refrigerant, such as via permeation of rubber hoses.

[Dryer]

If any moisture exists in the cooling circuit, it damages the system by deteriorating the valves of the compressor, its oil, by corroding metal parts in the circuit, and/or freezes in the expansion valve and blocks the circuit. The AC system uses synthetic zeolite as a dryer that is compatible with the circuit, and it absorbs any moisture that gets mixed into the circuit during installation or charging of refrigerant.

If the expansion valve freezes up frequently due to moisture (icing), it means the dryer has lost its ability to absorb it, so the receiver has to be replaced.

[Strainer]

If dirt gets into the cooling circuit, it blocks the expansion valve, damages the compressor and otherwise hampers its cooling function. The strainer works to prevent any dirt flowing in the refrigerant from going any further. The strainer cannot be cleaned, so when it becomes severely clogged up, (in which case the high pressure gets high, low pressure gets low), the receiver has to be changed.

[Sight Glass]



The sight glass is mounted at the receiver joint on top of the receiver and it is the only place in the circuit where the amount of refrigerant can be visually inspected.

- (1) Dryer
- (2) Receiver Tube
- (3) Strainer
- (4) Receiver Tank

- (A) Refrigerant Inlet
- (B) Refrigerant Outlet

RY9212001CAM0019US0

[7] PRESSURE SWITCH

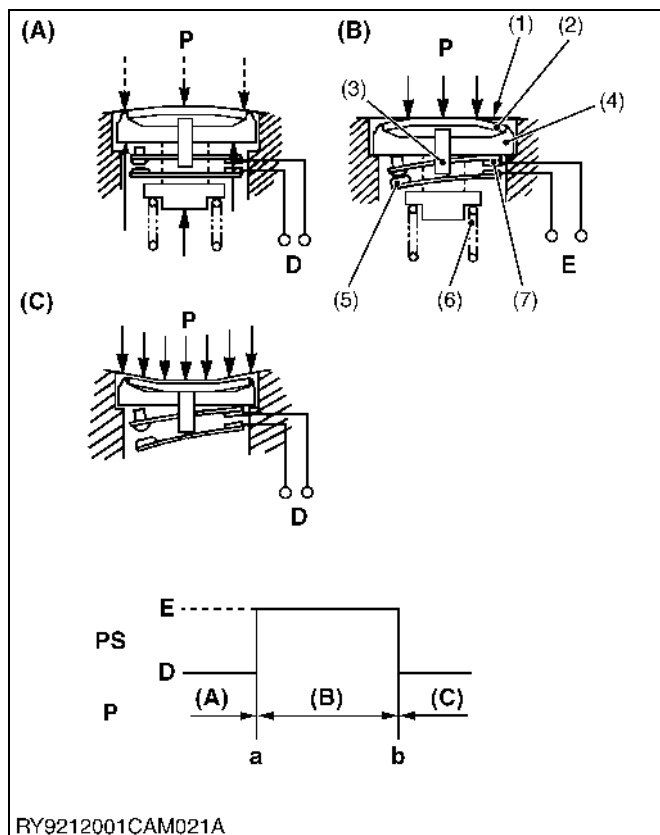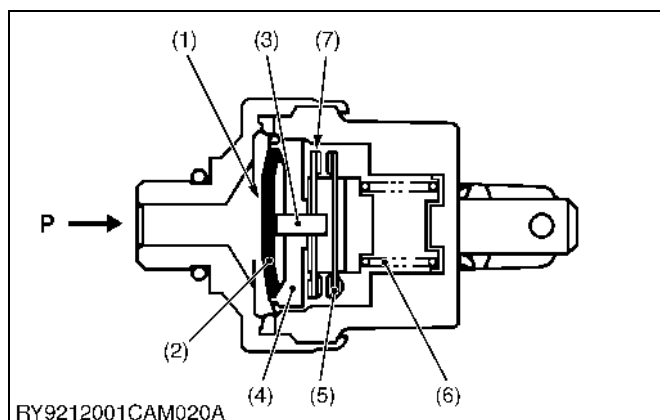

This dual type of switch detects unusually high and low pressures in the cooling cycle. If the pressure gets abnormally high or, due to a leak, abnormally low, it may damage the equipment or deteriorate the lubricating ability of the compressor oil, leading to scorching and breakdown. To prevent these kind of problems from occurring, the switch cuts the power to the compressor clutch and stops the compressor.

	Refrigerant pressure	Operation
(A)	No increase in pressure state (when abnormally low)	The refrigerant pressure becomes less than the force of the spring, so the spring presses the plate up and the upper contact opens (OFF).
(B)	Contact ON (normal operation)	The refrigerant pressure is greater than the force of the spring, so the pressure plate is pressed down, which presses the upper contact down, closing the contact (ON).
(C)	Contact OFF (abnormally high pressure)	The refrigerant pressure becomes greater than the force of the plate spring and the plate spring pushes down on the pin, which press on the lower contact, opening it (OFF).


- (1) Diaphragm
- (2) Plate Spring
- (3) Pin
- (4) Plate
- (5) Contact
- (6) Spring
- (7) Terminal

a : 0.19 MPa
(2.0 kgf/cm², 28.4 psi)
b : 3.14 MPa
(32 kgf/cm², 455 psi)
D : OFF
E : ON
P : Pressure
PS : Pressure Switch

RY9212001CAM0020US0

[8] ELECTRICAL SYSTEM

(1) Electrical Circuits

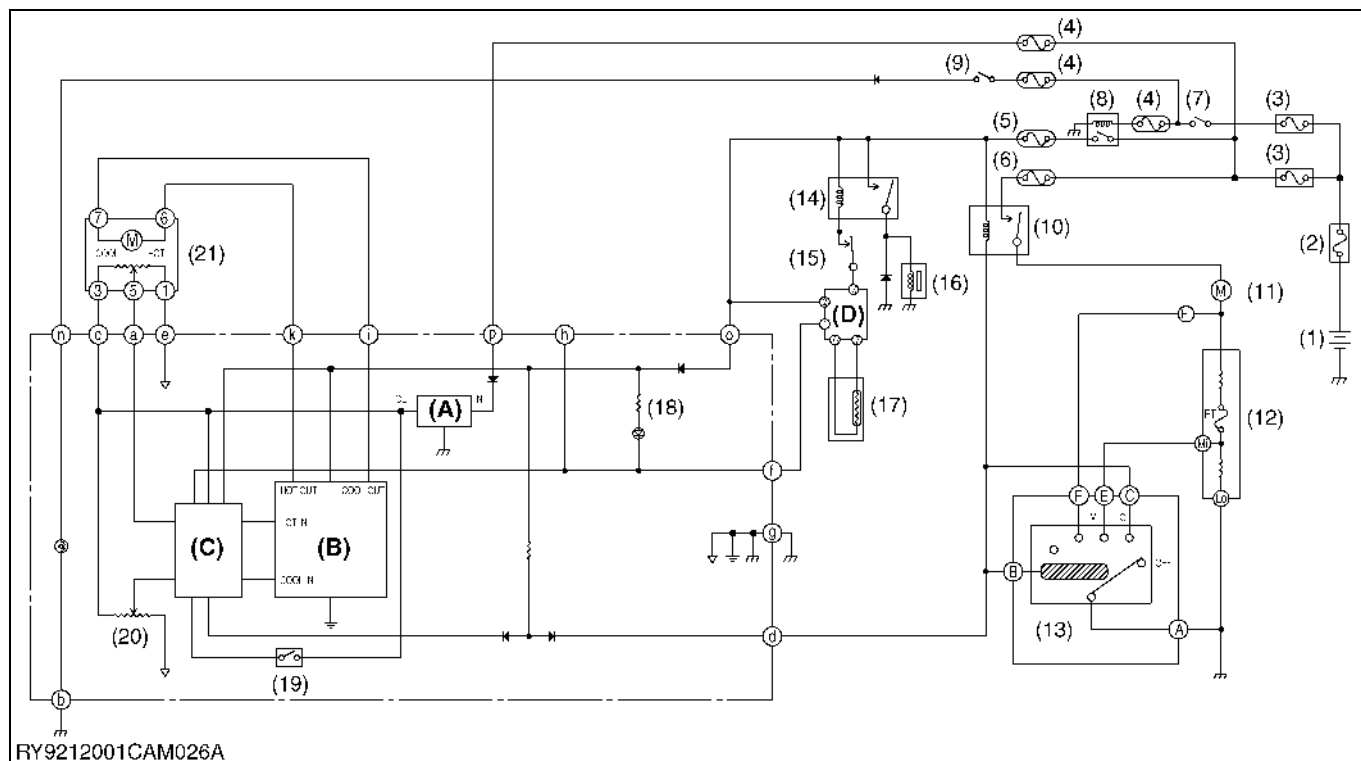


(1) Battery	(13) Blower Switch (Shorting Type)	(A) Fixed Voltage Circuit	(h) (Free)
(2) Slow-Blow Fuse (80A)	(14) Compressor Clutch Relay	(B) Servo Motor Drive Circuit	(i) Servo Motor Output1 (COOL Output)
(3) Slow-Blow Fuse (50A)	(15) Pressure Switch	(C) CPU	(j) (Free)
(4) Fuse (5A)	(16) Compressor Magnetic Clutch	(D) Electronic Thermo Amp	(k) Servo Motor Output2 (HOT Output)
(5) Fuse (10A)	(17) Fin Thermistor (Frost Sensor)	(a) Potentiometer Signal	(l) (Free)
(6) Fuse (30A)	(18) Indicator Lamp	(b) ILL-	(m) (Free)
(7) Start Switch	(19) AC switch	(c) Potentiometer Power	(n) Headlight Switch
(8) Cab Relay	(20) Volume (Temperature Setting)	(d) Blower Motor	(o) IG
(9) Headlight Switch	(21) Servo Motor	(e) Potentiometer GND	(p) +B Power
(10) Blower Motor Relay		(f) Electronic thermo	
(11) Blower Motor		(g) GND	
(12) Blower Resistor			

The processes up to the compressor's magnetic clutch engaging are indicated below.

1. Start switch → cab relay ON → blower motor relay ON → blower switch ON (LO, MI or HI) → blower motor ON
2. AC switch ON (indicator lamp lights up) → pressure switch ON → fin thermistor ON → compressor clutch relay ON → compressor magnetic clutch ON (compressor operates)

RY9212001CAM0024US0

(2) Relays

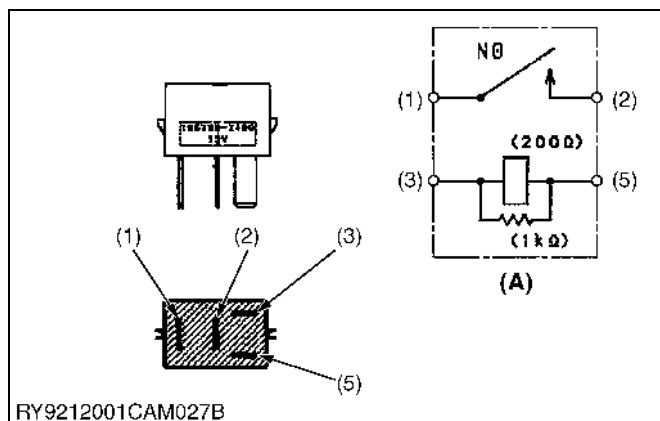

Current flows in the components of the AC system to the blower motor and compressor's magnetic clutch. If all of the current were supplied via the main switch, the current would be too much for the switch, so the contacts of the main switch would be in danger of burning out. Similarly, if this current flowed directly from the battery and the operator forget to turn the blower motor off, the battery would discharge.

The system is equipped with relays in order to prevent these kind of problems. When the current flows through the coils of these relays, their contacts close, allowing electricity to be supplied from the battery. By adopting these relays, only a tiny amount of current is needed to operate the relays, so very little current flows through the main switch. As a result, the concern over its contacts burning out is eliminated and when the main switch is open, the relays' contacts open at the same time. When this occurs, the flow of electricity in the AC circuit ceases and the possibility of the battery discharging is also eliminated.


- (1) Relay Terminal 1
- (2) Relay Terminal 2
- (3) Relay Terminal 3
- (5) Relay Terminal 5

(A) Connection Diagram

RY9212148CAM0007US0

(3) Blower Switch

When the blower switch is in the LO, MI, or HI position

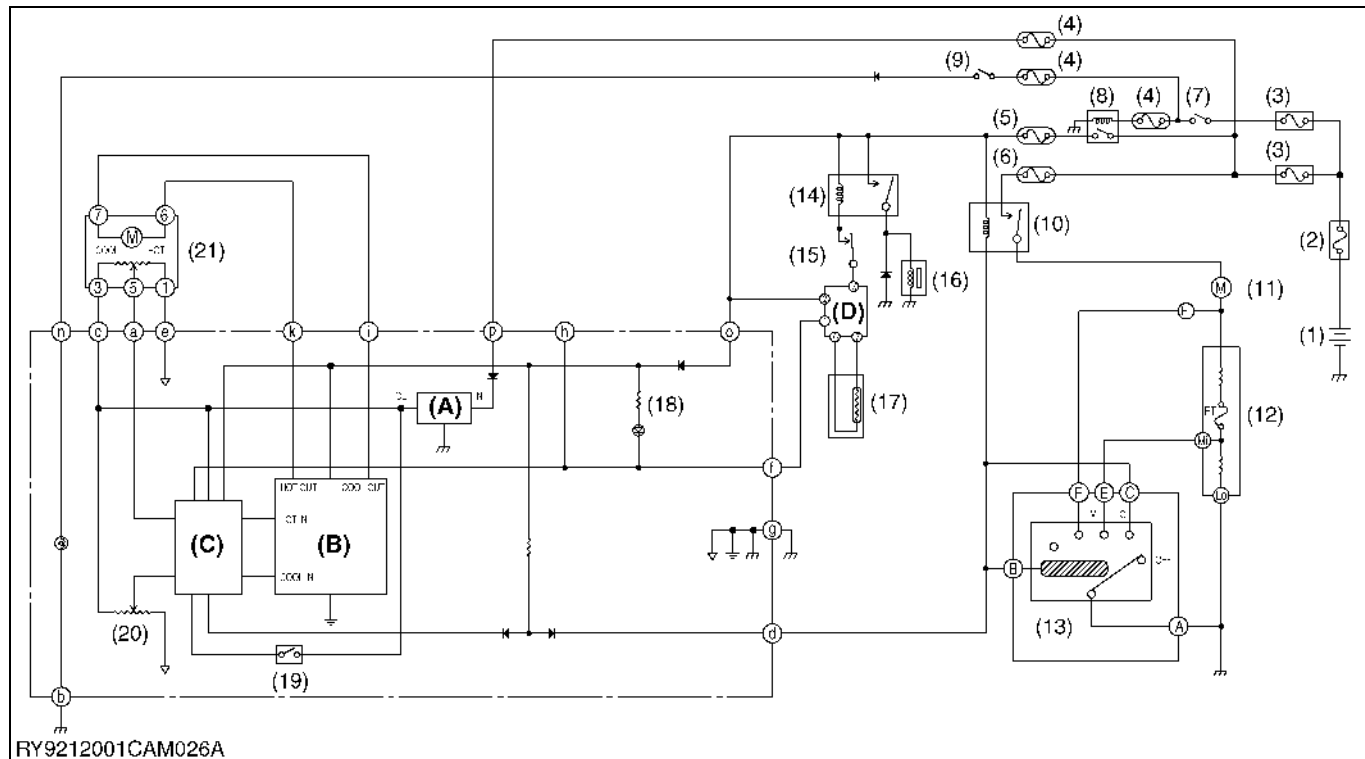

(1) Battery	(9) Headlight Switch	(16) Compressor Magnetic Clutch	(A) Fixed Voltage Circuit
(2) Slow-Blow Fuse (80A)	(10) Blower Motor Relay	(17) Fin thermistor (Frost Sensor)	(B) Servo Motor Drive Circuit
(3) Slow-Blow Fuse (50A)	(11) Blower Motor	(18) Indicator Lamp	(C) CPU
(4) Fuse (5A)	(12) Blower Resistor	(19) AC Switch	(D) Electronic Thermo Amp
(5) Fuse (10A)	(13) Blower Switch (Shorting Type)	(20) Volume (Temperature Setting)	
(6) Fuse (30A)	(14) Compressor Clutch Relay	(21) Servo Motor	
(7) Start Switch	(15) Pressure Switch		
(8) Cab Relay			

When the starter switch and the blower switch are turned on, electricity flows from the battery to the coil of the blower motor relay, turning the blower motor relay on. With the blower motor relay on, the electricity flows to the blower motor as indicated below.

● Lo Position

- Battery → slow-blow fuse (80A) → slow-blow fuse (50A) → fuse (30A) → blower motor relay → blower motor → blower resistor → ground

● Mi Position

- Battery → slow-blow fuse (80A) → slow-blow fuse (50A) → fuse (30A) → blower motor relay → blower motor → blower resistor → blower switch (E→A) → ground


● Hi Position

- Battery → slow-blow fuse (80A) → slow-blow fuse (50A) → fuse (30A) → blower motor relay → blower motor → blower resistor → blower switch (F→A) → ground

RY9212001CAM0026US0

2. WIPER

[1] WIPER SWITCH

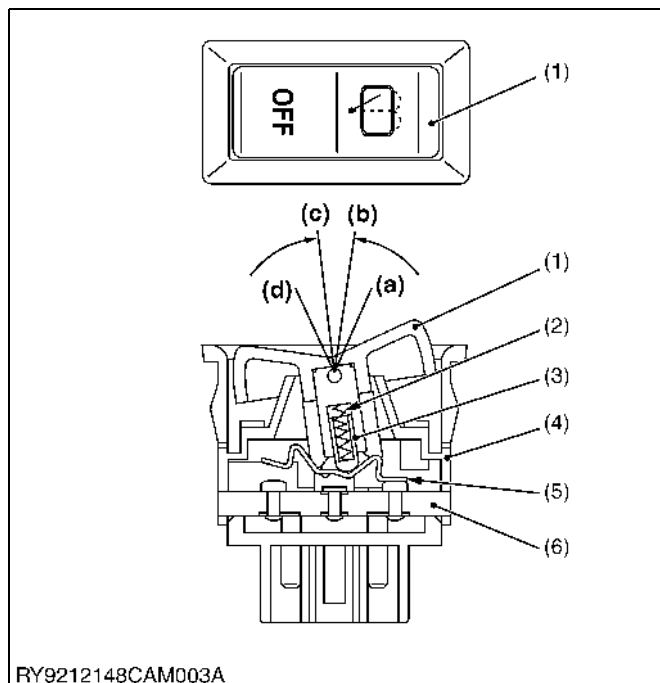

This switch has four positions, namely **(a)**, **(b)**, **(c)** and **(d)** as indicated in the figure. When the starter key is in its [RUN] position and the switch is pressed to its **(b)** position, the wiper motor operates; pressing it in further to its **(a)** position operates the window washer. When the operator releases the switch, it automatically returns from position **(a)** to position **(b)**.


The window washer also operates if it is pressed in to position **(d)** on the [OFF] side. When it is released, it automatically returns in the same way to position **(c)**.

- (1) Switch
- (2) Spring
- (3) Contact
- (4) Switch Body
- (5) Movable Contact
- (6) Insulator

- (a) Wash 1 Position**
(Both Wiper Motor and Window Washer Operate)
- (b) On position (Only the Wiper Motor Operates)**
- (c) Off Position**
- (d) Wash 2 Position (Only the Window Washer Operates)**

RY9212148CAM0005US0

[2] WIPER

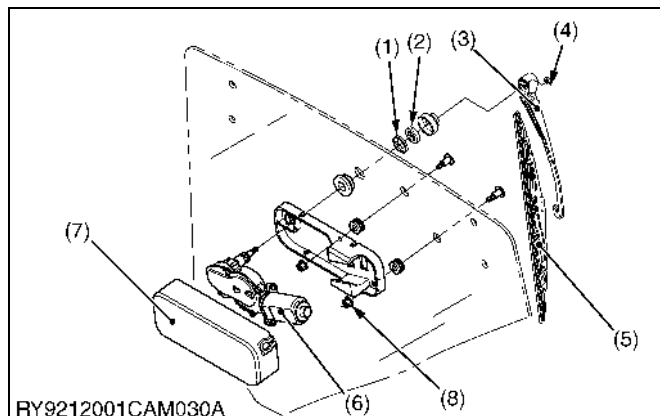

The wiper is composed of a motor, wiper arm, wiper blade, etc.



The motor is fixed speed and automatically returns to a set position.

- (1) Washer
- (2) Nut
- (3) Wiper Arm
- (4) Nut

- (5) Wiper Blade
- (6) Wiper Motor
- (7) Wiper Motor Cover
- (8) Flange Nut

RY9212001CAM0028US0

[3] WIPER MOTOR

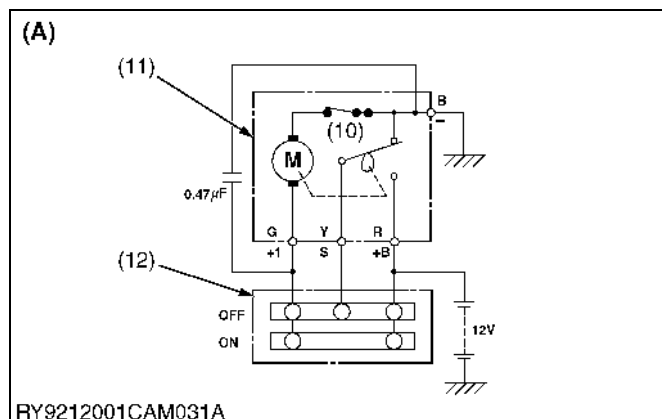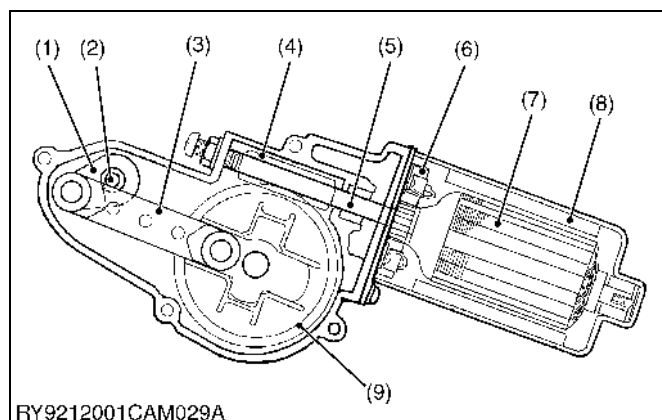

A cylindrical ferrite magnet and an armature are assembled inside the housing of the wiper motor.

A worm gear and a helical gear are attached to the end of the armature and act as reduction gears and the rod and a segmented arm provide reciprocating motion, which is communicated to the wiper arm via the arms axis.

The motor is a 2-brush specification model and its rpm cannot be altered.

(1) Segmented Arm	(8) Ferrite Magnet
(2) Arm's Axis	(9) Helical Gear
(3) Rod	(10) Breaker
(4) Worm Gear	(11) Motor
(5) Armature Axle	(12) Switch
(6) Brush	
(7) Armature	

**(A) Wiring Diagram
(Motor Stop Position)**

RY9212001CAM0029US0

SERVICING

CONTENTS

1. TROUBLESHOOTING.....	5-S1
2. SERVICE SPECIFICATIONS	5-S4
3. TORQUE	5-S5
4. PRECAUTIONS WHEN REPAIRING THE REFRIGERANT SYSTEM	5-S6
[1] USE OF SERVICE TOOLS	5-S6
(1) Manifold Gauge Set.....	5-S6
(2) Refrigerant Charging Hoses	5-S8
(3) Vacuum Pump Adapter	5-S9
(4) Electric Gas Leak Tester	5-S9
(5) Canister Tap Valve	5-S9
(6) T-Joint.....	5-S10
(7) R134a Refrigerant Collection/Recycling Device	5-S10
5. INSPECTING AND CHARGING THE REFRIGERANT SYSTEM	5-S11
[1] CHECKING THE SYSTEM WITH A MANIFOLD GAUGE.....	5-S11
[2] COLLECTION, VACUUMING AND CHARGING.....	5-S15
(1) Collecting Refrigerant.....	5-S15
(2) Vacuuming Out the System.....	5-S15
(3) Charging from the High-Pressure Side.....	5-S17
(4) Charging from the Low-Pressure Side	5-S17
(5) Inspections and Troubleshooting.....	5-S18
6. INSPECTION AND DISASSEMBLY	5-S20
[1] CHECKS AND ADJUSTMENTS	5-S20
(1) Compressor	5-S20
(2) Relays.....	5-S22
(3) Blower Motor	5-S24
(4) Blower Resistor	5-S25
(5) Blower Switch.....	5-S26
(6) Servo Motor (for Temp Control).....	5-S27
(7) Pressure Switch.....	5-S28
[2] DISASSEMBLY AND ASSEMBLY	5-S29
(1) AC Unit Assembly/Disassembly	5-S29
(2) Mounting and Removing the Compressor.....	5-S30
(3) AC and Heater Hose Routing	5-S32
(4) Electric Condenser/Fan Mounting and Removal	5-S34
7. WINDOW WASHER	5-S36
[1] WIPER SWITCH.....	5-S36
[2] WIPER MOTOR	5-S37
[3] WASHER MOTOR	5-S37
8. CABIN GLASS REMOVAL AND MOUNTING	5-S38
[1] COMPONENT SCHEMATIC	5-S38
[2] NECESSARY TOOLS	5-S42
[3] REMOVING THE GLASS ON THE RIGHT	5-S43
[4] REMOVING THE FRONT GLASS	5-S44
[5] REMOVING OTHER PANES OF GLASS	5-S46
[6] INSTALLING THE GLASS ON THE RIGHT.....	5-S46
[7] INSTALLING THE FRONT GLASS	5-S48
[8] INSTALLING OTHER PANES OF GLASS	5-S51
9. REMOVAL AND INSTALLATION OF GLASS	5-S52
[1] PREPARATION	5-S52

[2] REMOVING GLASS	5-S52
[3] INSTALLING GLASS	5-S53
[4] GLASS TRIM TYPE.....	5-S54
[5] HOW TO REPLACE THE GLASS OF THE RIGHT-SIDE WINDOW	5-S54
10. FRONT WINDOW	5-S57
[1] ADJUSTING THE CLOSING LOCK OF THE FRONT WINDOW (TOP)	5-S57
[2] ADJUSTING THE OPEN LOCK OF THE FRONT WINDOW (TOP)	5-S58

1. TROUBLESHOOTING

Compressor

Problem and/or Situation	Possible Cause	Solution
Noise (compressor on)	Wearing of or damage to the compressor's bearings	Replace
	Compressor valve damaged	Replace
	Belt slipping	Adjust or replace
	Compressor bracket mounting bolt(s) loose	Tighten
	Lines vibrating	Tighten and/or add clamp(s)
Noise (compressor off)	Blower damaged	Repair or replace
	Magnetic clutch, idler pulley and/or crank pulley bearings damaged or wearing	Replace

Air Conditioning System

Problem and/or Situation	Possible Cause	Solution
Cooling not working (air not blowing)	Blown fuse	Replace
	Main AC relay defective	Replace
	AC's blower motor damaged	Replace
	AC's blower switch broken	Replace
	Wiring harness unplugged or poor contact	Fix
Cooling not working (compressor not turning)	Blown fuse	Replace
	Magnetic clutch broken	Repair or replace
	AC switch broken	Replace
	Pressure switch broken	Replace
	Belt slipping	Adjust or replace
Cooling not working (other)	Not enough refrigerant	Check with a manifold gauge
	Expansion valve broken	Replace
	Compressor broken	Replace
Cooling not working effectively (not enough air blowing)	Filter clogged	Clean or replace
	Frost on the evaporator	Clean or replace the temperature switch
	AC's blower motor damaged	Replace
	AC blower resistor broken	Replace
Not cooling effectively (lots of foam visible in sight glass)	Not enough refrigerant	Check with a manifold gauge
	Refrigerant gas leaking from the cooling circuit	Repair and/or recharge refrigerant
	Air got in	Check with a manifold gauge
Too much refrigerant (no foam in sight glass)	Refrigerant overcharged	Check with a manifold gauge
Not cooling effectively (compressor not rotating properly)	Belt slipping	Adjust or replace
	Magnetic clutch broken	Repair or replace
	Compressor broken	Replace

Problem and/or Situation	Possible Cause	Solution
Not cooling effectively (other)	Thermistor broken	Replace
	Hot water valve damaged	Replace
	Condenser clogged with dirt or debris	Clean
	Expansion valve broken	Replace
Not heating effectively	Hot water valve damaged	Replace
	Servo motor broken	Check and repair
Not enough air flow (blower motor not turning)	Blower fan switch broken	Check and repair
	AC main relay broken	Replace
	Brushes have poor contact	Replace
	Blown fuse	Replace
	Miswiring or poor connections	Check and repair
Not enough air flow (air flow does not change to speed 3)	Blower resistor damaged	Replace
	Relay damaged	Replace
	Blower fan switch broken	Replace
Not enough air flow (other)	Blower not tight enough	Check and repair
	Blower deformed	Replace
	Blower hitting its casing	Check and repair
	Something blocking the inlet	Check and repair
	Frost on the evaporator	Clean or replace
	Filter clogged	Clean or replace
	Vent ducts clogged or detached	Check and repair
Not cooling effectively (compressor clutch not working)	Battery voltage too low	Charge the battery
	Rotor is hitting the stator	Replace
	Miswiring or loose connectors	Check and repair
	Relay damaged	Replace
	Coil shorted	Replace
	Ground defective	Check and repair
	Coil burned out	Replace
Not cooling effectively (high-pressure level too high)	Refrigerant overcharged	Check with a manifold gauge
	Condenser clogged with dirt or debris	Clean
	Air got in	Check with a manifold gauge
Not cooling effectively (high-pressure level too low)	Not enough refrigerant	Check with a manifold gauge
	Compressor discharge valve damaged	Replace
	Compressor gasket damaged	Replace
	Error in the low-pressure line (cracked or clogged)	Replace
Not cooling effectively (low-pressure level too high)	Refrigerant overcharged	Check with a manifold gauge
	Expansion valve too far open	Replace

Problem and/or Situation	Possible Cause	Solution
Not cooling effectively (low-pressure level too low)	Not enough refrigerant	Check with a manifold gauge
	Frost on the evaporator	Clean or replace
	Error in the low-pressure line (cracked or clogged)	Replace
	Expansion valve clogged	Replace
Not cooling effectively (both low and high pressure levels too high)	Refrigerant overcharged	Check with a manifold gauge
Not cooling effectively (both low and high pressure levels too low)	Not enough refrigerant	Check with a manifold gauge
Cannot control temperature (servo motor and/or temperature control dial defective)	Servo motor broken	Replace
	Temperature control dial broken	Replace
	Controller of the wire harness is off	Repair or replace
Cannot control the temperature (hot water valve does not open normally)	Servo motor broken	Replace
	Hot water valve damaged	Replace
Cannot control the temperature (poor heater hose layout)	Heater hose is pinched	Fix
	Heater hose is bent or broken	Repair or replace
Water leak (water leak inside the cab)	Drain hose bent or broken	Check and repair
	Drain hose clogged	Clean

Wiper

Problem and/or Situation	Possible Cause	Solution
Wiper doesn't work	Fuse blown (a part inside the wiper motor or some other moving part is shorted or burned out)	Pinpoint the cause of the damage and replace
	Wiper motor faulty (damaged armature, worn motor brushes, motor shaft locked)	Replace
	Wiper switch faulty	Replace
	Faulty operation of linkage mechanism due to foreign matter	Fix
	Wiper arm locked or rusted together	Grease up or replace
Wiper moves too slowly	Wiper motor faulty (damaged armature, poor contact due to worn motor brushes, faulty operation of motor shaft)	Replace
	Battery voltage low	Recharge or replace
	Wiper arm shaft rusty, foreign matter stuck in it	Grease up or replace
	Poor contact in wiper switch	Replace
Wiper fails to stop in the correct position	Wiper motor faulty (Dirty or poor contact of the contacts at the auto-stop position due to foreign matter)	Replace

2. SERVICE SPECIFICATIONS

Item		Factory specification	Allowable Limit Value
AC Compressor Magnetic Clutch	Air Gap	0.30 to 0.65 mm 0.0118 to 0.0255 in.	—
Magnetic Clutch Stator Coil	Electrical Resistance	3.0 to 4.0 Ω	—
Cooling Cycle (cooling cycle when operating normally)	Pressure (low-pressure side)	0.15 to 0.20 MPa 1.5 to 2.0 kgf/cm ² 21 to 28 psi	—
	Pressure (high-pressure side)	1.27 to 1.66 MPa 13 to 17 kgf/cm ² 185 to 242 psi	—
Pressure switch (dual type) (when pressure switch is off)	Pressure setting (low-pressure side)	Lower than the values below About 0.196 MPa 2.0 kgf/cm ² 28.4 psi	—
	Pressure setting (high-pressure side)	Higher than the values below About 3.14 MPa 32 kgf/cm ² 455 psi	—
AC drive belt	Tension	Deflects 20 to 25 mm (0.79 to 0.98 in.) when 98.0 N (10.0 kgf, 22.0 lbs) of forced is applied	—
Refrigerant	Type (recharge volume)	R134a 970 $\pm$ 50 g 2.14 $\pm$ 0.11 lbs	—
Compressor Oil	Type (usage volume)	ND-OIL8 <PAG*oil> 110 to 120 cc 0.116 to 0.127 U.S.qts 0.097 to 0.106 Imp.qts	—

*PAG : Polyalkylene glycol (synthetic oil)

RY9212148CAS0001US0

3. TORQUE

The following table indicates the specified tightening torque for nuts.

Items		N·m	kgf·m	lbf·ft
Condenser mounting	M8 nut	17.7 to 20.6	1.8 to 2.1	13.0 to 15.2
Compressor mounting	M8 bolt	16.7 to 19.6	1.7 to 2.0	12.3 to 14.5
Compressor bracket mounting	M12 bolt	77.5 to 90.2	7.9 to 9.2	57.1 to 66.5
	M8 bolt	16.7 to 19.6	1.7 to 2.0	12.3 to 14.5
Receiver mounting	M8 bolt	17.7 to 20.6	1.8 to 2.1	13.0 to 15.2
High pressure line 1 mounting (on condenser side)	M6 bolt	7.8 to 11.8	0.8 to 1.2	5.8 to 8.7
	M22 × 1.5 lock nut	19.6 to 24.5	2.0 to 2.5	14.5 to 18.1
Between condenser and receiver	M6 bolt	3.9 to 6.9	0.4 to 0.7	2.9 to 5.1
	M16 × 1.5 lock nut	11.8 to 14.7	1.2 to 1.5	8.7 to 10.8
High pressure line 2 mounting (on receiver side)	M16 × 1.5 lock nut	11.8 to 14.7	1.2 to 1.5	8.7 to 10.8
Low-pressure line between AC and compressor	M6 bolt	7.8 to 11.8	0.8 to 1.2	5.8 to 8.7
	M24 × 1.5 lock nut	29.4 to 34.3	3.0 to 3.5	21.7 to 25.3
AC mounting	M6 bolt	3.9 to 6.9	0.4 to 0.7	2.9 to 5.1
	M8 bolt	9.8 to 15.7	1.0 to 1.6	7.2 to 11.6
Magnetic clutch mounting	M6 bolt	10.8 to 16.2	1.10 to 1.65	8.0 to 11.9

RY9212148CAS0002US0

4. PRECAUTIONS WHEN REPAIRING THE REFRIGERANT SYSTEM

[1] USE OF SERVICE TOOLS

(1) Manifold Gauge Set

Always follow the warnings and regulations below when inspecting or repairing the air conditioning system. It is also extremely important that no one other than specially trained service personnel handles refrigerants.



CAUTION


- If the liquid refrigerant comes in contact with skin, it results in frostbite, so always be careful when handling refrigerants. Always wear goggles when working on this system in order to protect your eyes.
- Refrigerant service containers are made very sturdy for safety. However, they can explode if handled improperly. Always follow the instructions printed on their labels. In particular, never heat a refrigerant container above 40 °C (104 °F). Also, never drop one from any height.
- Do not steam clean this system. In particular, this system is under extremely high pressure, so do not steam clean the condenser as it may cause the system to explode.
- If an error is made in handling the service valve or in connecting a hose between the compressor's service valve and a manifold gauge, it may cause the refrigerant service container or the charging hose to explode. When connecting hoses or handling service valves, always check the pressure on the high-pressure side or on the low-pressure side.
- When recharging refrigerant with the compressor operating, do not open the high-pressure valve of the manifold gauge.
- Be careful of gas toxicity. The refrigerant gas in its natural state is harmless and is not toxic. However, when it comes in contact with very hot parts, it can break down chemically, producing hazardous materials.
- Do not heat service canisters unless absolutely necessary. When necessary to heat a canister, use water at or below 40 °C (104 °F). Never use boiling water to heat a canister.
- Take care with the following points on storing and handling service canisters.
 - Store in a cool, dry place.
 - Never drop or strike a canister.
 - Do not use service canisters that are deformed, have unusable screws or are otherwise damaged.
 - Never heat a service canister unless necessary. If one must be heated for some reason, use water at or below 40 °C (In such cases, never warm the canister while heating the water.) Do not immerse the valve of the service canister in water. Do not turn the service canister upside down. Turning it upside down allows liquid refrigerant into the compressor, which damages the valve.
 - Do not shake hard. (If the mounting of the valve is not secure, it may come off.)
 - Use ND-OIL8 (made by DENSO (Co. Ltd.)) compressor oil. (ND-OIL6 is designated for use with R12, so do not mistakenly use ND-OIL6.)
- Precautions on Inspecting and Charging A/C Gas
 - Perform all work in a well-ventilated location.
 - Be careful when handling high-pressure valves. When recharging refrigerant with the engine running, do not open the high-pressure valve (HI) of the manifold gauge. Overcharging refrigerant may cause problems such as poor cooling and overheating.

■ IMPORTANT

- Using R12 refrigerant in an R134a A/C system may cause problems to result, such as leaks of refrigerant at O-rings and fogging of the sight glass. Consequently, the shapes of line joints, service valves and service tools are different in order to prevent mistakes in connecting or recharging the wrong system.
- Always keep the work area clean, dry and free of any dirt or dust. Always wipe off any water from line fittings with a clean cloth before opening the fitting.
- Only use R134a refrigerant service tools.
- When discharging refrigerant, use an R134a refrigerant collection/recycling machine.
- Prior to connecting a charging hose to the tap valve of a refrigerant canister, check each seal and make sure it is not clogged up.
- When disconnecting charging hoses from compressor and receiver valves, do so as quickly as possible to minimize the leakage of gas.
- Be careful to only charge with the specified amount of refrigerant; never overcharge the system. This is important because overcharging the refrigerant can cause poor cooling performance among other things.

- Hand tighten when connecting the charging hose to the canister's tap valve. Do not use pliers to tighten the charging hose.
- Store refrigerant containers in a cool, dark place and never leave them in direct sunlight or in a hot place.
- R134a compressor oil readily absorbs moisture, so always seal any parts after disconnecting them.
- Do not use any of the old style R12 refrigerant or previous kinds of refrigerant compressor oil.

RY9212079CAS0001US0

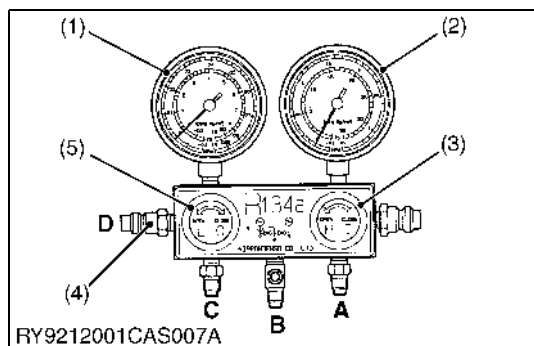

The manifold gauge set has a valve handle for opening and closing valves. The valve handle marked LO is for use on the low-pressure valve (5) and the valve handle marked HI is for use on the high-pressure valve (3). The following circuits can be achieved by variously opening and closing the high and low pressure valves.

(1) Low-Pressure Gauge	(4) Valve Core
(2) High-Pressure Gauge	(5) Low-Pressure Valve
(3) High-Pressure Valve	

RY9212001CAS0005US0

When low and high pressure valves are closed

The following 2 circuits are formed.

- Port (C) → Low-pressure gauge (1)
- Port (A) → High-pressure gauge (2)




CAUTION

- Be sure to open the valve core (d).

(1) Low-Pressure Gauge	(2) High-Pressure Gauge

RY9212001CAS0006US0

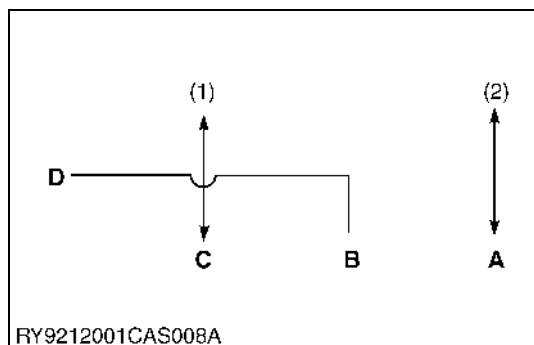

With the low-pressure valve open and the high-pressure valve closed

The following circuits are formed.

- Port (C) → Low-pressure gauge (1)
- Port (C) → Port (B)
- Port (C) → Port (D)
- Port (A) → High-pressure gauge (2)




CAUTION

- Be sure to open the valve core (D).

(1) Low-Pressure Gauge	(2) High-Pressure Gauge

RY9212001CAS0007US0

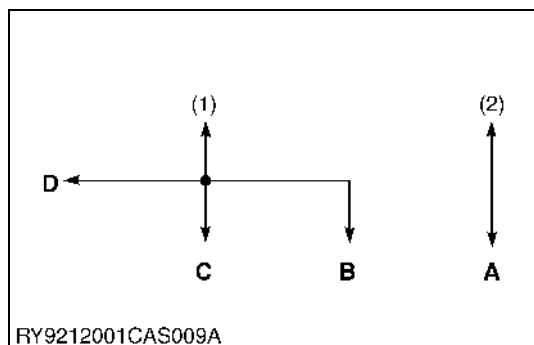

With the low-pressure valve closed and the high-pressure valve open

The following circuits are formed.

- Port (C) → Low-pressure gauge (1)
- Port (A) → Port (B)
- Port (A) → Port (D) (Be sure to open the valve core.)
- Port (A) → High-pressure gauge (2)





CAUTION

- Be sure to open the valve core (D).

(1) Low-Pressure Gauge	(2) High-Pressure Gauge

RY9212001CAS0008US0

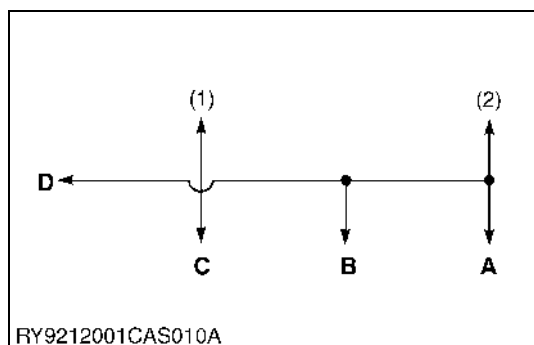

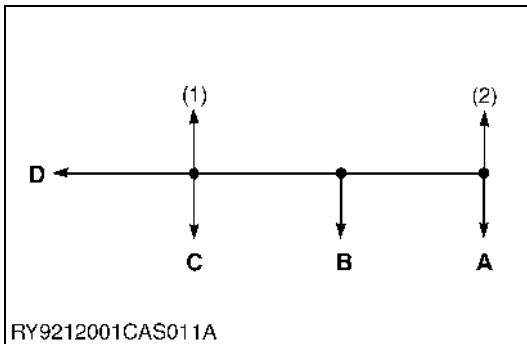

With low and high pressure valves open

The following circuits are formed.

- Port (A) → High-pressure gauge (2)
- Port (A) → Low-pressure gauge (1)
- Port (A) → Port (B)
- Port (A) → Port (C)
- Port (A) → Port (D) (Be sure to open the valve core.)



CAUTION


- Be sure to open the valve core (D).

(1) Low-Pressure Gauge

(2) High-Pressure Gauge

RY9212001CAS0009US0

(2) Refrigerant Charging Hoses

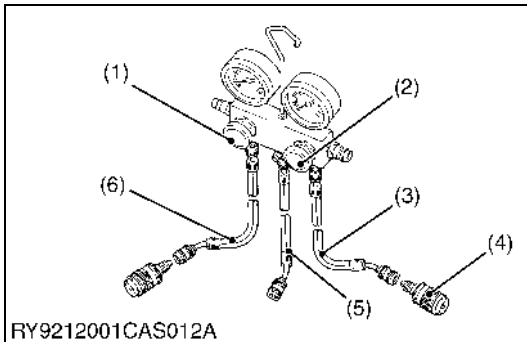

The three kinds of refrigerant charging hoses can be identified by color. Each of the refrigerant charging hoses is to be used as follows.

- In line with the AC manufacturer's recommendation, the blue hose (6) is to be used on the low-pressure side (intake side), the green hose (5) on the cooling side (center connection port) and the red hose (3) on the high-pressure side (discharge side).

(When connecting)

- Press the quick disconnect adapter (4) into the recharge valve and push in on part A until you hear it catch.



CAUTION

- While pressing in to make a connection, be careful not to bend any lines.
- If the sleeve (7) moves prior to connecting the quick disconnect adapter to the recharge valve, move the sleeve back to its original position and try again to make the connection.
- If there is any refrigerant remaining in the refrigerant recharge hose, it makes it difficult to connect the quick disconnect adapter. In this case, relieve the pressure in the refrigerant recharge hose and then connect the adapter. (Pressing on the plunger (8) eliminates any residual pressure.)




(When disconnecting)

- With part A of the quick-disconnect adaptor held in place, slide part B up.



CAUTION

- After removing the quick-disconnect adapter, be sure to put a cap on the service valve of the adapter.

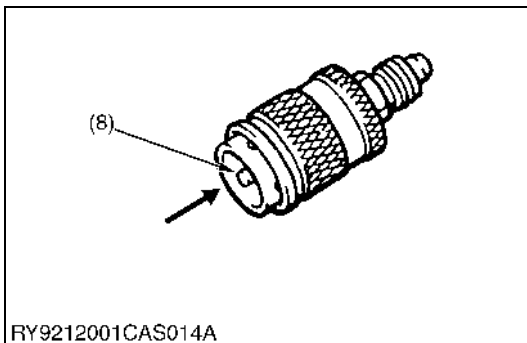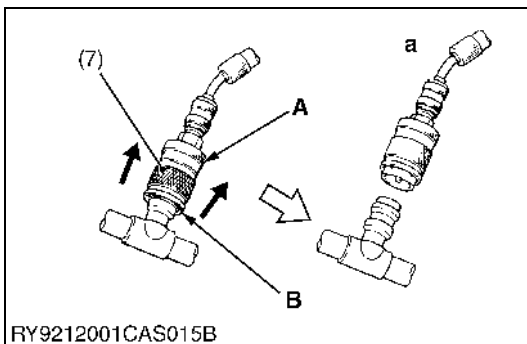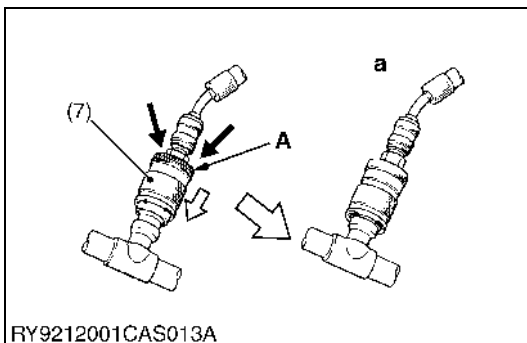

(1) Low Pressure Valve

(7) Sleeve

(2) High Pressure Valve

(8) Pusher

(3) Red Hose

(4) Quick Disconnect Adapter



a : Makes a catching sound

(5) Green Hose

(6) Blue Hose

RY9212148CAS0003US0

(3) Vacuum Pump Adapter

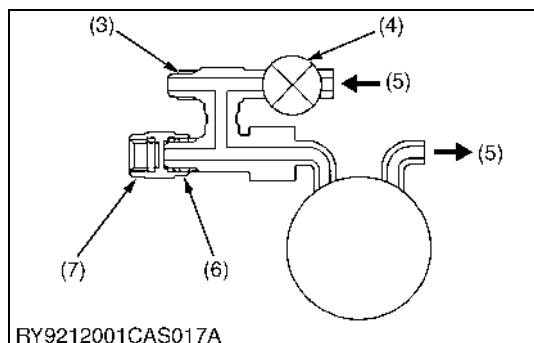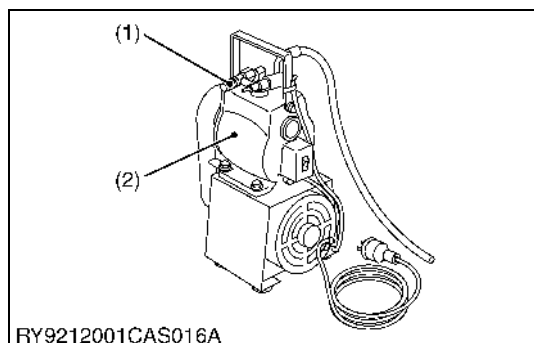


Purpose of the Vacuum Pump Adapter

1. After the AC cooling system is vacuumed, when the vacuum pump is stopped, there is a vacuum inside the hoses of the manifold gauge, so the oil of the vacuum pump flows back into the refrigerant charging hose. If the refrigerant system is charged in this state, the vacuum pump oil remaining in the refrigerant charging hose will go into the AC refrigerant system along with the refrigerant. A vacuum pump adaptor equipped with a solenoid valve is used to prevent this backflow of oil from the vacuum pump. The role of the solenoid valve is to close when electricity is flowing to the solenoid valve, cutting it off from outside air and maintaining the vacuum; when the electricity is cut off, the valve opens, bringing in outside air and relieving the vacuum.
2. If this adapter is connected to the currently used R12 vacuum pump, it enables the vacuum pump to be used for both R134a and R12.

(1) Vacuum Pump Adapter	(5) Air
(2) Vacuum Pump	(6) For R12
(3) For R134a	(7) Plug Cap
(4) Solenoid Valve	

RY9212001CAS0011US0

(4) Electric Gas Leak Tester

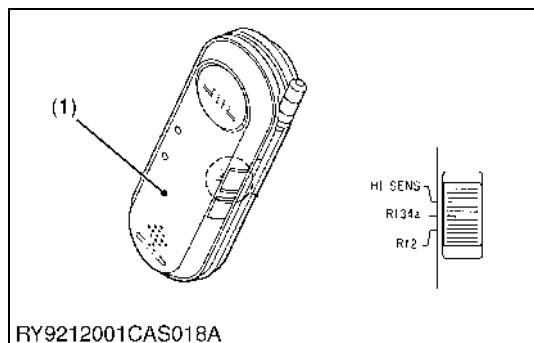

The old style R12 gas leak tester are not sensitive enough for R134a and cannot be used. Consequently a new and very sensitive electrical gas leak tester has been designed that can be used with both R134a and R12.

[NOTE]


Halogenated Torch Gas Leak Testers

- Because this tester detects gas leaks based on the reaction of chlorine in the refrigerant, it cannot detect R134a because it does not contain chlorine.

- (1) Electrical Gas Leak Tester

RY9212001CAS0012US0

(5) Canister Tap Valve

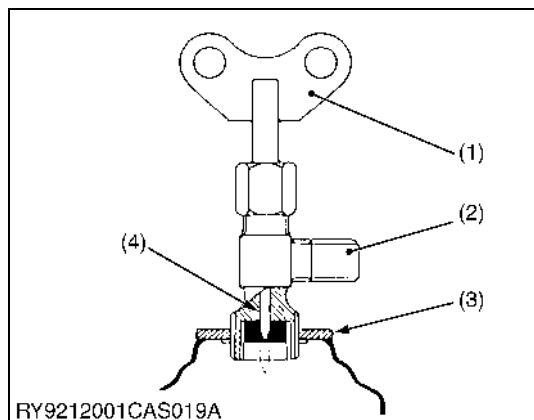


The canister tap valve used in recharging the refrigerant of the AC system has to be used as follows.

1. Before attaching the canister tap valve to the refrigerant container, rotate the handle (1) counterclockwise until the needle of the valve is completely retracted.
2. Rotate the plate nut (disk) (3) counterclockwise to its highest position and then screw the canister tap valve into the sealed tap.
3. Rotate the plate nut clockwise as far as you can and fasten the center charging hose to the canister tap valve.
4. Tighten the plate nut securely by hand.
5. Rotate the handle (1) clockwise to open a hole in the sealed tap.
6. To charge the system with refrigerant, turn the handle (1) counterclockwise. To stop charging, turn the handle clockwise.

(1) Butterfly Handle	(3) Disc
(2) Connector	(4) Needle

RY9212148CAS0004US0

(6) T-Joint

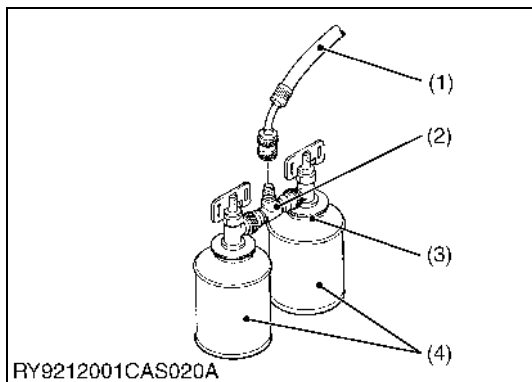

A T-joint (2) is used when using two refrigerant canisters (4) at the same time to make gas recharging more efficient.

1. Attach a refrigerant canister service valve on each side of the T-joint (2) and connect a refrigerant charging hose (1) to the T-joint.

(1) Refrigerant Charging Hose (Green)	(3) Canister Tap Valve
(2) T-Joint	(4) Refrigerant Canister

RY9212001CAS0014US0

(7) R134a Refrigerant Collection/Recycling Device

When it is necessary to discharge the refrigerant in order to work on the machine, a collection / recycling device must be used. (Never release refrigerant into the atmosphere.)

■ IMPORTANT

- Use a dedicated R134a refrigerant collection/recycling device.
- To prevent any damage to the compressor, use neither R12 system refrigerant nor cooling system oil in R134a equipment.

RY9212001CAS0015US0

5. INSPECTING AND CHARGING THE REFRIGERANT SYSTEM

[1] CHECKING THE SYSTEM WITH A MANIFOLD GAUGE


■ IMPORTANT

- Be aware that the gauge pressure values noted in the following test are measured under identical conditions and they may vary somewhat from your gauge pressure values, depending on the prevailing conditions.

Conditions

- Ambient temperature : 30 to 35 °C (86 to 95 °F)
- Engine RPM : Approx. 1,500
- Temperature control lever : Max cooling position
- Blower switch : HI Position

RY9212001CAS0016US0

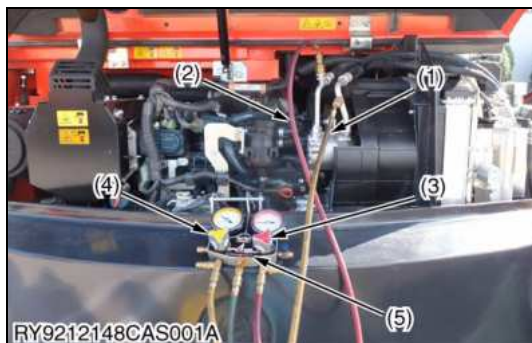

Manifold connections and test preparations

- Close the manifold gauge's high (3) and low (4) pressure valves tightly.
- Connect the red (2) refrigerant charging hose to the high-pressure charge valve (7) and the blue or yellow (1) refrigerant charging hose to the low-pressure charge valve (6).




CAUTION

- Use the refrigerant pressure in the refrigerant cycle to completely flush out the air in the refrigerant charging hose from the end of the manifold gauge's connection.
- Start up the engine and set it at approximately 1,500 rpms.
 - Turn the AC switch on and set the temperature control dial to the max cooling position.
 - Set the blower switch to its HI position.

(1) Refrigerant charging hose (blue or yellow)	(5) Manifold gauge
(2) Refrigerant charging hose (red)	(6) Low-pressure side charge valve
(3) High-pressure valve	(7) High-pressure side charge valve
(4) Low-pressure valve	

RY9212148CAS0005US0

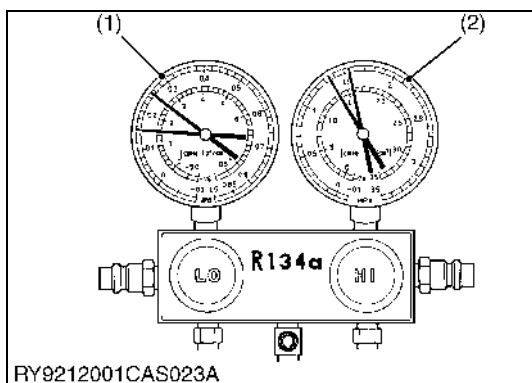

When operating normally


If the refrigerant cycle is operating normally, readings will be around the factory specifications in the table below.

Gas Pressure	Factory specification	Low pressure side	0.15 to 0.20 MPa 1.5 to 2.0 kgf/cm ² 21 to 28 psi
		High pressure side	1.27 to 1.66 MPa 13 to 17 kgf/cm ² 185 to 242 psi

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0018US0

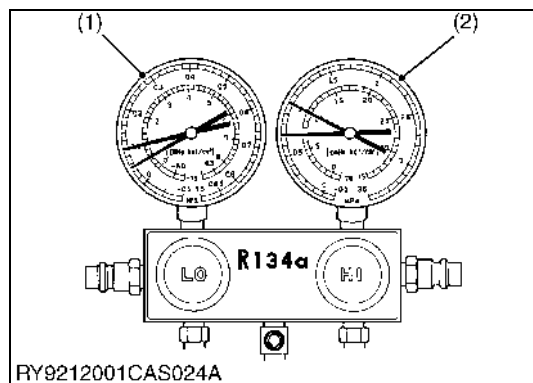


Without enough refrigerant

1. Symptoms that appear in the refrigerant cycle
 - Both high (2) and low (1) side pressures are too low.
Low-pressure side (1) : 0.05 to 0.10 MPa (0.5 to 1.0 kgf/cm², 7.1 to 14.2 psi)
High-pressure side (2) : 0.69 to 0.98 MPa (7 to 10 kgf/cm², 99.6 to 142.2 psi)
 - Foam visible in the sight glass.
 - Air output by the A/C appears to be cooled.
2. Possible Cause
 - Gas leaking from the circuit of the refrigerant cycle.
3. Solution Methods
 - Use an electric gas leak tester to check for leaks and repair any found.
 - Recharge the system with an appropriate amount of refrigerant.

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0019US0

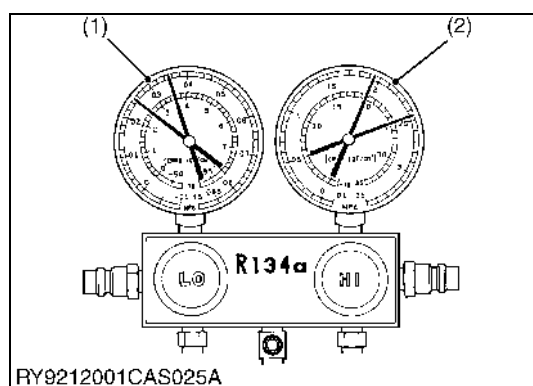

Excess refrigerant or insufficient condenser cooling

1. Symptoms that appear in the refrigerant cycle
 - Both high (2) and low (1) side pressures are too high.
Low-pressure side (1) : 0.20 to 0.35 MPa (2.0 to 3.5 kgf/cm², 28.4 to 49.8 psi)
High-pressure side (2) : 1.96 to 2.45 MPa (20 to 25 kgf/cm², 284.5 to 355.6 psi)
2. Possible Causes
 - Cycle charged with too much refrigerant.
 - Poor condenser cooling.
3. Solution Methods
 - Clean the condenser.
 - Adjust the tension of the A/C drive belt to the appropriate tension.
 - If the 2nd item above is normal, check the amount of refrigerant.




CAUTION

- To discharge excess refrigerant, loosen the manifold's gauge's low-pressure valve and slow discharge it.

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0020US0

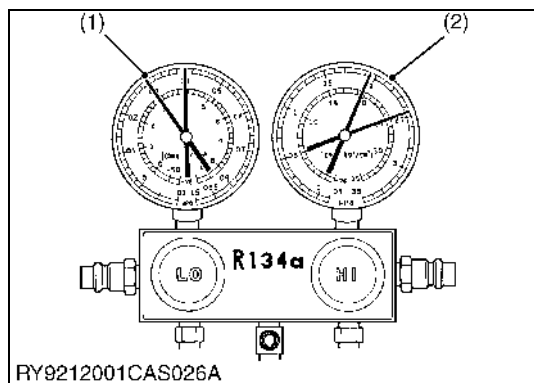

Air mixed into the cycle

1. Symptoms that appear in the refrigerant cycle
 - Both high (2) and low (1) side pressures are too high.
Low-pressure side (1) : 0.20 to 0.35 MPa (2.0 to 3.5 kgf/cm², 28.4 to 49.8 psi)
High-pressure side (2) : 1.96 to 2.45 MPa (20 to 25 kgf/cm², 284.5 to 355.6 psi)
 - The line on the low-pressure side (1) feels cold to the touch.
2. Possible Causes
 - Air is mixed in the refrigerant cycle
3. Solution Methods
 - Replace the receiver.
 - Check the amount of compressor oil and whether it is contaminated.
 - Vacuum it out and charge the cycle again with fresh refrigerant.




CAUTION

- If you fail to vacuum out a refrigerant cycle like that mentioned above and simply charge the cycle with refrigerant, the problem may recur.

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0021US0

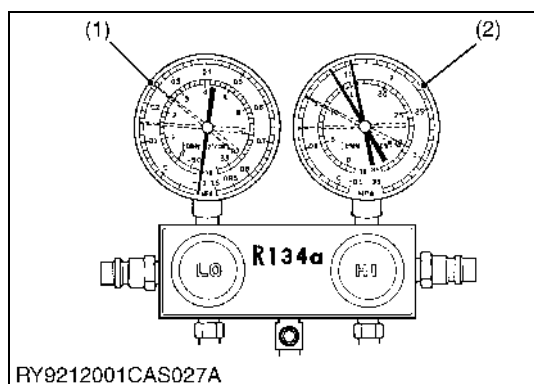


Moisture mixed into the cycle

1. Symptoms that appear in the refrigerant cycle
 - At first the A/C works normally, but after some time, the pressure on the low-pressure side (1) becomes a vacuum and the high-pressure side (2) is at a low pressure.
Low-pressure side (1) : Vacuum;
High-pressure side (2) : 0.69 to 0.98 MPa (7 to 10 kgf/cm², 99.6 to 142.2 psi)
2. Possible Causes
 - Moisture in the refrigerant cycle freezes up in the expansion valve orifice, creating a temporary blockage. As time elapses, the ice thaws and it returns to normal.
3. Solution Methods
 - Replace the receiver.
 - Eliminate the moisture in the refrigerant cycle by repeatedly vacuuming it out.
 - Recharge the system with an appropriate amount of refrigerant.

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0022US0

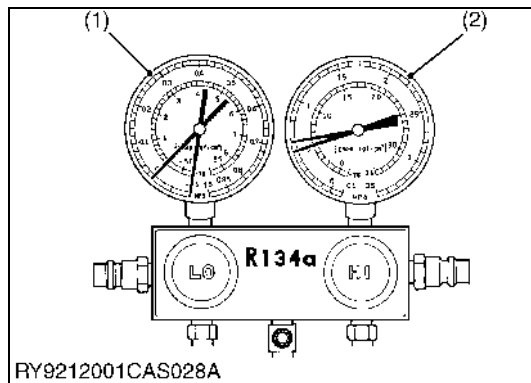

Refrigerant fails to circulate

- Symptoms that appear in the refrigerant cycle
 - Low-pressure side (1) becomes a vacuum and the high-pressure side (2) is at low pressure.
Low-pressure side (1) : Vacuum;
High-pressure side (2) : 0.49 to 0.59 MPa (5 to 6 kgf/cm², 71.2 to 85.3 psi)
- Possible Causes
 - The line above the expansion valve orifice is frozen up and the refrigerant cannot flow due to moisture and/or dirt stuck in the refrigerant cycle.
- Solution Methods


Wait for some time to elapse and determine whether it is dirt or moisture blocking the line by whether A/C operation recovers or not.

 - If the problem is moisture, the problem resolves itself, as indicated in the previous section.
 - If the cause is dirt, remove the expansion valve and blow out any dirt with compressed air.
 - If the dirt cannot be eliminated, replace the expansion valve and the receiver. Vacuum out the line and charge the cycle with an appropriate amount of fresh refrigerant.
 - If the problem is caused by a gas leak in the heat-sensitive tube, replace the expansion valve.

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0023US0

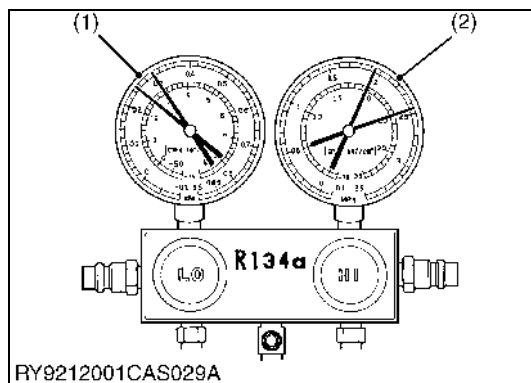


Expansion valve too far open

- Symptoms that appear in the refrigerant cycle
 - Both high (2) and low (1) side pressures are too high.
Low-pressure side (1) : 0.29 to 0.39 MPa (3 to 4 kgf/cm², 42.7 to 56.9 psi)
High-pressure side (2) : 1.96 to 2.45 MPa (20 to 25 kgf/cm², 284.5 to 355.6 psi)
 - Either frost or heavy condensation on the low-pressure side line
- Possible Causes
 - Problem with the expansion valve.
 - The flow volume adjustment is set improperly.
- Solution Methods
 - Replace the expansion valve.

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0024US0

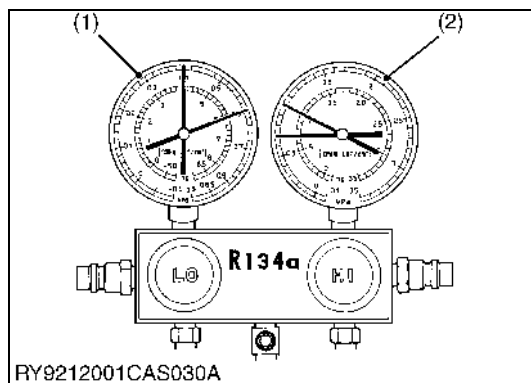

Faulty compression from compressor

- Symptoms that appear in the refrigerant cycle
 - Low-pressure side (1) : 0.39 to 0.59 MPa (4 to 6 kgf/cm², 56.9 to 85.3 psi)
High-pressure side (2) : 0.69 to 0.98 MPa (7 to 10 kgf/cm², 99.6 to 142.2 psi)
- Possible Causes
 - Compressor is leaking.
- Solution Methods
 - Replace the compressor.



CAUTION

- When the compressor is producing a faulty compression, it can be detected with a manifold gauge (figure at left).

(1) Low Pressure Side

(2) High Pressure Side

RY9212001CAS0025US0


[2] COLLECTION, VACUUMING AND CHARGING

■ IMPORTANT

- Follow 4. Precautions when Repairing the Refrigerant Cycle when discharging, vacuuming and charging the refrigerant system.

RY9212001CAS0026US0

(1) Collecting Refrigerant

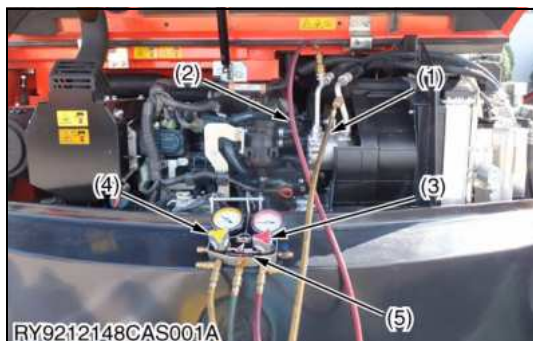

Get a R134a refrigerant collection/recycling device ready to use.

- Connect the low-pressure hose (blue) (4) from the refrigerant collection/recycling machine to the low-pressure side charge valve (1). Connect the high-pressure hose (red) (5) to the high-pressure side charge valve (2).
- Follow the instructions of the manufacturer and discharge the refrigerant from the cooling system.

■ IMPORTANT

- Do not use device except an R134a refrigerant collection and recycling machine. In order to prevent damage to the compressor, do not mix R134a equipment, refrigerant or compressor oil into an R12 system.



CAUTION

- When removing the charge valve hose, cover it with a rag to protect your fingers and eyes from frost bite from the refrigerant.



(1) Refrigerant charging hose (blue or yellow)	(5) Manifold gauge
(2) Refrigerant charging hose (red)	(6) Low-pressure side charge valve
(3) High-pressure valve	(7) High-pressure side charge valve
(4) Low-pressure valve	

RY9212148CAS0006US0

(2) Vacuuming Out the System

No.	Description of Work	Remarks
(1)	Check the connected parts and correct any problems	
(2)	Start vacuuming	Approx 15 minutes, 750 mmHg (229 in.Hg) or greater
(3)	Stop vacuuming	Leave for five minutes
(4)	Check the concentration	If the gauge indicates abnormally, return to (1)
(5)	Charge with refrigerant	98 kPa (1.0 kgf/cm ² , 14 psi)
(6)	Check for gas leaks	
(7)	Charge with refrigerant	

RY9212001CAS0028US0

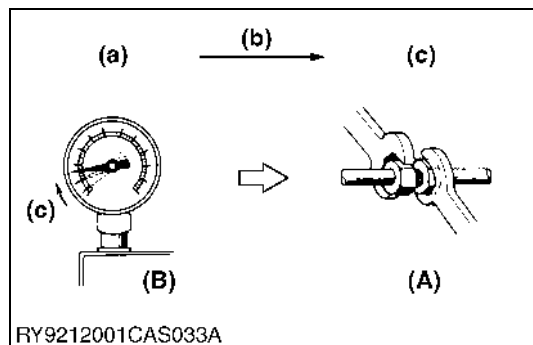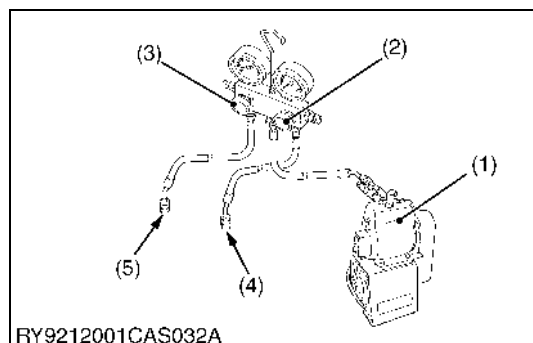

Manifold gauge connections and vacuuming

1. Close the high-pressure (HI) and low-pressure (LO) valves of the manifold gauge.
2. Connect the L-shaped side of 2 charging hoses to quick joints and connect them to the compressor and receiver service valves.

Blue hose	Low-pressure side (L mark)
Red hose	High-pressure side (H mark)


3. Connect the charging hose (green) in the middle of the manifold gauge to the vacuum pump.
4. Open the high and low pressure valves of the manifold gauge.
5. Turn the vacuum pump switch on and vacuum the line until the low-pressure gauge reaches a reading of approximately -0.1 MPa (-750 mmHg). (about 15 minutes)
6. Once about -0.1 MPa (-750 mmHg) is reached, close the high and low pressure valves of the manifold gauge and stop the vacuum pump.
7. Let it set for at least five minutes and check to make sure the indicator needle of the low-pressure gauge does not approach 0.
8. If the needle of the gauge approaches 0, the system's airtightness is compromised somewhere, so after inspecting and repairing the line connections, run the vacuum again and check to make sure there are not any places that are not airtight.

- (1) Vacuum Pump
- (2) High-Pressure Valve
- (3) Low-Pressure Valve
- (4) High-Pressure Side (H Mark)
- (5) Low-Pressure Side (L Mark)

- (A) Inspection Line Connections
- (B) Low-Pressure Gauge

- (a) Valve Settings
(L: Closed, H: Closed)
- (b) Leave for at Least Five Minutes
- (c) If the Needle Approaches 0,
Inspecting and Repairing the Line
Connections.

RY9212001CAS0029US0

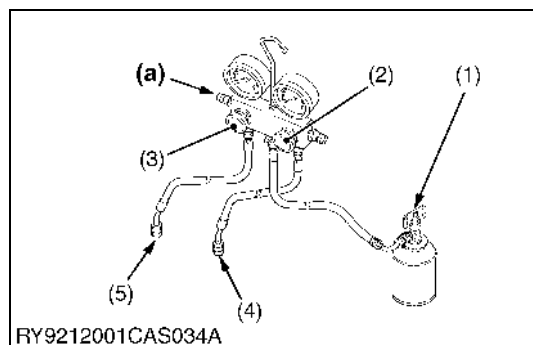

Connections with a refrigerant collector or service canister


1. Close the high-pressure (HI) and low-pressure (LO) valves of the manifold gauge.
2. Connect the charging hose (green) connected to the vacuum pump to the collector or service canister. (Air is in the charging hose, so do not open the high or low pressure valves.)
3. Discharge from the collector or open the service canister's valve.
4. Press on the valve core of the manifold gauge for three to five seconds to discharge any air from the hose.

- (1) Service Canister Valve
- (2) High-Pressure Valve
- (3) Low-Pressure Valve
- (4) High-Pressure Side (H Mark)
- (5) Low-Pressure Side (L Mark)

- (a) Press Valve Core to Expel Air

RY9212001CAS0030US0

(3) Charging from the High-Pressure Side

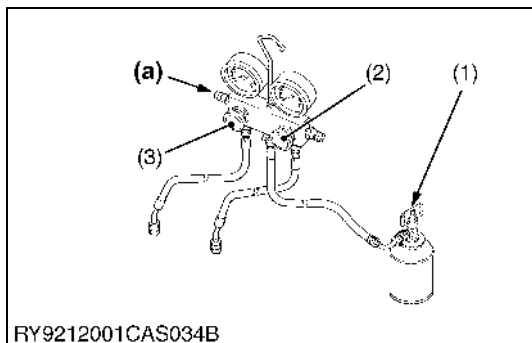

Charging from the High-pressure Side



CAUTION

- **Important : do not start the engine. If the engine is running, the gas will flow back and burst either the service canister or a hose.**

■ IMPORTANT

- **Do not open the low-pressure valve of the manifold gauge.**
- **If the service canister has been changed, be sure to expel any air out of the charging hose (green).**

1. Without starting the engine, open the high-pressure valve and charge with approx 500 g of gas.
2. While charging, once the low-pressure gauge indicates approx 0.10 MPa (approx 1.0 kgf/cm²), close the high-pressure valve and the service canister valve for the time being.
3. Use a gas detector to check the hoses and pipe connections for gas leaks; if any exist, repair them. If there are no leaks, continue charging the refrigerant.
4. When charging on the high-pressure side stops, close the high-pressure valve on the manifold gauge and the service canister valve, and then charge from the low-pressure side.

(1) Service Canister Valve


(2) High-Pressure Valve

(3) Low-Pressure Valve

(a) Press Valve Core to Expel Air

RY9212001CAS0031US0

(4) Charging from the Low-Pressure Side

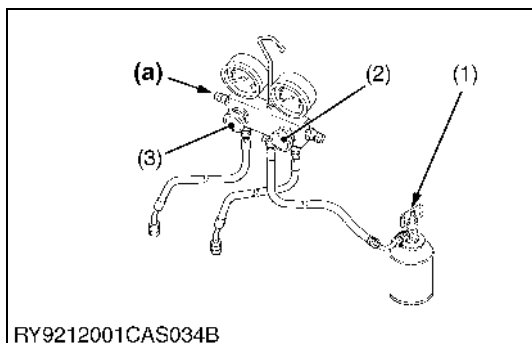

Charging from the Low-Pressure Side



CAUTION

- **Never open the manifold gauge's high-pressure valve when charging refrigerant while the engine is running. (If the high-pressure valve is opened, high-pressure gas will flow back up the line and rupture the service canister or a charging hose.)**
- **Always keep the service canister upright when charging.**

■ IMPORTANT

- **If the service canister has been changed, be sure to expel any air out of the charging hose (green).**

1. Check and make sure the manifold gauge's high-pressure valve is closed.
2. After starting the engine, set it to approx 1500 rpms and open all of the doors.
3. Turn the AC switch on and set the temperature control to maximum cooling.
4. Open the manifold gauge's low-pressure valve and the service canister valve and charge with the specified amount of gas.
5. After completing refrigerant charging, close the manifold gauge's low-pressure valve and the service canister valve and stop the engine.
6. Check for any gas leaks with the gas leak tester.

(1) Service Canister Valve

(2) High-Pressure Valve


(3) Low-Pressure Valve

(a) Press Valve Core to Expel Air

RY9212148CAS0022US0

(5) Inspections and Troubleshooting

[A] Checking the Quantity of AC Gas

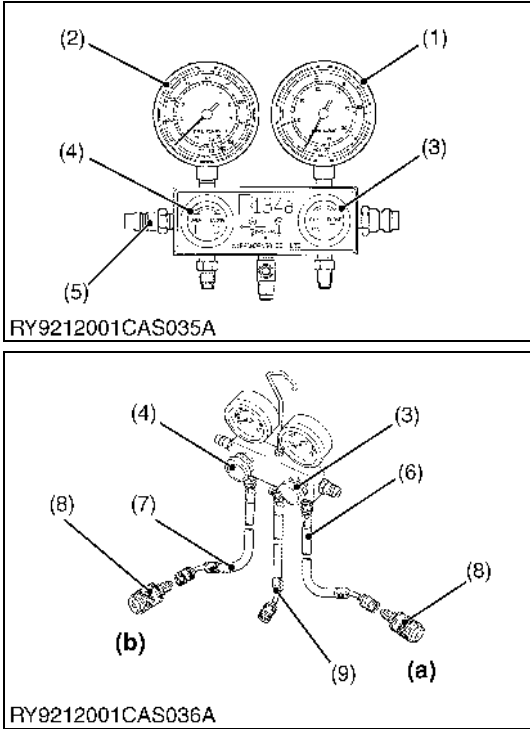

Checking with a manifold gauge

All the manifold gauge values indicated below are measurements taken under the specified conditions. Please note that the measurements you take will vary depending on the prevailing conditions.

Conditions

Doors	All open
Inside/outside air switch	Inside
Ambient air temperature	30 to 35 °C (86 to 95 °F)
Engine RPM	About 1,500
Temperature control	Max cooling position
Blower switch	HI

1. After closing both the high and low-pressure valves of the manifold gauge, connect charging hoses (red/blue) to the compressor and the service canister valve of the receiver tank.
2. Loosen the low-pressure valve slightly to expel any air from the charging hose. After expelling the air, close the low-pressure valve again.
3. Expel air from the charging hose on the high-pressure side in the same way.
4. Start the engine and set it at approximately 1500 rpms.
5. Turn the AC switch ON and set the temperature control to maximum cooling and the blower switch to HI.
6. Read the values on the low-pressure and high-pressure gauges.

When Normal	Factory specifica- tion	Low pressure side	0.15 to 0.20 MPa 1.5 to 2.0 kgf/cm ² 21 to 28 psi
	Factory specifica- tion	High pressure side	1.27 to 1.66 MPa 13 to 17 kgf/cm ² 185 to 242 psi

- (1) High-Pressure Gauge

(2) Low-Pressure Gauge

(3) High-Pressure Valve

(4) Low-Pressure Valve

(5) Valve Core

(6) Red


(7) Blue

(8) Quick Joint

(9) Green
- (a) High-Pressure Side
(Compressor's H-Mark Side)

(b) Low-Pressure Side
(Compressor's L-Mark Side)

RY9212001CAS0033US0

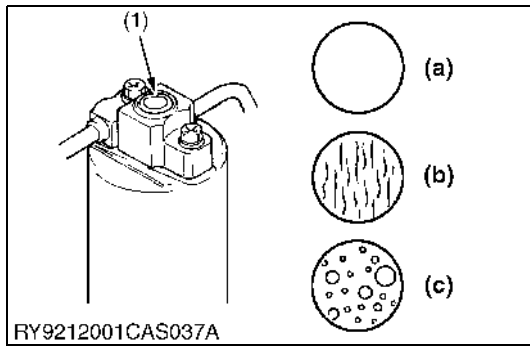

Checking with the sight glass

Conditions

Doors	All open
Inside/outside air switch	Inside
Ambient air temperature	30 to 35 °C (86 to 95 °F)
Engine RPM	About 1500 rpm
Temperature control	Max cooling position
Blower switch	HI

Criteria

(a)	Overcharged	No air bubbles at all in the flow. In this case, both high and low-pressure sides are at high pressure and the cooling is ineffective.
(b)	Normal amount	Almost no air bubbles in the flow. If the engine rpm is raised gradually from idle to 1500 rpm, the air bubbles disappear and the flow becomes transparent.
(c)	Undercharged	Air bubbles flow past constantly.


(1) Sight Glass

RY9212001CAS0034US0

6. INSPECTION AND DISASSEMBLY

[1] CHECKS AND ADJUSTMENTS

(1) Compressor

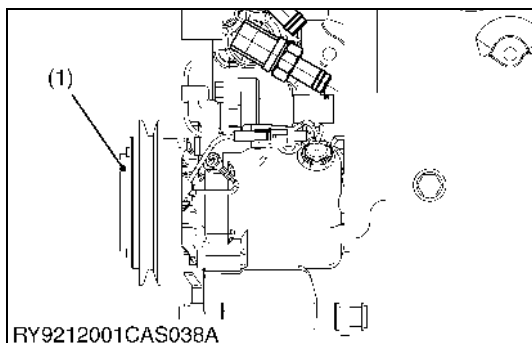

Magnetic clutch

1. Start the engine.
2. With the AC switch on the AC control panel off, check and make sure that no scraping sounds or other noise comes from the pulley as it turns.
3. Turn the AC switch and the fan switch on to make the AC system operate. With the AC working, check and make sure the magnetic clutch is not slipping.
4. If there is any noise, repair or replace it.

(1) Magnetic Clutch

RY9212148CAS0008US0






Stator coil

1. Remove the magnetic clutch's 1P connector.
2. Measure the resistance between the 1P connector on the magnetic clutch side and the body of the stator.
3. If the measurement falls outside of the factory specification, replace the stator coil.

Between stator body and harness side of stator coil	Factory specification	3 to 5 Ω

RY9212148CAS0009US0

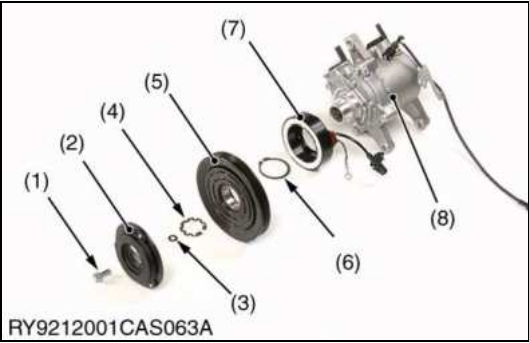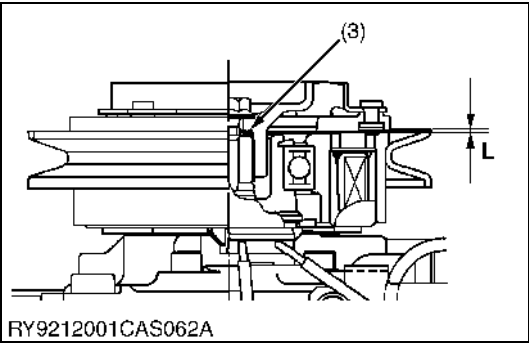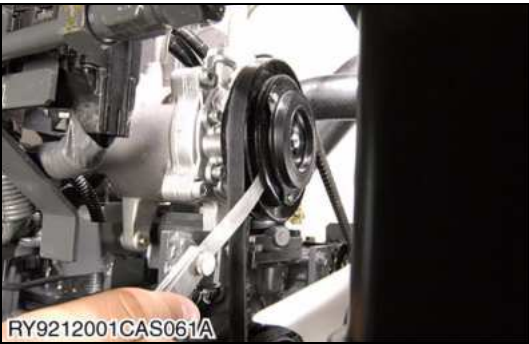

Adjusting clearance

- 1. Use a feeler gauge to check the clearance.
- 2. If the measurement is outside the factory specification, adjust the clearance.

Clearance	Factory specification	0.30 to 0.65 mm 0.0118 to 0.0255 in.

[NOTE]

Shim Thickness	Part No.
0.10 mm (0.0039 in.)	T1065-87340
0.15 mm (0.0059 in)	T1065-87350
0.40 mm (0.016 in.)	T1065-87360
0.60 mm (0.024 in.)	T1065-87370
1.0 mm (0.0394 in.)	T1065-87380

- (1) Magnetic Clutch Mounting Screw

(2) Hub Plate

(3) Shim

(4) Snap Ring





(5) Rotor
- (6) Snap Ring

(7) Stator

(8) Compressor Body
- L : Clearance**

RY9212148CAS0010US0

(2) Relays

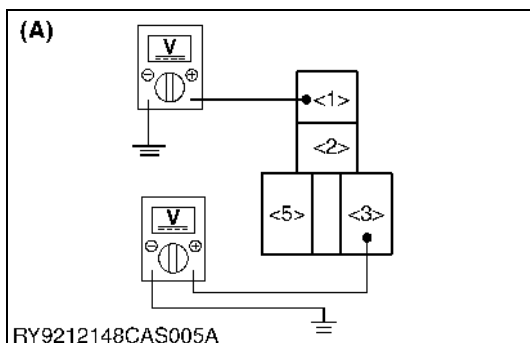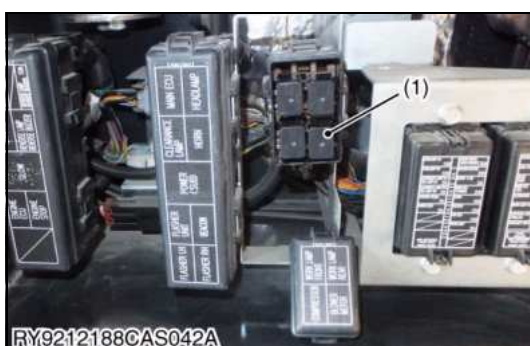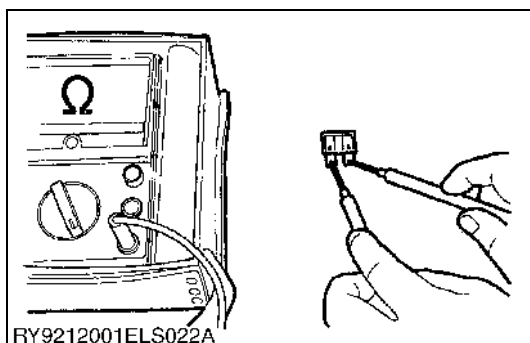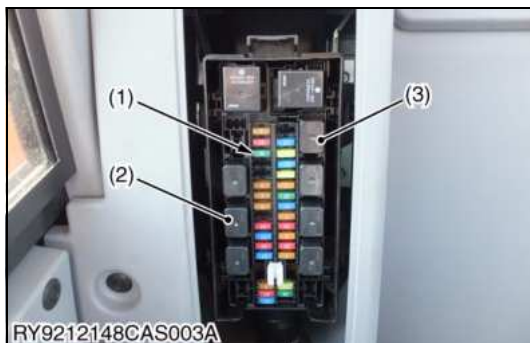

Blower motor inspection

1. Key switch: STOP
2. Check whether the blower motor fuse (30A) is blown.

Criteria
Regular: no break
Irregular: has a break

3. Switch the blower motor and horn relays.
4. Start the engine, then turn the fan switch to [3] and check if it works.

Criteria
Regular: it works
Irregular: it does not work

(1) Blower motor fuse (30A)	(3) Horn relay
(2) Blower motor relay	(4) Fan switch

RY9212148CAS0011US0

Blower motor relay voltage check

1. Take out the blower motor relay.
2. Key switch: RUN
3. Measure the voltage based on the table below.

Measurement	Connector name (+ terminal side)	Pin No.	Connector name (- terminal side)	Pin No.
(a)	Blower motor relay	<1>	Body GND	—
(b)	Blower motor relay	<3>	Body GND	—


Regular: 12 V

Irregular: Large discrepancy from 12 V

- (1) Blower Motor Relay

(A) Fuse Box Terminals

RY9212148CAS0012US0

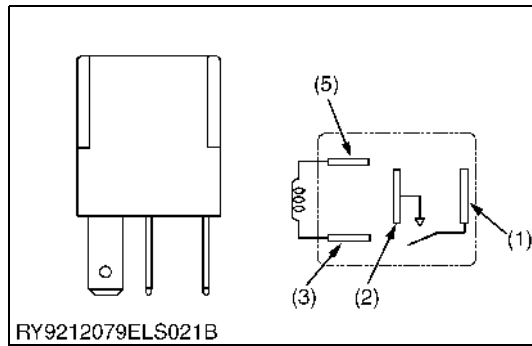

Blower motor inspection

1. Key switch: STOP
2. Take out the blower motor relay.
3. Measure the resistance based on the table below.

Mea- sure- ment	Relay terminal (+ terminal side)	Relay terminal (- terminal side)
(a)	(3)	(5)

Factory spec: 92 to 112 Ω

Outside factory spec: NG

4. Test the continuity based on the table below.

Mea- sure- ment	Relay terminal (+ terminal side)	Relay terminal (- terminal side)
(a)	(1)	(2)

Regular: No continuity


Irregular: Continuity

RY9212148CAS0013US0

(3) Blower Motor



RY9212148CAS024A

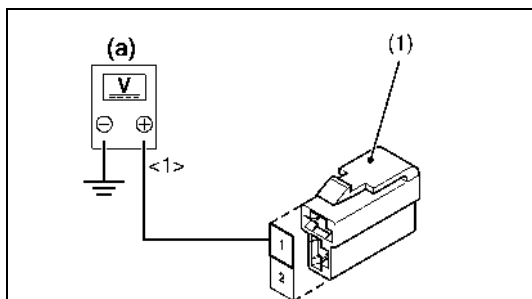


RY9212148CAS007A



RY9212148CAS004B



RY9212001CAS043B

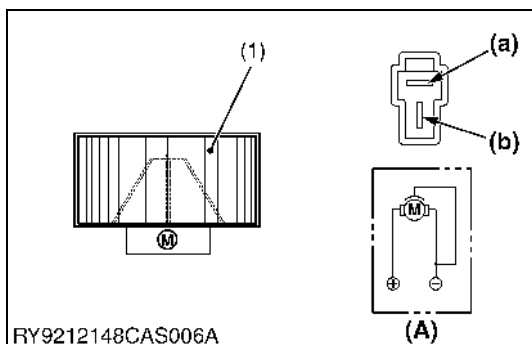

RY9212148CAS006A

Checking the Voltage

1. Remove the blower motor connector.
2. After starting the engine, set the fan switch on [3].

Measure the voltage based on the table below.

Measurement Points	Connector Name (+terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(a)	Blower motor connector	<1>	Body GND	—

Normal: 12 V

Irregular: Large discrepancy from 12 V

- (1) Blower Motor Connector (2) Fan Switch

RY9212148CAS0014US0


Blower motor test

1. Remove the blower resistor.
2. Turn the blower motor by hand and check whether it turns smoothly.
3. If the blower motor fails to turn, check the motor.

- (1) Blower Motor (A) Circuit Diagram
(a) (+) Terminal
(b) (-) Terminal

RY9212148CAS0015US0

(4) Blower Resistor

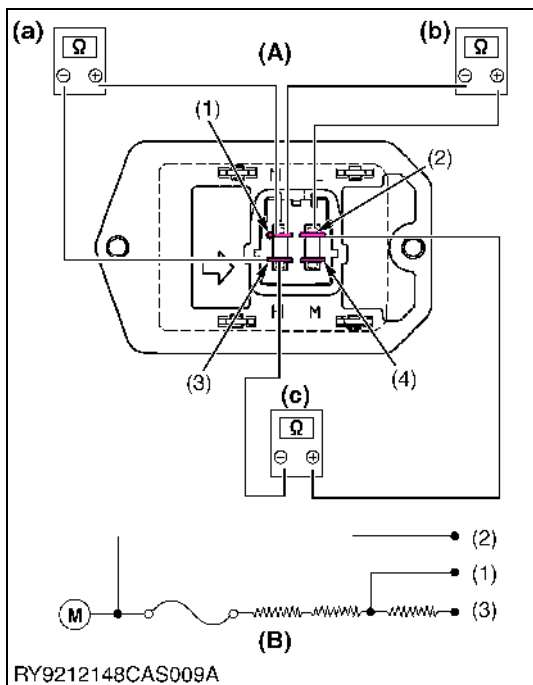

Checking the Voltage

1. Remove the blower motor connector.
2. After starting the engine, set the fan switch off.
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector Name (+terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(a)	Blower resistor motor connector	<2>	Body GND	—

Normal: 12 V

Irregular: Large discrepancy from 12 V

- (1) Blower Resistor
- (2) Blower Resistor Motor Connector
- (3) Fan Switch

RY9212148CAS0016US0

Inspecting the Blower Resistor

1. Put the key switch in its STOP position.
2. Disconnect the blower resistor connector from the machine and test the resistor on its own.
3. Measure the resistance based on the table below.

Mea- sure- ment	Between terminals	Factory specification	Assessment Results
(a)	1 – 3	Approx. 1.0 Ω	
(b)	1 – 2	Approx. 0.7 Ω	
(c)	2 – 3	Approx. 1.7 Ω	





Regular: Within factory specification

Irregular: Outside factory specification

- (1) MI
 - (2) HI
 - (3) LO
 - (4) Blank
- (A) Blower Resistor
(B) Wiring Diagram

RY9212148CAS0017US0

(5) Blower Switch

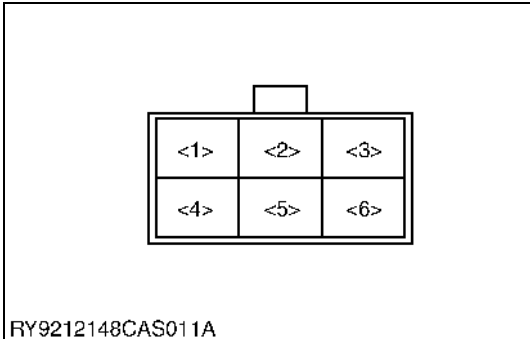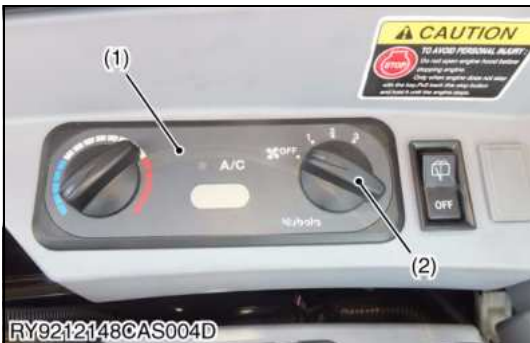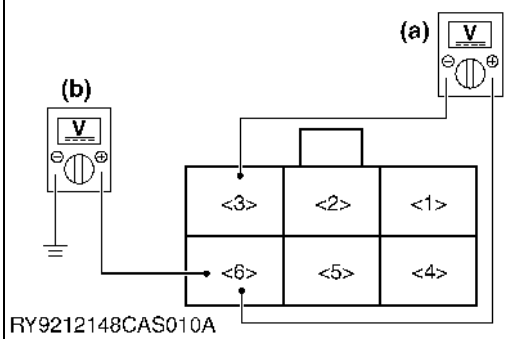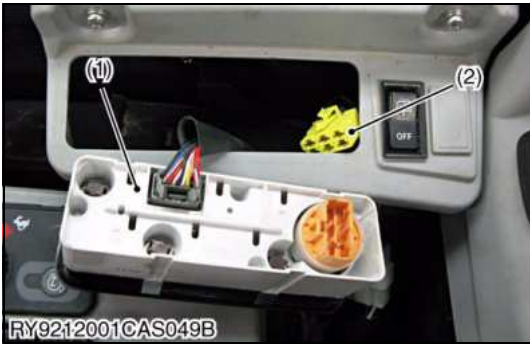

Voltage check

- 1. Disconnect the blower switch connector.
- 2. Turn the key switch to the RUN position.
- 3. Measure the voltage based on the table below.

Mea- sure- ment	Connector terminal name (+ terminal side)	Pin No.	Connector terminal name (- terminal side)	Pin No.
(a)	Blower switch connector	<6>	Blower switch connector	<3>
(b)	Blower switch connector	<6>	Body GND	-

Regular: 12V
Irregular: Large discrepancy from 12V

- (1) Control panel
 - (2) Blower switch connector
- RY9212158CAS0001US0




- 1. Turn the key switch to the STOP position.
- 2. Remove the control panel from the machine and test the blower switch independently.

Position		<3>	<6>	<2>	<5>	<1>	<4>
Blower switch	OFF						
	● 1	●	●	●			
	● 2	●	●			●	
	● 3	●	●				●

RY9212032CAS011A

- (1) Control panel
 - (2) Blower switch
- RY9212158CAS0002US0

(6) Servo Motor (for Temp Control)

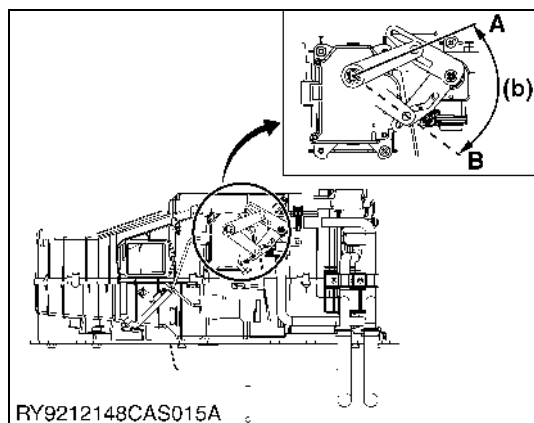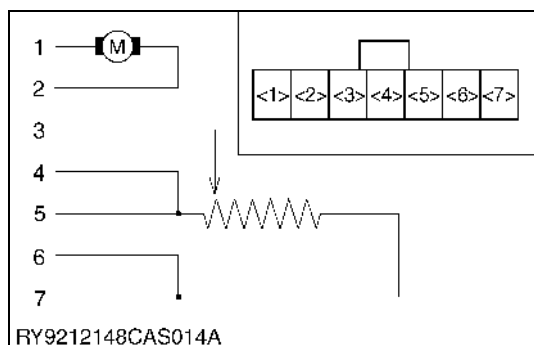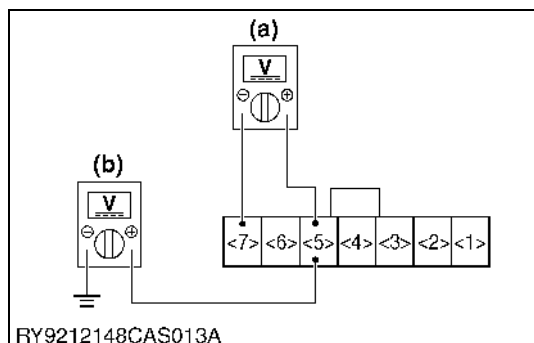

Voltage check

1. Disconnect the servo motor connector.
2. Turn the key switch to the RUN position.
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector terminal name (+ terminal side)	Pin No.	Connector terminal name (- terminal side)	Pin No.
(a)	Servo motor connector	<5>	Servo motor connector	<7>
(b)	Servo motor connector	<5>	Body GND	—

Regular: 5V

Irregular: Large discrepancy from 5V

- (1) Servo motor connector

RY9212158CAS0003US0

Servo motor inspection

1. Turn the key switch to the STOP position.
2. Disconnect the servo motor connector from the machine and test the servo motor independently.
3. Measure the voltage based on the table below.

Mea- sure- ment	Connector terminal name (+ terminal side)	Pin No.	Connector terminal name (- terminal side)	Pin No.
(a)	Servo motor	<1>	Servo motor	<2>

Regular: Approx. 33Ω (actual reference value)

Irregular: Large discrepancy from 33Ω

4. Apply the battery voltage to terminals 1 and 2 of the servo motor and check whether it drives the servo motor.
5. Measure the resistance between A and B in the diagram at left according to the table below.

Mea- sure- ment	Connector terminal name (+ terminal side)	Pin No.	Connector terminal name (- terminal side)	Pin No.
(b)	Servo motor	<3>	Servo motor	<5>

Regular: Gradual change in resistance (0 to within 6kΩ)


Irregular: No change in resistance

RY9212158CAS0004US0

(7) Pressure Switch

When a pressure switch (inside the high-pressure/low-pressure switch) is operating normally, electricity is conducted (ON) and when an abnormal pressure occurs, it trips the switch, blocking the electricity (OFF).

RY9212001CAS0046US0

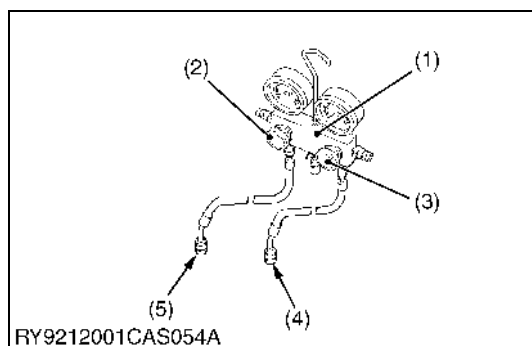

RY9212001CAS054A

Manifold gauge connections

1. Close the HI (high-pressure side) valve (3) and the LO (low-pressure side) valve (2) of the manifold gauge (1) securely.
2. Connect the red charging hose (4) to the HI (high-pressure side) charge valve (1) and the blue charging hose (5) to the LO (low-pressure side) charge valve (2).
3. Open the manifold gauge's HI (high-pressure side) valve (3) a little and press on the valve core to expel any air inside its charging hose (4). Then close the HI (high-pressure side) valve (3) tightly.
4. Open the manifold gauge's LO (low-pressure side) valve (2) a little and press on the valve core to expel any air inside its charging hose (5). Then close the LO (low-pressure side) valve (2) tightly.

- (1) Manifold Gauge
(2) Low-Pressure Valve
(3) High-Pressure Valve

- (4) Red Charging Hose
(5) Blue Charging Hose

RY9212001CAS0047US0



RY9212148CAS016A

When refrigerant pressure is rising (OFF)

1. Start the engine and set it at 1,500 rpms. Turn the AC switch on the control panel on, set the fan switch to HI and set the temperature control lever to the max cool position.
2. Cover the front of the condenser with cardboard or the like and raise the pressure on the high-pressure side of the AC cycle.
3. Once the pressure on the high-pressure side rises, the high-pressure switch operates, turning the magnetic clutch of the compressor off. When it does so, read the HI (high-pressure) gauge of the manifold gauge and if it reads higher than the pressure setting, replace the pressure switch (8).
 - Pressure setting on the high-pressure side of the switch:
Switches off at approximately 3.14 MPa (32 kgf/cm², 460 psi) or higher

RY9212148CAS0018US0


When refrigerant pressure is dropping (OFF)

1. Remove the connector of the pressure switch (1).
2. Measure the resistance between the terminals of the pressure switch with a circuit tester. It should register 0 Ω unless there is insufficient gas due to a leak or unless the pressure switch is faulty.
 - Pressure setting on the low-pressure side of the switch:
Switches off at approximately 0.196 MPa (2.0 kgf/cm², 28 psi)

RY9212001CAS0049US0

[2] DISASSEMBLY AND ASSEMBLY

(1) AC Unit Assembly/Disassembly

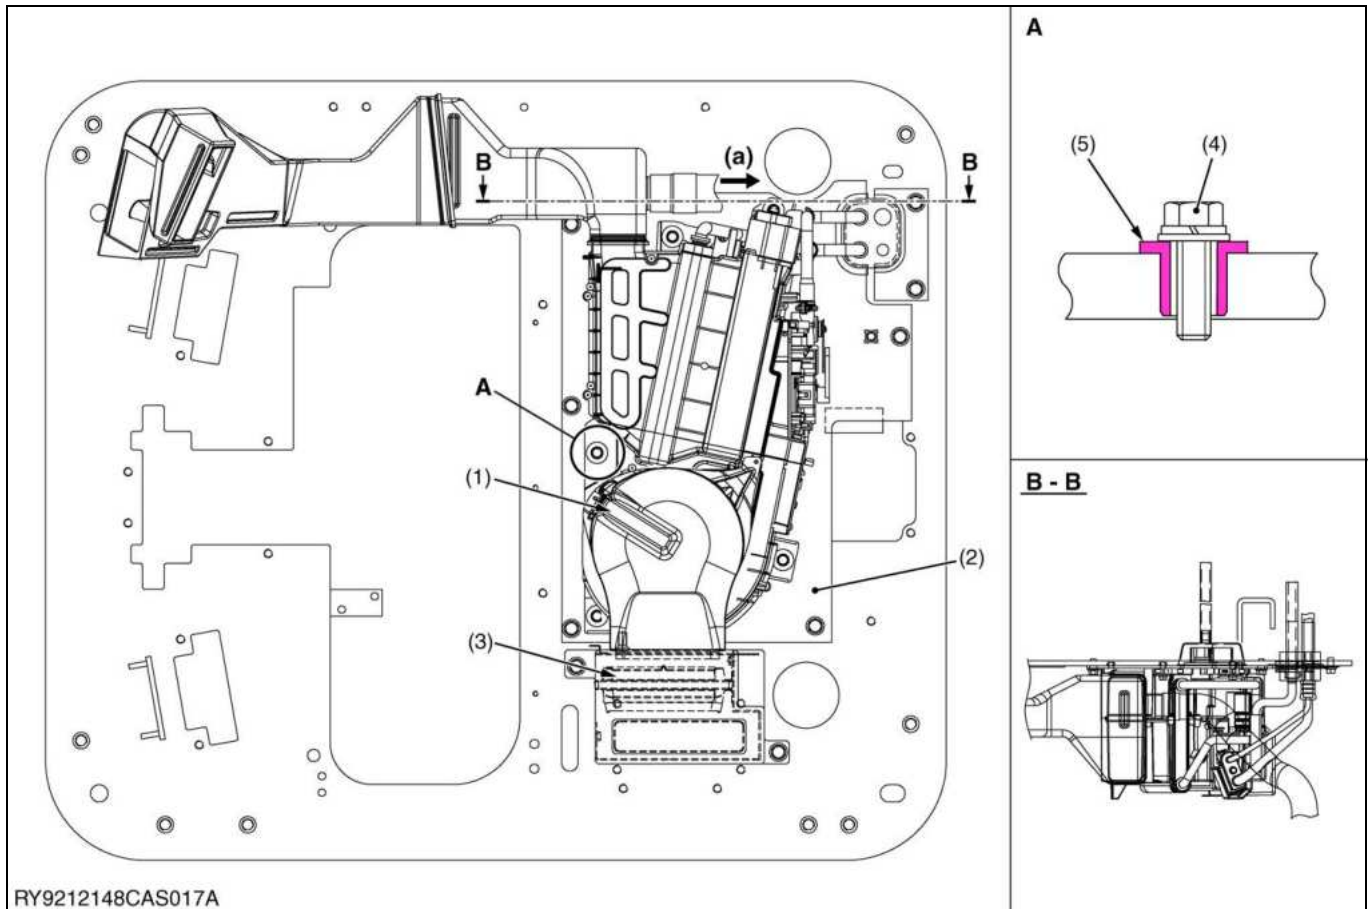

(1) AC Unit
(2) AC step


(3) Filter
(4) Bolt

(5) Collar

(a) To rear duct


RY9212158CAS0005US0

(2) Mounting and Removing the Compressor

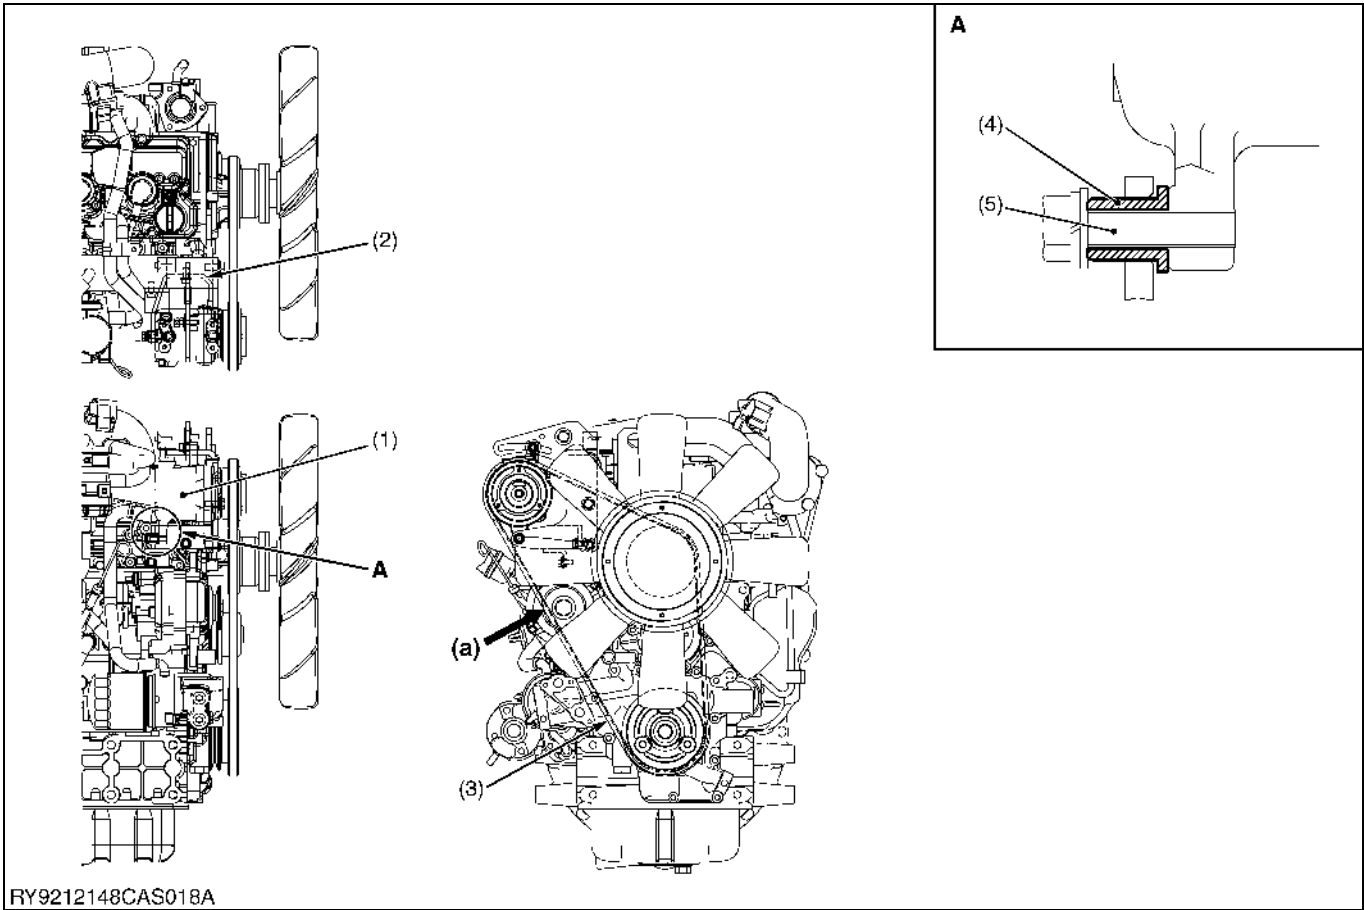

- (1) Compressor ASSY
(2) Compressor bracket
- (3) V belt
(4) Bolt
- (5) Compressor bushing
- (a) Point to measure compressor belt tension

RY9212148CAS0029US0

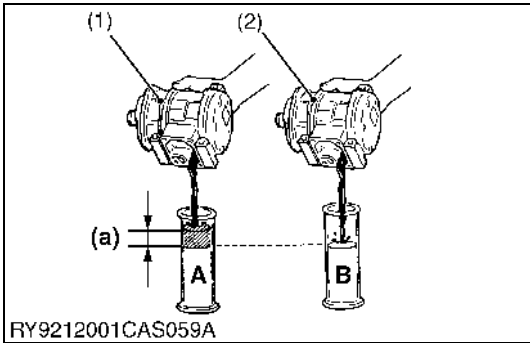

Filling the Compressor with Oil


When replacing the compressor

- The amount of oil required by the new compressor is enclosed within the AC cycle. A certain amount of compressor oil circulates along with the gas in the AC system.
- When replacing the compressor, remove the excess oil from the new compressor.
- Compressor oil (ND-OIL8) readily absorbs moisture, so seal it immediately.

Compressor Oil	Type: ND-OIL8	Capacity (reference value): 60 cc

- (1) New Compressor
(2) Compressor Being Replaced
- A : Amount of Oil for New Compressor
B : Amount of Oil from Old Compressor
- (a) Remove Excess Oil (A-B)

RY9212079CAS0037US0

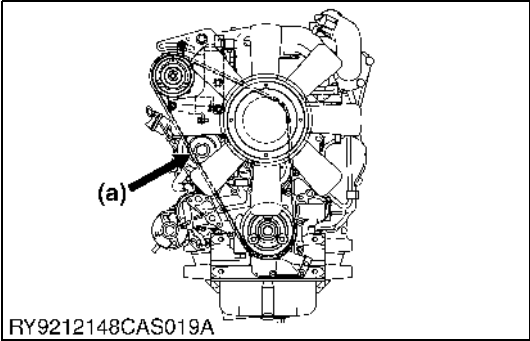

When replacing the compressor, press at point (a) on the drive belt and adjust the tension.

■ IMPORTANT


- Be careful that the compressor bushing faces the right direction.

Belt tension adjustment	98 N 10.0 kgf 22 lbf	20 to 25 mm 0.79 to 0.98 in.

RY9212148CAS0030US0

(3) AC and Heater Hose Routing

[A] AC Hose

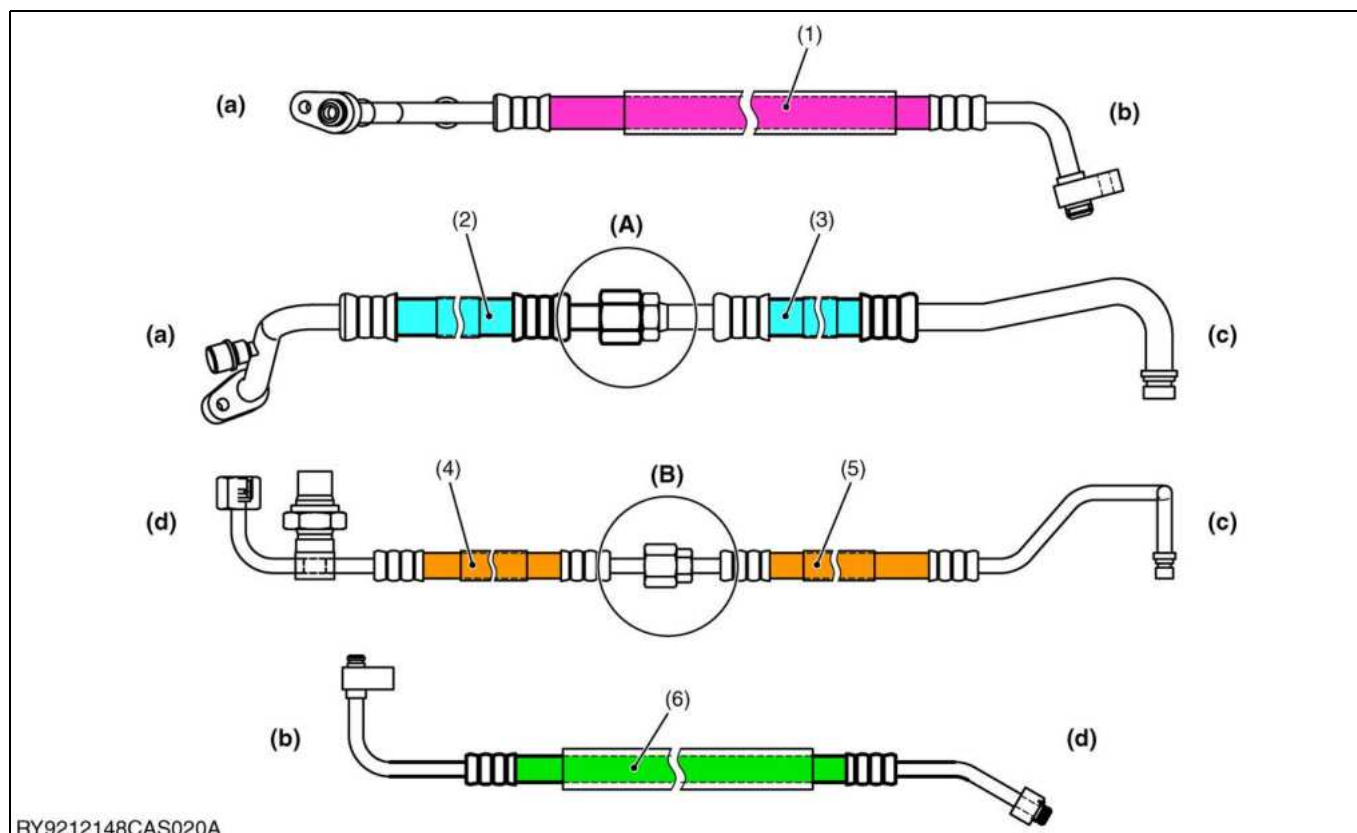

- (1) Discharge hose
(2) Suction hose 2
(3) Suction hose 1

- (4) Liquid hose P2
(5) Liquid hose P1
(6) Liquid hose

- (a) Compressor side
(b) Condenser side
(c) AC unit side
(d) Receiver side


- (A) M24X1.5 connection
(B) M16X1.5 connection

Tightening torque	Discharge hose (1) (M6 bolt)	7.9 to 11.8 N·m 0.8 to 1.2 kgf·m 5.8 to 8.7 lbf·ft
	Suction hose (2), (3) (M24X1.5)	29.4 to 34.3 N·m 3.0 to 3.5 kgf·m 21.7 to 25.3 lbf·ft
	Liquid hose (4), (5) (M16X1.5)	11.8 to 14.7 N·m 1.2 to 1.5 kgf·m 8.7 to 10.8 lbf·ft
	Liquid hose (6) (Condenser side M6 bolt)	7.9 to 11.8 N·m 0.8 to 1.2 kgf·m 5.8 to 8.7 lbf·ft
	Liquid hose (6) (Receiver side M6 bolt)	3.9 to 6.9 N·m 0.4 to 0.7 kgf·m 2.9 to 5.1 lbf·ft

CAUTION

- Always collect the refrigerant before disconnecting any hoses and promptly seal the AC system so no moisture or water gets into it.
- Disconnect the negative battery terminal before disconnecting any connectors.
- Be careful not to mix up the high and low-pressure hoses or the charge/discharge hoses.
- Apply compressor oil (ND-OIL8) to pipes with O-rings and push the tip in to the ridged surface.
- Install so pipes and hoses are not twisted.
- Use two wrenches on aluminum pipe nuts and fasten to keep the companion nut from turning. (The material of the companion nut is softer, so be careful when tightening it.)

RY9212158CAS0006US0

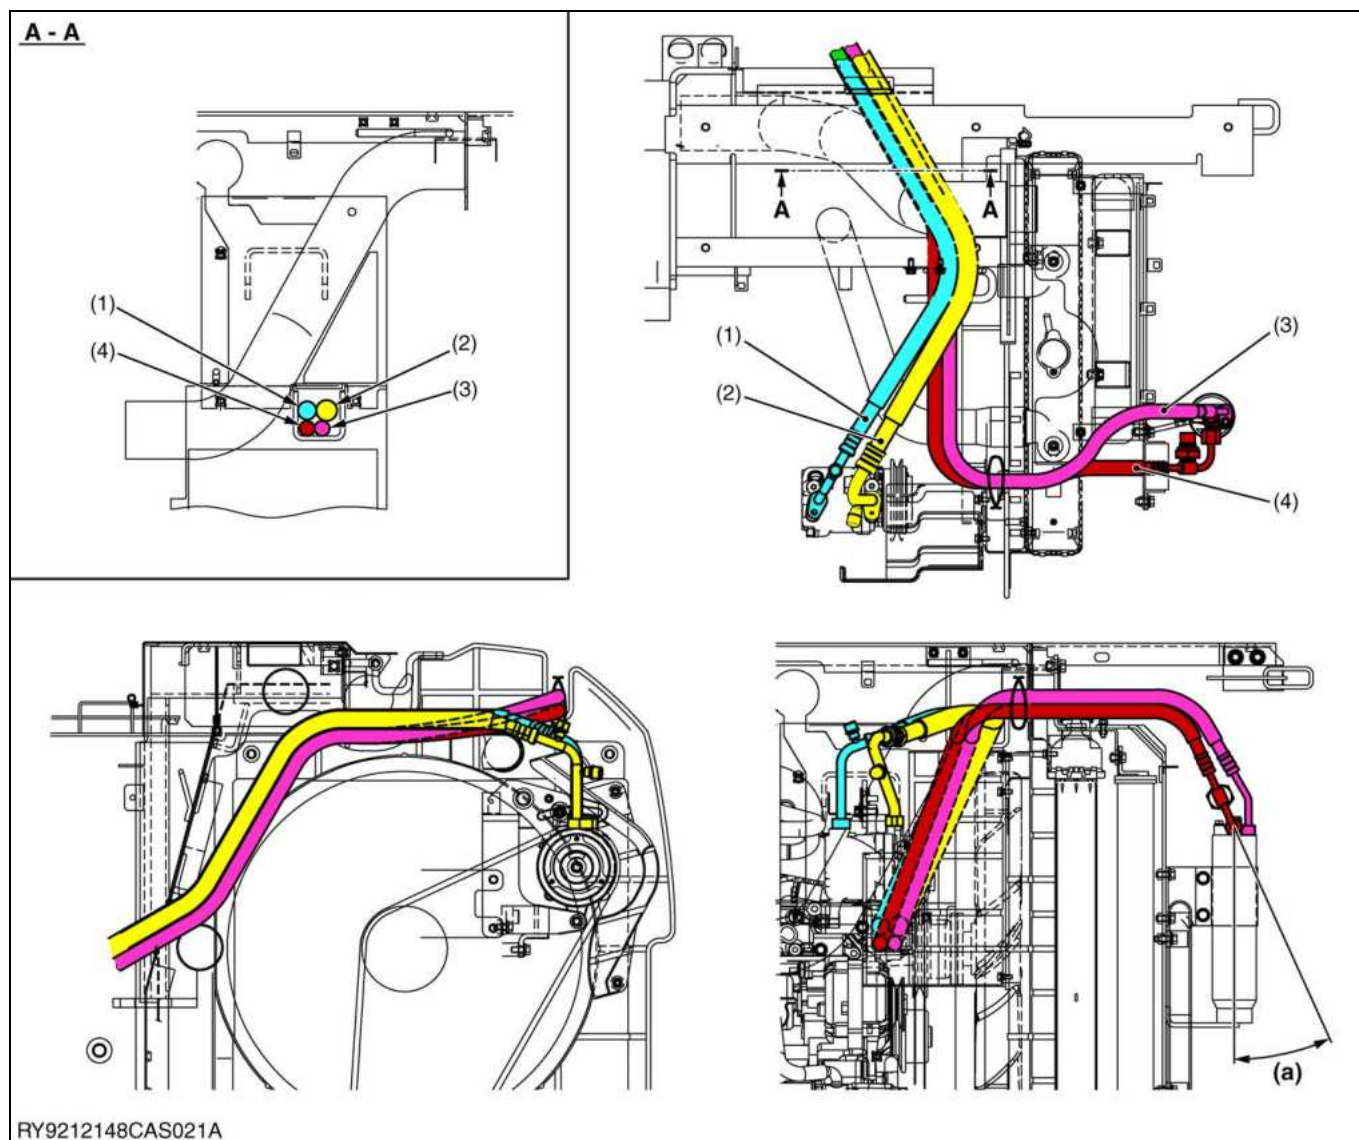[B] Hose Routing


(1) Discharge hose
(2) Suction hose 2

(3) Liquid hose
(4) Liquid hose P2

(a) 25° (0.44 rad)

RY9212158CAS0007US0

(4) Electric Condenser/Fan Mounting and Removal

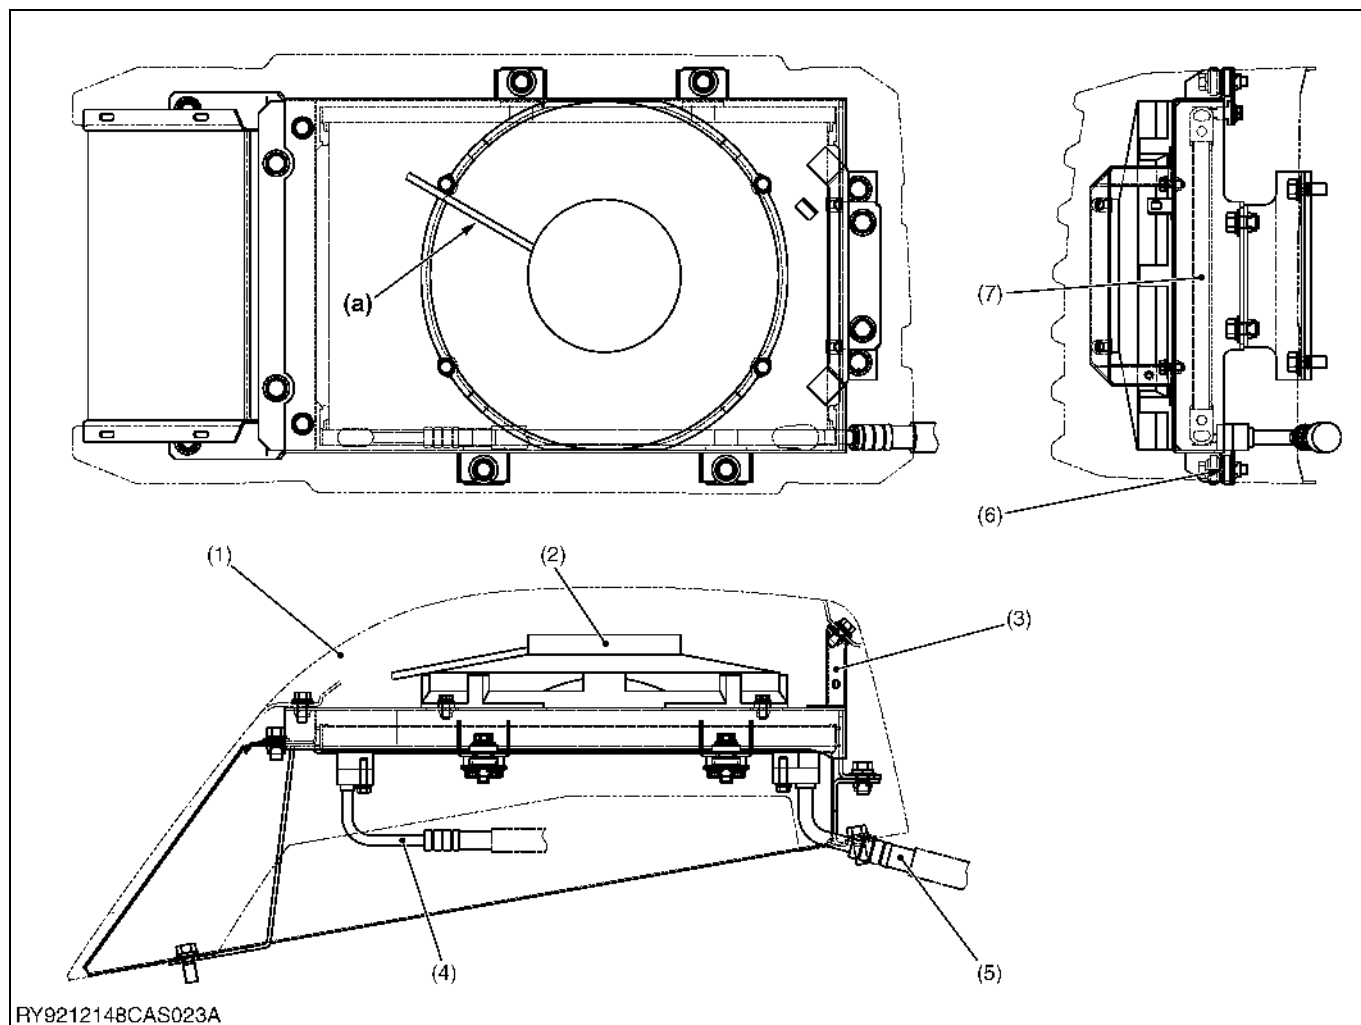


- (1) Condenser cover
- (2) Electric fan
- (3) Condenser base

- (4) Liquid hose
- (5) Discharge hose

- (6) Cushion
- (7) Condenser

(a) Electrical wiring

RY9212158CAS0008US0

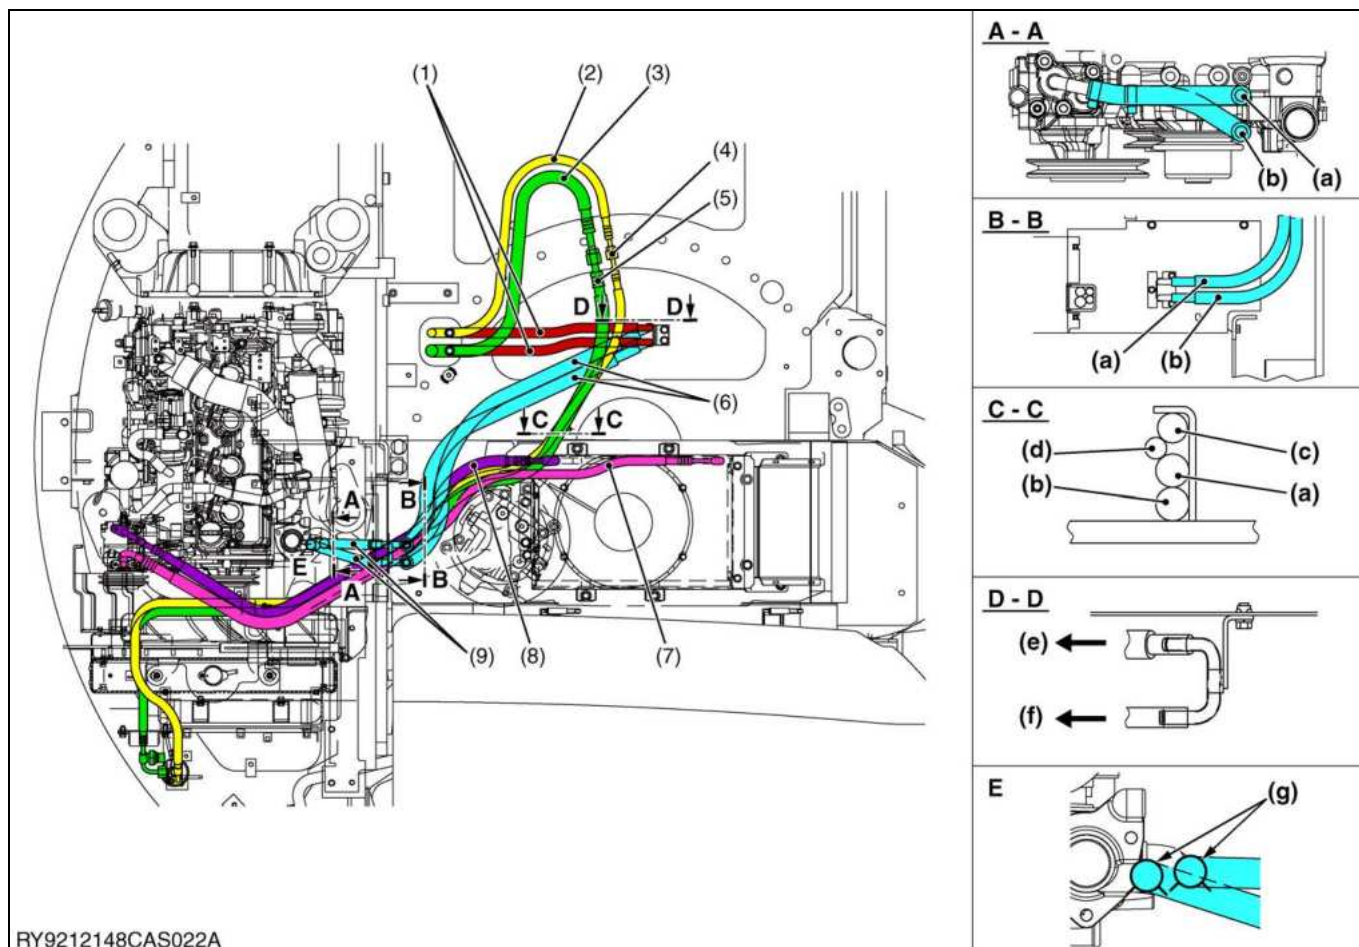

- (1) Heater hose 3
- (2) Liquid hose P1
- (3) Suction hose 1
- (4) Liquid hose P2
- (5) Suction hose 2

- (6) Heater hose 2
- (7) Liquid hose
- (8) Discharge hose
- (9) Heater hose 1




- (a) Engine side discharge
- (b) Engine side return
- (c) AC unit return
- (d) AC unit supply

- (e) To engine side
- (f) To AC unit side
- (g) Take care to face clamps correctly.

RY9212158CAS0009US0

7. WINDOW WASHER

[1] WIPER SWITCH

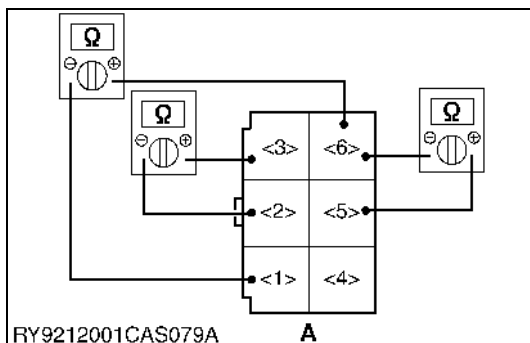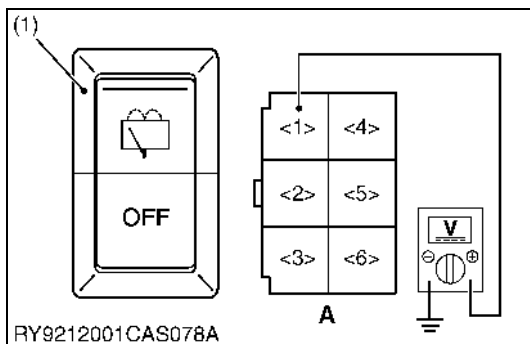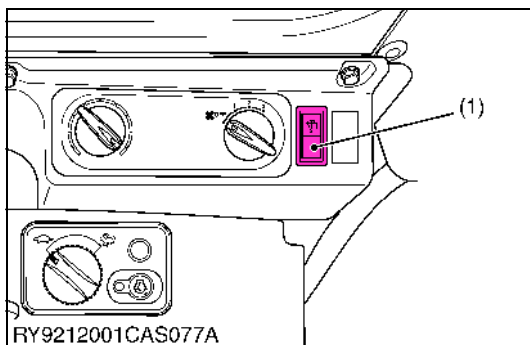

Connector voltage

1. Remove the 6P connector from the wiper switch.
2. Switch the starter switch to [RUN] and the wiper switch to ON.
3. Measure the voltage between terminal 1 of the connector on the harness side and ground on the body.
4. If is the same as the battery voltage (DC 11 to 14 V), it is normal.

(1) Wiper Switch

A : 6P Connector (Harness Side)

RY9212001CAS0071US0

Checking the wiper switch

1. Check the continuity between each of the terminals according to the table below.
2. If continuity exists, it is normal.


Position	<3>	<2>	<1>	<6>	<5>
WASH1	●	●		●	●
ON			●	●	
OFF				●	●
WASH2	●	●	●	●	

RY9212032CAS012A

A : 6P Connector (Switch Side)

RY9212001CAS0072US0

[2] WIPER MOTOR

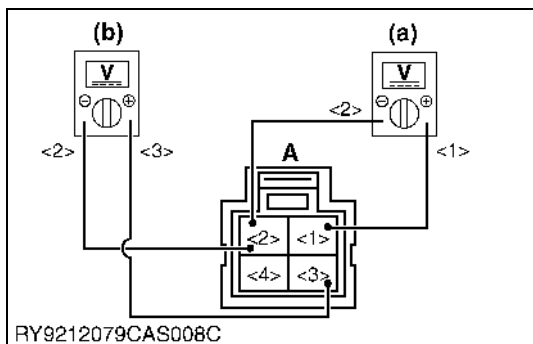

RY9212079CAS008C

Checking the Voltage

1. Remove the wiper motor connector.
2. Start the engine and turn the wiper switch ON.

Measure the voltage based on the table below.

Measurement Points	Connector Name (+terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(a)	Wiper motor connector	<1>	Wiper motor connector	<2>
(b)	Wiper motor connector	<3>	Wiper motor connector	<2>

Regular: 12 V


Irregular: Large discrepancy from 12 V

(1) Wiper Motor

A : Wiper Motor Connector

RY9212148CAS0019US0

[3] WASHER MOTOR

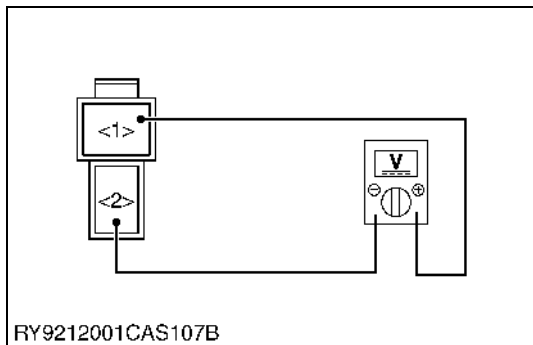

RY9212001CAS107B

Checking the Voltage

1. Remove the washer motor connector.
2. Start the engine and turn the wiper switch ON.

Measure the voltage based on the table below.

Measurement Points	Connector Name (+terminal side)	Pin No.	Connector Name (- terminal side)	Pin No.
(a)	Washer motor connector	<2>	Washer motor connector	<1>

Regular: 12 V

Irregular: Large discrepancy from 12 V


(1) Washer Tank

(2) Washer Motor Connector

RY9212148CAS0020US0


8. CABIN GLASS REMOVAL AND MOUNTING

[1] COMPONENT SCHEMATIC

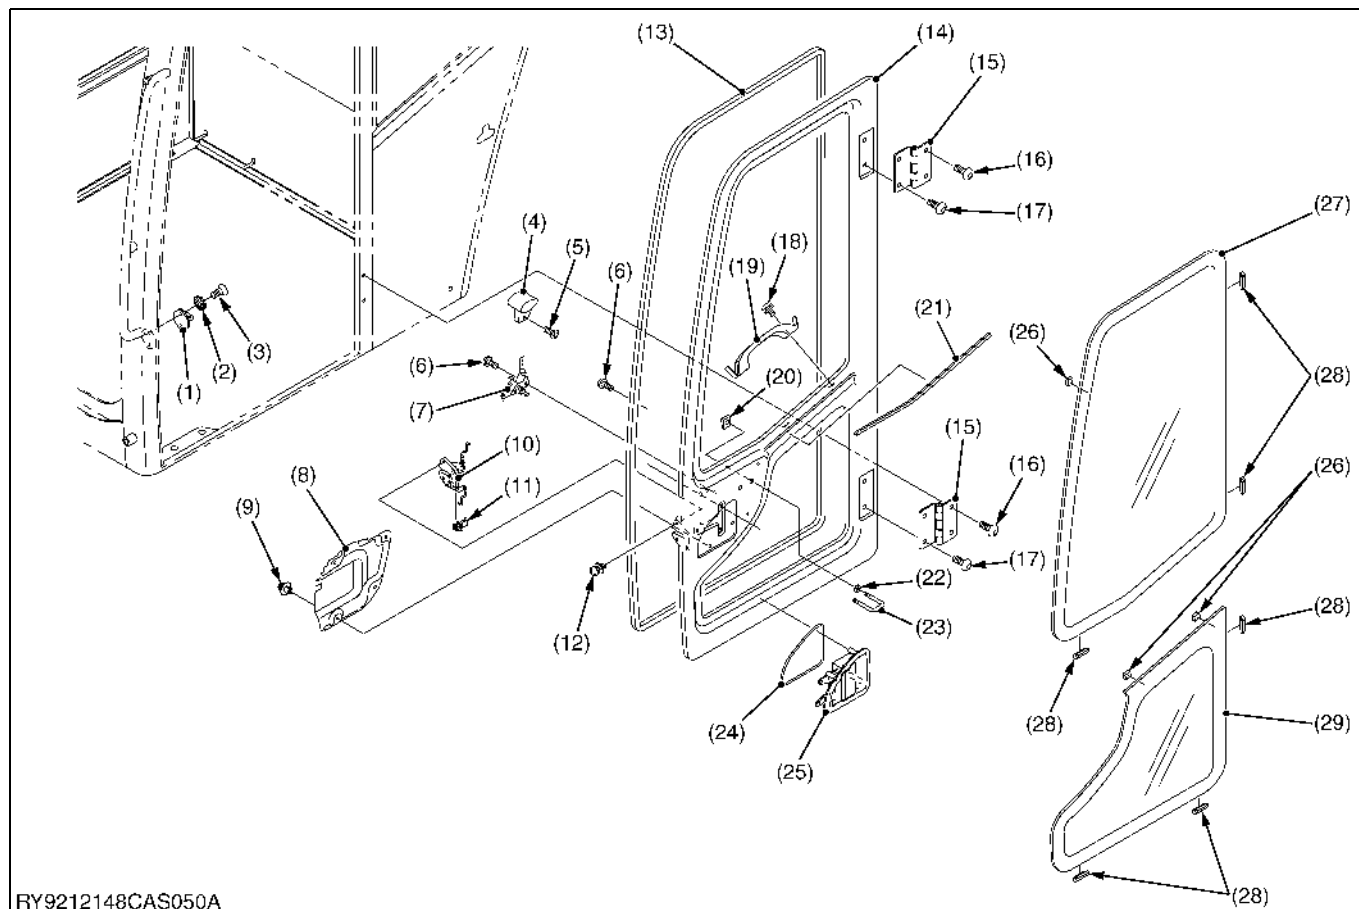

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Striker (door)	1	(16)	Bolt	4
(2)	Toothed washer	2	(17)	Bolt	4
(3)	Screw	2	(18)	Screw	2
(4)	Knob	1	(19)	Handle	1
(5)	Screw	2	(20)	Spring nut	2
(6)	Bolt	5	(21)	Seal	1
(7)	Handle ASSY (inner)	1	(22)	Washer	2
(8)	Cover	1	(23)	U bolt	1
(9)	Fastener	4	(24)	Seal	1
(10)	Door lock ASSY	1	(25)	Handle ASSY (Outer)	1
(11)	Joint	1	(26)	Spacer	3
(12)	Screw	3	(27)	Upper glass	1
(13)	Trim	1	(28)	Spacer	6
(14)	Doors	1	(29)	Lower glass	1
(15)	Hinge	2			


RY9212148CAS0076US0

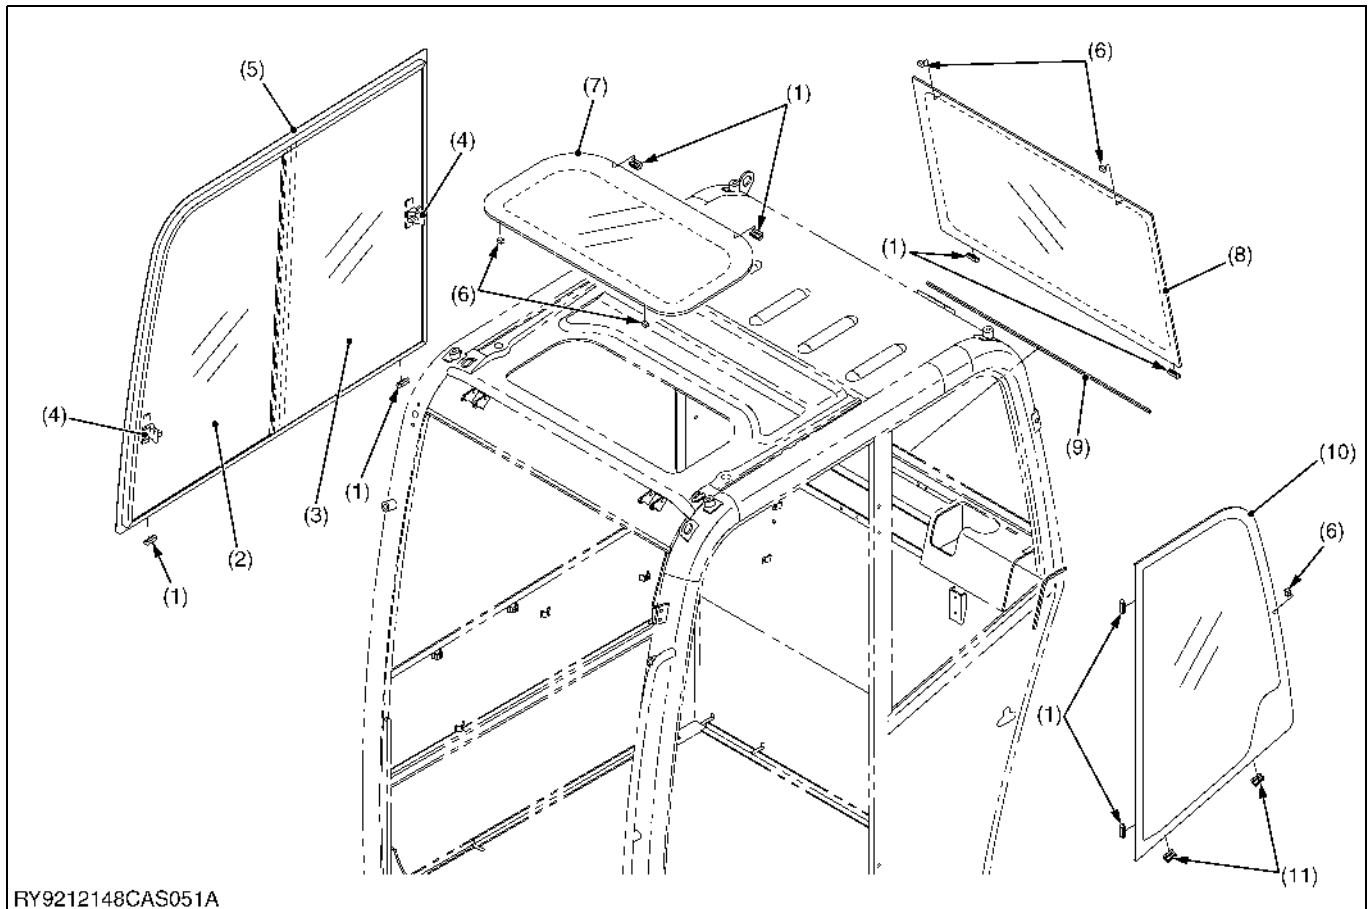

RY9212148CAS051A


No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Spacer	8	(7)	Roof	1
(2)	Front glass	1	(8)	Glass	1
(3)	Rear glass	1	(9)	Cushion	1
(4)	Hook	2	(10)	Glass	1
(5)	Sash	1	(11)	Spacer	2
(6)	Spacer	5			

RY9212148CAS0077US0

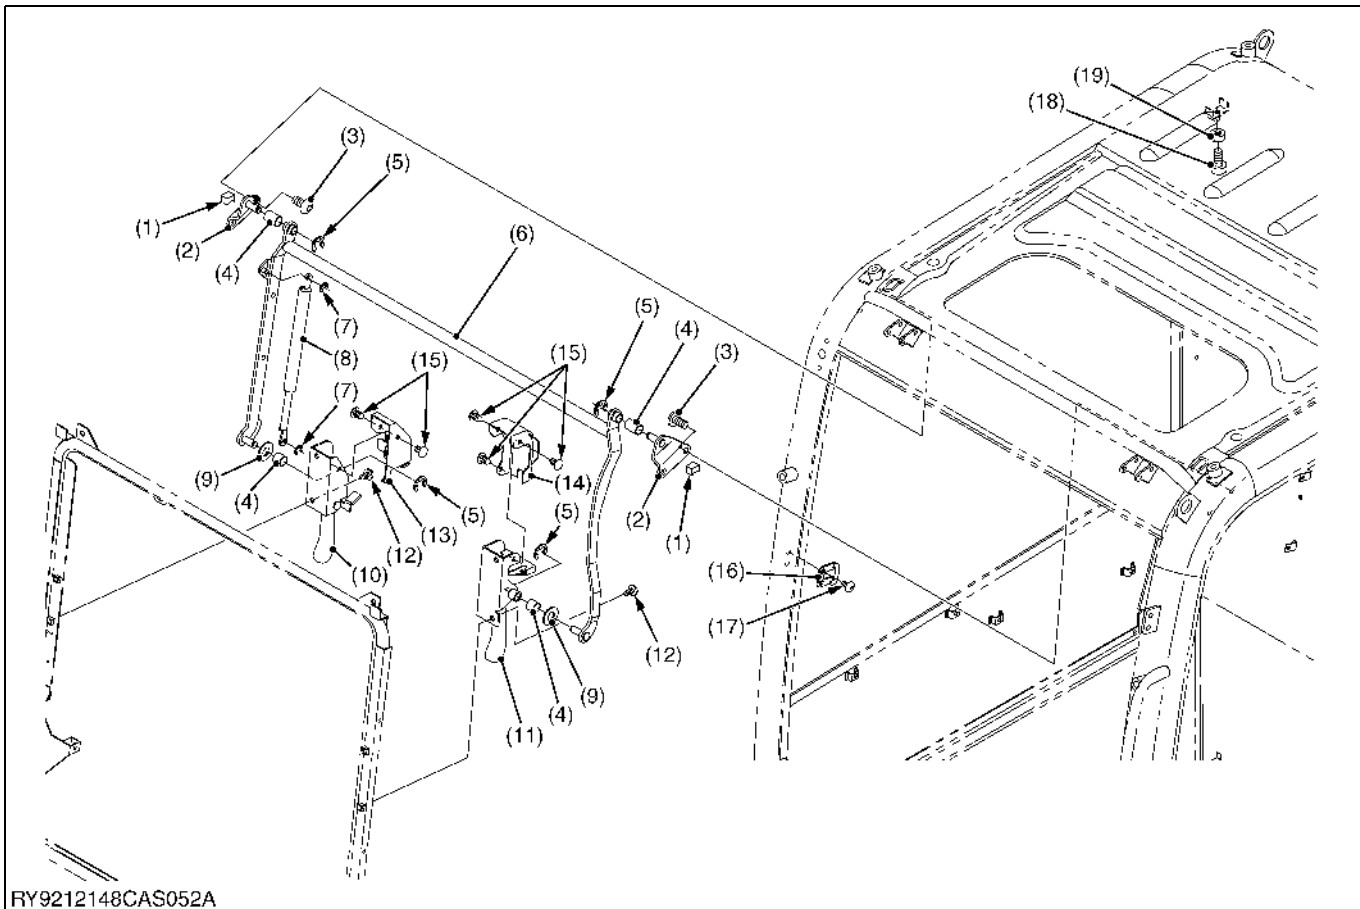

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Stopper	2	(11)	Lever	1
(2)	Linkage	2	(12)	Bolt	4
(3)	Bolt	4	(13)	Cover	1
(4)	Bushing	4	(14)	Cover	2
(5)	Snap ring	4	(15)	Clip	5
(6)	Linkage	1	(16)	Striker	1
(7)	Snap ring	2	(17)	Bolt	4
(8)	Damper	1	(18)	Stopper (rubber)	2
(9)	Washer	2	(19)	Nut	2
(10)	Lever	1			


RY9212148CAS0078US0

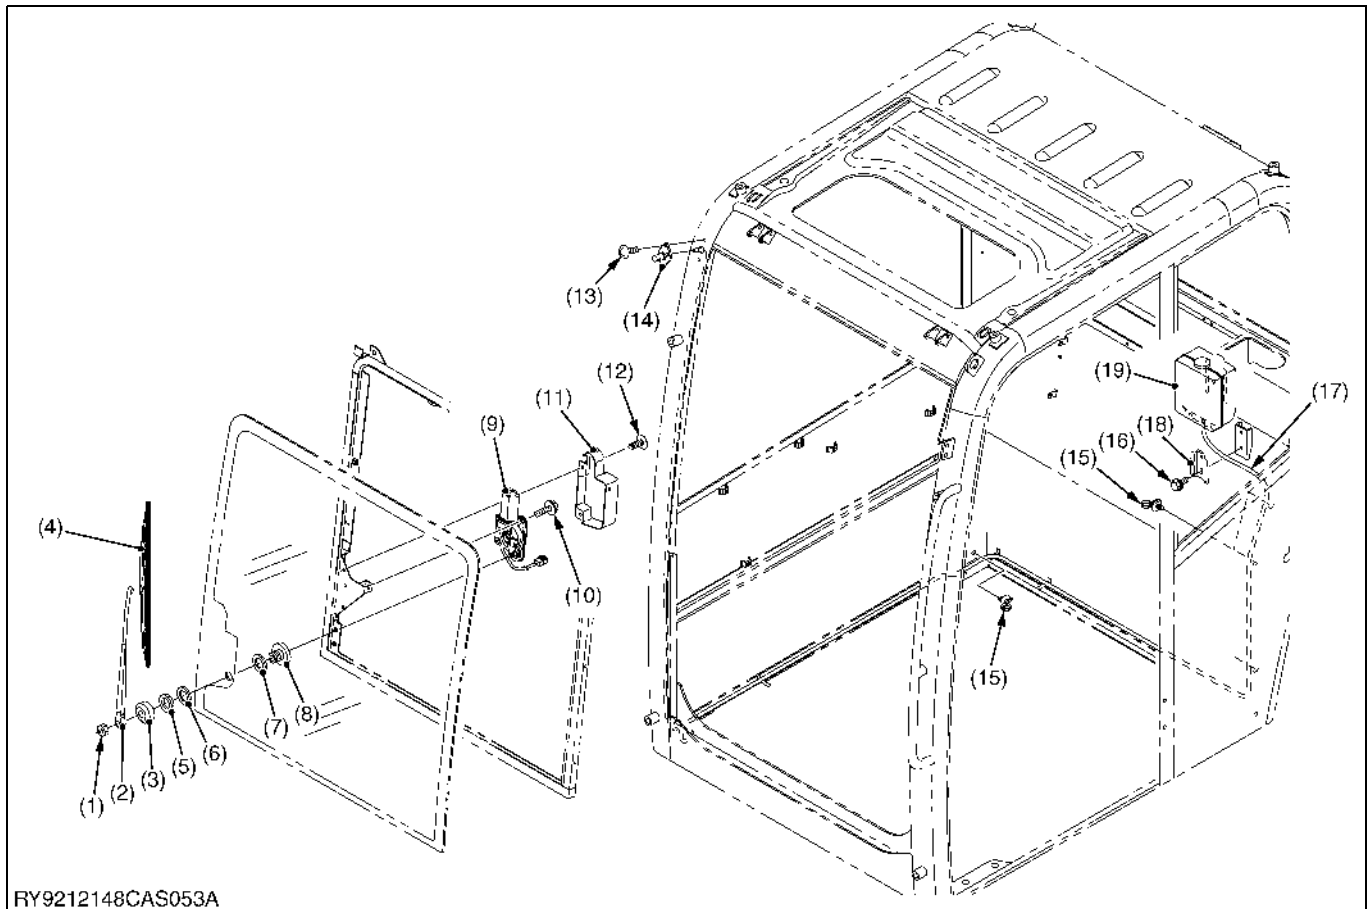

RY9212148CAS053A

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Nut	1	(11)	Cover	1
(2)	Arm (wiper)	1	(12)	Clip	3
(3)	Cap	1	(13)	Screw	2
(4)	Blade (wiper)	1	(14)	Nozzle	1
(5)	Nut	1	(15)	Clamp	4
(6)	Washer	1	(16)	Bolt	2
(7)	Gasket	1	(17)	Hose	1
(8)	Holder	1	(18)	Flange	1
(9)	Wiper Motor	1	(19)	Washer tank	1
(10)	Bolt	3			

RY9212148CAS0079US0

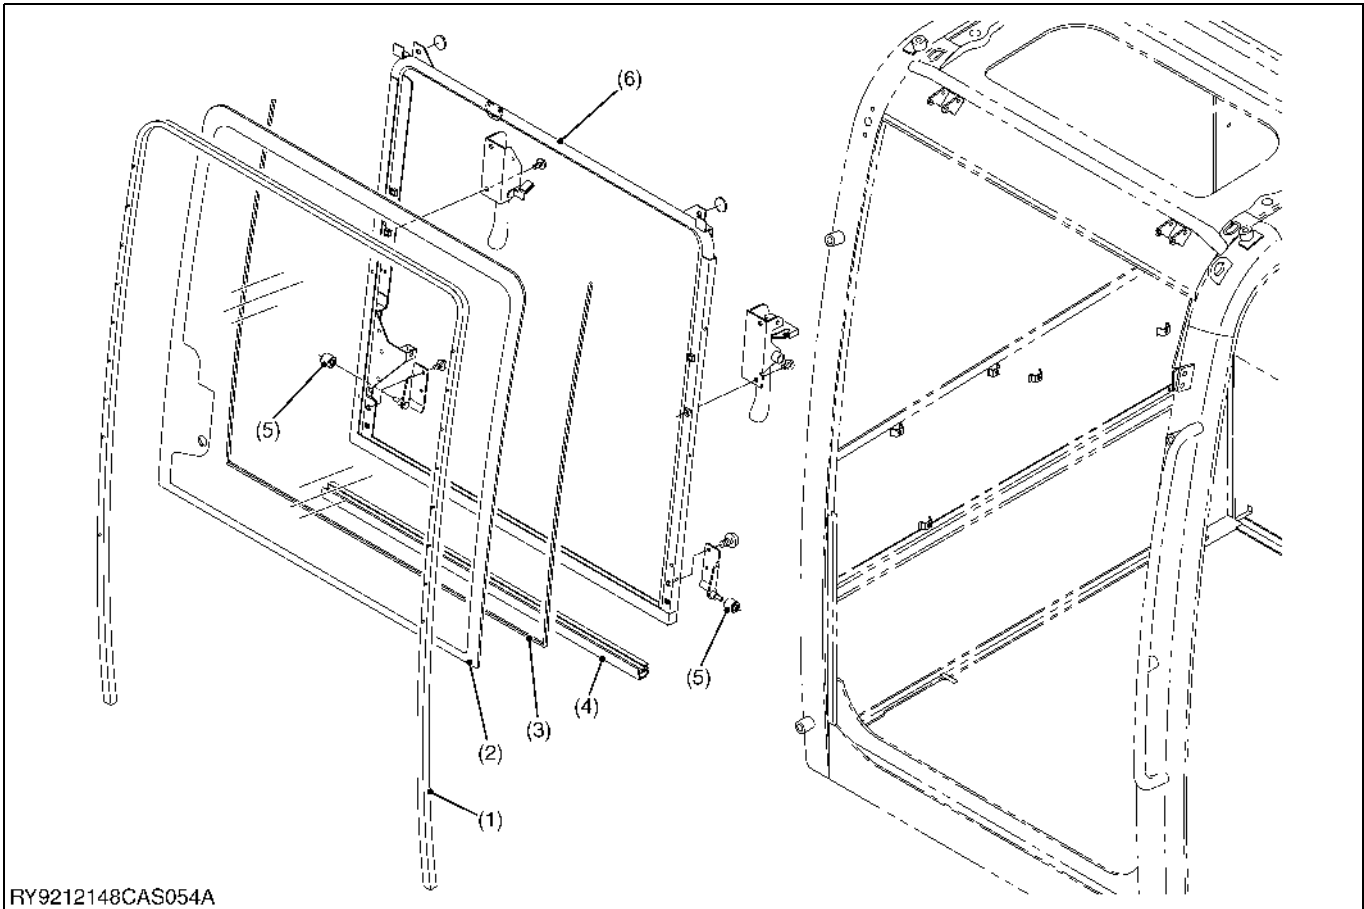

RY9212148CAS054A

No.	Part Name	Q'ty	No.	Part Name	Q'ty
(1)	Spacer	8	(7)	Roof	1
(2)	Front glass	1	(8)	Glass	1
(3)	Rear glass	1	(9)	Cushion	1
(4)	Hook	2	(10)	Glass	1
(5)	Sash	1	(11)	Spacer	2
(6)	Spacer	5			

RY9212148CAS0080US0

[2] NECESSARY TOOLS



RY9212148CAS025A

- (1) Piano Wire

(2) Scraper

(3) Slotted Screwdriver

(4) Needle-Nose Pliers

(5) Utility Knife

(6) Slotted Screwdriver
- (7) Torx (T50)

(8) Wrench (10 mm)

(9) Wrench (27 mm)

(10) Socket (M12),Ratchet

(11) Suction Pads

RY9212148CAS0036US0

[3] REMOVING THE GLASS ON THE RIGHT




1. Protect inside cabin from possible glass debris.

⚠ CAUTION

- Take care not to get hurt from shards of glass.

- (1) Cover

RY9212148CAS0037US0

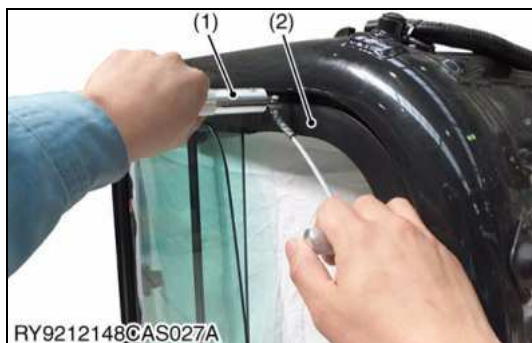

2. Insert the utility knife between the frame of the cabin and the right sash to make an opening to pass the piano wire through.


⚠ CAUTION

- Take care not to cut your hands or fingers on the blade of the utility knife.

- (1) Utility Knife

- (2) Sash

RY9212148CAS0038US0

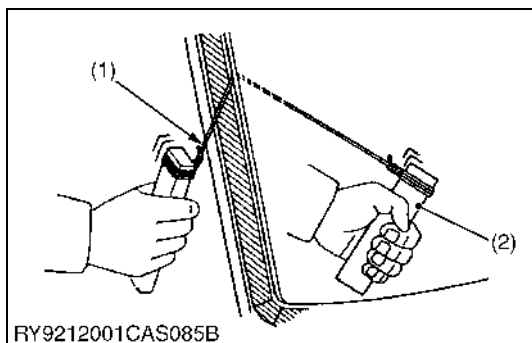

3. Pass the piano wire between the frame of the cabin and the right sash.
4. Wind the ends of piano wire on with wood-block or something like handle, and cut the seal between the frame and glass with moving the piano wire alternately.

⚠ CAUTION

- The piano wire may break due to the heat from the friction, so take care not to cut your hand/fingers.

- (1) Piano Wire

- (2) Wood Block


RY9212148CAS0039US0



5. Remove the right sash from the cabin.

- (1) Seal

RY9212148CAS0040US0

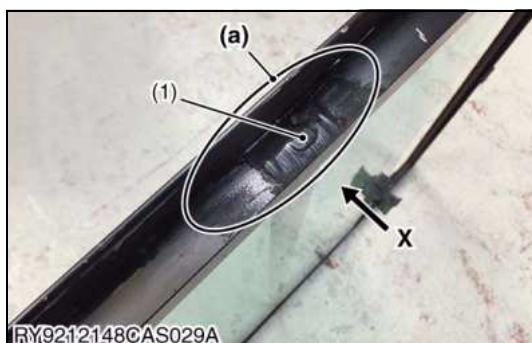

6. A coating was applied to the right sash, so use the scraper to scrape it off. (2 places)
7. Lift up the end of the seal with a slotted screwdriver from the direction of X. (2 places)

- (1) Seal

- (a) Coating

RY9212148CAS0041US0



RY9212148CAS030A

8. Expand the frame of the right sash in direction **A** and remove the glass in direction **B**.

RY9212148CAS0042US0

[4] REMOVING THE FRONT GLASS



RY9212148CAS031A

1. Remove the bolts and then the wiper.
2. Remove the cap.

(1) Nut
(2) Wiper

(3) Cap

RY9212148CAS0043US0



RY9212148CAS032A

3. Remove the nut.

■ IMPORTANT

- Take care not to crack the glass.

(1) Nut

RY9212148CAS0044US0




RY9212148CAS033A

4. Remove the wiper motor harness, the cap and then the cover.

(1) Harness
(2) Cap

(3) Cover

RY9212148CAS0045US0

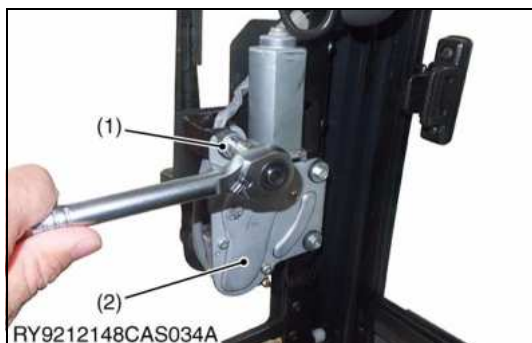


RY9212148CAS034A

5. Remove the three bolts and the wiper motor.

(1) 3 × Bolt (M6 × 25)

(2) Wiper Motor

RY9212148CAS0046US0

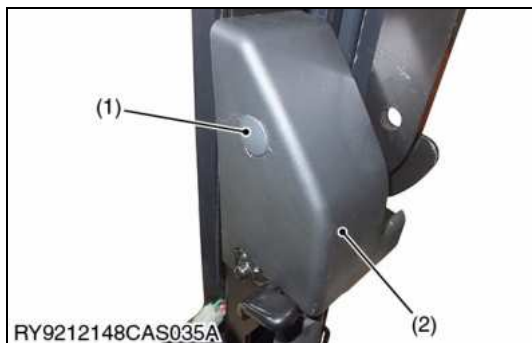

6. Remove the cap and the cover. (LH/RH 2 places each)

- (1) Cap (2) Cover

RY9212148CAS0047US0



7. With the front glass closed, remove the 4 bolts. (LH/RH 2 places each)

- (1) 4 × Bolt (M6 × 10)

RY9212148CAS0048US0



8. Remove the front frame.

■ IMPORTANT

- Take care not to crack the glass.
- Take care not to lose the roller.

- (1) Front Frame (2) Roller

RY9212148CAS0049US0



9. Insert the utility knife between the front frame and the glass to make an opening to pass the piano wire through.




CAUTION

- Take care not to cut your hands or fingers on the blade of the utility knife.
- Take care not to get hurt from shards of glass.

- (1) Utility Knife

RY9212148CAS0050US0

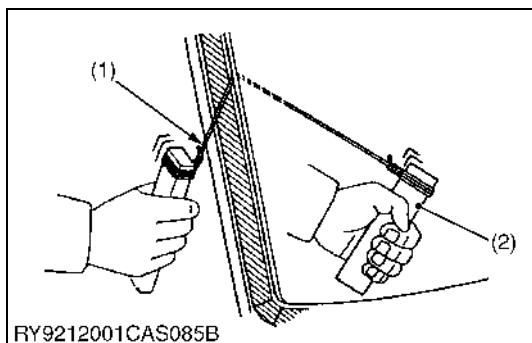

10. Pass the piano wire between the front frame and the glass.

11. Wrap both ends of the piano wire around blocks of wood or the like and move them back and forth.




CAUTION

- The piano wire may break due to the heat from the friction, so take care not to cut your hand/fingers.

- (1) Piano Wire (2) Wood Block

RY9212148CAS0051US0

[5] REMOVING OTHER PANES OF GLASS

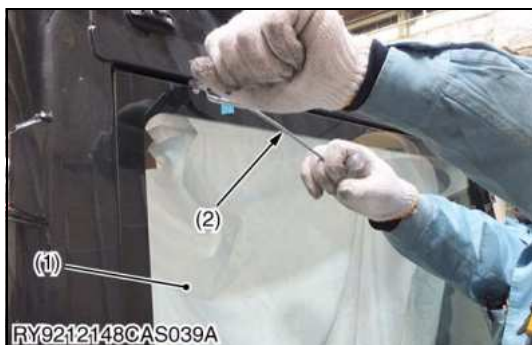

1. Protect inside cabin from possible glass debris.
2. Insert the utility knife between the cabin frame and the glass to make an opening to pass the piano wire through.




CAUTION

- Take care not to cut your hands or fingers on the blade of the utility knife.
- Take care not to get hurt from shards of glass.

(1) Cover

(2) Utility Knife

RY9212148CAS0052US0

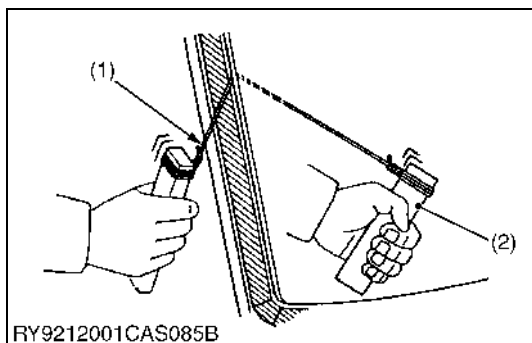

3. Pass the piano wire between the cabin frame and the glass.
4. Wind the ends of piano wire on with wood-block or something like handle, and cut the seal between the frame and glass with moving the piano wire alternately.



CAUTION

- The piano wire may break due to the heat from the friction, so take care not to cut your hand/fingers.

(1) Piano Wire

(2) Wood Block

RY9212148CAS0053US0

[6] INSTALLING THE GLASS ON THE RIGHT



1. Remove any adhesive remaining on the cabin frame.



CAUTION

- Take care not to cut your hands or fingers on the blade of the scraper.

RY9212148CAS0054US0



2. Use the cleaning agent to remove any grime or oil remaining on the cabin frame.
3. Apply primer and allow to dry for the indicated time.
 - Cleaning agent (Sika Aktivator-205)
 - Primer (Sika Primer-206 G + P)



CAUTION

- Take care not to get the cleaner or the primer in your eyes.


Ambient temperature	15°C or higher	10 minutes
	Below 15°C	30 minutes


(1) Cabin frame

(2) Primer

(a) No less than 20 mm (0.79 in.)

RY9212148CAS0055US0

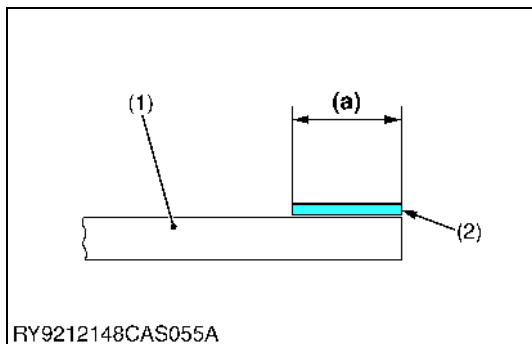


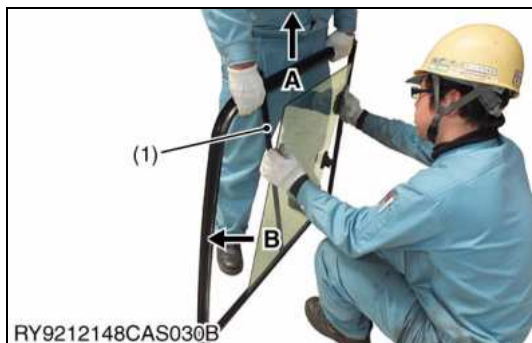

4. Expand the sash in direction **A** and install the 1st pane of glass in direction **B**, then the seal and then the 2nd pane of glass.

(1) Seal

RY9212148CAS0056US0

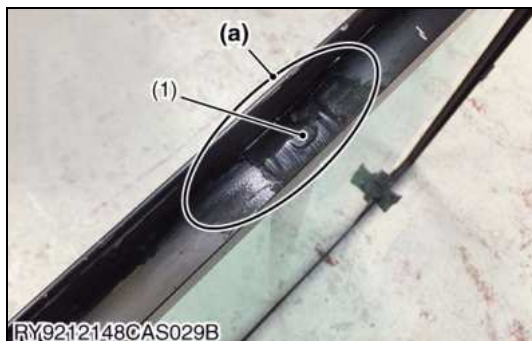

5. Put the end of the seal back in place with a slotted screwdriver. (2 places)

6. Apply the coating.


■ **IMPORTANT**

- **Apply the coating so there are no gaps and water cannot leak.**

(1) Seal

(a) Coating (Sikaflex - 265)

RY9212148CAS0057US0

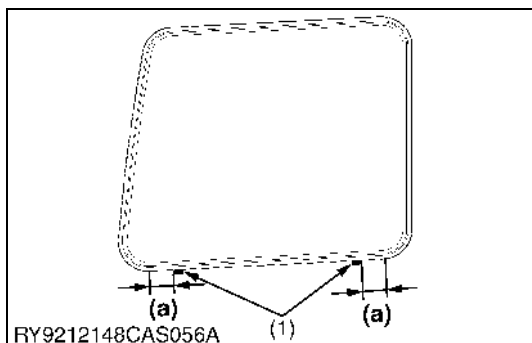

7. Stick the new spacers at the set locations.

(1) Spacer

(a) 100 mm (3.9 in.)

RY9212148CAS0058US0



8. Apply the adhesive around the entire cabin frame.


(1) Adhesive (Sikaflex - 265)

(a) No less than 10 mm (0.39 in.)

(2) Nozzle

(b) No less than 12 mm (0.47 in.)

RY9212148CAS0059US0

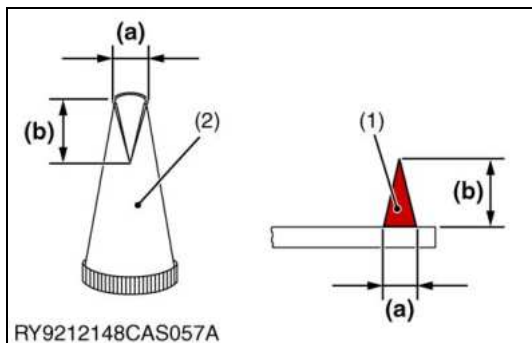




9. Use suction pads to install the sash.
10. Use tape or the like to hold it in place until the adhesive hardens.

■ IMPORTANT

- Take care not to drop the glass.
- After installation, leave to cure for at least 24 hours.

RY9212148CAS0060US0

[7] INSTALLING THE FRONT GLASS

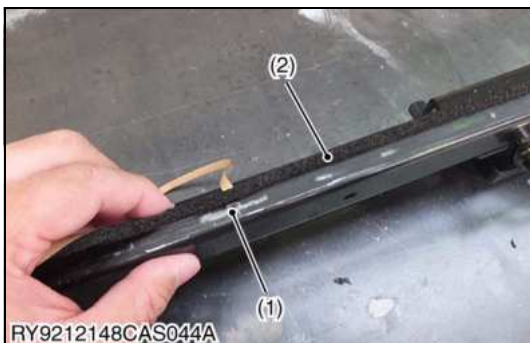

1. Use the scraper and the cleaning agent to remove any remaining adhesive, grime or oil on the front frame and then apply the trim to the frame.



CAUTION

- Take care not to cut your hands or fingers on the blade of the scraper.
- Take care not to get the cleaner or the primer in your eyes.

(1) Front Frame

(2) Trim

RY9212148CAS0061US0




2. Apply primer and allow to dry for the indicated time.

Ambient temperature	15°C or higher	10 minutes
	Below 15°C	30 minutes

(a) No less than 12 mm (0.47 in.)

RY9212148CAS0062US0

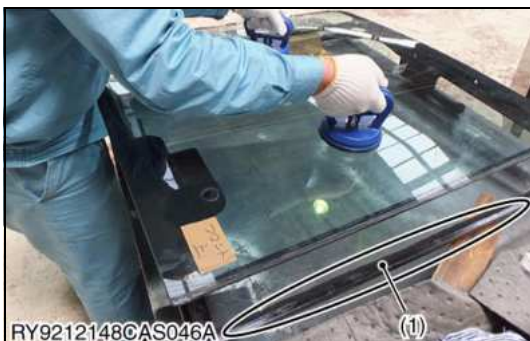

3. Apply the adhesive only to the bottom of the front frame (round frame).
4. Use suction pads to mount the front glass to the frame.

■ IMPORTANT

- Take care not to drop the glass.

(1) Adhesive (Sikaflex - 265)


(a) No less than 8 mm (0.31 in.)

(2) Nozzle

(b) No less than 12 mm (0.47 in.)

(3) Trim

RY9212148CAS0063US0

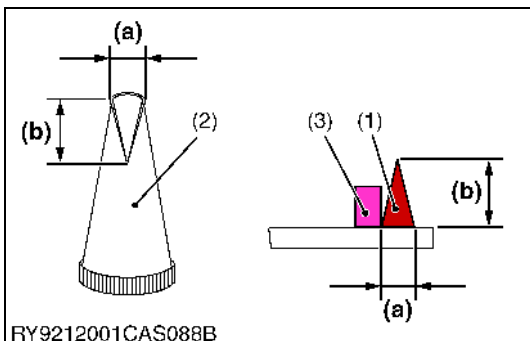



5. Inject adhesive into the gap between the front glass and the frame.

■ **IMPORTANT**

- Take care so the adhesive does not stick out.

RY9212148CAS0064US0



6. Put a weight on the glass to the adhesive hardens.

■ **IMPORTANT**

- Take care not to crack the glass.

RY9212148CAS0065US0



7. Install the front frame.

■ **IMPORTANT**

- Take care not to crack the glass.
- Apply grease to the roller to prevent them to come lose. (LH/RH 2 places each)



CAUTION

- Take care not to get your fingers caught between the glass and the frame.

(1) Roller

(2) Front Frame

RY9212148CAS0066US0




8. With the front glass closed, install the 4 bolts. (LH/RH 2 places each)

Tightening torque	Bolt (1)	9.0 to 15.0 N·m 0.92 to 1.53 kgf·m 6.64 to 11.10 lbf·ft

(1) 4 × Bolt (M6 × 12)

RY9212148CAS0067US0

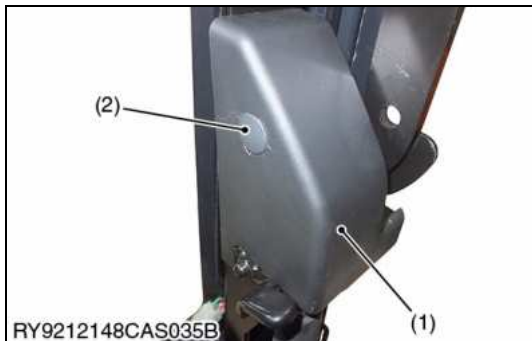


9. Install the cover and the cap. (LH/RH 2 places each)

(1) Cover

(2) Cap

RY9212148CAS0068US0

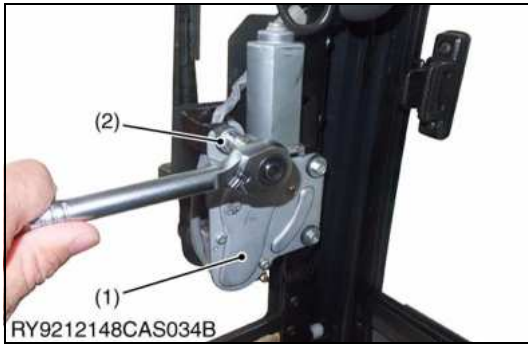


10. Install the wiper motor.

Tightening torque	Bolt (2)	3.5 to 6.5 N·m 0.36 to 0.66 kgf·m 2.58 to 4.79 lbf·ft

(1) Wiper Motor

(2) 3 × Bolt (M6 × 25)

RY9212148CAS0069US0

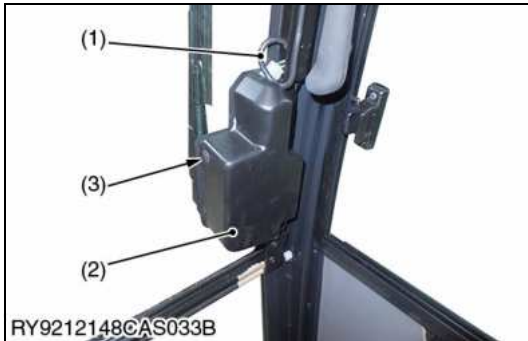

11. Install the wiper motor harness, cover and cap.

(1) Harness

(3) Cap

(2) Cover

RY9212148CAS0070US0



12. Install the nut.


■ IMPORTANT

- Take care not to crack the glass.

Tightening torque	Nut (1)	2.5 to 3.5 N·m 0.26 to 0.36 kgf·m 1.84 to 2.58 lbf·ft

(1) Nut

RY9212148CAS0071US0

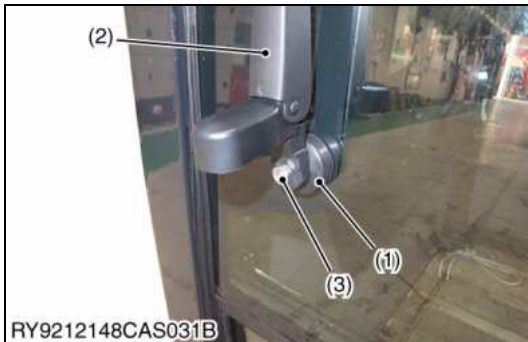

13. Install the cap, wiper and nuts.

Tightening torque	Nut (3)	6.5 to 9.5 N·m 0.66 to 0.97 kgf·m 4.79 to 7.01 lbf·ft


(1) Cap

(3) Nut

(2) Wiper

RY9212148CAS0072US0

[8] INSTALLING OTHER PANES OF GLASS

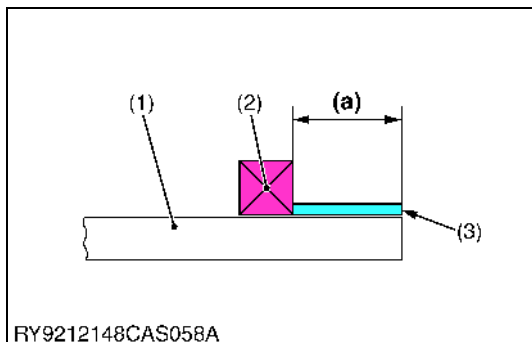


1. Use the scraper and the cleaning agent to remove any remaining adhesive, grime or oil on the frame and then apply the trim to the frame.
2. Apply primer and allow to dry for the indicated time.

Ambient temperature	15°C or higher	10 minutes
	Below 15°C	30 minutes

- (1) Cabin Frame
(2) Trim
(3) Primer

(a) No less than 18 mm (0.71 in.)

RY9212148CAS0073US0

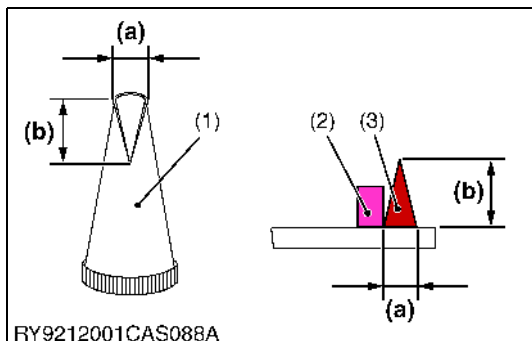

3. Apply the adhesive.

- (1) Nozzle
(2) Trim
(3) Adhesive (Sikaflex - 265)

(a) No less than 7 mm (0.31 in.)

(b) No less than 12 mm (0.47 in.)

RY9212148CAS0074US0



Check for Water Leaks

1. After mounting the glass, sprinkle water to test the seal.


■ IMPORTANT

- Make sure there are no water leaks.

RY9212148CAS0075US0

9. REMOVAL AND INSTALLATION OF GLASS

[1] PREPARATION

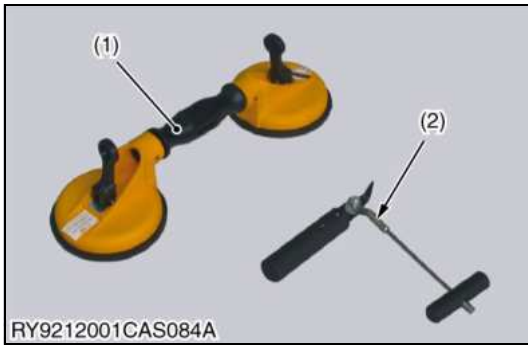

Items required

- Cleaner : Equivalent of Seeker Cleaner 205
- Adhesive : Equivalent of Seeker Flex 250PC-JM
- Primer : Equivalent of Seeker Primer 206
- Scraper
- Awl
- Adhesive cutter
- Glass suction cups (use if needed)

NOTE

- The cleaner and adhesive have a short shelf-life (9 to 12 months), so obtain them immediately before use from a nearby manufacturer or a shop that handles auto glass products.

(1) Glass Suction Cups

(2) Adhesive Cutter


RY9212001CAS0085US0

[2] REMOVING GLASS

CAUTION

- The section on removing and installing glass was created as a general explanation of the work method and it may differ from the removal/installation methods for glass installed on the machine covered by this workshop manual. Further, there is no guarantee on the glass or parts used around the glass.

RY9212158CAS0010US0

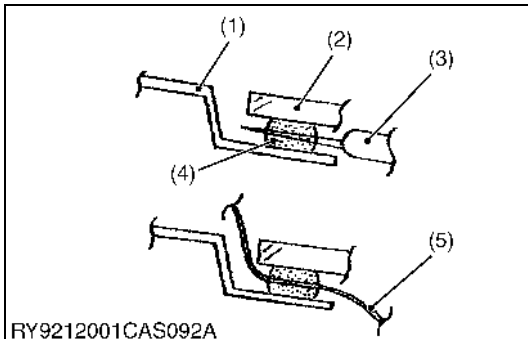

1. Mask off painted surface around the glass to protect them from scratching while removing/installing glass.
2. Remove the glass.

[When using piano wire (damages parts of the glass)]


- Pierce and make a hole in the adhesive with an awl (or knife of glass cutter, etc.).
- Pass the piano wire (or steel wire) through the hole.
- Wrap both ends of the piano wire around a wood block or the like.
- Pull the piano wire along the edge of the window, sawing through the adhesive between the cab and the glass; then remove the glass from the cab.

[When using an adhesive cutter (completely ruins the glass)]

- Insert the adhesive cutter into the adhesive.
- Pull on part (a) of the cutter and cut the glass out.

CAUTION


- If the piano wire gets very hot in one place, it may break. Avoid rubbing it with much force against the edge of the glass.
- Be careful not to cut yourself on fragments of glass or the blade of the cutter.

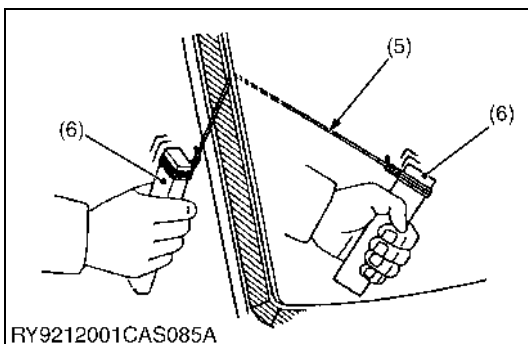


- (1) Cab Frame
(2) Glass
(3) Awl
(4) Adhesive

- (5) Piano Wire
(6) Wood
(7) Adhesive Cutter

RY9212001CAS0086US0

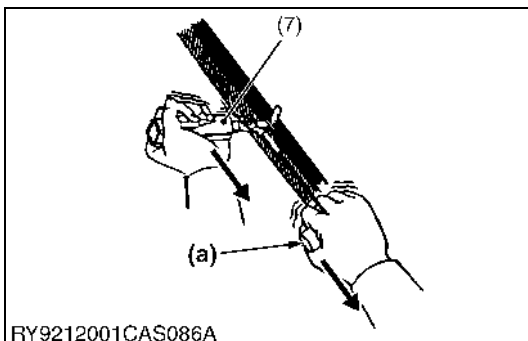

[3] INSTALLING GLASS

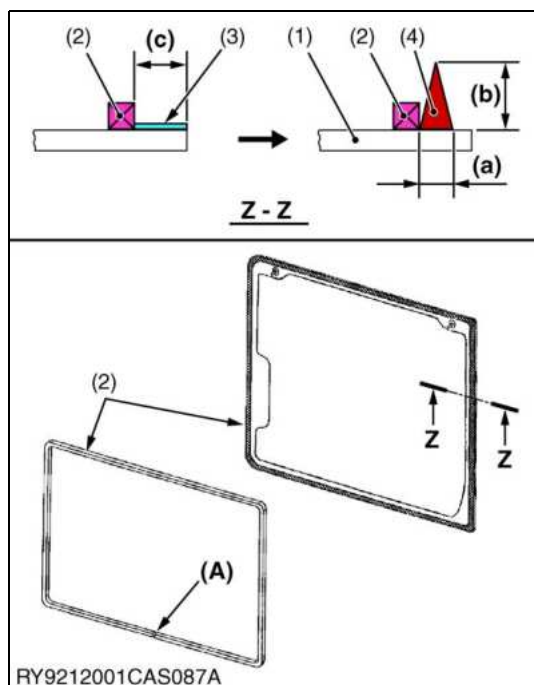

1. Completely eliminate all old adhesive on the frame of the cab.
2. Use the cleaner to clean the cab frame and the surface of the new glass where adhesive will be applied to get rid of any dirt or oil.
3. Affix the windshield dam to the surface of the new glass where the adhesive will be applied.
4. Apply primer uniformly around the circumference of the windshield dam.
5. Apply adhesive uniformly along the outer circumference of the windshield dam.
6. Apply primer uniformly around the entire circumference of the flange of the cab frame. (Application width: 18 mm (0.71 in.) or more)
7. Make and install a spacer for in between the edge of the glass and the cab's frame so that the glass does not slide down during installation. (holds position and prevents slipping)
8. Press lightly all the way around the edge of the glass from the outside, so the glass touches the shield dam and they stick together.
9. Hold the glass in place with packing tape until the adhesive hardens so the glass does not shift or come off.



(1) Glass	(a) At Least 7 mm (0.28 in.)
(2) Windshield Dam (W/Adhesive)	(b) At Least 12 mm (0.47 in.)
(3) Primer (Apply)	(c) 12 mm (0.47 in.)
(4) Adhesive (Apply)	(A) Start Affixing Dam Here

RY9212001CAS0087US0

• For the front window

(1) Glass	(a) At Least 7 mm (0.28 in.)
(2) Windshield Dam (W/Adhesive)	(b) At Least 12 mm (0.47 in.)
(3) Adhesive (Apply)	
(4) Fastener (Affix as Male/Female Set)	(A) Line Up with the Edge of the Frame

RY9212001CAS0088US0

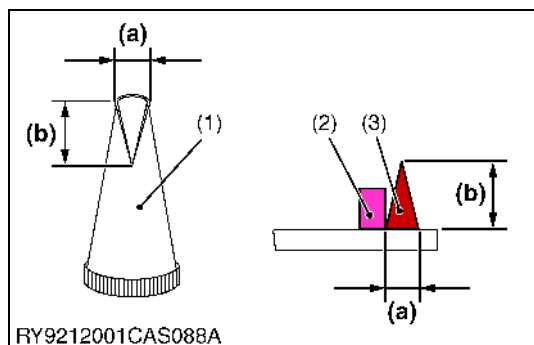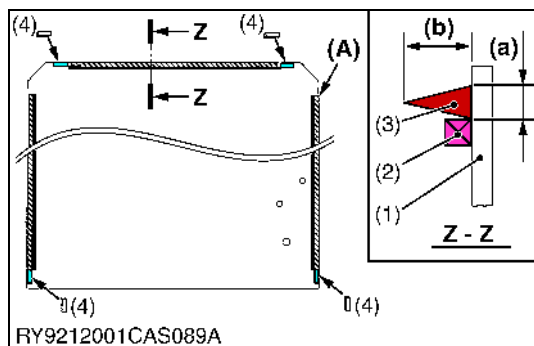

• Recommended shape of triangular bead


■ NOTE

- Cut the tip of the nozzle of the adhesive cartridge in the shape of a V.
- Apply the adhesive to the glass so it forms a uniform triangular bead.

(1) Nozzle Tip	(a) At Least 8 mm (0.31 in.)
(2) Windshield Dam (W/Adhesive)	(b) At Least 12 mm (0.47 in.)
(3) Adhesive (Apply)	

RY9212001CAS0089US0

[4] GLASS TRIM TYPE

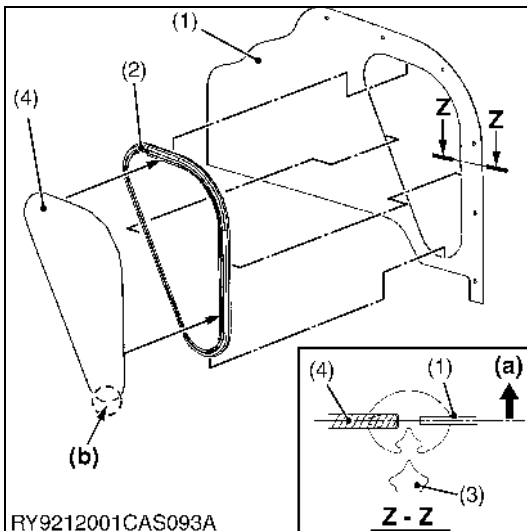

(When removing)

1. Lift the rubber core by its seam and remove it.
2. Remove the glass to the outside.

(When attaching)

1. From the outside, insert the glass into the glass trim.
2. Insert the rubber core into the groove all the way around the trim.
3. Start inserting the rubber core at the bottom center. (to prevent rain from getting in)

- (1) Panel
- (2) Glass Trim
- (3) Rubber Core
- (4) Glass


- (a) Inside
- (b) Start Here

RY9212001CAS0090US0

[5] HOW TO REPLACE THE GLASS OF THE RIGHT-SIDE WINDOW

Put something like a piano wire into the outer window frame, pull it along the frame, remove the adhesive agent and cut it off from the cab frame. Replace the window glass followed by the next procedure.

RY9212032CAS0012US0

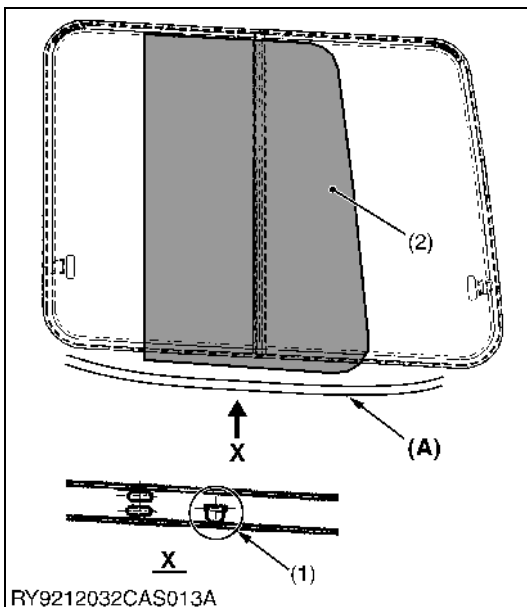

How to replace the glass

1. Lift the pin up with a flat-head driver.
Remove the sealant first and lift the pin.
2. Open the window to the point as shown in the figure.
3. Push down to widen up the window frame within elastic deflection not enough to deform itself permanently and replace the glass.
And the same way when you install the glass.
4. Put the pin back and apply sealant.


■ NOTE

- Use same brand of an adhesive agent and a primer
E.g.)
 - Cleaner: TK cleaner made in Daishin Chemistry
 - Adhesive agent: Sikaflex-260AP (SikaTack-Go!) or MSI made Sunrise U90
 - Primer: Sika Coating Activator or MSI made Sunrise Primer 24

- (1) Pin
- (2) Window

- (A) Push down to widen up the window frame

RY9212148CAS0023US0

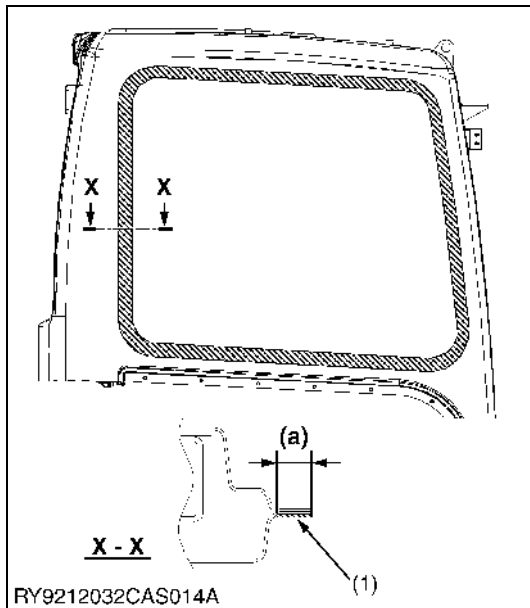

How to apply primer on the cab side

1. Remove dirt and grease on the opening surface of the glass sash's flange with a cleaner such as white gasoline. Avoid using an alcoholic cleaner.
2. Apply body primer evenly all around of flange from the end.


■ NOTE

- You have to finish the glass installation within 3 min. to 6 hours after coating the primer.

(1) Primer (Apply)

(a) 18 mm (0.71 in.) or more

RY9212032CAS0014US0

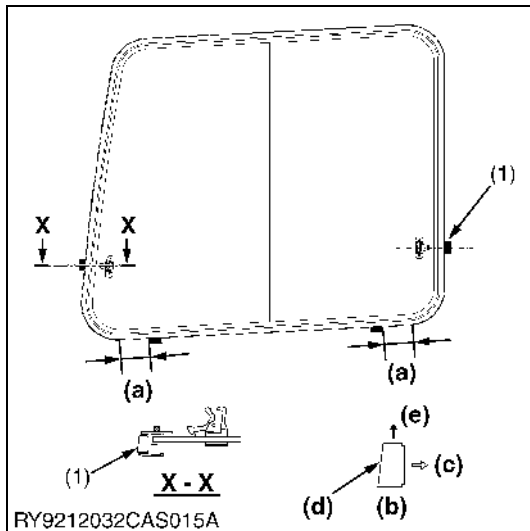

How to install the glass spacer

1. Remove dirt and grease on the surface of glass spacer with a cleaner such as white gasoline.
2. Apply the primer to the glass spacer.
3. Install the glass spacer in the glass sash. (4 spots)

(1) Glass Spacer

(a) 100 mm (3.9 in.)


(b) Cross Section of the Spacer

(c) Install in the Sash

(d) Inclined Surface

(e) Cab Side

RY9212032CAS0015US0

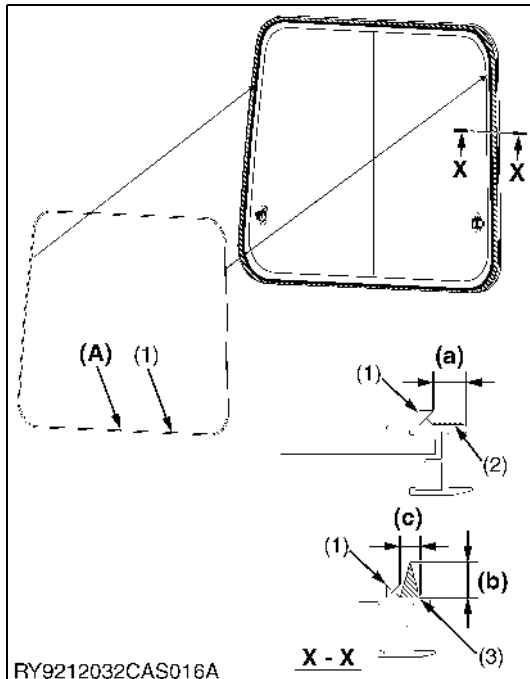

How to install the sealant dam and apply the primer

1. Remove dirt and grease on the surface of the circumference at the back of the sash glass to apply an adhesive agent and on the surface of applying a sealant dam with a cleaner such as white gasoline. Avoid using an alcoholic cleaner.
2. Put a sealant dam on the position as shown in the figure and evenly apply the primer peripherally.

[How to apply adhesive]

1. Apply the adhesive along the circumference of the sealant dam.

■ NOTE

- You have to finish the glass installation within 3 min. to 6 hours after coating the primer.
- In order to keep water-tightness, the adhesive must be applied unbrokenly.
- Installation of glass needs to be done within 3 min. after the adhesive is applied.

(1) Sealant Dam (W/Adhesive)

(a) 12 mm (0.47 in.)

(2) Primer (Apply)


(b) 12 mm (0.47 in.) or more

(3) Adhesive (Apply)

(c) 7 mm (0.27 in.) or more

(A) Starting Point of Installation

RY9212032CAS0016US0

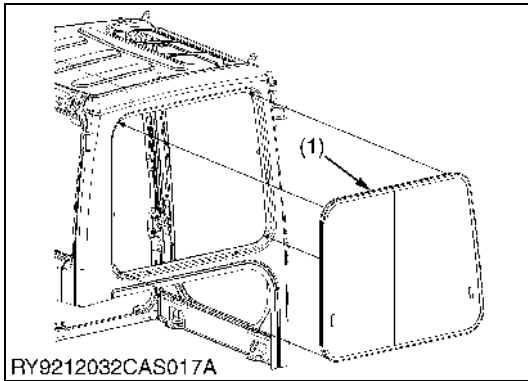

How to install the glass sash

1. Set the glass in the sash on which the adhesive has been already applied and install to attach on the cabin frame.

■ NOTE





- Adhesive should not be run off the edge of the sash after the glass sash is set.
- Need to maintain that state for about 24 hours after the glass sash is set.

(1) Glass Sash

RY9212032CAS0017US0

10. FRONT WINDOW

[1] ADJUSTING THE CLOSING LOCK OF THE FRONT WINDOW (TOP)

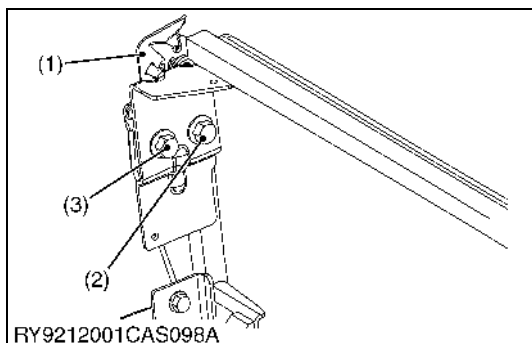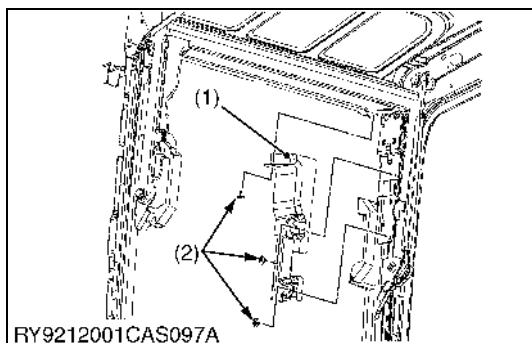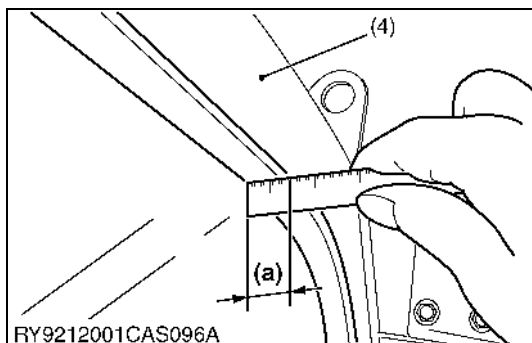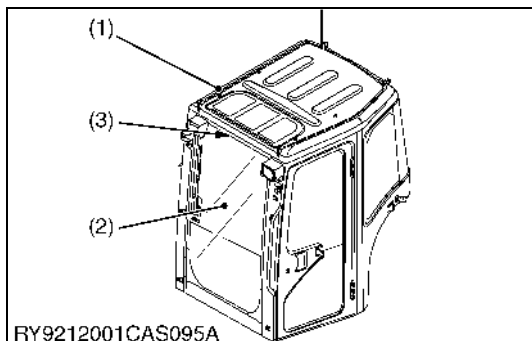

When water leaks in the cabin or it rattles

1. Close the front window (top) and lock it securely.
2. Remove the trim on the top edge of the front window (top) about half way along the frame and measure the clearance between the glass and the cab frame.

■ NOTE

- If you remove the trim too far, the glass may shift out of position, preventing a reliable measurement of the clearance.

- (1) Cab ASSY
(2) Front Window (Top)
(3) Trim
(4) Cab Frame

(a) Clearance

RY9212001CAS0091US0

3. Remove the clip and then the lock cover.

- (1) Lock Cover (2) Clip

RY9212001CAS0092US0

4. Remove the lock of the front window (top) and loosen the lock's mounting bolts.
5. Leave the rear bolt as is and lift up the front bolt 1.0 to 1.5 mm (0.04 to 0.06 in.).

■ NOTE

- Lifting the bolt more than 1.5 mm (0.06 in.) may prevent the lock from working.


6. Re-tighten the bolts to the specified torque.
7. Close the front window (top) and lock it securely.
8. Recheck the clearance between the glass and the cab frame and make sure the clearance is smaller.
9. Operate the mini-excavator and make sure the rattling has stopped while driving.
10. Spray some water on the window and make sure it does not leak.

- (1) Lock
(2) Bolt (Front)

(3) Bolt (Rear)

RY9212001CAS0093US0

[2] ADJUSTING THE OPEN LOCK OF THE FRONT WINDOW (TOP)

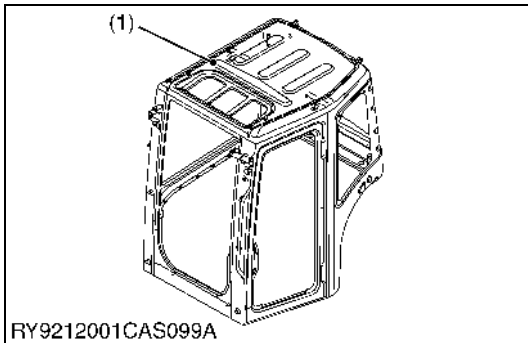

When it rattles on the cabin

 
 

 

 
 
 

 
 
 
 
 
 
 
 
1. Lift the front window (top) and lock it securely to the ceiling.
2. While pulling down on the handle, check whether there is a gap between the glass and the cushion.
3. If the glass is up against the cushion without a gap, it is OK.
4. If there is a gap between the glass and the cushion, it causes the rattling. Loosen the nut and stretch the cushion until it is against the surface of the glass.
5. After adjusting the cushion, re-tighten the nut.
6. Lift the front window (top) and lock it securely to the ceiling.
7. Operate the mini-excavator and make sure the rattling has stopped while driving.

- (1) Cabin
(2) Nut

- (3) Cushion
(4) Handle

























RY9212001CAS0094US0

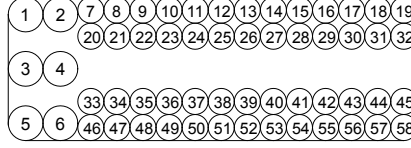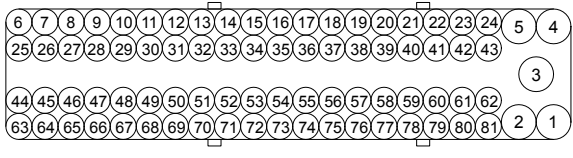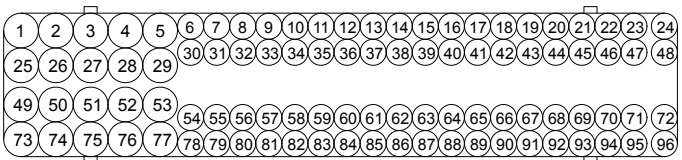

232C  C_WF04_7123-7740-40_1	ALTERNATOR (IG,L)  C_OF02_71 23-2820_1	BEACON_SWITCH  C_OF10_7123-8307 _1	CAB(CAB_WORKLIGHT,FR(+))  C_CAM01_1	CAB_WORKLIGHT, FL(+)  C_CBF01_1	CRANKSHAFT_SENSOR(NE),D  C_WF03_7283-8852-30_1	DUAL_PRESSURE_SWITCH  C_WF02_6189-0094_1	ENGINE(OPEN)  C_OM08_7122 -6080_1	FRONT_WORKLIGHT(+)  C_CBF01_1	FUSE (COMPRESSOR)  C_OF02_M iniFuses _1 279 +2 351	FUSE(HEATER, FUELFILTER)  C_OF02_M iniFuses _1	GND (CABFRAME)  C_LAF01 _M8_1	
A/C_FAN_SWITCH  C_OF06_7123-2865-30_1	ANTITHEFT_ANTENNA  C_WM06_61 89-6171_1	BLOWER_MOTOR  C_OF02_6098-0325 _1	to_CAB_WORK LIGHT,FR(+)  C_CBF01_1	CAB_WORK LIGHT,FL (-)  C_CAM01_1	CRS-ECU(58pin)  C_WF58_9-1452415-9_1	E/F_CHANGE_SWITCH  C_OF10_7123-8307_1	ECU(MAIN)  C_WF81_1473244-1_1	MAIN(OPEN)  C_OF08_7123 -6080_1	FRONT_WORKLIGHT(-)  C_CAM01_1	FUSE (CONDENSOR_FAN)  C_OF02_P lug-in_1 ype_1	FUSE(HORN-MAIN)  C_OF02_M iniFuses _1	GND(RADIO)  C_LAF01 _M8_1
A/C_HEATER_CONTROLER  C_OF16_MX34016SF1_1	BATTERY (POWER),N_BI  C_OM01_71 22-4113-3 0_1	BOOM_RAISE_SW  C_WF02_6189-0156 _1	CAB  C_OF08_7123-6083 -30_1	to_CAB_ WORKLIGHT,FR(-)  C_CAM01_1	CRS-ECU(96pin)  C_WF96_9-1452423-9_1	EGR_VALVE  C_WF04_6195-0030_1	ENGINE(POWER)  C_OM02_7122 -4123-30_1	FUEL_PUMP  C_OF02_7 123-2820 _1	FUSE(ECU-MAIN(+B))  C_OF02_M iniFuses _1	FUSE(HORN-SW)  C_OF02_M iniFuses _1	GND(RADIO ,CAB)  C_LAF01 _M5_1	
AIR_FLOW_SENSOR  C_WF05_6189-1046_1	MAIN(POWER), N_BI  C_OF01_71 23-4113-3 0_1	CAB  C_OM08_7122-6083 -30_1	to_MAIN(CAB)  C_OM08_7122-6083 -30_1	CAB(WIPER)  C_OF04_7123 -6040_1	DIODE(COMPRESSOR)  C_OF02_6098-0017_1	ELECTRICAL_BUZZER  C_OF02_7123-2820_1	ENGINE(SOLENOID)  C_WM12_7222 -7923-40_1	FUEL_TEMP_SENSOR  C_WF02_1 78392-6_ _1	FUSE(ECU-MAIN(+B)),BI  C_OF02_M iniFuses _1	FUSE(LEVER_LOCK)  C_OF02_M iniFuses _1	GND(RADIO ,F)  C_LEF01 _M5_1	
AI_CONSOLE  C_WF08_FW-C-8F_1	BATTERY_TERMINAL,BI  C_LAF01_M 8_1	to_MAIN(CAB)  C_OM08_7122-6083 -30_1	CAB(CAB_WORKLIGHT, FL(+))  C_CAM01_1	CAMSHAFT_SENSOR(G)  C_WF03_6 189-1130 _1	DOC_INLET_TEMP_SENSOR  C_WF02_7283-7026-30_1	ELECTRICAL_OUTLET  C_OF02_7123-8322_1	ENGINE(SOLENOID)  C_WM12_7222 -7923-40_1	FUSE(A/C_CONTROLLER)  C_OF02_M iniFuses _1	FUSE(ECU-MAIN(AC))  C_OF02_M iniFuses _1	FUSE(METER (+B))  C_OF02_M iniFuses _1	GND1  C_LAF01 _M8_1	
AI_PRESSURE_SW  C_WF02_6189-0156_1	BATTERY_TERMINAL,N_BI  C_LAF01_M 8_1	CAB(CAB_WORKLIGHT, FL(+))  C_CAM01_1	to_MAIN(CAB_WIPER)  C_OM04_7122 -6040_1	CAN  C_WF02_7 123-8520 -40_1	DOC_OUTLET_TEMP_SENSOR  C_WF02_7283-7028-10_1	ELECTRICAL_OUTLET  C_OF02_7123-8322_1	ENGINE(FUEL_SENSOR)  C_WM02_7222-1424-40_1	FUSE(ALTERNATOR)  C_OF02_M iniFuses _1	FUSE(ECU-MAIN(POWER))  C_OF02_M iniFuses _1	FUSE(RADIO (AC))  C_OF02_M iniFuses _1	GND2  C_LAF01 7009-1 836_1	
ALTERNATOR(+B)  C_LAF01_M6_1	BEACON(+)  C_LEF01_M 8_1	to_CAB_WORKLIGHT,FL(+)  C_CBF01_1	CAB_POWER_SOURCE  C_OF08_7123 -6083-30_1	CAN  C_WF02_7 123-8520 -40_1	DPF_DIFF_PRESSURE_SENSOR  C_WF03_1813271-1_1	ENGINE(FUEL_SENSOR)  C_WM02_7222-1424-40_1	ENGINE(SYGNAL)  C_WM16_7222 -7564-40_1	FUSE(BEACON)  C_OF02_M iniFuses _1	FUSE(ELECTRICAL_OUTLET)  C_OF02_M iniFuses _1	FUSE(ROOM_LIGHT)  C_OF02_M iniFuses _1	GND3  C_LAF01 7009-1 836_1	
		to_CAB_WORKLIGHT,FL(-)  C_CAM01_1	CAB_WORKLIGHT, B(+)  C_CBF01_1	CONDENSOR_FAN  C_WF02_D T06-2S-C E05_1	DPF_OUTLET_TEMP_SENSOR  C_WF02_7283-7023_1			FUSE(BLOWER)  C_OF02_M iniFuses _1	FUSE(FRONT-WORKLIGHT)  C_OF02_M iniFuses _1	FUSE(STARTER)  C_OF02_M iniFuses _1	GND4  C_LAF01 7009-1 836_1	
			CAB_WORKLIGHT, B(-)  C_CAM01_1					FUSE(CAB-WORKLIGHT)  C_OF02_M iniFuses _1	FUSE(FUEL_PUMP)  C_OF02_M iniFuses _1	FUSE(WIPER/WASHER)  C_OF02_M iniFuses _1	GND4  C_LAF01 7009-1 836_1	
								FUSE(FUEL_SUPPLY_PUMP)  C_OF02_M iniFuses _1	GLOW,D  C_LEF01_M4_1			

CONNECTOR CHART 1 (KX080-4 US, CA)

                        CONNECTOR CHART 1 (KX080-4 US, CA)

HEATER (FUEL FILTER)  C_WF02_6-17614-6_1	INLET_AIR_TEMP_SENSOR  C_WF02_7283-7027-40_1	RADIO(AC)  C_CBF01_1	RELAY (CRS_MAIN)  C_OF05_M-ISO_1	SBF,MAIN1-2  C_OF02_7323-3220_1	SOLENOID (AUX1-L)  C_WF02_174-352-2_1	SPEAKER(L)  C_OF02_7123-2820_1	SUCTION_CONTROL_VALVE  C_WF02_6189-0039_1	TRAVEL_PRESSURE_SENSOR  C_WF03_7183-7874-30_1	to_CAB(WIPER)  C_OM04_7122-1347_1	to_J/C-INJ/SLD-GND  C_WF08_7283-7080-40_1
HORN(+)  C_OF01_7123-2010_1	INTAKE_THROTTLE_MOTOR  C_WF06_7283-1968-30_1	RADIO(GND)  C_CAM01_1	RELAY(ECU,MAINPOWER)  C_OF05_M-ISO_1	SBF-BOX  C_OF06_7357-5155-30_1	SOLENOID (AUX1-R)  C_WF02_174-352-2_1	SPEAKER(L+)  C_CAM01_1	SWITCH(DPF,INHIBIT)  C_OF10_7123-8307_1	TRAVEL_SPEED&ANGLE_BLADE_CONTROL_SW  C_WF04_6180-4181_1	to_WIPER  C_OF04_7123-1347_1	J/C-INJ/SLD-GND  C_WM08_7382-1480-40_1
HORN(-)  C_OF01_7123-2010_1	JS_CONTROL(L)  C_WF08_6195-0051_1	RADIOFRAME(GND)  C_CAM01_1	RELAY(GLOW)  C_OF05_M-ISO_1	SENSOR,FUEL  C_WF03_7283-8730-30_1	SOLENOID (AUX2-L)  C_WF02_174-352-2_1	SPEAKER(L-)  C_CAM01_1	SWITCH(LEVER_LOCK)  C_WF02_6195-0003_1	TRAVEL_SPEED_SW  C_WM03_6092-0013_1	to_CAMSHAFT_SENSOR  C_WF04_33472-0401_1	to_J/C-SLD-GND  C_WF02_7283-7020-10_1
INJECTOR_1  C_WF02_6189-0611_1	JS_CONTROL(R)  C_WF08_6195-0051_1	RAIL_PRESSURE_SENSOR  C_WF03_174357-2_1	RELAY(HORN)  C_OF05_M-ISO_1	SENSOR_BOOST  C_WF03_6189-0099_1	SOLENOID (AUX2-R)  C_WF02_174-352-2_1	SPEAKER(R)  C_OF02_7123-2820_1	SWITCH(WATER_LEVEL)  C_WF02_6189-0176_1	WASHER_TANK  C_OF02_7123-2820_1	to_MAIN(CAMSHAFT_SENSOR)  C_WM04_33482-0406_1	J/C-SLD-GND  C_WM02_7382-8924-10_1
INJECTOR_2  C_WF02_6189-0611_1	KEY_SWITCH  C_WF03_7123-6234-40_1	REGISTER(120ohm)  C_WF02_7123-6423-30_1	RELAY(LIGHT)  C_OF05_M-ISO_1	SERVICE_TOOL  C_WF04_174257-2_1	SOLENOID (E/F)  C_WF02_174-352-2_1	SPEAKER(R-)  C_CAM01_1	THERMOSTAT  C_OF05_7283-1050_1	WATER_TEMP_SENSOR  C_WF02_178392-6_1	to_J/C(CAN,EGR,SERVICE)  C_WF06_7283-8850-30_1	to_MAIN(WORKLIGHT)  C_OM02_7122-2820_1
INJECTOR_3  C_WF02_6189-0611_1	LCD_METER  C_OF14_7283-5832_1	RELAY(BEACON)  C_OF05_M-ISO_1	RELAY(POWER)  C_OF05_M-ISO_1	SERVO_MOTOR  C_OF07_IL-AG5-7S-S3C1_1	SOLENOID (LEVER_LOCK)  C_WF02_174-352-2_1	SPEAKER(R-)  C_CAM01_1	TRAVEL_ALARM(FRONT,+)  C_CBF01_1	WIPER,F  C_OF04_6090-1011_1	J/C(CAN,EGR,SERVICE)  C_WM06_7182-9630-30_1	to_WORKLIGHT  C_OF02_7123-2820_1
INJECTOR_4  C_WF02_6189-0611_1	OIL-SW,D  C_OF01_172320-2_1	RELAY(BLOWER)  C_OF05_M-ISO_1	RELAY(STARTER)  C_OF05_M-ISO_1	SOLENOID(ANGLE-L)  C_WF02_7283-2090-30_1	SOLENOID (MULTI)  C_WF02_728-3-209-0-30_1	STARTER(S),D  C_OF01_172320-1_1	TRAVEL_ALARM(FRONT,GND)  C_CAM01_1	WIPER_SWITCH  C_OF06_7123-2860_1	to_J/C(CAN,MAIN)  C_WF08_7283-1081-10_1	J/C(CAN,MAIN)  C_WM08_7382-1481-10_1
	RADIO(+B)  C_CBF01_1	RELAY(COMPRESSOR)  C_OF05_M-ISO_1	RESISTOR_BLOWER  C_OF05_M-ISO_1	SOLENOID(ANGLE-R)  C_WF02_7283-2090-30_1	SOLENOID (TRAVEL_SPEED)  C_WF02_728-3-209-0-30_1	STOP_SWITCH  C_WM02_6187-2801_1	TRAVEL_ALARM(REAR,+)  C_CBF01_1	WORKLIGHT_SWITCH  C_OF10_7123-8307_1		
		RELAY(CONDENSOR_FAN)  C_OF05_M-ISO_1	ROOM_LIGHT  C_OF03_6130-2330_1				TRAVEL_ALARM(REAR,GND)  C_CAM01_1			

CONNECTOR CHART 2 (KX080-4 US, CA)

EDITOR:

KUBOTA CORPORATION

CONSTRUCTION MACHINERY

SERVICE TECHNICAL SUPPORT DEPARTMENT

1-1 NAKAMIYA-OHIKE 1-CHOME, HIRAKATA-CITY, OSAKA, 573-8573, JAPAN

PHONE : (81)72-840-1195

FAX : (81)72-890-2883

E-mail : kbt_g.ce-sv@kubota.com
