



- (6) To attach outer blades, be sure to install the plain washer and lock washer between the blade and bolt head.

(RC40-G, RC48-G)

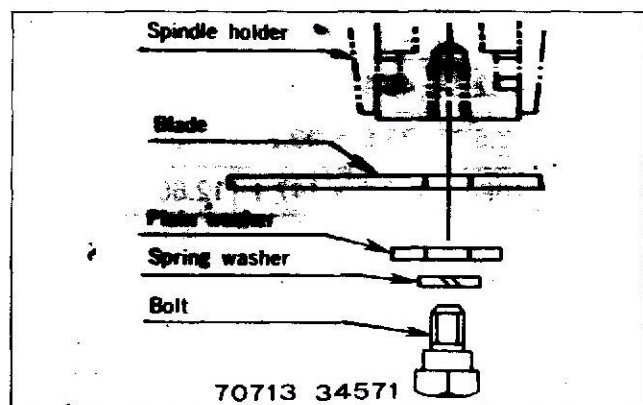

(RC44-G)

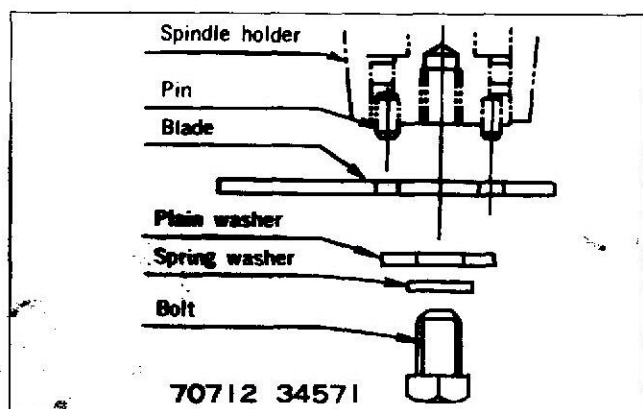

[IMPORTANT]

- TIGHTEN THE BOLT OF THE OUTER BLADES TO 12.6 TO 15 kgf-m (91 ~ 109 ft-lbs) OF TORQUE.

8.3 BELT REPLACEMENT


- (1) Remove the mower from the tractor.
- (2) Clean around the gear box.
- (3) Remove the left and right hand shields from the mower deck. Also, remove the right hand bracket which mounts the gear box to the mower deck.
- (4) Remove the tension screw.
- (5) Remove the belt from the tension pulley. Slip the belt over the top of the gear box.
- (6) To install a new belt, reverse the above procedures.

[IMPORTANT]

- ADJUST THE TENSION SCREW TO LENGTHEN THE SPRING TO 150mm (5.9 in.) RC40-G, RC48-G
- ADJUST THE TENSION SCREW TO LENGTHEN THE SPRING TO 135mm (5.3 in.) RC44-G

[NOTE]

- Tighten bracket bolts securely.

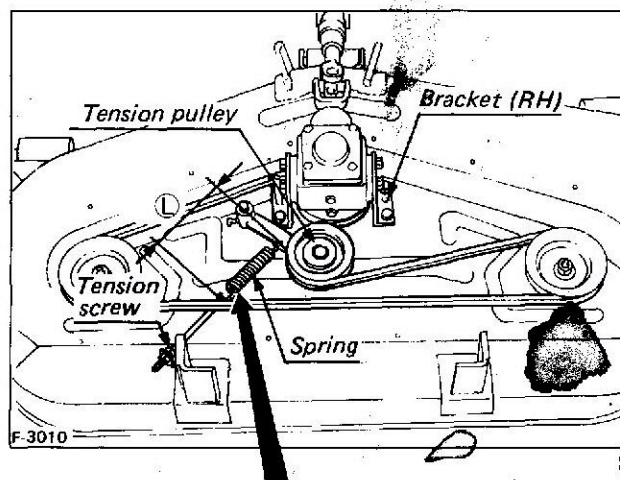

F-3078

- RC40-G: 150 mm (5.9 in.)
- Ⓛ RC48-G: 150 mm (5.9 in.)
- RC44-G: 135 mm (5.3 in.)

PARTS LIST

Please use this parts list for the following:

1. When replacing parts, contact your local dealer referring to the part number.
2. Refer to the illustrations for assembly and disassembly.


CONTENTS

1. Joint	1
2. Gear box	1
3. Spindle and Blade	2
4. Spindle and Blade	2
5. Tension pulley	3
6. Deck and Deflector	3
7. Rear wheel	5
8. Linkage	5

*This parts list is subject to change without notice.

RC40-G
RC44-G
RC48-G


1. JOINT

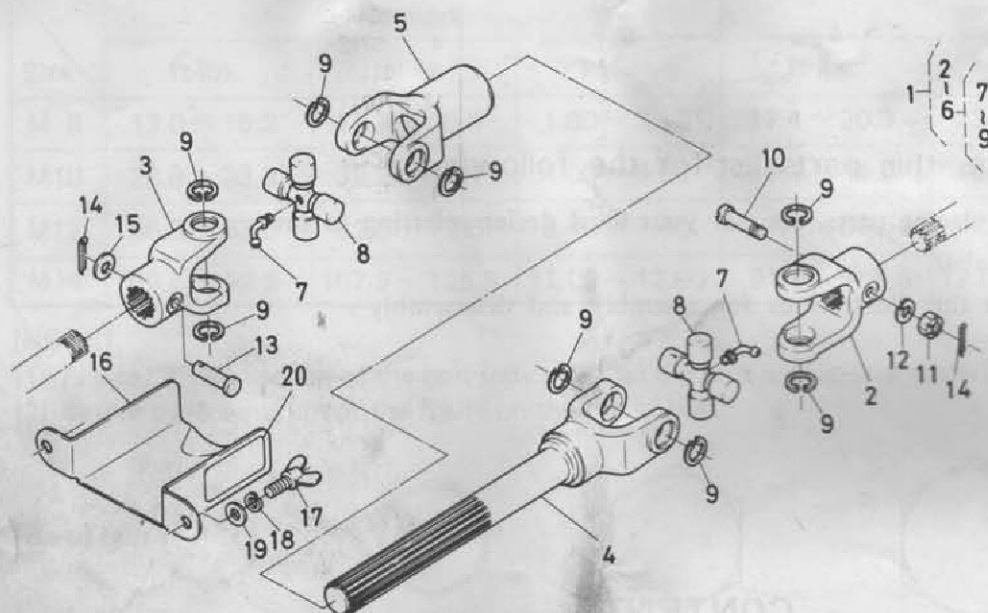

Ref.No	Code No.
1	70712-3201-3
2	70720-3111-7
3	70720-3112-3
4	70712-3114-2
5	70720-3117-6
6	70720-3211-1
7	70720-3121-2
8	70720-3118-2
9	70720-3212-1
10	70720-3120-2
11	02356-50080
12	04512-50080
13	05122-50845
14	05511-50218
15	04012-50080
16	70712-3235-2
17	01811-50812
18	04512-50080
19	04013-50080
20	70713-3236-1

RC40-G
RC44-G
RC48-G


2. GEAR BOX

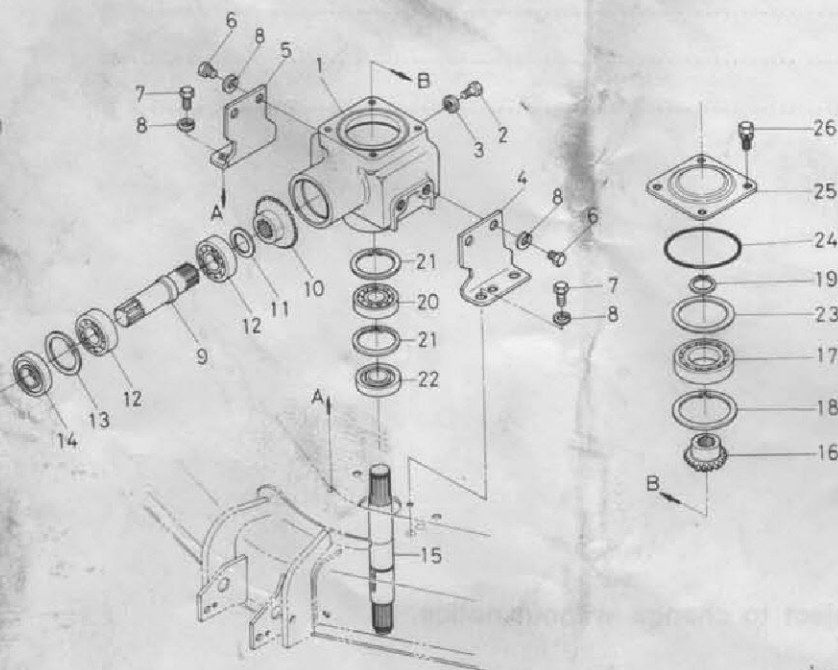

Ref.No	Code No.	Ref.No	Code No.
	RC40-G	1	70712-3311-2
10	70713-3333-1	2	01170-51014
16	70713-3353-1	3	04717-01000
	RC44-G	4	70722-3313-2
10	70712-3333-1	5	70722-3315-2
16	70712-3353-1	6	01173-51222
	RC48-G	7	01173-51228
10	76500-3333-1	8	04512-50120
16	76500-3353-1	9	70712-3331-1
		10	
		11	70720-3335-2
		11	70720-3336-2
		12	08101-06205
		13	04611-00520
		14	09502-55210
		15	70712-3351-2
		16	
		17	70712-3355-1
		18	04611-00650
		19	04612-00220
		20	08101-06205
		21	04611-00520
		22	09502-55210
		23	70712-3357-1
		23	70712-3359-1
		24	04811-10800
		25	70712-3361-1
		26	01123-50814

RC40-G
RC44-G
RC48-G


3. SPINDLE AND BLADE

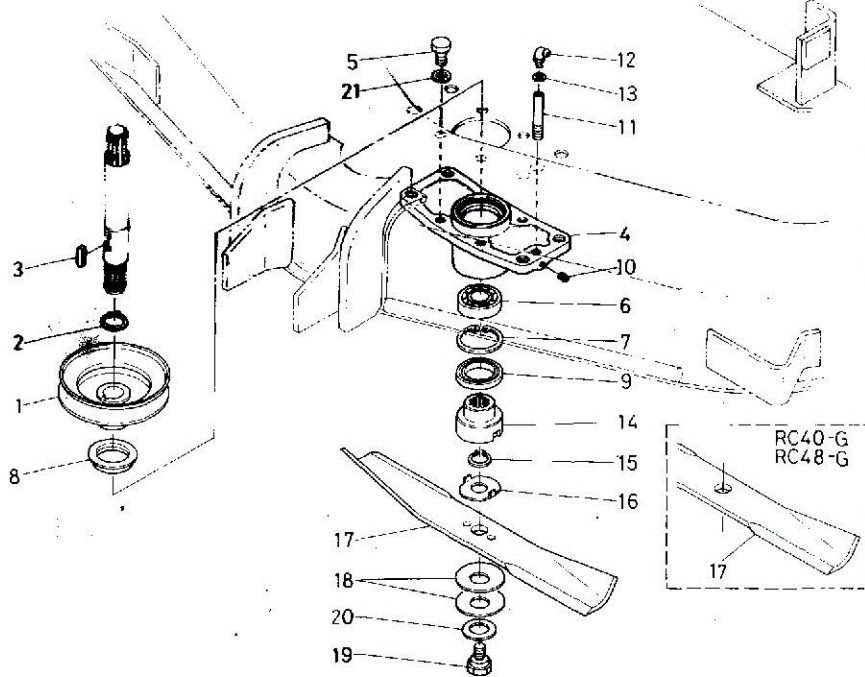

Ref.No	Code No	Ref.No	Code No
	RC40-G	1	70712-9903-2
4	70712-3411-3	2	04612-00250
5	01130-51020	3	05712-00728
17	70713-3433-1	4	
	RC44-G	5	
4	70712-3411-3	6	08101-06205
5	01130-51020	7	04611-00520
17	70712-3433-2	8	70722-3412-1
	RC48-G	9	09500-35528
4	76500-3411-2	10	03410-50606
5	01170-51222	11	70722-3413-2
17	76500-3433-1	12	66616-3436-1
21	04512-50120	13	66616-3439-1
		14	70712-3415-2
		15	04612-00220
		16	70722-3432-1
		17	
		18	70722-3435-1
		19	70722-3437-3
		20	70722-3439-2
		21	

RC40-G
RC44-G
RC48-G


4. SPINDLE AND BLADE

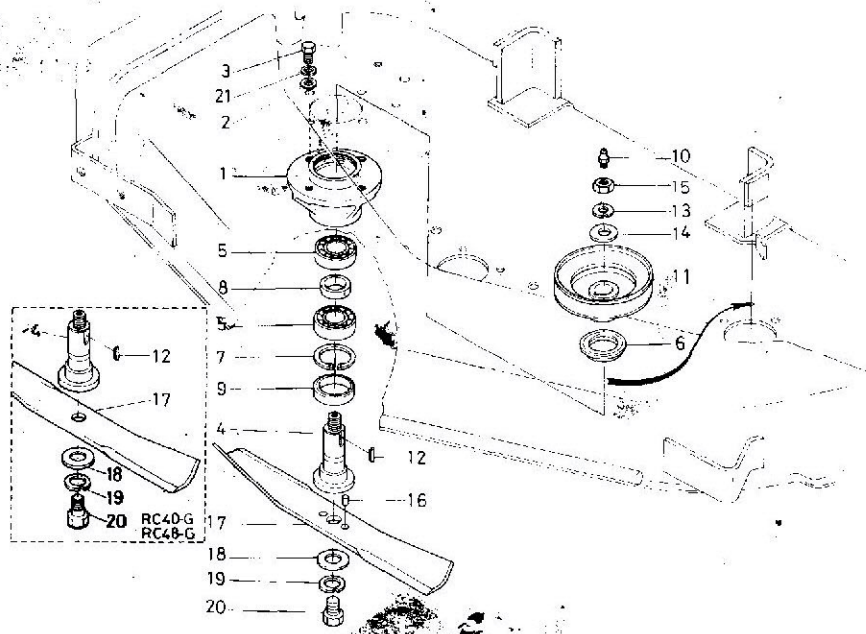

Ref.No	Code No	Ref.No	Code No
	RC40-G	1	
1	70712-3451-1	2	
2	04013-50100	3	
3	01130-51022	4	
4	70713-3453-3	5	08101-06205
16		6	70722-3412-1
17	70713-3433-1	7	04611-00520
18	70713-3435-1	8	70712-3455-1
19	04512-50180	9	09500-35528
20	70713-3436-2	10	06613-10675
21		11	70725-3357-2
	RC44-G	12	05712-00722
1	70712-3451-1	13	04512-50160
2	04013-50100	14	70721-3456-2
3	01130-51022	15	02172-50160
4	70712-3453-2	16	
16	70721-3457-2	17	
17	70712-3433-2	18	
18	70712-3435-2	19	
19	04512-50140	20	
20	01173-51428	21	
21			
	RC48-G		
1	76500-3451-1		
2	04013-50120		
3	01170-51225		
4	70713-3453-3		
16			
17	76500-3433-1		
18	70713-3435-1		
19	04512-50180		
20	70713-3436-2		
21	04512-50120		

RC40-G
RC44-G
RC48-G


5. TENSION PULLEY

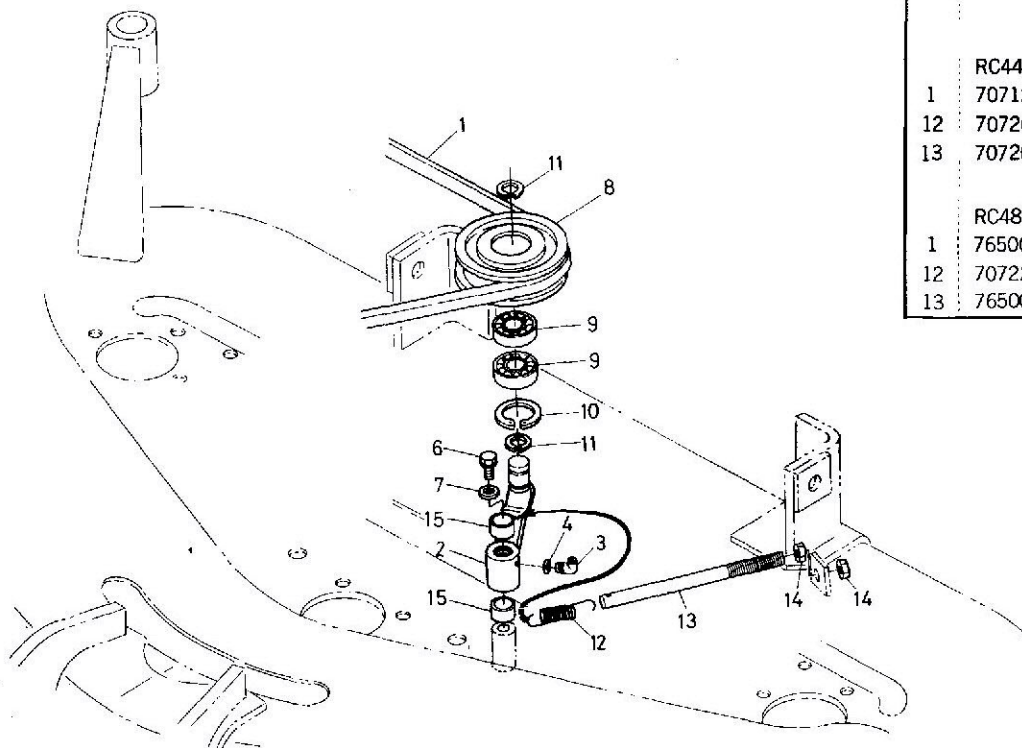

Ref.No.	Code No.	Ref.No.	Code No.
	RC40-G	1	
1	70713-3477-1	2	70713-3473-1
12	70722-3475-1	3	
13	70722-3477-1	4	
		5	
	RC44-G	6	01120-50814
1	70712-3471-1	7	04015-50080
12	70720-3475-2	8	70720-6921-2
13	70720-3477-2	9	08141-06203
		10	04611-00400
	RC48-G	11	04612-00170
1	76500-3471-1	12	
12	70722-3475-1	13	
13	76500-3479-1	14	02118-50100
		15	41071-3112-1

RC40-G


6. DECK AND DEFLECTOR

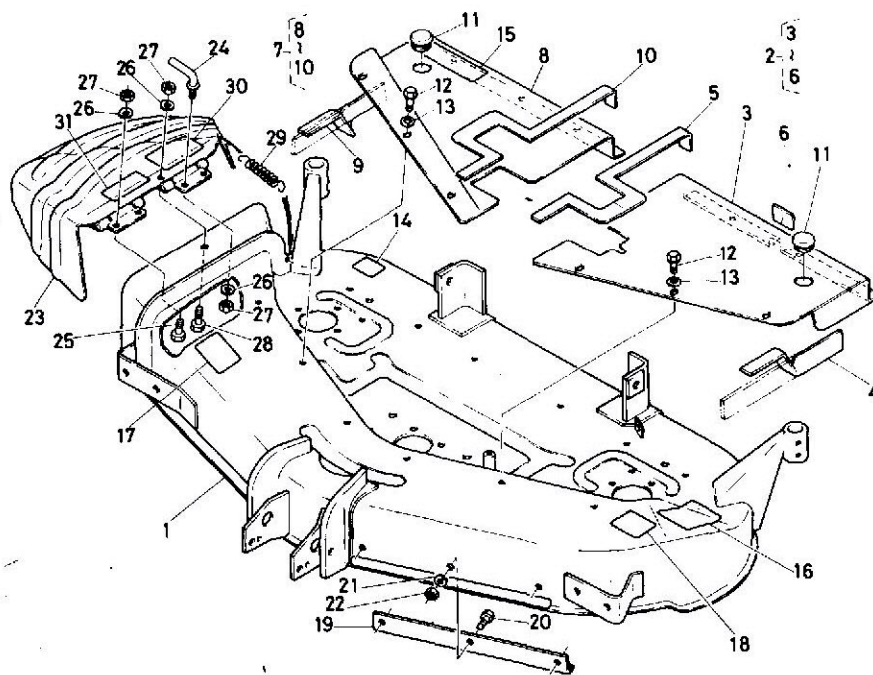

Ref.No.	Code No.
1	70713-4116-1
2	70713-4113-1
3	70713-4118-1
4	70722-4122-2
5	70713-4124-1
6	70722-4126-1
7	70713-4115-1
8	70713-4120-1
9	70722-4122-2
10	70713-4128-1
11	66204-5116-1
12	01120-50818
13	04013-50080
14	70713-4117-1
15	36200-9816-2
16	70720-4715-3
17	70712-4114-1
18	70712-4716-2
19	70712-4119-1
20	01170-51016
21	04512-50100
22	02118-50100
23	70712-4711-2
24	70721-4713-1
25	01170-51020
26	04512-50100
27	02118-50100
28	01170-51028
29	70722-4712-2
30	70712-4714-1
31	70713-3457-1

RC44-G


6. DECK AND DEFLECTOR

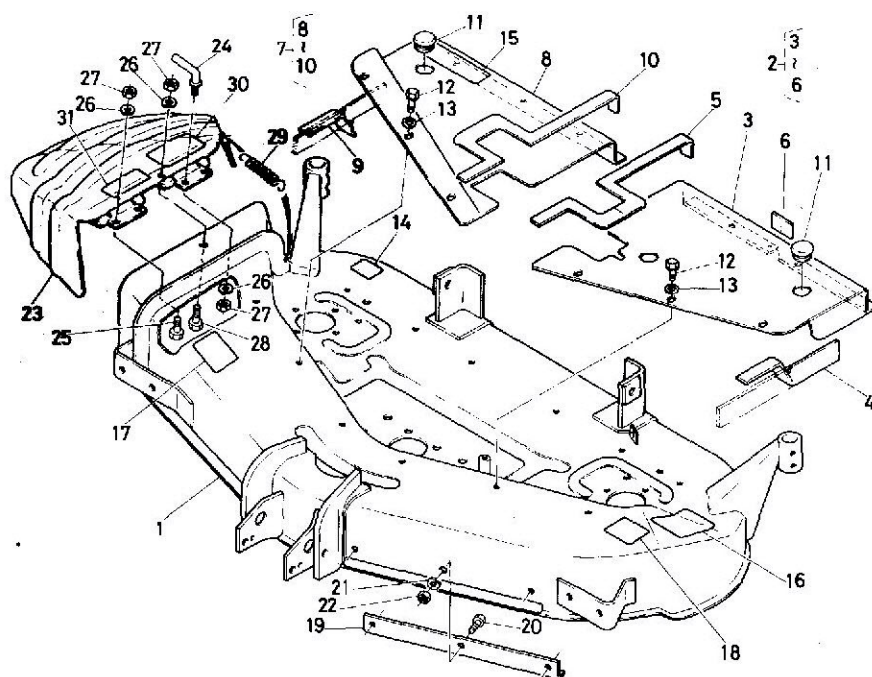

Ref. No.	Code No.
1	70712-4116-4
2	70712-4113-1
3	70712-4118-1
4	70722-4122-2
5	70712-4124-1
6	70722-4126-1
7	70712-4115-1
8	70712-4120-1
9	70722-4122-2
10	70712-4128-1
11	66204-5116-1
12	01120-50818
13	04013-50080
14	70712-4117-1
15	36200-9816-2
16	70720-4715-3
17	70712-4114-1
18	70712-4716-2
19	70712-4119-1
20	01170-51016
21	04512-50100
22	02118-50100
23	70712-4711-2
24	70721-4713-1
25	01170-51020
26	04512-50100
27	02118-50100
28	01170-51028
29	70722-4712-2
30	70712-4714-1
31	70712-3457-1

RC48-G

6. DECK AND DEFLECTOR

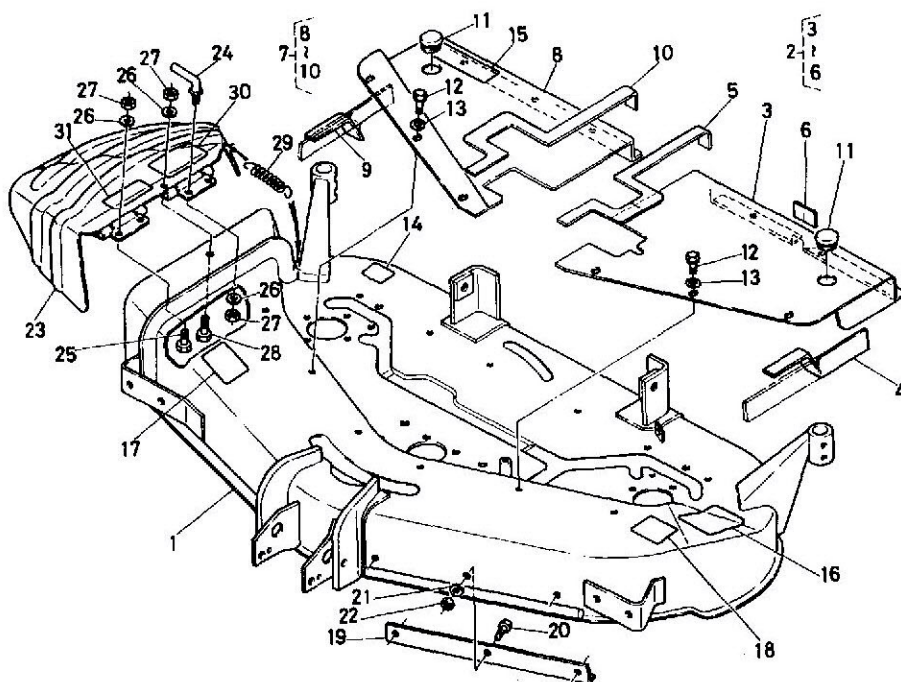


Ref. No.	Code No.
1	76500-4116-4
2	76500-4113-2
3	76500-4118-2
4	70722-4122-2
5	76500-4124-2
6	70722-4126-1
7	76500-4115-2
8	76500-4120-2
9	70722-4122-2
10	76500-4128-2
11	66204-5116-1
12	01120-50818
13	04013-50080
14	76500-4117-1
15	36200-9816-2
16	70720-4715-3
17	70712-4114-1
18	70712-4716-2
19	70712-4119-1
20	01170-51016
21	04512-50100
22	02118-50100
23	76500-4711-1
24	70721-4713-1
25	01170-51020
26	04512-50100
27	02185-50100
28	01170-51028
29	70722-4712-2
30	70712-4714-1
31	70713-3457-1

RC40-G
RC44-G
RC48-G

7. REAR WHEEL

Ref. No.	Code No.
	RC40-G
14	01130-51022
	RC44-G, RC48-G
14	01130-51025

Ref. No.	Code No.
1	70712-4211-1
2	70712-4419-1
3	09220-20284
4	04611-00280
5	04013-50200
6	70712-4214-1
7	05511-50545
8	70712-4215-2
9	70712-4217-2
10	06613-10010
11	05122-50845
12	70712-4219-1
13	70722-4611-2
14	
15	70713-4617-2
16	70720-4618-3
17	04011-50120
18	05511-50425

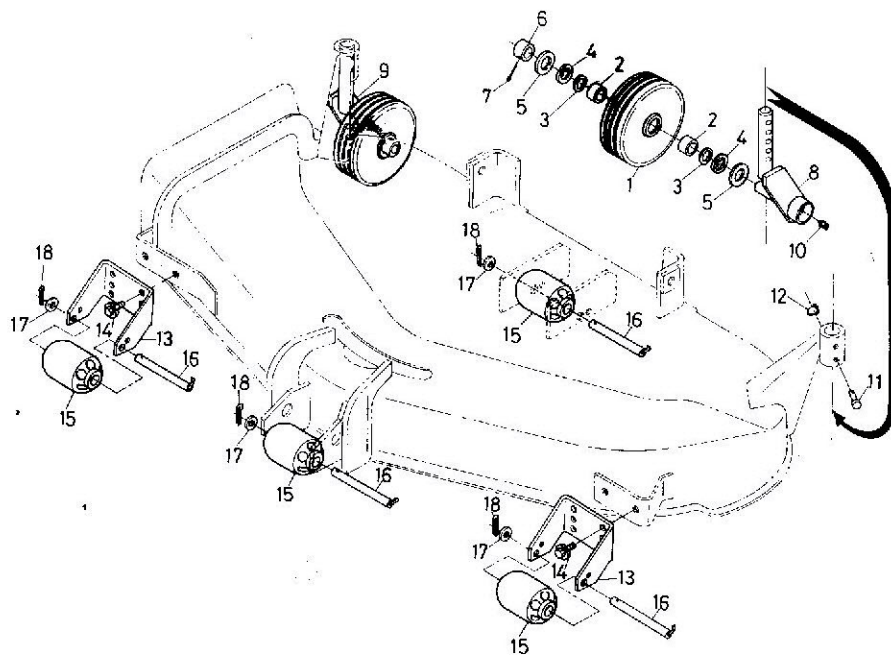


RC40-G
RC44-G
RC48-G

8. LINKAGE

Ref. No.	Code No.
	RC40-G, RC48-G
4	70713-5123-4
	RC44-G
4	70712-5123-3

Ref. No.	Code No.
1	04011-50120
2	05122-51245
3	70712-5114-1
4	
5	
6	
7	
8	05122-51245
9	04011-50120
10	70712-5114-1
11	70712-5126-1

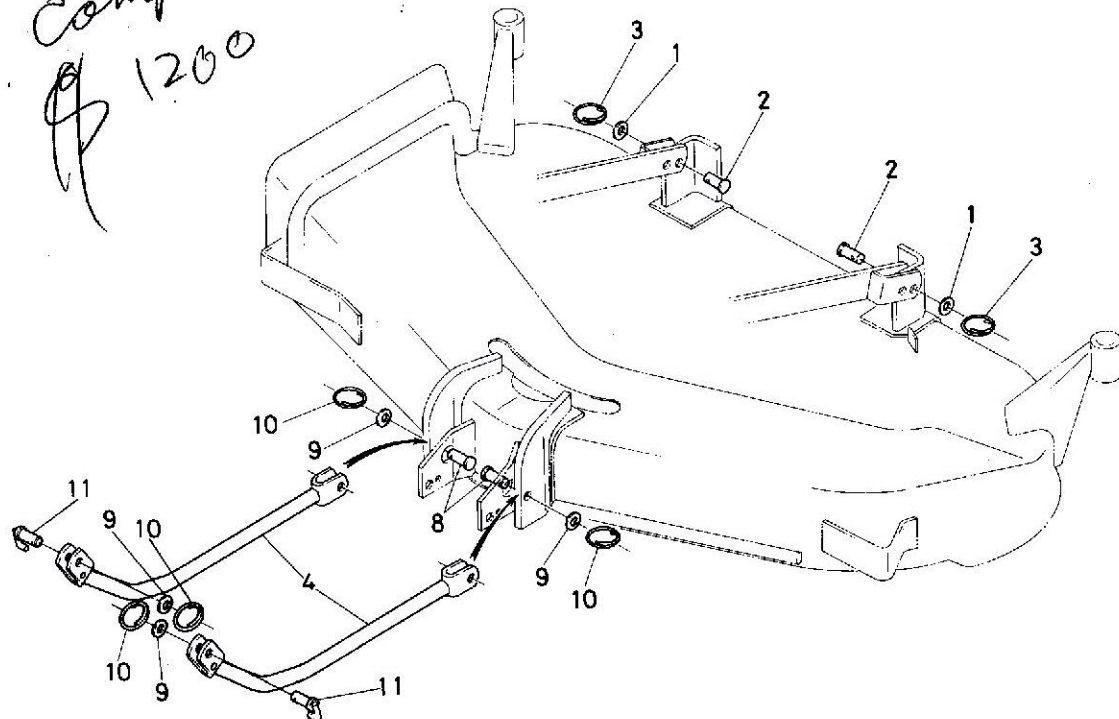

*complete Deck
\$ 1200*



KUBOTA

- Head Office : 2-47, Shikitsuhigashi 1-chome, Naniwa-ku, Osaka 556-91, Japan.
Telephone : (06) 648-2111
Cable : IRONKUBOTA OSAKA
Telex : 526-7785 KUBOTA J
- Tokyo Office : 3-2, Nihonbashi-Muromachi 3-chome, Chuo-ku, Tokyo 103, Japan
Telephone : (03) 245-3111
Cable : IRONKUBOTA TOKYO
Telex : 222-6088 KUBOTA J
- New York Office : The Chrysler Building 59th Floor 405 Lexington Avenue, New York, N.Y. 10174 U.S.A.
Telephone : (212) 490-8050
Telex : 238738 KBTN UR, 645220 KUBOTA NYK
- London Office : 11/12 Hanover Street, London W1R 9HF, U.K.
Telephone : (01629-6471)~4
Telex : 263235 KUBOTA G
- Düsseldorf Office : Georg-Glock-Strasse 14, 4000 Düsseldorf, Federal Republic of Germany
Telephone : 0211-434154~57
Telex : 8584498 KBTA D
- Bangkok Office : Thaniya Bldg. 4th Floor, 62 Silom Road, Bangkok, Thailand
Telephone : 234-7880, 234-7882
Cable : IRONKUBOTA-BANGKOK
Telex : 82369 KUBOTA TH
- Jakarta Office : Skyline Building, 16th Floor, J.L. M. H. Thamrin No.9, Jakarta, Indonesia
Telephone : 323977
Telex : 46630 KUBOTA JKT
- Singapore Office : Suite No.20-06, 20th Floor CPF Building, 79 Robinson Road, Singapore 0106
Telephone : 2241919
Telex : 22519 KUBOTA RS
- Cairo Office : 21, El Batal Ahmed Abdel Aziz Street Agouza FLAT-7, Cairo, Egypt
Telephone : 698898
Telex : 23337 EFFAT UN
- Affiliated Companies
 - U.S.A. : KUBOTA TRACTOR CORPORATION
550 West Artesia Blvd., Compton, California 90224, U.S.A.
 - U.S.A. : KUBOTA AMERICA CORPORATION (New York Office)
The Chrysler Building 59th Floor 405 Lexington Avenue, New York, N.Y. 10174 U.S.A.
 - U.S.A. : KUBOTA AMERICA CORPORATION (Los Angeles Office)
523 West Sixth Street, Suite 432, Los Angeles, California 90014 U.S.A.
 - U.S.A. : KUBOTA AMERICA CORPORATION (Houston Office)
Two Greenspoint Plaza, Suite 100, 16825 Northchase Drive, Houston, Texas 77060, U.S.A.
 - U.S.A. : KUBOTA CREDIT CORPORATION U.S.A.
550 West Artesia Blvd., Compton, California 90224, U.S.A.
 - U.S.A. : AUBURN CONSOLIDATED INDUSTRIES, INC.
2100 South "J" Street, Auburn, Nebraska-68305, U.S.A.
 - Canada : KUBOTA TRACTOR CANADA LTD.
1495 Dinison Street, Markham, Ontario, Canada L3R 5H1
 - Brazil : KUBOTA-TEKKO DO BRASIL INDUSTRIA E COMERCIO LTDA.
Av. Fagundes De Oliveira 900, Piraporinha- Diadema, São Paulo, Brazil
 - Germany : KUBOTA (DEUTSCHLAND) GmbH
Georg-Glock-Strasse 14 D-4000 Dusseldorf 30, Federal Republic of Germany
 - France : KUBOTA TRACTOR EUROPE S.A.
12 Boulevard des Martyrs de Chateaubriand Zone Industrielle, 95100 Argenteuil France
 - U.K. : KUBOTA TRACTORS (U.K.) LIMITED
Dormer Road, Thame, Oxfordshire, OX9 3UE, U.K.
 - Iran : IRAN KUBOTA INDUSTRIAL WORKS, LTD.
Mobarezan Ave. No.82, Alimoseo St., Tehran, Iran
 - Indonesia : P.T. KUBOTA INDONESIA
J.L. Setyabudi 279, Semarang, Indonesia
 - Malaysia : KUBOTA AGRICULTURAL MACHINERY SDN.BHD.
Lot 15 Jalan Pahat, Shah Alam, Selangor Malaysia
 - Thailand : KUBOTA TRACTOR THAILAND CO., LTD.
No.39 Vipavadee-Rungsit Road, Kwaeng Samsennai, Khetr Phayathai, Bangkok 4, Thailand
 - Thailand : THE SIAM KUBOTA DIESEL CO., LTD.
814 Techavanich Road, Bangsue, Bangkok, Thailand
 - Philippines : KUBOTA-MARSTEEL MACHINERY CO., INC.
2nd Floor, R.B. Gonzales Bldg., 1186 Quezon Ave. Quezon City, Metro Manila, Philippines
 - Taiwan : SHIN TAIWAN AGRICULTURAL MACHINERY CO., LTD.
282, Su-Chuen 2nd Road, Kaohsiung, Taiwan

美國 (アメリカ)

Code No. 78712-7111-5